

Masami Hirosaka's RC10B3 won the '99 IFMAR World Championships!

©2000 Associated Electrics, Inc.



ASSOCIATED'S RC10B3--



All kit versions include:

2.40:1 Stealth transmission for effortless power handling.
Molded composite chassis for better rigidity and Lexan B3 racing body.
Quadra-symmetric suspension for greater stability and handling.
Optimized front end geometry improves steerging and increases rigidity.
Adjustable battery placement for fine tuning of traction or steering.
2.2" one-piece front and rear wheels.

Pro-Line 4 Rib M2 front tires and Pro-Line "Holeshot" M2 rear tires.

FACTORY TEAM

Shocks: Hard anodized, PTFE-coated gray.

Rear Axles: MIP CVD's. **Also includes:** Factory Team parts, ball bearings throughout.

TEAM KIT

Shocks: Hard anodized, PTFE-coated gray.

Rear Axles: MIP CVD's. **Also includes:** Ball bearings

throughout.

SPORT KIT

Shocks: Gold shocks.

Rear Axles: Associated dogbones &

stub axles.

Also includes: Mechanical speed control and motor. Bushings throughout.

BASIC+ KIT

Shocks: Gold shocks.

Rear Axles: Associated dogbones &

stub axles.

Also includes: Bushings

throughout.

REQUIRED EQUIPMENT TO RUN YOUR KIT

for the Factory Team kit #9043

R/C two channel surface frequency radio system with one servo.
Battery pack (6 cell).
Battery charger (we recommend a peak detection charger).
Electronic speed control.
R/C electric motor.
Pinion gear, 48 ptich. Teeth to be determined by type and wind of motor.

for the B3 Team kit #9032

R/C two channel surface frequency radio system with one servo. Battery pack (6 cell). Battery charger (we recommend a peak detection charger). Electronic speed control. R/C electric motor. Pinion gear, 48 ptich. Teeth to be determined by type and wind of motor.

for the B3 Sport kit #9013


R/C two channel surface frequency radio system with two servos. Battery pack (6 cell). Battery charger (we recommend a peak detection charger).

for the B3 Basic+ kit #9003

R/C two channel surface frequency radio system with one servo. Battery pack (6 cell). Battery charger (we recommend a peak detection charger). Electronic speed control. Pinion gear, 48 ptich. Teeth to be determined by type and wind of motor.

YOU WILL NEED THESE TOOLS TO ASSEMBLE YOUR KIT

- Phillips screwdriver #2.
- 2 1/8" flat head screwdriver.
- 3 5/16" driver or glow plug wrench.
- A Needlenose pliers.
- **5** Super glue (cyanoacrylic glue).
- Hobby knife WARNING! This knife cuts plastic and fingers with equal ease, so be careful.
- Precision ruler.

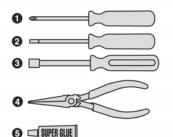

WARNING! Always use hand and eye protection with cyanoacrylic glue!

TOOLS SUPPLIED

Allen wrenches, .050", 1/16", 3/32", 5/64".



Molded tools (#6956):



HELPFUL TOOLS (NOT REQUIRED)

 Allen drivers (straight Allen wrenches with hex shaped handles) such as the following made by Associated:

#6957 .050" Allen wrench #6958 1/16" Allen wrench #6959 5/64" Allen wrench #6960 3/32" Allen wrench #6961 2.5mm Allen wrench

- Hand drill with 1/8" & 1/4" bits
- Vernier calipers
- Hobby scissors
- · Liquid dish soap
- Nut drivers (screwdriver-handled hex socket tools) such as the following from Associated: #SP-86 3/16" nut driver
 #SP-85 1/4" nut driver

WARNING!

Do not use a power screwdriver to install screws into nylon, plastic, or composite materials. The fast rotation speed can heat up the screws being installed. They can then break the molded parts or strip the threads during installation.

REACHING US

CUSTOMER SUPPORT

(714) 850-9342 Fax (714) 850-1744 http://www.rc10.com/help http://www.rc10.com/kits



©2000 Associated Electrics, Inc.

ASSOCIATED ELECTRICS, INC.

3585 Cadillac Ave. Costa Mesa, CA 92626-1401 USA http://www.rc10.com

READ THIS BEFORE BUILDING

READ THE MANUAL!

This manual is for four different B3 kits and will help you assemble and set up each one. Read the manual before starting your kit and before contacting us for help. "Hello, Associated, I need some help." "Did you read the manual?"

OPEN THE BAGS IN ORDER

The assembly is arranged so that you will open and finish that bag before you go on to the next bag. Sometimes you will have parts remaining at the end of a bag. These will become part of the next bag. Some bags may have a large amount of small parts. To make it easier to find the parts, we recommend using a partitioned paper plate for spreading out the parts so they will be easier to find.

SUPPLEMENTAL SHEETS


We are constantly updating parts to improve our kits. These changes, if any, will be noted in supplementary sheets located in a parts bag or inside the kit box. Check the kit box before you start and each bag as it is opened. When a supplement is found, attach it to the appropriate section of the manual.


MANUAL FORMAT


The following explains the format of these instructions.


The beginning of each section indicates:

- 1 Which bag to open ("BAG A") and which steps you'll be using those parts for ("FOR STEPS 1-3").
- **2** Which parts you will use for those steps. Remove only the parts shown. "1:1" indicates an actual size drawing; place your part on top and compare it so it does not get confused with a similar part.
- 3 Which tools you should have handy for that section.
- **4** An asterix (*) next to a part number indicates the part used in the Factory Team B3 kit. (You can use those numbers to upgrade your B3 kits to Factory Team specs.)
- **5** The instructions in each step are ordered in the order you complete them, so read the words AND follow the pictures. The numbers in circles are also in the drawing to help you locate them faster.
- **6** When we refer to left and right sides of the buggy, we are referring to the driver's point of view inside the car.

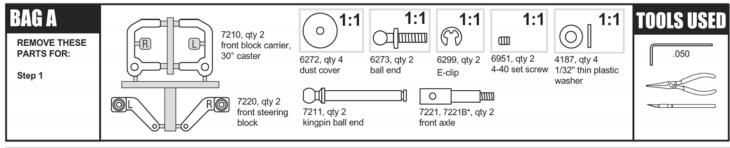


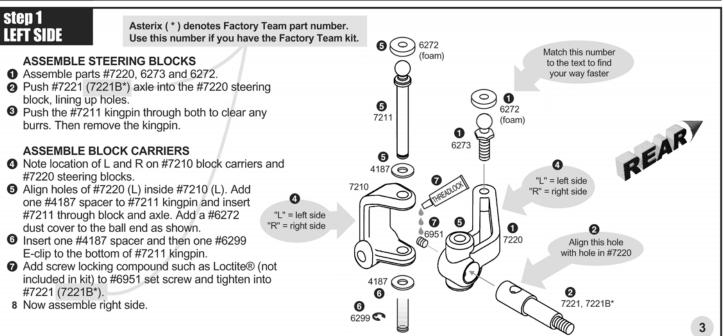

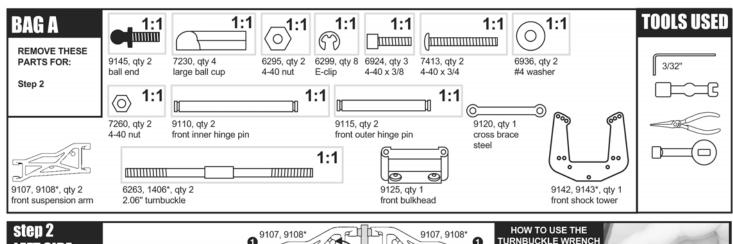

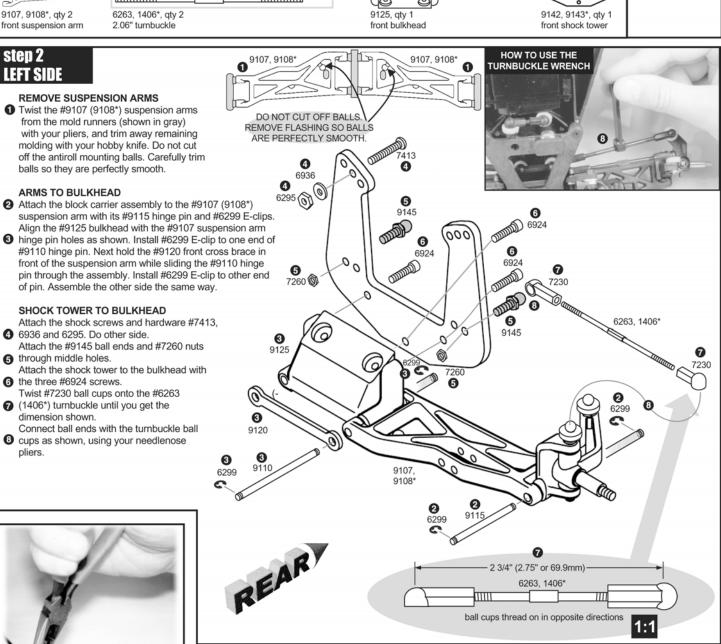



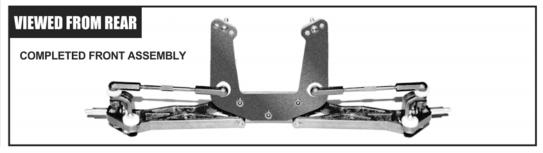













1:1

1:1

TOOLS USED

Steps 1-3











9155, qty 1 bell crank

9155, qty 2 bell crank bushing

9162*, qty 2 bell crank ball bearing



1:1

9158, 9156B*, qty 1 adjusting nut

1:1

9160, qty 1 mounting pin, right hand



9160, qty 1 mounting pin, left hand



9165, qty 1 9215, qty 3 6-32 x 3/16 drag link



9210, 9210B*, qty 1 kickup



4

6270

9158, 9156B*, qty 1 tube, aluminum



9158, qty 1 servo saver spring


9158, 9156B*

3

sten 1

KICKUP TO CHASSIS

- Add screw locking compound such as Loctite© (not included in kit) to the three #9215 screws and attach the #9210 (9210B*) aluminum kickup (nose plate) to the #9200 (9199*) chassis.
- 2 Place the two #9160 servo saver/bell crank mounting pins in the locating holes.

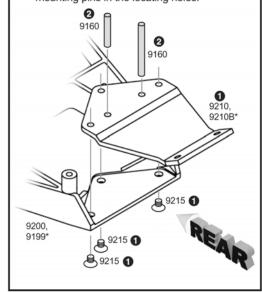


step 2

SERVO SAVER

- Push one #9155 servo saver bushing into each end of the #9158 (9156B*) aluminum
- 2 Slide the two #9155 servo saver arms onto the tube.
- Slide the spring and adjusting nut on the tube. Tighten the nut until 1/32" of the tube threads are exposed.
- Add three #6270 ball ends where shown and three #6272 foam dust covers onto them.

BELLCRANK


- Install the two #9155 (9162*) 9162 bushings or 9162* bearings into the bell crank.
- 6 Add two #6270 ball ends where shown and two #6272 foam dust covers onto them.

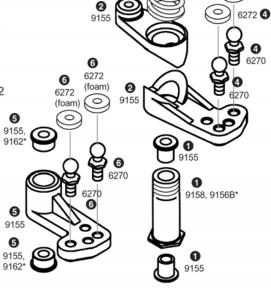

step 3

DRAG LINK

1 Install the #9165 drag link over the two ball ends with your needlenose pliers.

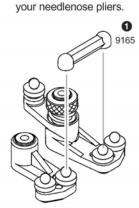

PROFILE


IFMAR 2WD World Champion

Masami has a long string of wins for Associated 2WD and Yokomo 4WD cars. Masami drove the fastest car at the '97 World's with his RC10B3 buggy, and took top honors in the 4WD category.

At the '99 Worlds in Finland Mark Pavidis (left) TQ'd with his RC10B3 and Masami (right) was crowned as World Champion driving his B3.



IFMAR WORLD CHAMPIONSHIPS, 1999

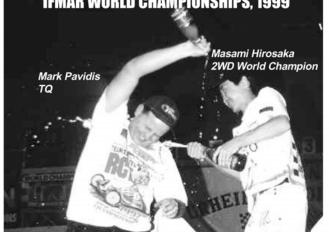

The RC10B3 TQ'd and won the 1999 IFMAR World Championship

5

BAG B

REMOVE THESE PARTS FOR:

Steps 4-6

1:1

6292, qty 2

4-40 x 3/8

1:1

6922, 6934*, qty 2

4-40 x 1/2



3 6923

6923, qty 2

4-40 x 3/4



3 9 6923







0

0

TOOLS USED

1/16"


step 4


SERVO SAVER TO CHASSIS

Place the servo saver assembly over the pins.

TOP PLATE TO CHASSIS

- 2 Line up the #9130 (9131*) front top plate with the servo saver pins and screw holes.
- Solt down the top plate with two #6923 screws tightly, then back off both screws one full turn. This will allow us to accomplish step 5 below.

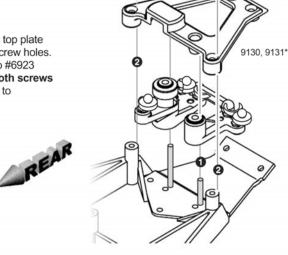

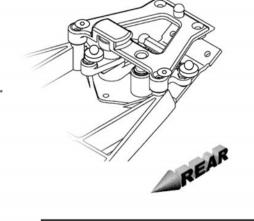

step 6


BUMPER TO CHASSIS

Use two #6922 (6934*) screws to secure the top plate to front bulkhead.

Secure front bulkhead to kickup plate with two #6292 screws.


3 Go back and tighten the two #6923 screws from Bag B, step 4.

9 Bolt on the #9220 bumper with the two #7673 (6933*) screws.

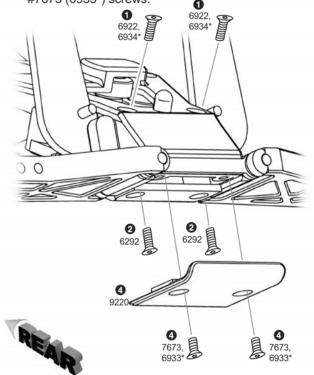

Step 5 FRONT END TO CHASSIS

Slip front end under top plate, then push rearward over kickup.

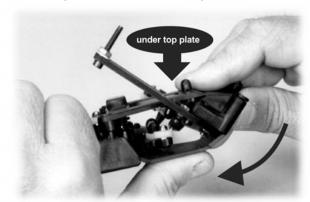



BAG B

REMOVE THESE PARTS FOR:


Step 7


1:1


7230, qty 4 large ball cup 1:1

6263, 1406*, qty 2 2.06" turnbuckle TOOLS USED



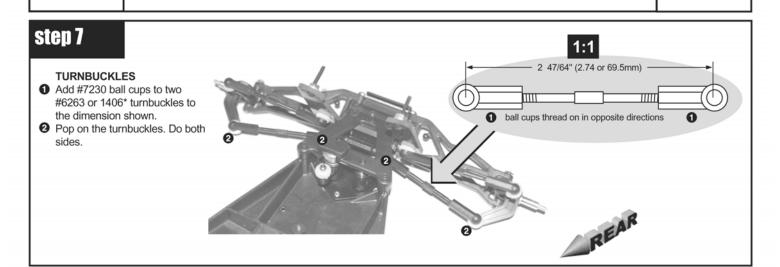

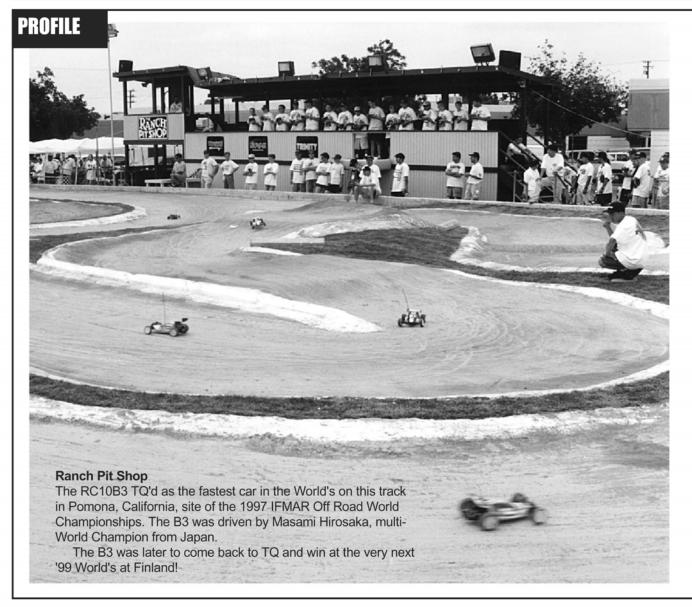


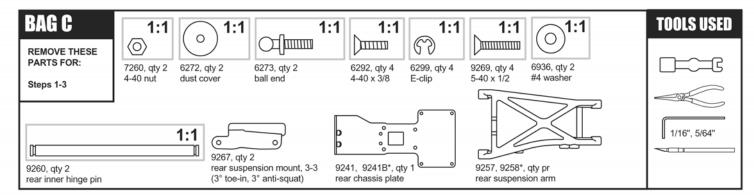

step 1

TRIM SUSPENSION ARMS

Twist the #9257 (9258*) suspension arms from the mold runners (shown in gray) with your pliers, and trim away the remaining molding with your hobby knife.

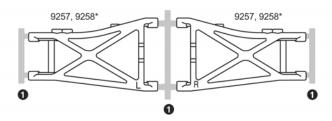


step 2 LEFT SIDE


REAR PLATE TO CHASSIS


• Attach the two #9267 (3-3) rear suspension arm mounts to the #9241 (9241B*) chassis plate with two #9269 5-40 x 1/2 screws and a single #6936 washer as shown.

These mounts are marked L3-3 (left) and R3-3 (right). The coding stands for 3° toe in and 3° anti-squat. *NOTE: by using the #4 washer, your anti-squat is effectively reduced to 1.5°.*

- Pasten the chassis plate to the bottom of the chassis with four #6292 screws.
- Add two #6273 ball ends to the inside holes of the chassis, then thread on the #7260 nuts to the ball ends. Then add the #6272 foam dust covers.

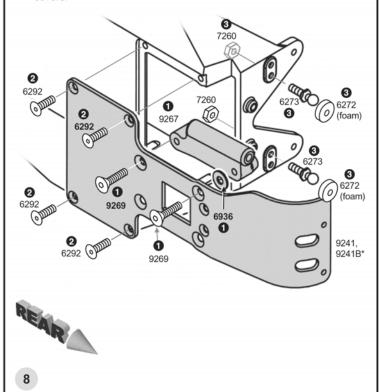

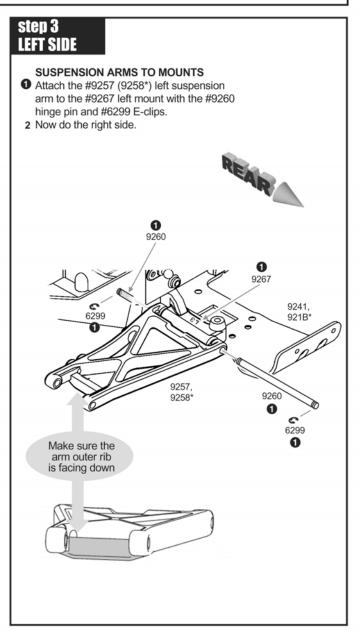


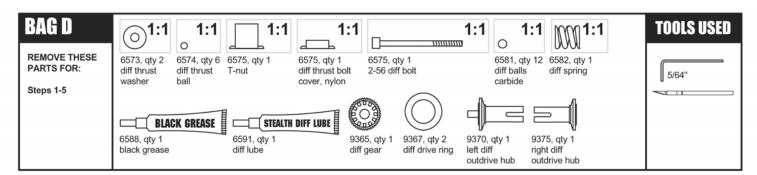





SET UP DIFF GEAR

- Add a generous amount of #6591 diff lube to the #9365 diff gear ball holes and push in the twelve #6581 diff balls. Then push in the lube that was pushed out.
- 2 Insert one #6597 bushing or #6589 bearing into the

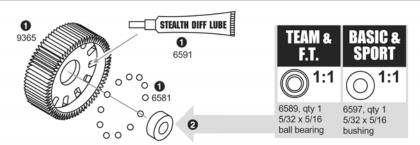

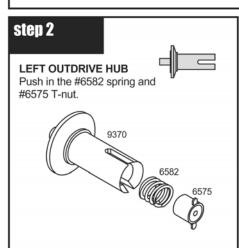

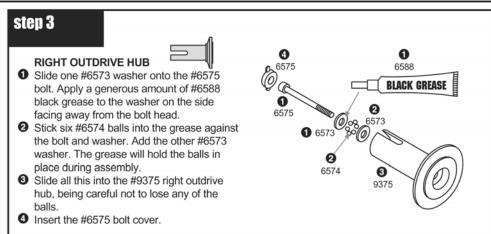



step 4

RIGHT OUTDRIVE HUB


- Insert one #6597 bushing or #6589 bearing into the #9375 right hub.
- Add a light coat of #6591 diff lube to right hub where shown.
- 3 Place a #9367 diff drive ring and then the gear assembly on the hub.

ASSEMBLE THE HUBS

- Add a light coat of #6591 diff lube to left hub where shown.
- **5** Place a #9367 diff drive ring on the hub.
- Push the #9370 hub over the diff bolt and center the hub.

CHECK ALIGNMENT OF HUBS

- 7 Tighten the diff with your 5/64" Allen wrench, but not completely.
- 8 Rotate the diff hubs several times as you are tightening the bolt to check for proper alignment of the parts.
- 9 We'll adjust the diff on the next page.

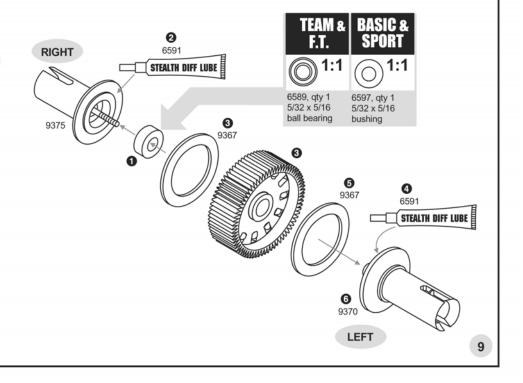

step 5

ADJUST THE DIFFERENTIAL

1 As you tighten the diff bolt, you will notice the Tnut ears moving closer to the bottom of the diff hub slot. This compresses the spring behind the T-nut. The spring should be fully compressed at the same time the T-nut reaches the end of the slot. Caution: Pay close attention to feeling when

the spring is fully compressed. Do not overtighten the **bolt.** When you feel the spring fully compressed, loosen the diff bolt 1/8 of a turn. No more, no less. Your diff should now operate very smoothly when turning the hubs in opposite directions. After you have driven the car once, recheck the diff adjustment. Never adjust the diff any other way.





REMOVE THESE PARTS FOR:

Steps 6-7



1:1

6928, 6935*, qty 3 4-40 x 1

1:1

7669, qty 2 drive shaft spacer



TOOLS USED

1/16", 3/32



right tranny case



left tranny case




idler gear

7337, qty 3 idler gear shaft washer, gold

step 6

ADD BUSHINGS OR BEARINGS TO THE CASE HALVES

- 1 Cut the two #9352 transmission case halves and the three #9352 spacers from the runner.
- 2 Add bushings or bearings to each case half.

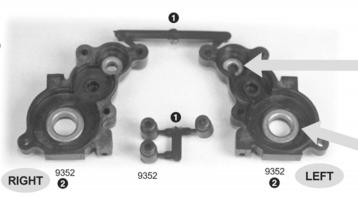

SPORT

3977, qty 2 3/16 x 3/8 unflanged bearing 6599, qty 2 3/16 x 3/8 bushing

1:1




3976, qty 2 3/8 x 5/8 unflanged bearing

6598, qty 2 3/8 x 5/8 bushing

1:1



10

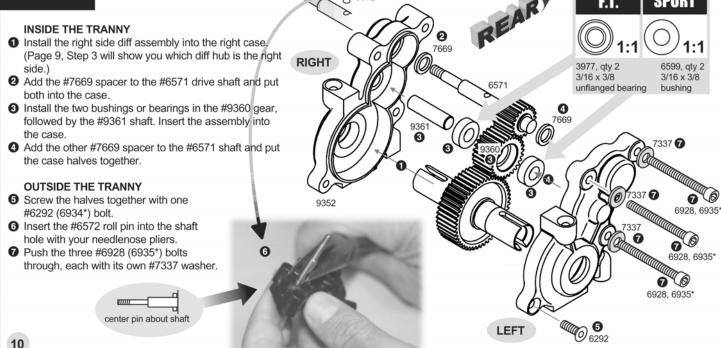

BAG D

REMOVE THESE PARTS FOR:

Steps 8-11



6292, 6934*, qty 2 4-40 x 3/8



6568, qty 4 4-40 x 3/16

1:1



9352, qty 3 9251, qty 1 motor plate inner torque spacer clutch hub



9252, qty 1 outer torque clutch hub



9253, qty 1 clutch disc



6587, qty 1 torque control spring



1:1



6594, qty 2 thrust bearing washer (thin)



6594, qty 1 thrust bearing (thick gold)



6599, qty 1 3/16 x 3/8 bushing



6629, qty 1 5-40 locknut



6693, qty 1 81T 48 pitch Stealth spur gear



7373, qty 1 motor plate gasket foam



7874, 7873*, qty 2 4-40 x 7/16



9245, 9245B*, qty 1 motor plate



9380, 9381*, qty 1 rear transmission brace

step 8

REMOVE THE BACKING


• Remove the backing and center from the #7373 gasket.



step 9

INSTALL THE MOTOR PLATE

- Center the #7373 gasket around the large round hole of the 9245 (9245B*) plate.
- 2 Install the three #9352 spacers.
- (9245B*) plate and fasten with the three #6928 (6935*) screws.

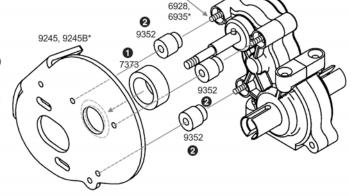


0

step 10

INSTALL THE ASSOCIATED TORQUE CLUTCH (ATC)


- Add the #9251 inner hub to the shaft, lining up the notch with the roll nin.
- 2 Install the #9253 clutch disc into the inner hub, then add the #9252 outer hub and #6599 bushing.
- Install parts in the following order: #6594 (thin), 6594 (thick), 6594 (thin), 6587 black spring, 6629 locknut.
- Orient the #6693 spur gear side facing out as shown and mount to #9252 with two #6568 screws.
- Tighten the #6629 locknut so the end of the shaft is flush with the end of the nut. This is a good initial adjustment. For further info on the torque clutch, see the tuning section on page 27.

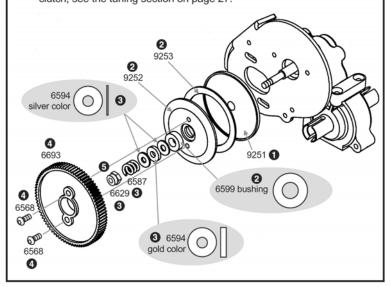


step 11 LEFT SIDE

MOUNT THE TRANSMISSION

- Mount the #9380 brace with two #7874 (7873*) screws.
- Mount the tranny with the two #6292 (6934*) screws from below, lining up the motor plate holes as shown.
- Bolt the motor plate to the rear chassis with two #6568 screws.

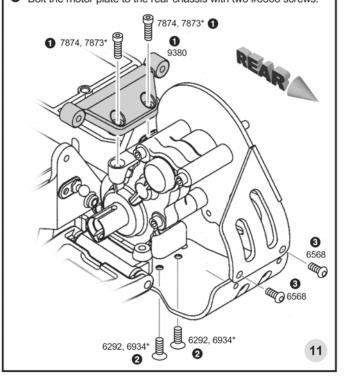


BASIC & SPORT KITS ONLY

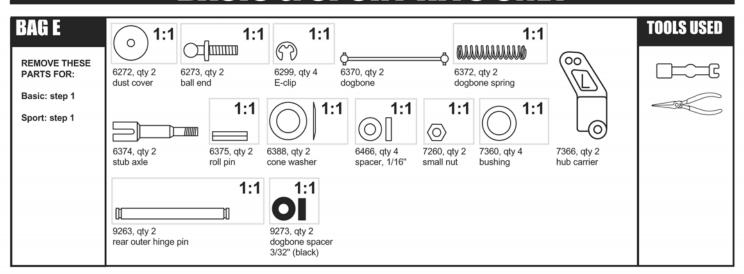


step 1 LEFT SIDE

BASIC & SPORT KITS ONLY

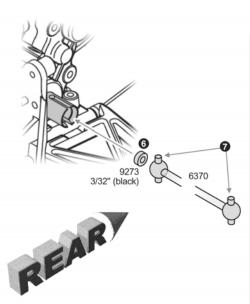

ASSEMBLE REAR HUB CARRIERS

- Note that the #7366 hub carriers are marked for left and right. Insert #7360 bushings into each side of the left hub carrier. Install the #6374 stub axle as shown.
- Insert #6388 cone washer as shown, raised outer edges facing out. Add #6375 roll pin.
- 3 Insert the #6372 spring into the stub axle.
- Thread on the #6273 ball end and add the #7260 nut to the other side. (When you do the other hub carrier, thread the ball end into the other side so both will point to the front when assembled.) Add a #6272 dust cover to the ball end.
- 5 Follow the above for the right hub carrier.

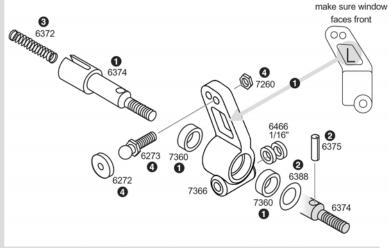

9257 REAR

8 6466 1/16", 2

8 7366


HUB CARRIERS TO REAR ARMS

- (Upper left drawing:) Push the #9273 spacer into the outdrive of the transmission.
- (Upper left drawing:) Insert the dogbone pins into the stub axle and outdrive hub as shown.
- Place the hub carrier between the arm holes as shown and add two #6466 spacers where shown.
- **9** Add one #6299 E-clip to the end of the #9263 hinge pin, insert it as shown, then add the other #6299 E-clip.
- 10 Now install the axle assembly for the right side.

9263

6299

TEAM & FACTORY TEAM KITS ONLY

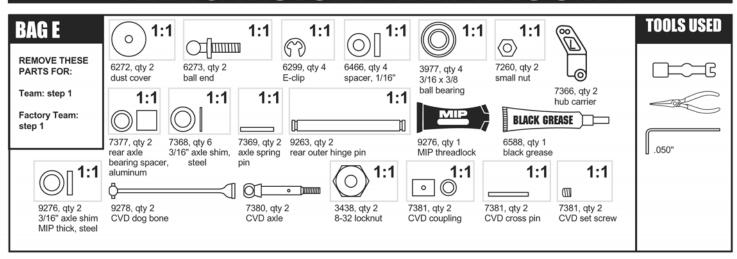

Step 1 TEAM & FACTORY TEAM KITS ONLY

ASSEMBLE THE #9276 MIP CVD™ (Constant Velocity Drive™)

- Spread some Associated #6588 black grease inside the #7380 axle hole where shown, then on the #7381 coupling, and insert the coupling into the axle.
- 2 Slide the axle into the #9278 dogbone, aligning the cross holes.
- 3 Insert the #7381 cross pin, making sure it is evenly spaced on both sides of the #9278 bone.
- Add the #9276 MIP thread lock to the #7381 set screw. Angle and turn the MIP CVD™ so the set screw can be screwed in with the Allen wrench.

5 Assemble the other axle.

0 7381 a cross pin 9278 6588 7380 BLACK GREASE REAR O 4 7381 9276 4 coupling 7381 0 7366 6299 9257 9258 6299 9263


REAR HUB CARRIERS

- Note that the #7366 hub carriers are marked left and right. Slide one of the thin #7368 3/16" axle shims onto the axle.
- Install one #3977 bearing, then the #7377 bearing spacer. NOTE: You MUST use the bearing spacer. Slide the axle assembly into the hub carrier from the rear.
- Install the second #3977 bearing into hub carrier and onto the axle, followed by the #9276 thick spacer and two #7368 thin spacers. Insert the #7369 roll pin into axle.
- Thread on the #6273 ball end into the hole shown and add the #7260 nut to the other side. (When you do the other hub carrier, thread the ball end into the other side so both ball ends will point to the front when

into the other side so both ball ends will point to the front when assembled.) Add a #6272 dust cover to the ball end.

5 Follow the above for the right hub carrier.


make sure window faces front

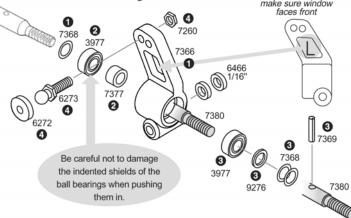



HUB CARRIERS TO REAR ARMS


- O Place the left hub carrier between the arm holes as shown and add two #6466 spacers where shown.
- Add a #6299 E-clip to the #9263 hinge pin insert it as shown, then add an E-clip at the other end of the hinge pin.
- 8 Insert the universal dog bone into the slots of the outdrive hub.
- 9 Now install the axle assembly for the right side.

ALL KITS

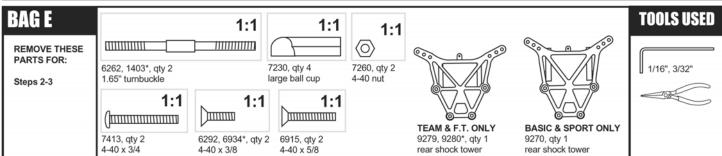

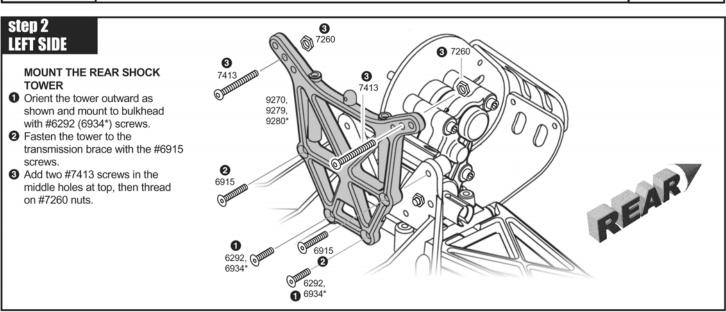

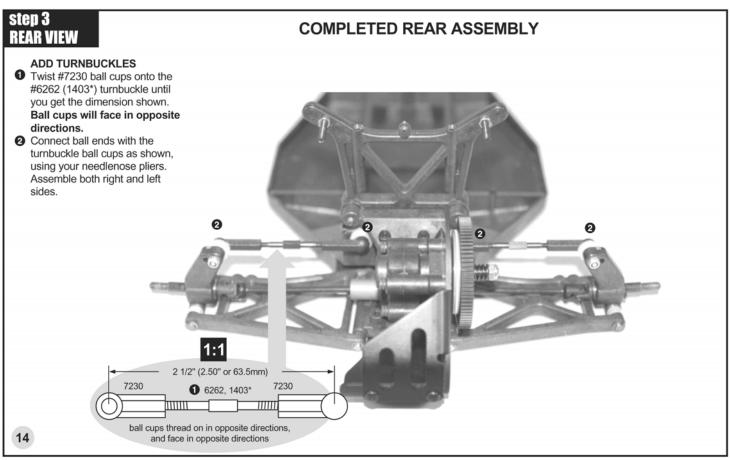

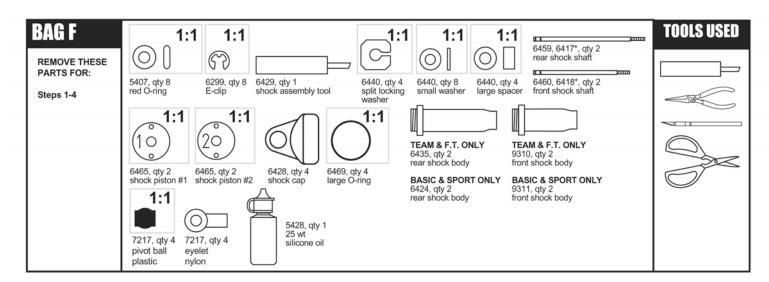




TRIM SHOCK PISTONS

Burrs interfere with smooth shock action within the shock body. To remove from tree without creating burrs, twist up, not down. Remove two each of #1 and #2.


Remove remaining burrs carefully with hobby knife.

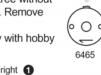

burr

0



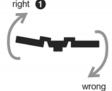

TRIM SHOCK WASHERS & SPACERS


For best shock performance, trim each part from the parts tree so no part of the two molding runners remain. It is safer to remove a tiny amount of the part than to risk the chance of a burr remaining. Short blade scissors or a hobby knife will work fine, as shown at right. Run your finger over the edges to feel for burrs you cannot see. Remove the ones you find. Burrs can keep the parts from snapping in correctly, and can cause the shock to leak or the shaft to iam.





step 2


SHOCK SEAL PARTS

- Install the #5407 and #6440 parts shown onto the #6429 tool tip.
- Add 3-4 drops of #5428 oil to the inside of the shock body, and to the shock seal parts.
- Insert the tool tip into the shock body all the way. Push easily until the parts snap into place.
- Check the tool height in photo. The right shock shows just before snapping parts in place, the left shows after.
- 5 If your shocks do not snap together easily, check the parts for burrs again.
- 6 Assemble the other shock bodies the same.

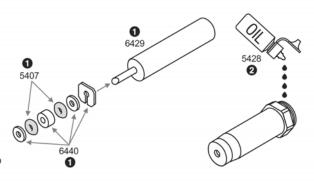

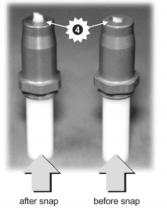

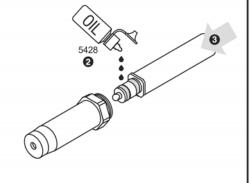

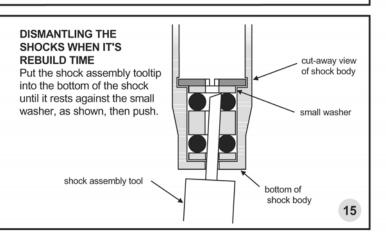

step 3


FINAL INTERNAL SHOCK ASSEMBLY

- 1 Add #6469 O-ring over threads of shock body.
- 2 For the #6460 (6418*) front shock shafts, install a #6299 Eclip on either side of a #6465 (#2) piston. For the #6459 (6417*) rear shock shafts, install a #6299 E-

clip on either side of a #6465 (#1) piston. 3 Place a couple drops of #5428 oil on threaded part of shaft

and insert into shock body.

Push the #7217 pivot ball and eyelet together, then screw the eyelets onto the end of the shock shaft. Hold shaft with rag and needlenose pliers next to threads.

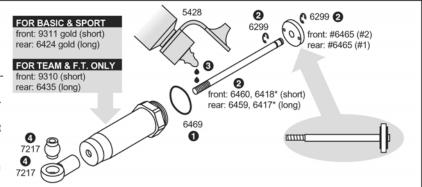

step 4

FILLING THE SHOCKS

- 1 Holding the shocks upright, fill with oil to the top of the shock body.
- Slowly move the shaft up and down several times to allow air bubbles to escape to the top.
- Refill with oil to the top of the shock body.
- 4 Push the shaft in until the piston is level with top of shock body. The oil will slightly bulge up above the shock body.
- 6 Install the #6428 shock cap and tighten. There should be no gap between the cap and the hex portion of the shock body when

SETTING THE REBOUND


6 Move the shock shaft in and out a few times an then push it all the way in. It should be easy to push the shaft in until the eyelet hits the body.



7 Then the shaft should push itself out approximately 1/4" to 3/8" (6.3mm -9.5mm").

If the shocks do not push out this far, there is not enough oil in them. Add just a little oil and try steps 6-7 again.

 If the shocks push out farther than the distance in step seven, or you cannot push the shaft in until the evelet hits the body. there is too much oil. Loosen the cap a half turn (with the shaft extended) and pump out a small amount of oil by pushing the shaft in. Retighten the cap and try steps 6-7 again.

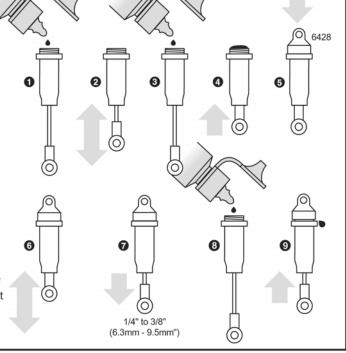

BAG F

REMOVE THESE PARTS FOR:


Step 5



6474, qty 4 spring collar

6478, qty 2 rear spring silver


6494, qty 2 front spring green

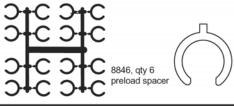

step 5

FINAL SHOCK ASSEMBLY

- Install one #6474 spring collar onto the shock body.
- Install the correct spring for front and back shocks.
- 3 Pull the shock shaft out as far as it will go, compress the spring, then insert the #6474 spring cup over the #7217
- Twist two 1/4" thick #8846 preload spacers from the tree. For the front shocks, slide a preload spacer between the spring collar and shock body hex.
- **5** Twist two 1/16" and 1/8" thick preload spacers off the tree. Slide them onto the rear shocks between the spring collar and shock body hex.

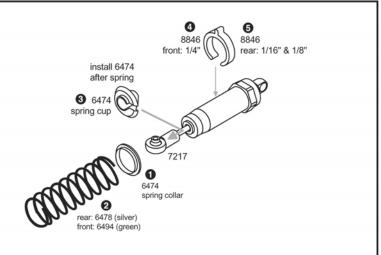

BAG F

REMOVE THESE PARTS FOR:

Steps 7-8



6222, qty 4 4-40/5-40 locknut




6473, qty 4 shock bushing




6918, qty 4 4-40 x 1/2

TOOLS USED



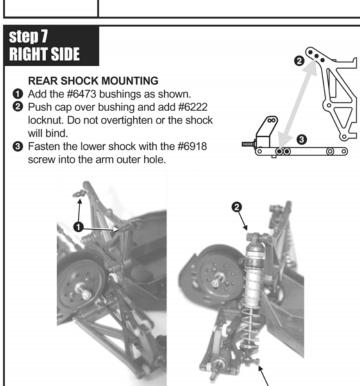

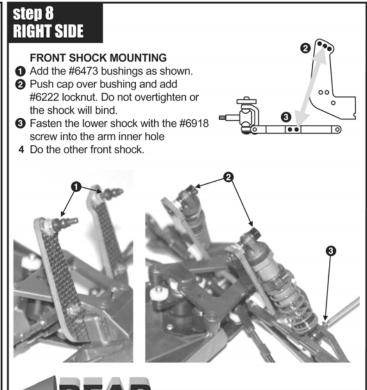

BAG G

REMOVE THESE PARTS FOR:

Step 1



9180, qty 1 ea servo horns

6270, qty 1 ball end

REAR



1:1 0

6272, qty 1 dust cover

1:1 (0

7337, qty 4 washer



7336, qty 2

0 0 7336, qty 2 servo mount

spacer **1:1**

BASIC, SPORT, TEAM ONLY 6917, qty 4 4-40 x 3/8

1:1 OR


FACTORY TEAM ONLY 6860*, qty 4 4-40 x 3/8

TOOLS USED 1/16'

step 1

ASSEMBLE THE SERVO

- 1 Find the approporiate #9180 servo horn for your servo, marked "A" for Airtronics, "F" for Futaba, "J" for JRPropo, and "H" for Hitec. Remove the servo horn from your servo and replace with the #9180 horn, then fasten with the stock mounting screw.
- 2 Install the #6270 ball end into the servo horn. Add the #6272
- 3 Attach the #7336 mounts with the #6917 (6860*) screws and #7337 washers. Add the #7336 spacers if you have an Airtronics servo.

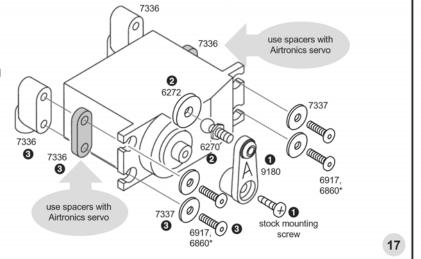

BAG G

REMOVE THESE PARTS FOR:

Step 2



9170, qty 2 servo link cup



9170, qty 1 servo link



7673, 6933*, qty 2 4-40 x 5/16






step 2 RIGHT SIDE

MOUNT THE SERVO


- 1 Mount the servo with two #7673 (6933*) screws.
- Assemble the #9170 servo link, matching the length to the true scale drawing.
- Use needle-nose pliers to attach link to ball ends.

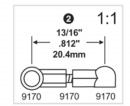





PARTS REMOVED TO IMPROVE CLARITY

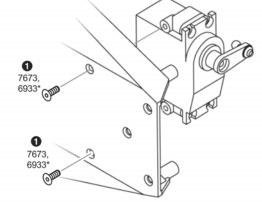



BAG G

REMOVE THESE PARTS FOR:

Step 3



6515, qty 2 3mm x 6mm gold



2 6936, qty 2 m #4 washer



6951, qty 1 4-40 x 1/8 set screw




SPORT ONLY 6681, qty 1 23 tooth pinion gear



SPORT ONLY 6520, qty 3 .1uf capacitor



TOOLS USED

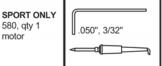


step 3 RIGHT SIDE

INSTALL THE MOTOR

- Attach three capacitors to your motor according to the instructions that came with your motor, if they are not on already. For the Sport kit, solder the colored plug wire to a positive tab on the motor and the black wire to a negative tab. For the Basic, Team & Factory Team kits, you must buy your own motor, then follow this step.
- Install the #6681 gear with the #6951 set screw going to the flat side of the shaft. For the Basic, Team & Factory Team kits, you must buy your own pinion gear. If you use an electonic speed control, see its directions for installing motor capacitors.
- Use two #6515 screws and two #6936 washers to mount the motor as shown so the gears mesh.


SET THE GEAR MESH

You should be able to rock the spur gear back and forth in the teeth of the pinion gear without making the pinion gear move. If the plastic gear is tight, then loosen the #6515 screws and move the motor away, then try again. A gear mesh that is too tight or too loose will reduce power and damage the gear

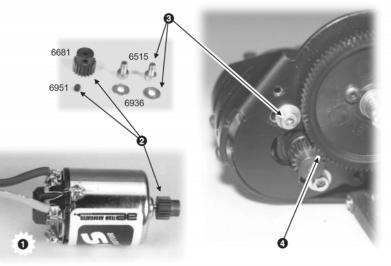





SPORT KIT ONLY

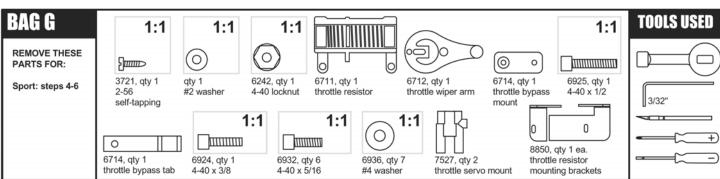


step 5

step 4 MOUNTS TO SERVO 1 Attach the #7527 mounts to the servo with four #6932 screws and four #6936 washers. Orient your servo output shaft as shown here. **1** 6932 **9 RESISTOR TO SERVO 9** 6932 **1** 2 Push the #8850 brackets **1** 6936 into the #6711 resistor. 6936 1 3 Attach the brackets to the **1** 6932 **2** mounts with two #6932 6932 🛈 screws and two #6936 **1** 6936 **(** washers. 6936 1 0 Ø 7527 8850 **3** 6936 7527 @mm **3** 6932 0 6711 0 932 Omn **3** 6936 **3** 6932

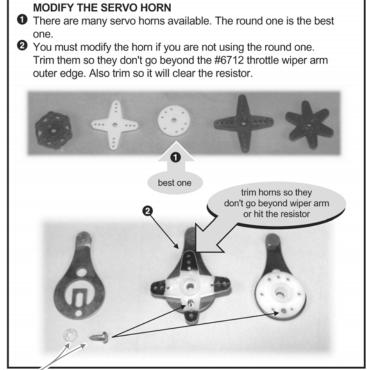

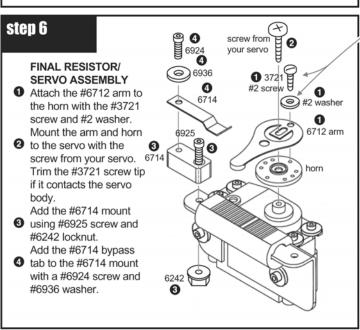

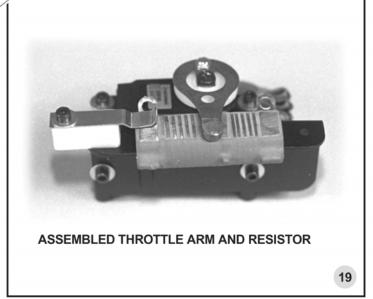


SPORT KIT ONLY



REMOVE THESE PARTS FOR:

Sport: steps 7-9



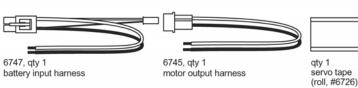






TOOLS USED

step 7

WIRE THE RESISTOR


- Solder the short red wire between the positive resistor tab and the brass bypass tab.
- 2 Solder the #6745 harness wires to the wiper arm and negative tab on the resistor.
- 3 Solder the #6747 harness to the positive and negative tabs on the resistor.
- 4 Run the wire of the servo attached to the resistor through the battery slot area.

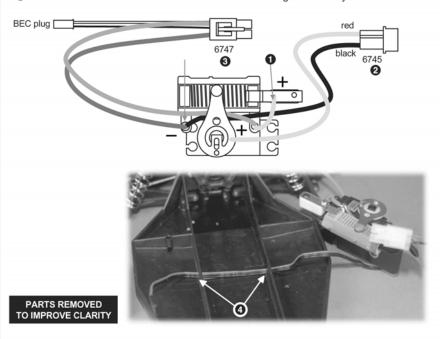



SPEED CONTROL TO CHASSIS

• Attach speed control to chassis with two #6917 screws from the bottom.

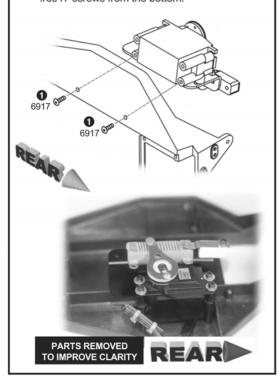


ALL KITS


step 9 LEFT SIDE

RADIO RECEIVER TO CHASSIS

- 1 Cut a piece of servo tape, remove the paper from one side, and attach it to the bottom of your receiver.
- 2 Slip the receiver wire through the built-in chassis antenna mount.
- 3 Remove the paper from the other side and attach to the chassis as shown.
- Plug the small #6747 BEC plug (of step 7) into the receiver's on/off switch.
- 5 Follow the instructions that accompany your radio receiver system.



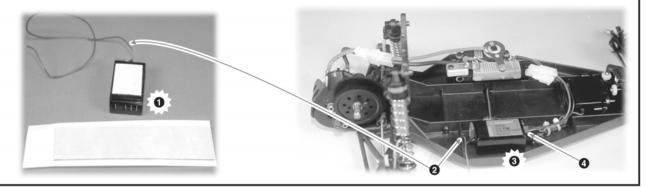


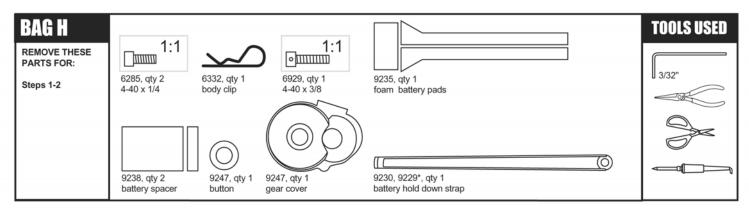


step 1 LEFT SIDE

INSTALLING THE BATTERY PACK

- 1 Install the three #9235 foam battery pads.
- Install the two #9238 foam battery spacers. (The tuning section will show you how to adjust your steering or traction by moving these spacers.)
- 3 Install your battery pack. (See step 5 if you need to assemble it first.)
- Thread on the #6929 screw. Aim the body clip hole across the chassis. Add the #9230 (9229*) battery hold down strap. Adjust the screw so the batteries are held tight, but you are still able to push the #6332 body clip through the screw.

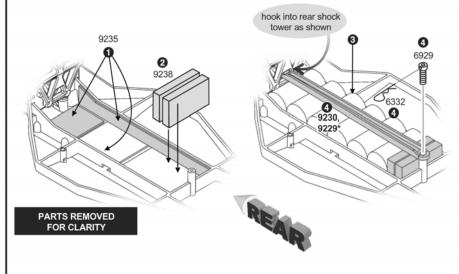


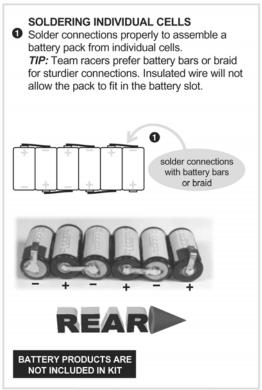

step 2 RIGHT SIDE

GEAR COVER

- Trim the #9247 gear cover, cutting out three holes shown. Insert the #9247 insert button into the large hole cut into the gear cover.
- 2 Mount the cover with two #6285 screws.

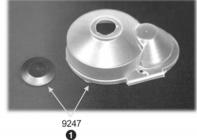




REMOVE THESE PARTS FOR: Step 3 qty 1 servo tape

step 3

RADIO AND RECEIVER INSTALLATION

- Install your battery pack as shown. If you need to assemble the battery, see step 1 #5 on page 21.
- 2 Cut a piece of servo tape and use it to attach your ESC and switch where shown.
- Out a piece of servo tape and use it to attach your receiver where shown.
- Connect the ESC and steering servo to your receiver according to your radio or ESC instructions, then connect the motor to your ESC.

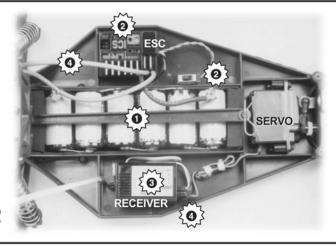



BAG H

REMOVE THESE PARTS FOR:

Step 4

6338, qty 1 antenna tube cap 6338, qty 1 antenna tube

step 4

MOUNT THE ANTENNA


- 1 Push your reciever wire through the built-in antenna mount hole.
- 2 Thread the wire through the #6338 antenna and push the antenna firmly into the chassis' antenna mount hole.
- 3 Add the #6338 cap to the other end of the antenna tube.





SPORT KITS ON **BAG H TOOLS USED** REMOVE THESE PARTS FOR: 1:1 050' Basic & Sport: Step 5 9454, qty 1 6182, qty 1 4436, qty 2 6190, qty 2 6332, qty 2 6142, qty 1 4-40 x 5/16 wing thing body clip .065" wing wire wing body step 5 WING ASSEMBLY 3 Trim and paint the #6182 wing. Make two **BODY MOUNTING** holes for the wing things. 0 1 Trim and paint the body. (See painting Insert the #6190 wing things. Insert the 6182 instructions on page 25 if you have not done #9454 wire through the wing things. this before.) 5 Secure the wire to the wing things with the use inner holes **4** 6190 2 Secure the #6142 body to the chassis with #4436 set screws. two #6332 body clips where shown. Output Properties of the pr where shown. 6190 cut 6 openings for body Follow trim lines carefully. body & wing mounts These openings allow 9454 for shocks these openings allow 4 antenna for shocks 4436 6 4436

TEAM ASSOCIAT

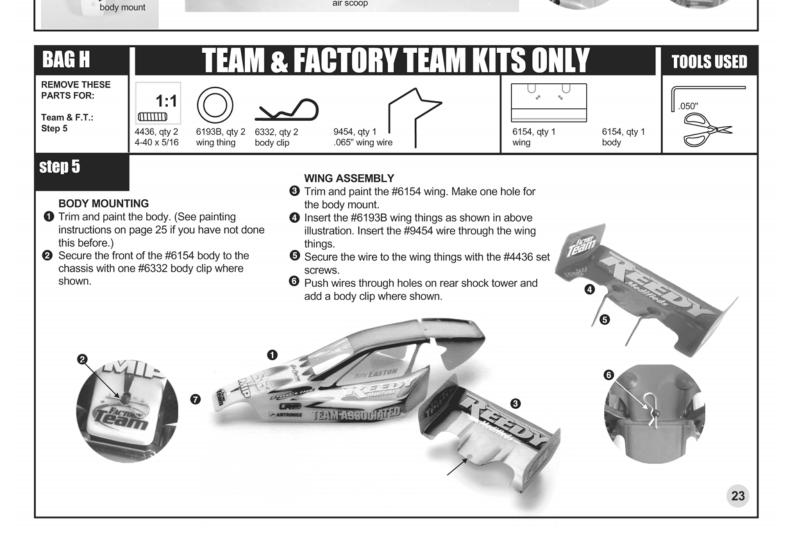


TOOLS USED BAG I 1:1 1:1 0 0 REMOVE THESE PARTS FOR: 3438, qty 2 6222, qty 2 8-32 locknut 4-40/5-40 3/32" Steps 1-2 locknut \odot 1:1 1:1 Basic & Sport ONLY **Basic & Sport ONLY** 6825, qty 2 6878, qty 2 Basic & Sport ONLY Team & F.T. ONLY 9490Y, qty pr 9480Y, qty pr Holeshot rear tire M2 front tire 6599, qty 4 3977, qty 4 1 piece rear wheels 1 piece front wheels 3/16 x 3/8 3/16 x 3/8 unflanged bushing unflanged ball bearing Team & F.T. ONLY Team & F.T. ONLY


9482, qty pr

Pro-Line front wheels

9491, qty pr

Pro-Line rear wheels

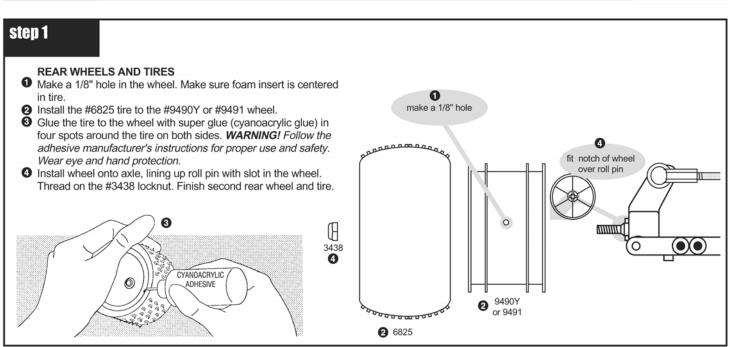


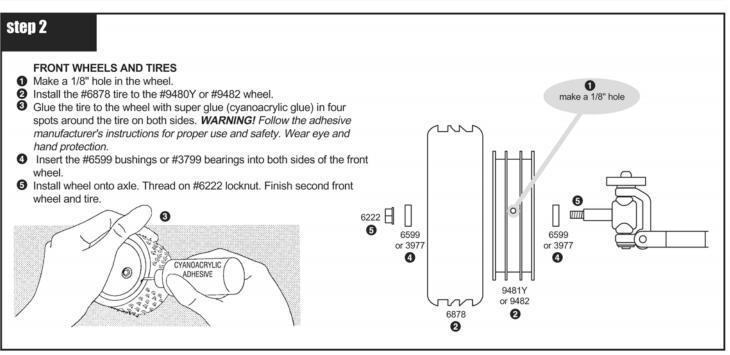





driver	
track_	
date _	

FRUNT SUSPENSIUN		
FRONT BLOCK CARRIER (caster setting 25° 30°	ng)	
FRONT RIDE HEIGHT:		
STEERING BLOCK		
ANTI ROLL BAR:	NONE THICK THIN OTHER	
	<u> </u>	☐ TOE-IN° ☐ TOE-OUT°

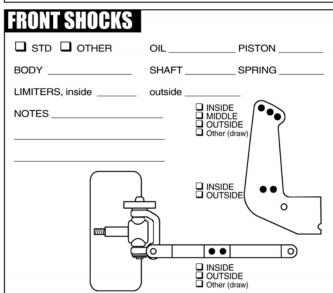

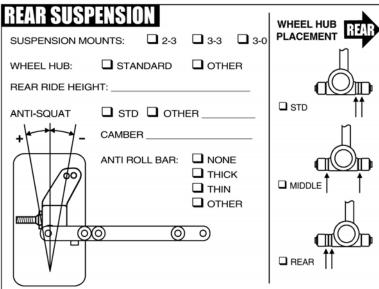

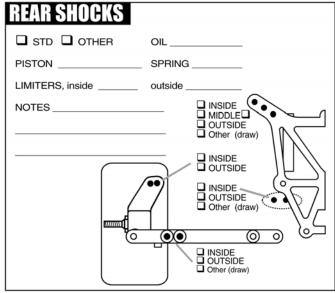


OTHER	MOTOR, TRANSMISSION & ELECTRICAL				
TIRES & WHEELS		MOTOR	PINION	SPUR GEAR	
FRONT TIRES	D FOAM	DRIVESHAFTS			
REAR TIRES	□ FOAM	SLIPPER 🗖 ST	D HYDRA U VISCO	OIL	_
FRONT WHEELS 1 PIECE	☐ 3 PIECE ☐ OTHER	BATTERY TYPE _	PLACEMENT $^{ heta}$	FRONT θ MIDDLE	θ REAR
CHASSIS \square STD $^{\theta}$ SHORT	☐ LONG ☐ GRAPHITE	RADIO	SPD. CONT	SERVO	

COMMENTS/EXCUSES			



See page 2 for complete specs on what is included in each kit. Factory Team Kit shown. Radio and electronics are not included in kits.

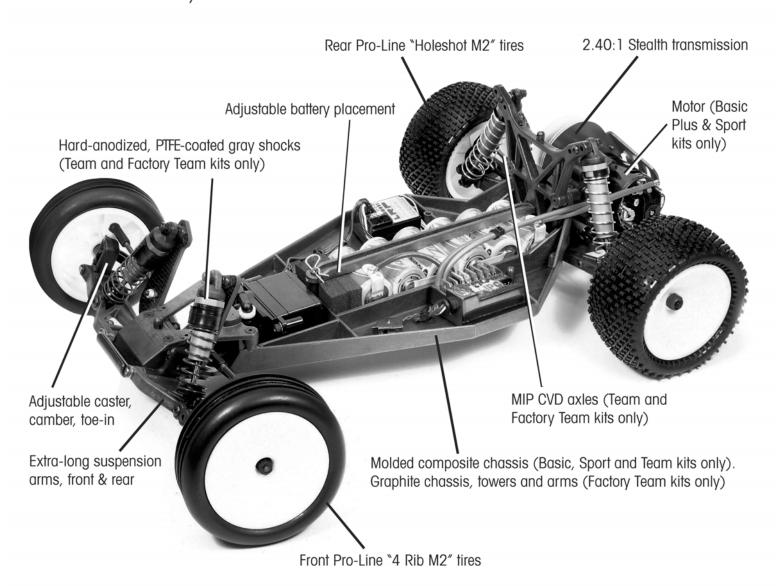

TEAM ASSOCIATED RECOMMENDS





