



Setup Sheet

Track: Trelleborg Euro's 2000

Driver: Teppo

Date: Starting Set-up

Indoor
 Outdoor

Slick
 Loose-Dirt

Smooth
 Rough

Thight Open

High-Bite

Extra-Rough

Front Suspension *(Circle or Check the Appropriate Settings)*


Toe In Out 0 °

Ride Height Bones just Bellow level

Camber - + 1 °

Caster Stock Other _____ °

Diff Plastic Steel Drive Shafts CVD Steel

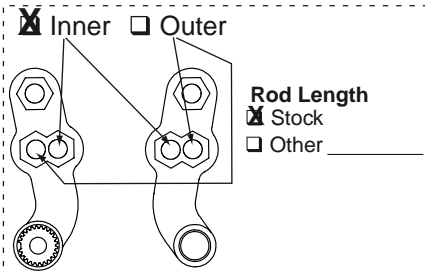

Notes: 0deg camber @ max ride height

Sway Bar

No
 Yes size _____

Front Shocks


Oil: 25wt Losi

Piston: 57 Standard / Drilled

Spring: Orange -2.5 Coils Cut off

Internal Spring: Yes

Limiters: Inside- Only Spring Outside-

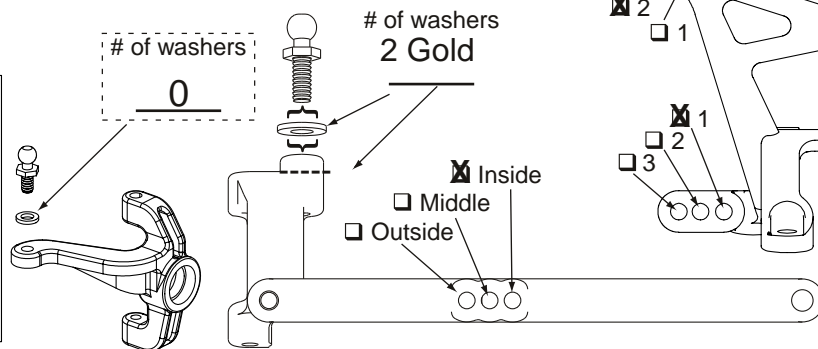

Rear Suspension

Notes: Flipped pivot plate's used

Toe-In Inside Outside 3 °

Ride Height Bones just below level

Camber - + 2 °

Pivot Support 0 No Shim Shim Under Front Shim Under Rear

Diff Plastic Steel Drive Shafts Dogbone Aluminum CVD Steel Sliders Plastic

Sway Bar

No
 Yes size 1.6mm


Rear Shocks

Oil: 40wt Losi (57 w/One hole drilled to 1.7mm)

Piston: 3x1.5mm Standard Drilled

Spring: Yellow

Limiters: Inside- 0.090" Outside- 2 x "B"

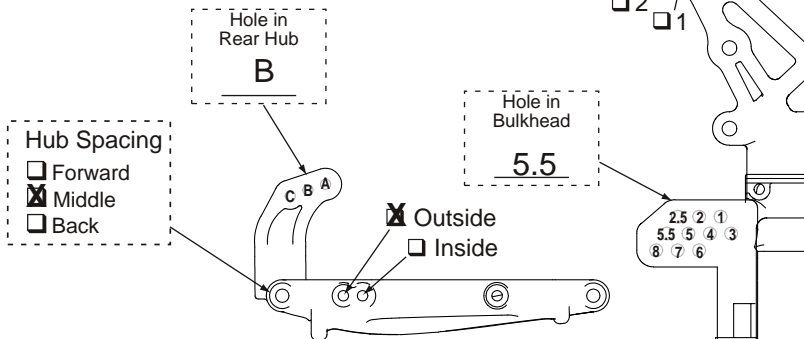

Tires

Front: Taper Pin

Compound Red

Foam Losi Firm

Rear: Taper Pin, Wide wheels

Compound Red

Foam Losi Firm

Motor: LRP 9x3

Pinion: 18

Spur: 84

Wing Setup: 4WD Full Wing

Clicker Adjustment: Locked One-Way Soft Spring

Slipper: Yes No Stiff Spring _____

Battery Placement: Back Forward Other: _____

Notes: _____