



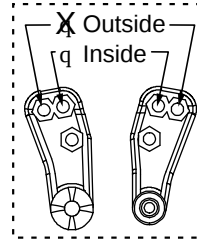
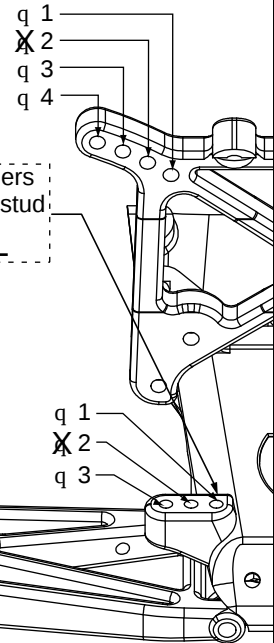
Setup Sheet

Track: Standard Set UpDriver: Matt Francis☐ Indoor
☐ Outdoor☐ Smooth
☐ Rough☐ Slippery
☐ High-Bite
☐ Blue-GrooveDate: January 2001☐ Tight / ☐ Open

FRONT SUSPENSION (Circle or Check the Appropriate Settings)

Toe ☐ In 0°
☐ OutRide Height Arms LevelCamber ☒ - 1/2°
☐ +Caster ☒ Stock 0°
☐ OtherSway Bar ☒ No
☐ Yes size

of washers under steering / tie-rod ball studs

Spindle ball stud: 2Bellcrank ball stud: 0# of washers under ball stud: 1

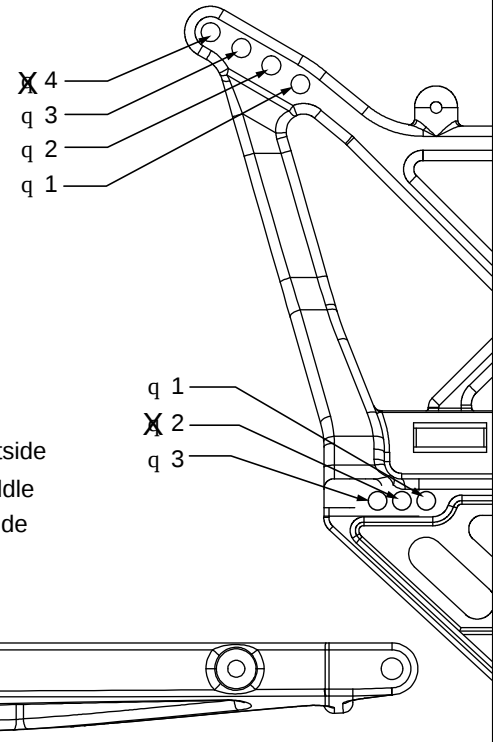
Front Shocks

Oil: 35 wt LosiPiston: 56 ☒ Standard / ☐ DrilledSpring: Buggy GreenLimiters: ☒ Inside- B spacer ☐ Outside- none

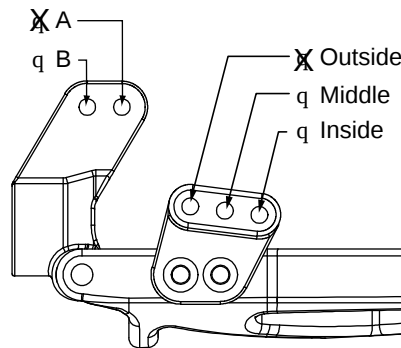
Spindle Location

☐ Top
☐ Middle
☒ Bottom

REAR SUSPENSION

Toe-In ☒ Inside 3°
☐ OutsidePivot Support 2 deg ☒ No Shim
☐ Shim Under Front
☐ Shim Under Rear > # of shims: 0Ride Height Bones just below levelCamber ☒ - 1/2°
☐ +Drive Shafts ☒ Dogbones ☐ Aluminum
☐ CVDs ☒ SteelRear Hub Spacing ☐ Forward
☒ Center
☐ RearOutdrives ☒ Steel
☐ PlasticSway Bar ☒ No
☐ Yes size

Rear Shocks

Oil: 35 wt LosiPiston: 55 ☐ Standard / ☒ DrilledSpring: YellowLimiters: ☐ Inside- none ☐ Outside- ends 3 turn

Tires

Front: Directionals

Compound

Silver

Foam

Losi FirmMotor: 11x2 Pinion/Spur: 18 86Rear: T-2000RedBomb 2 FirmBattery Position: 1/2" back

Notes: