
SETUP SHEET SPUDER

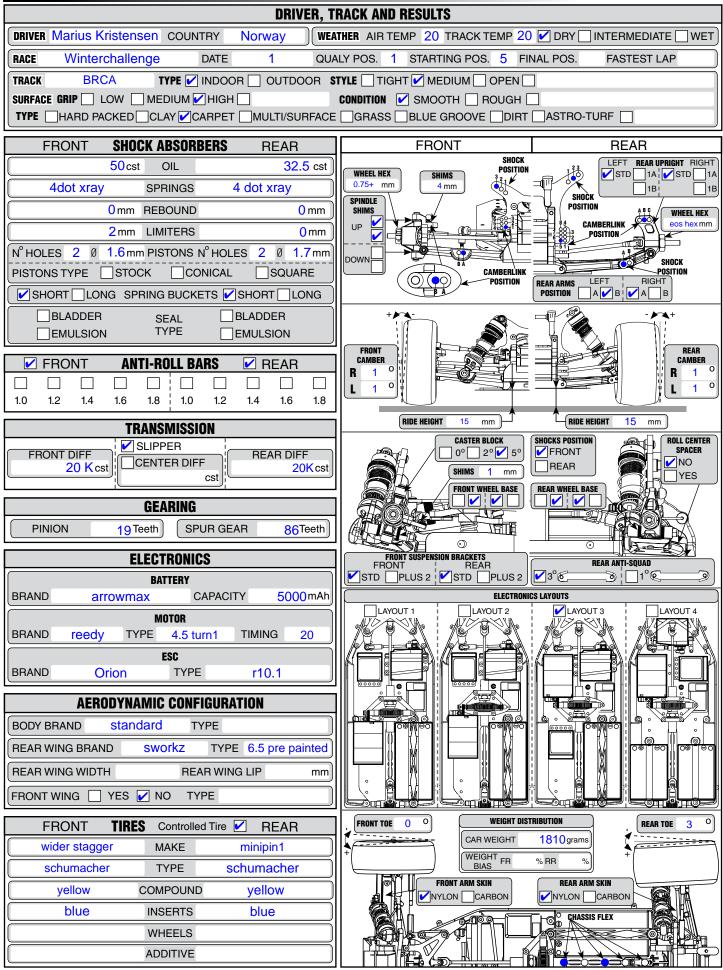



REMARKS

2 mm sway bar front and rear. 2 hole on front shocktower. glued the inserts to the arm to make them harder.