

#7036 RC10T2 KIT

PARTS ARRANGED BY BAG NUMBER IN KIT

#7036 BAG 6-14

#7036 BAG 7-1

#7036 BAG 7-2

#7036 BAG 7-4

#7036 BAG 7-5

#7036 BAG 7-6

#7036 BAG 7-7

#7036 BAG 7-8

#7036 BAG 7-9

#7036 BAG 7-10

#7036 BAG 7-11

BAG 7-15

MAIN SHOCK BAG

SHOCK ASSEMBLY PARTS BAG

#7036 TRANNY BAG A

TRANNY BAG B


TRANNY BAG C

TRANNY BAG D


#7036 RC10T2 KIT

PARTS ARRANGED BY BAG NUMBER IN KIT


#7036 TRANNY BAG E

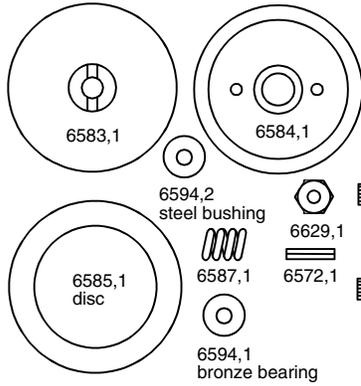


#7036 TRANNY BAG F

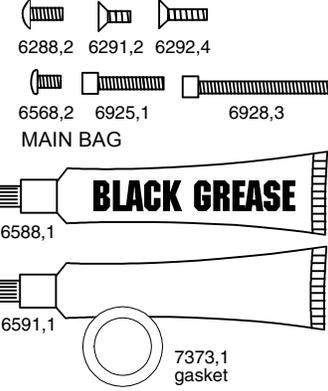


#7036 FRONT TIRE/WHEEL BAG

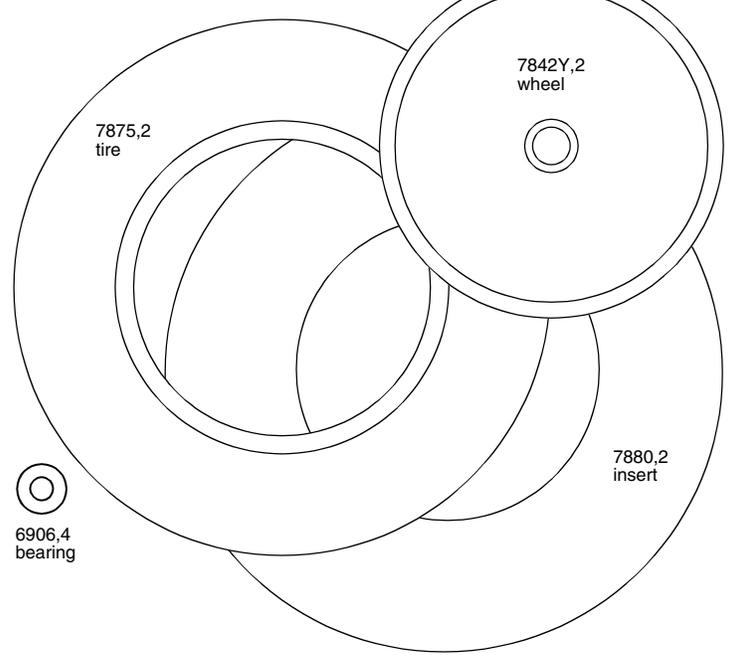


#7036 TRANNY MOTOR PLATE BAG

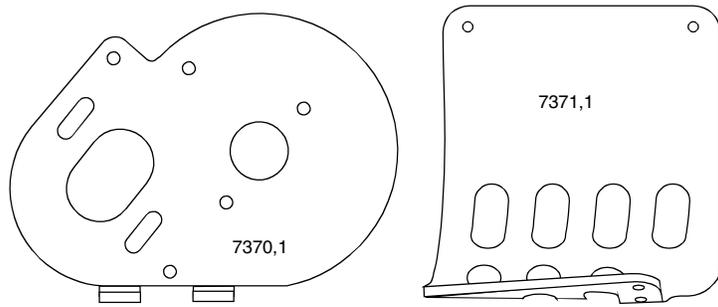


#7036 TRANNY GEAR COVER BAG

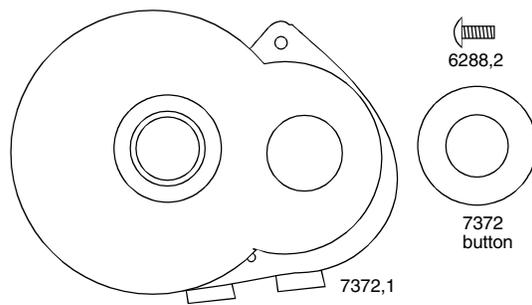


#7036 SUSPENSION ARM BAG

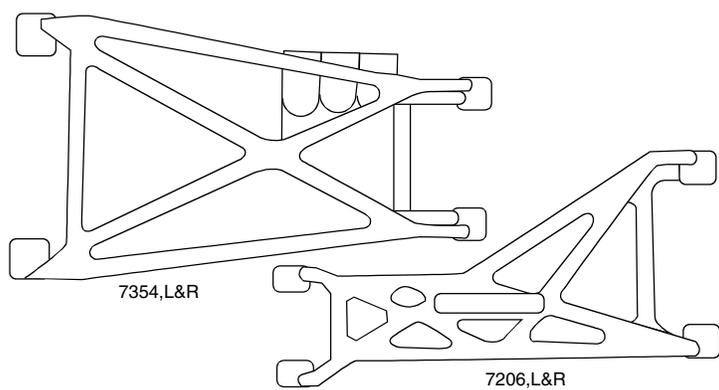

#7036 REAR TIRE/WHEEL BAG

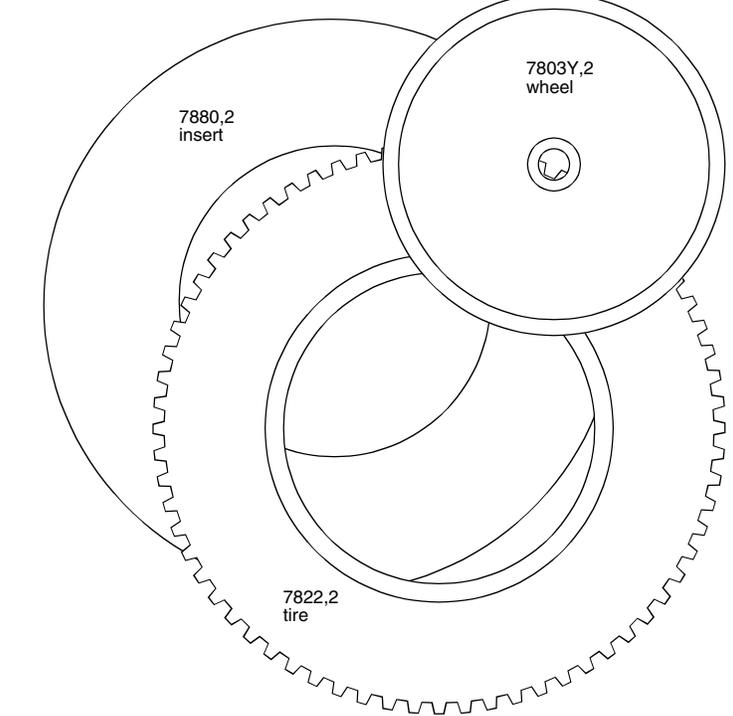

#7036 MASTER KIT BAG

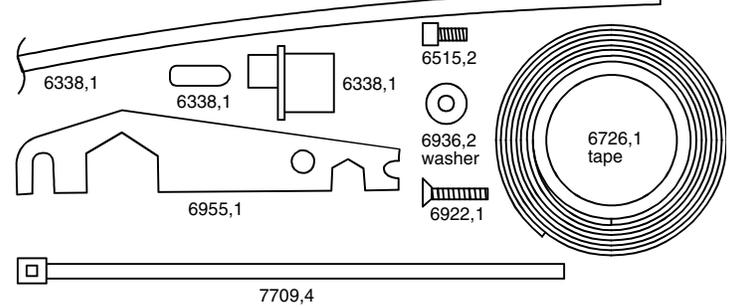

#7036 TOOL BAG

