



FRONT END INSTALLATION


- A13) Position the B4 front suspension and steering over the front of the chassis (XF1005) just as it was on your B4. Be careful that the steering assembly remains in place and that the bulkhead (9563) stays in position with the top plate (9566). The top plate should fit snugly over the center post in the chassis and on the bosses at each side of the front of the chassis.

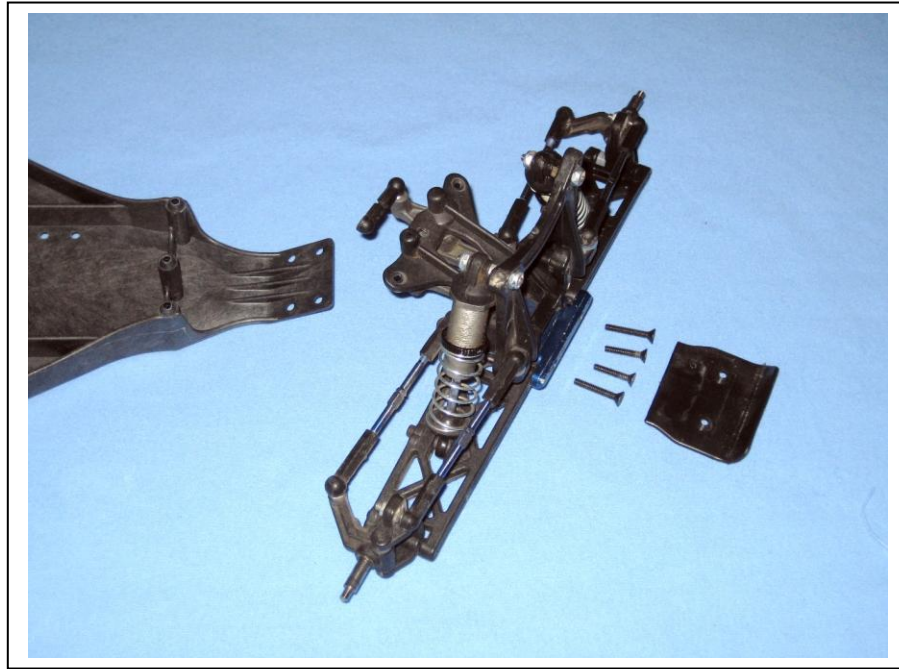


- A14) Secure the top plate with the three screws you took out from the B4. Leave these screws finger-tight for now.

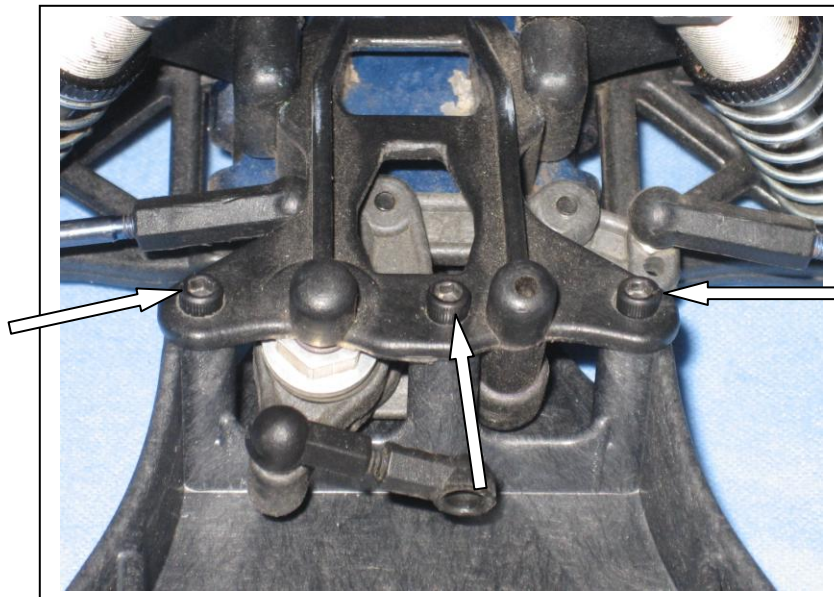

- A15) Carefully turn the chassis & front suspension over. Install the two 5/8" flat head screws you removed from the bulkhead back into the rear-most of the four holes at the front of the chassis.

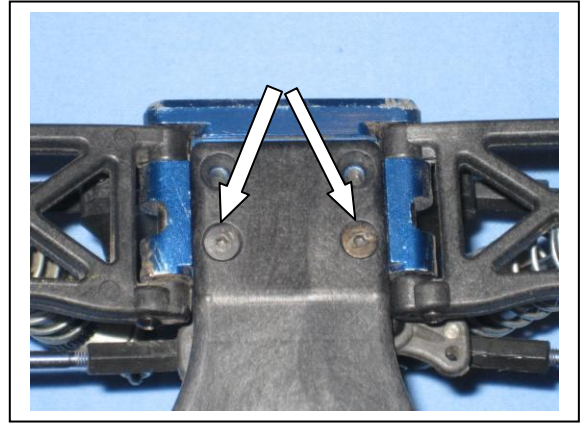

- A16) Place the front bumper (9562) in position and secure it with the two 5/8" flat head screws you took out.

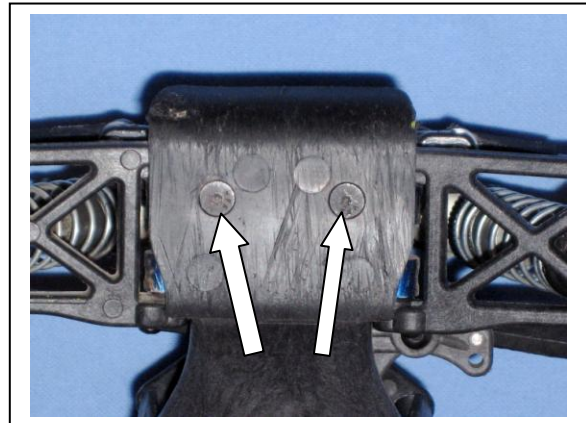

- A17) Now secure the three screws for the top plate that you left finger tight in step A14 above

That's it -- front end is done.

