



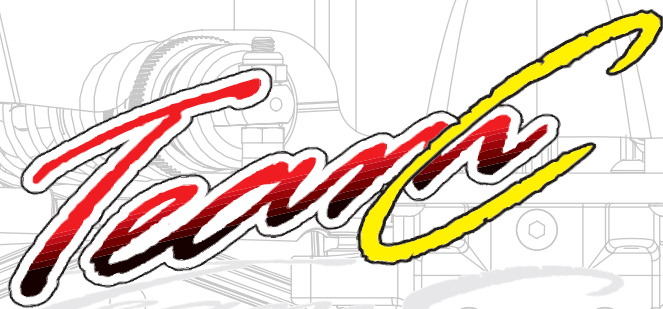

T4 V2

www.teamcracing.net

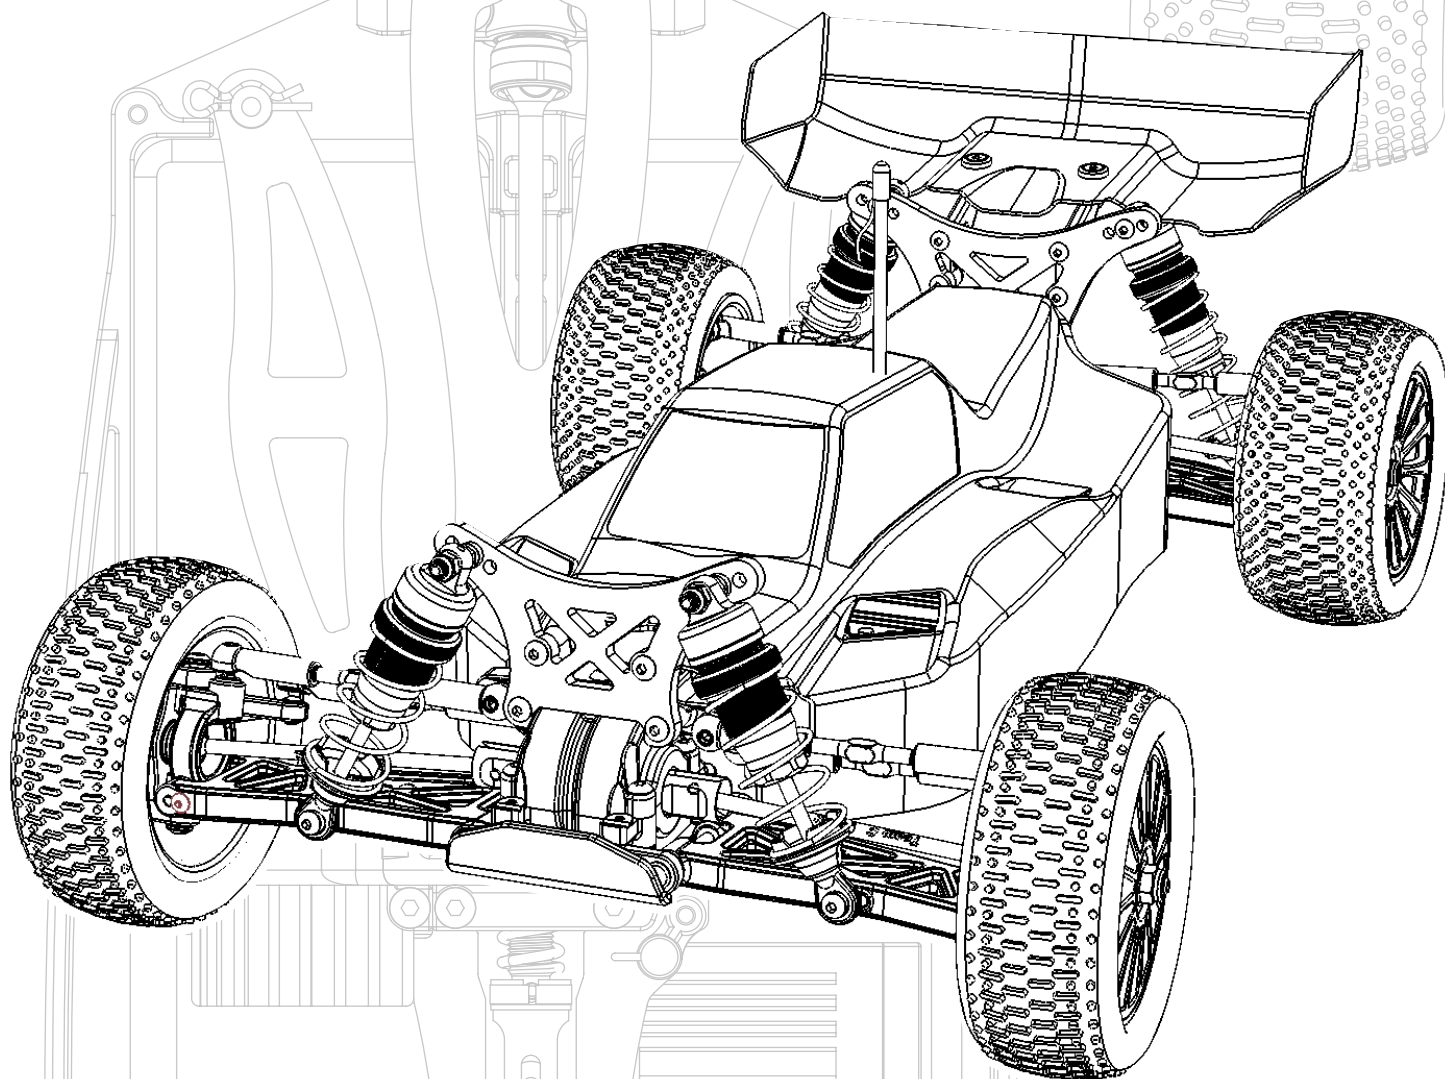

1:10 SCALE RADIO CONTROLLED ELECTRIC POWERED 4WD BUGGY

Dimensions 尺寸:


Length 長度.....	410mm
Width 寬度	250mm
Height 高度.....	140mm

Transmitter Preparation

調整遙控器

Power Switch
電源開關

ON
OFF

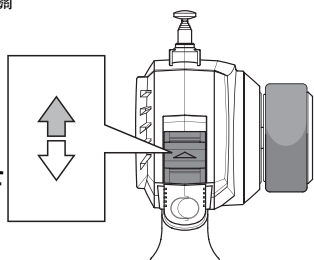

Antenna
天線


Extend the antenna to the maximum
Length for best performance
天線拉的越長性能越好

27MHz Transmitter Crystal (TX)
27MHz 發射機晶片 (TX)

Transmitter crystal (TX)
發射機晶片



Receiver crystal (RX)
接收機晶片



The crystal can be replaced to change frequencies.
Note: You must also change receiver crystals!
Do not use AM crystals

更換晶片可以改變頻率
注意：你也必須改變接收機晶片！

Battery Level Indicator
電池標準指示燈




Good Batteries
標準的電池




Low Batteries (Light Blinks)
低電的電池 (電燈閃爍)

Reverse Switch
反向開關

! Servo Factory Settings
! 工廠安裝 (當轉向/油門反向時調整用)

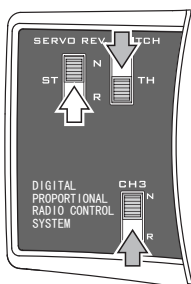

4 3ch Switch
第三動作開關




This switch is used for optional parts.
這個開關用於選擇部分

Left turn
向左旋轉

Straight (neutral)
豎直 (中立)

Right turn
向右旋轉

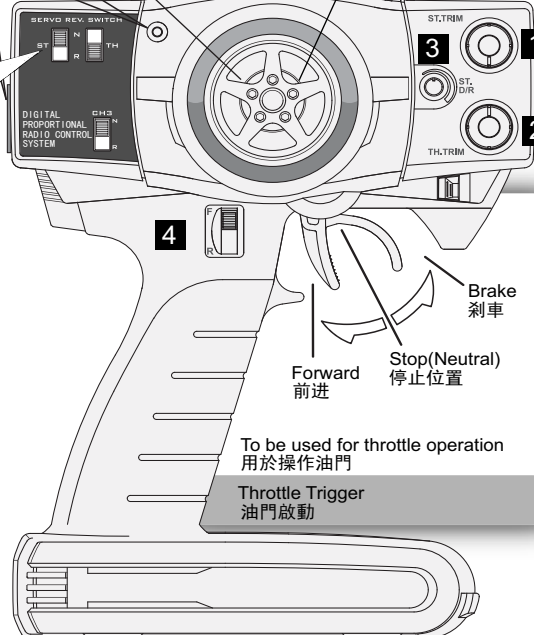

1 Steering Trim
方向調整



To be used for trimming the steering
operation
用於調整轉向中立點

2 Throttle Trim
油門前進/後退 (剎車) 調整



To be used for trimming the throttle
operation
用於調整油門中立點

3 Steering Dual Rate
轉向舵角量




To be used to adjust steering servo throw
用來調整轉向伺服

Transmitter Battery Installation
遙控器電池安裝



Open battery cover at the bottom of transmitter.
Install batteries. Follow the direction of batteries
designated in the inside of battery box.

在遙控器的底部打開電池蓋子，安裝電池。
跟隨電池的指示在電池盒裡面指定

Battery Cover
電池蓋

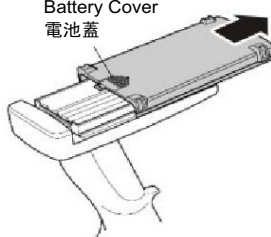

8X AA Alkaline Batteries
AA 鹼性電池

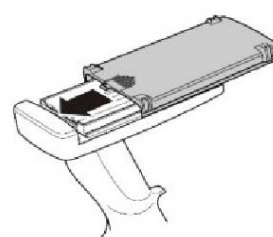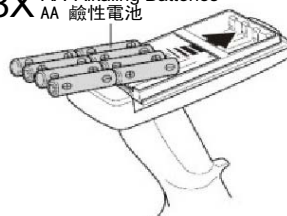


Transmitter Preparation

調整遙控器

A new Ni-MH battery must be charged before it is used. Refer to the charger instruction manual for charging.
 在使用之前，一個新電池必須先充電。詳情請參考充電器說明書。

Set up the radio control system as indicated below.
 如下圖所示安裝接收機控制系統

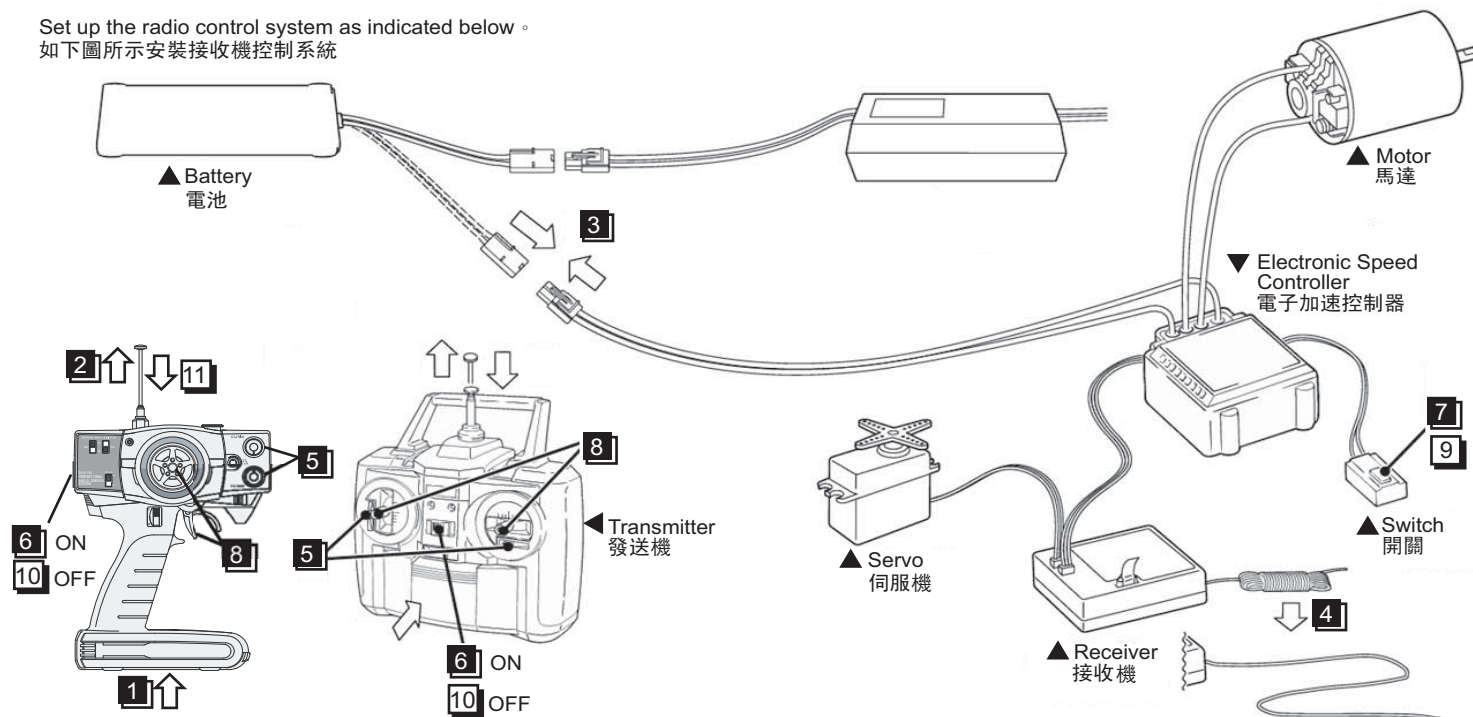

● Start

- 1 Install batteries.(Transmitter)
- 2 Extend the antenna.(Transmitter)
- 3 Connect the battery
- 4 Extend the antenna.(Reveiver)
- 5 Center the trims.
- 6 Switch on.(Transmitter)
- 7 Switch on.(Reveiver)
- 8 Make sure the servos are in command.

● Finish

- 9 Switch off.(Reveiver)
- 10 Switch off.(Transmitter)
- 11 Retract the antenna(Transmitter)

● 開始

- 1 安裝電池(發送機)
- 2 拉出天線(發送機)
- 3 連接電池
- 4 拉出天線(接收機)
- 5 中心對整齊
- 6 開關(發送機)
- 7 開關(接收機)
- 8 確定控制伺服機

● 結束

- 9 關閉開關(接收機)
- 10 關閉開關(發送機)
- 11 收回天線(發送機)

Tools required

組裝需要的工具

- Needle Nose Pliers
尖嘴鉗



- Awl
錐



- Grease
潤滑油



- Screw Cement
螺絲膠水



- Instant Glue
瞬間膠水




- Ball differential Grease(Clear)
差速滾珠油(清澈)



- Molybdenum Grease(Black)
鉬油(黑)



- SP KINFE EDGE REAMER
刀刃 絞刀

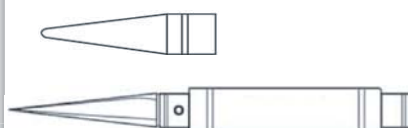


No need to pre-drill precise holes
(1mm to 15mm) can be drilled

可以對預鑽的孔準確的鑽深
1mm-15mm, 不需要穿透

- Wire Cutters
鋼絲鉗




- ROUND CUTTER&SANDER
剪刀&挫刀

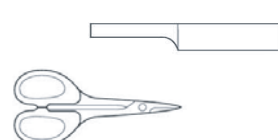

- Hex Wrench
六角扳手



- Hex Wrench
十字套筒




- Sharp Hobby knife
美工刀



For trimming bodies!
用於修剪車殼!


1 Suspension Mount/Side plate 摆臂固定座/侧板

Bag-A Bag-B

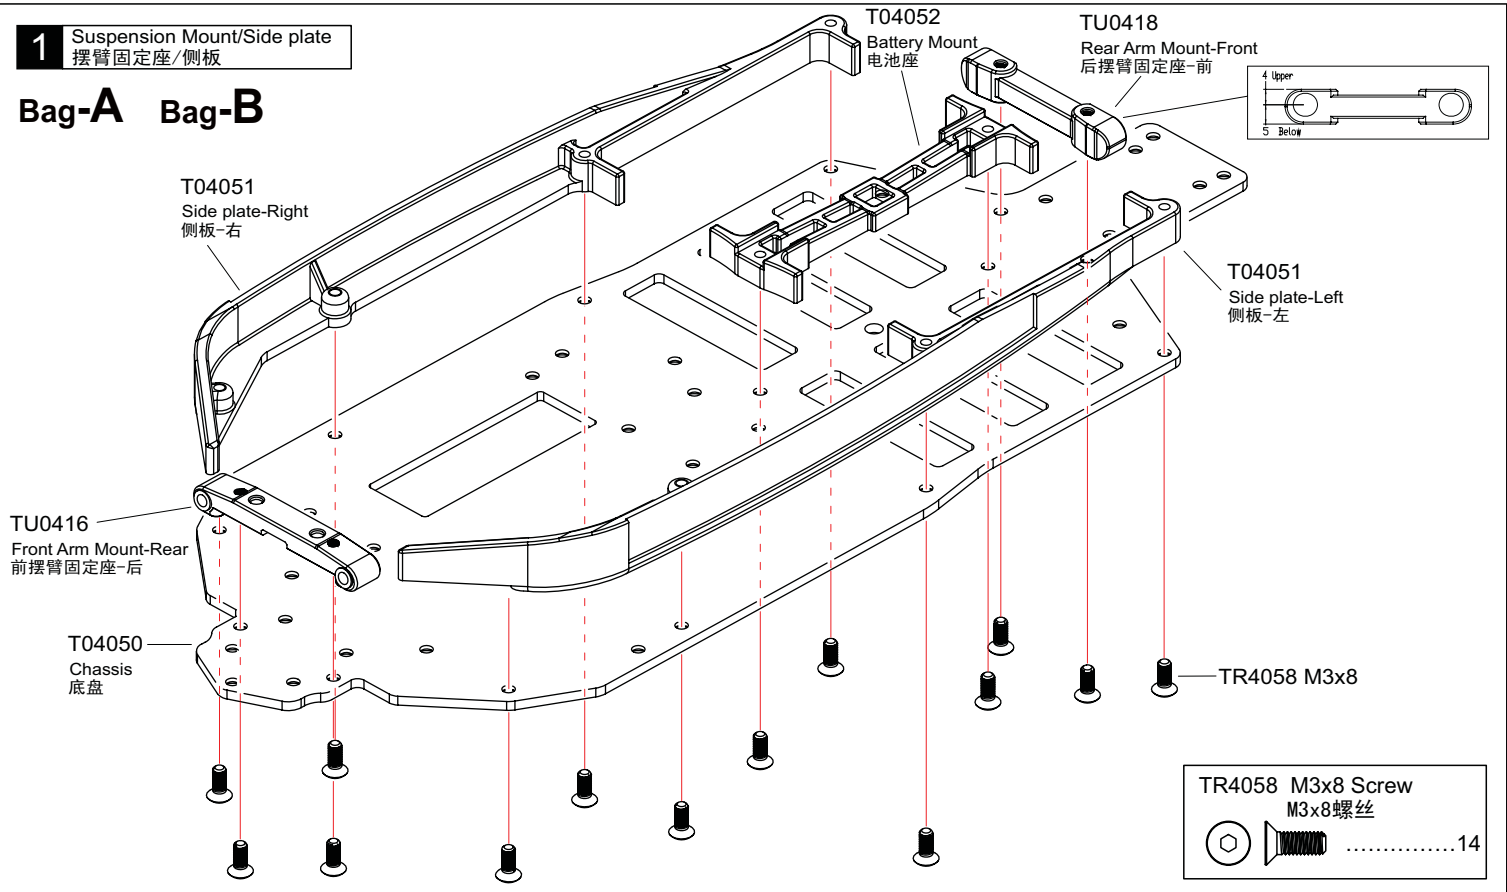

2 Diff-gear Box / Motor Mount 差速齿轮箱/马达座

Bag-B

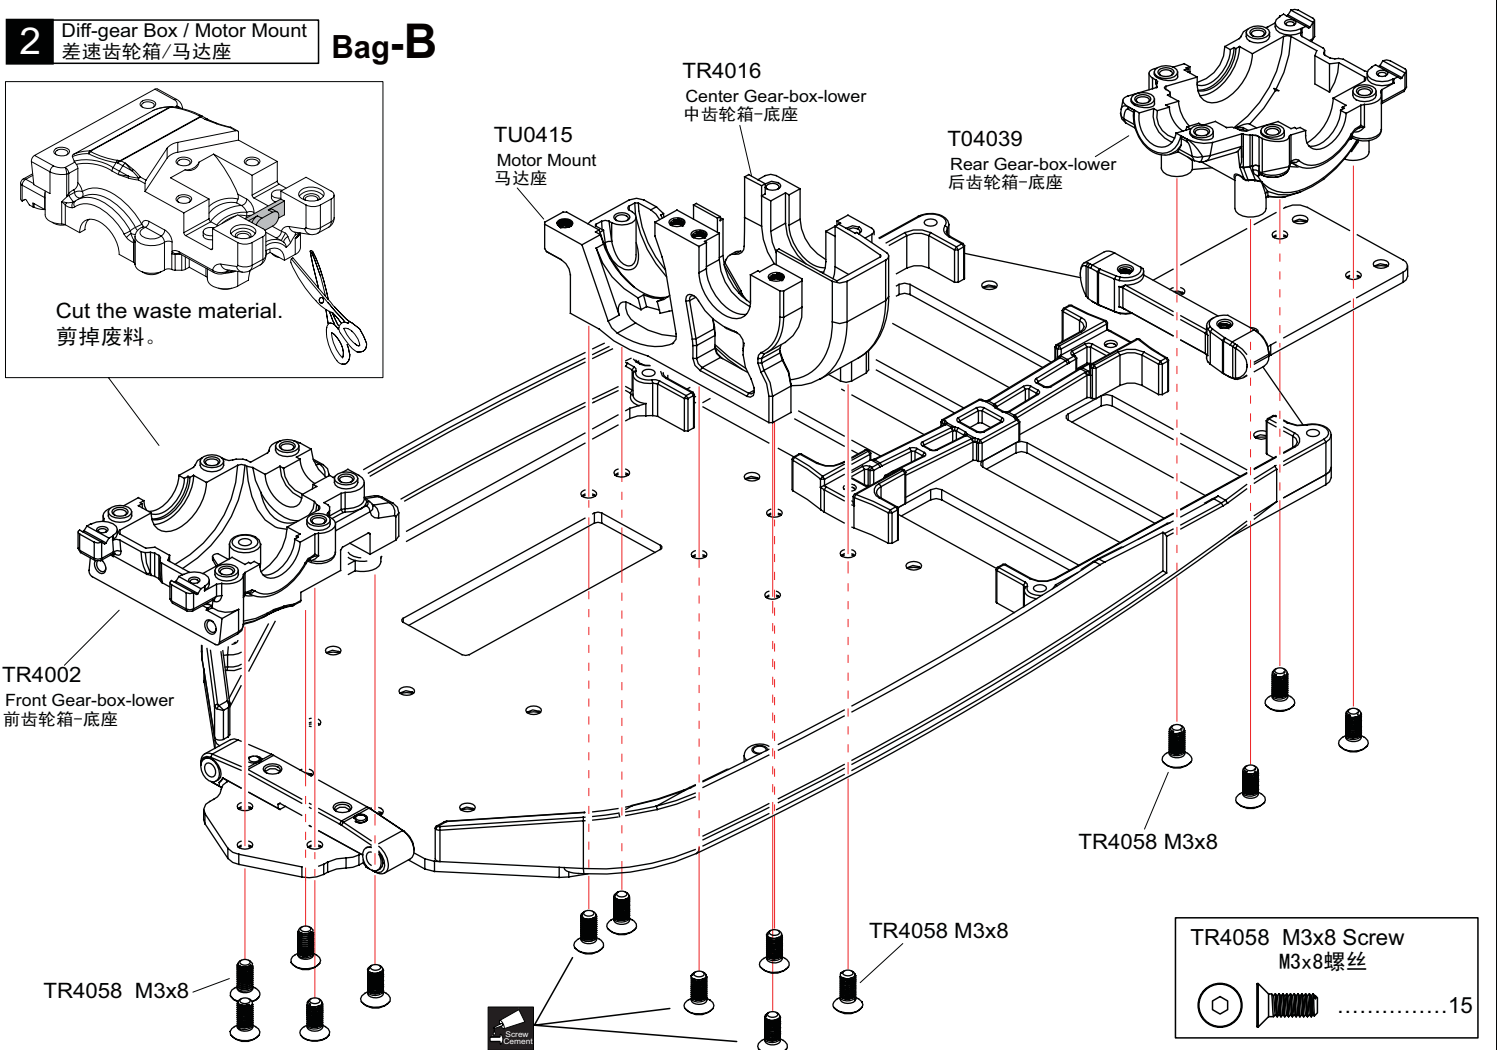

Apply threadlocker(screw cement)
打螺丝胶水

3 Diff 差速器

x2 Bag-B

TS4040 3.0 E-ring
3.0 E扣

.....4

TS4039 5.1x13x0.2 Washer
5.1x13x0.2墊片

.....4

T04040 4.8x1.6 O-ring
4.8x1.6 O環

.....4

T02099 10x15x4 Ball Bearing
10x15x4軸承




.....4

TS4039 Diff shaft
差速軸

.....4

T04041 10x12x0.2 Washer
10x12x0.2墊片

.....2

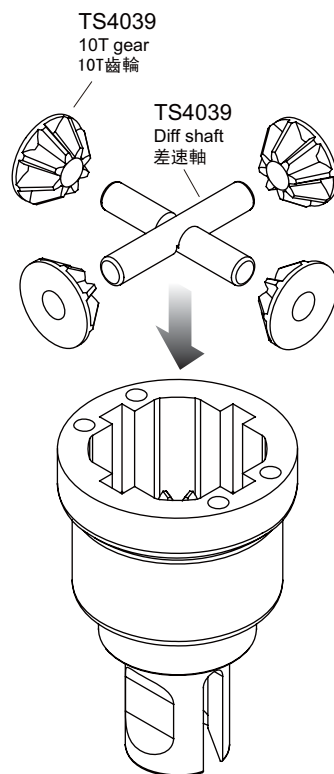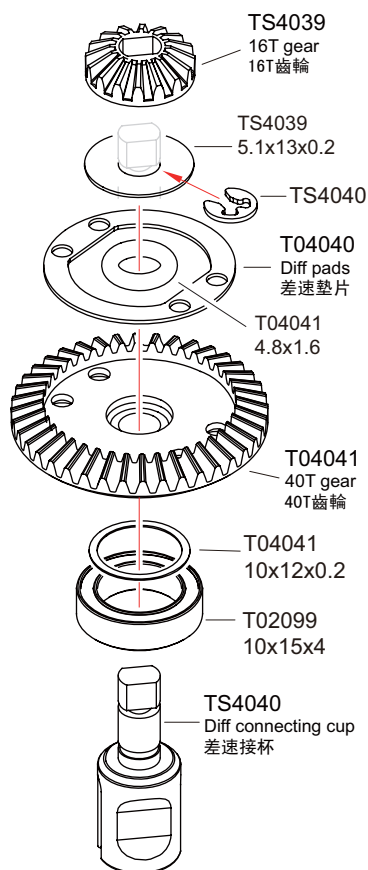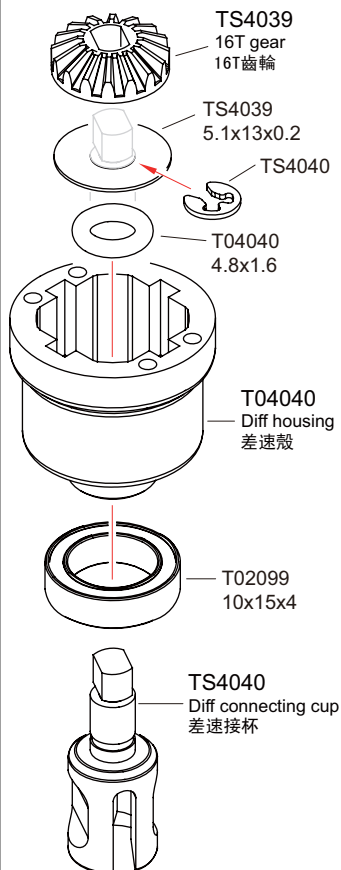

4 Diff / Mid CVD 差速器 / 中CVD

F/R Bag-B

T04040 M2.5x6 Screw
M2.5x6螺絲

.....8

T04044/T04045 M3x8 Screw
M3x8螺絲


.....2

T02100 5x10x4 Ball Bearing
5x10x4軸承


.....4

86000 5.1x8x0.2 Washer
5.1x8x0.2墊片

.....2

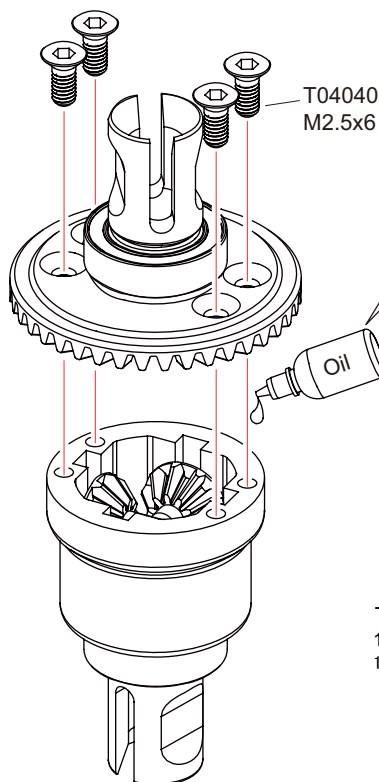

5000# for Front diff,
2000# for Rear diff.
High grip:
Suggest using 7000#
differential oil for front,
Suggest using 3000#
differential oil for rear;
Low grip:
Suggest using 3000#
differential oil for front,
Suggest using 1000#
differential oil for rear.

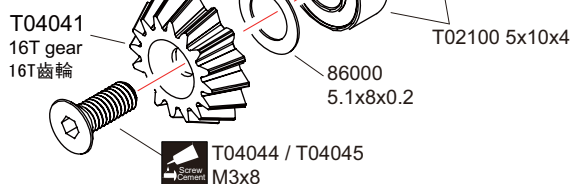

T04044
83mm center front CVD
83mm中前CVD

T04045
78mm center rear CVD
78mm中後CVD


x2 Assemble as many times as specified
需組裝數量

Apply threadlocker(screw cement)
打螺絲膠水

F/R Assemble front and rear sides the same way
前後裝法相同


5 F/R Gear-Box 前/後齒輪箱

Bag-B

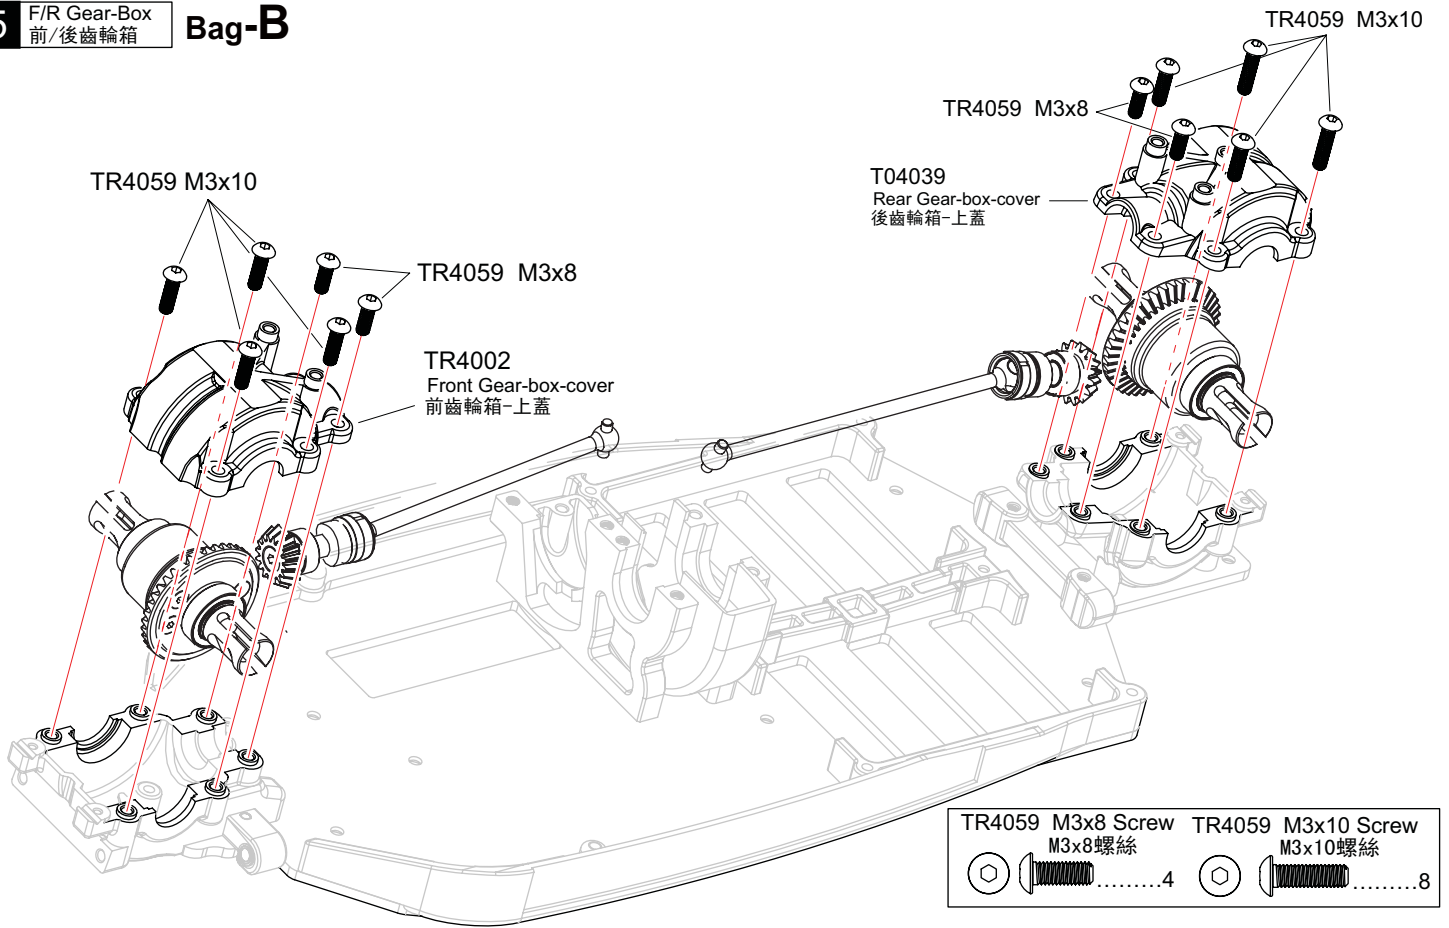

6 Slipper set 扭限組





Bag-B

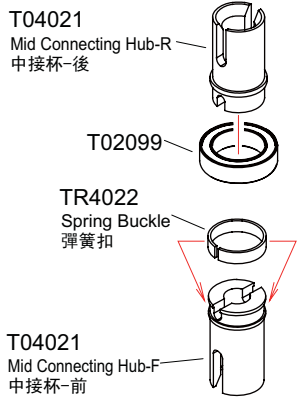


T04032 2x9.8 Pin
2x9.8 鋼針4

TR4059 M3x5 Screw
M3x5 螺絲2

T02099 10x15x4 Ball Bearing
10x15x4 軸承2

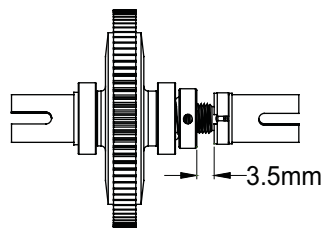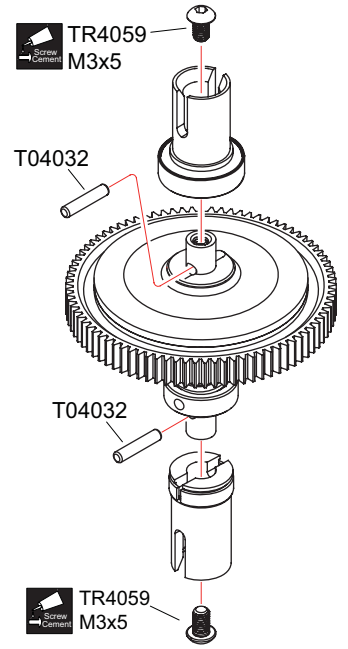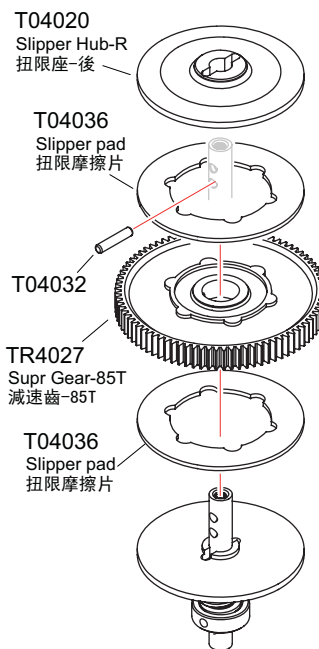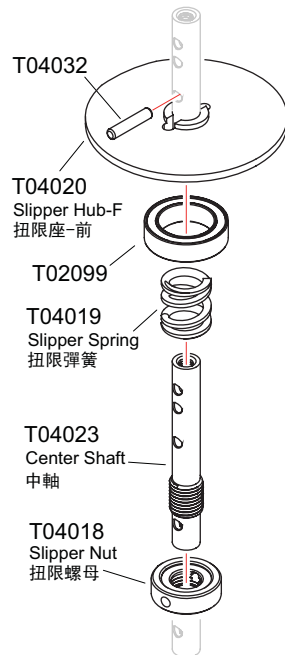


After first run, re-adjust to around 3.5mm
運行後再調整到3.5mm

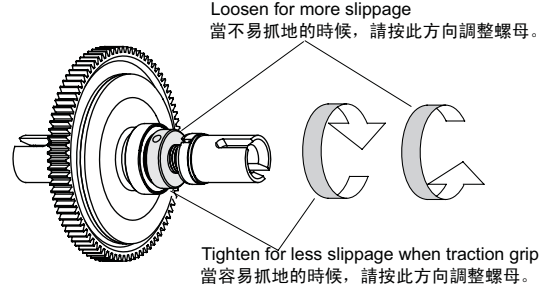


Apply threadlocker(screw cement)
打螺絲膠水

7 Center Gear 中齒輪

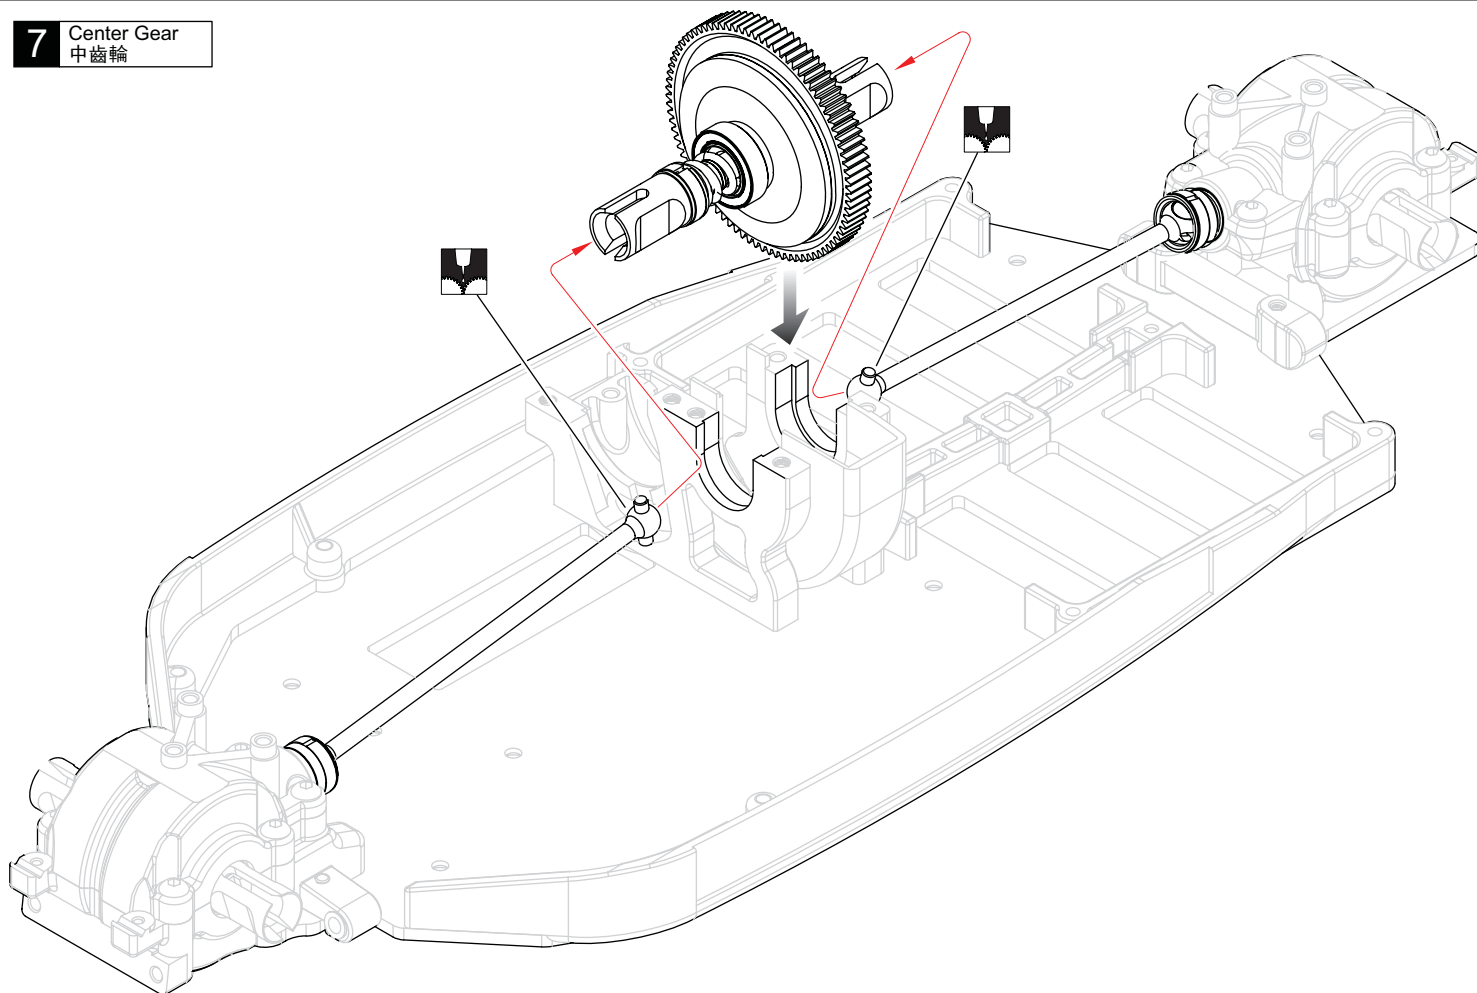

8 Steering Servo 轉向伺服系統 Bag-C

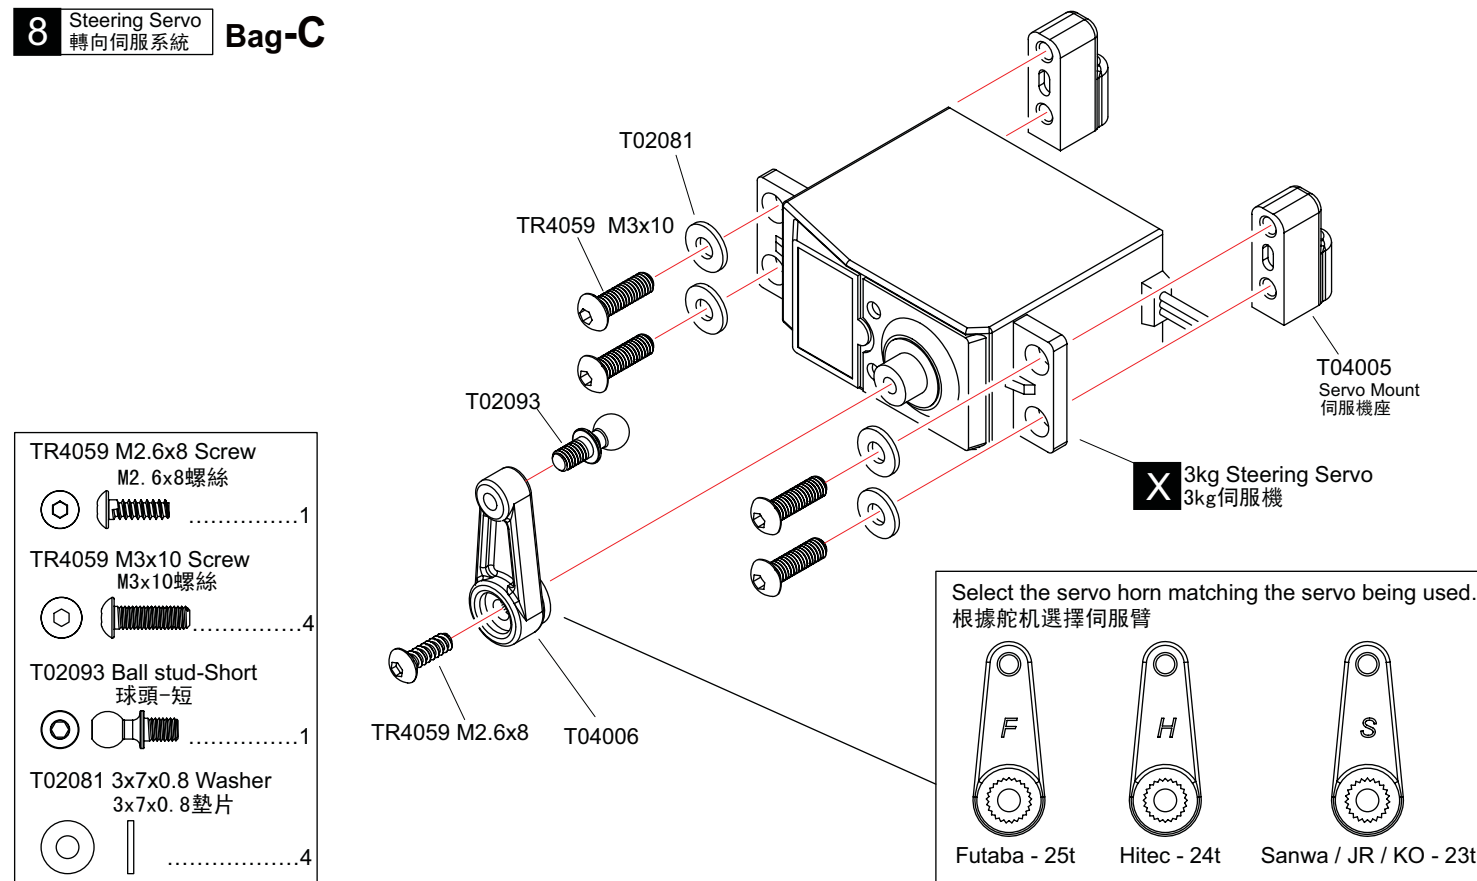


Apply grease
塗油脂

Must be purchased separately
需另購物品

Steering Servo 轉向伺服系統


11 Buffer 緩衝

Bag-C

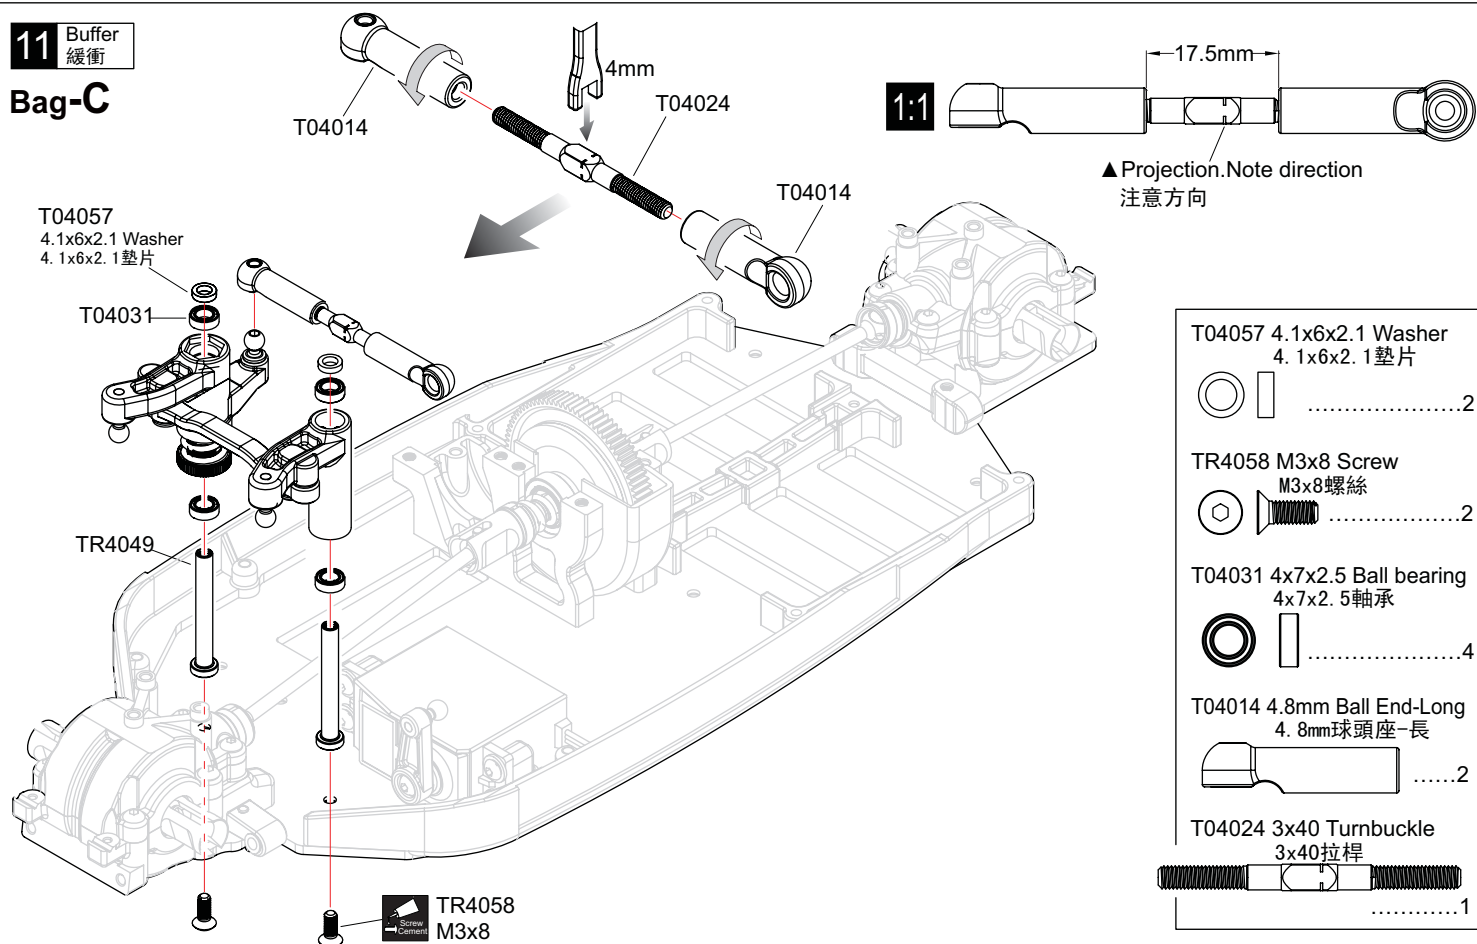


12 Upper Deck-Front / Front Upper Suspension Arm Mount 二樓板-前 / 前上擺臂座

Bag-C

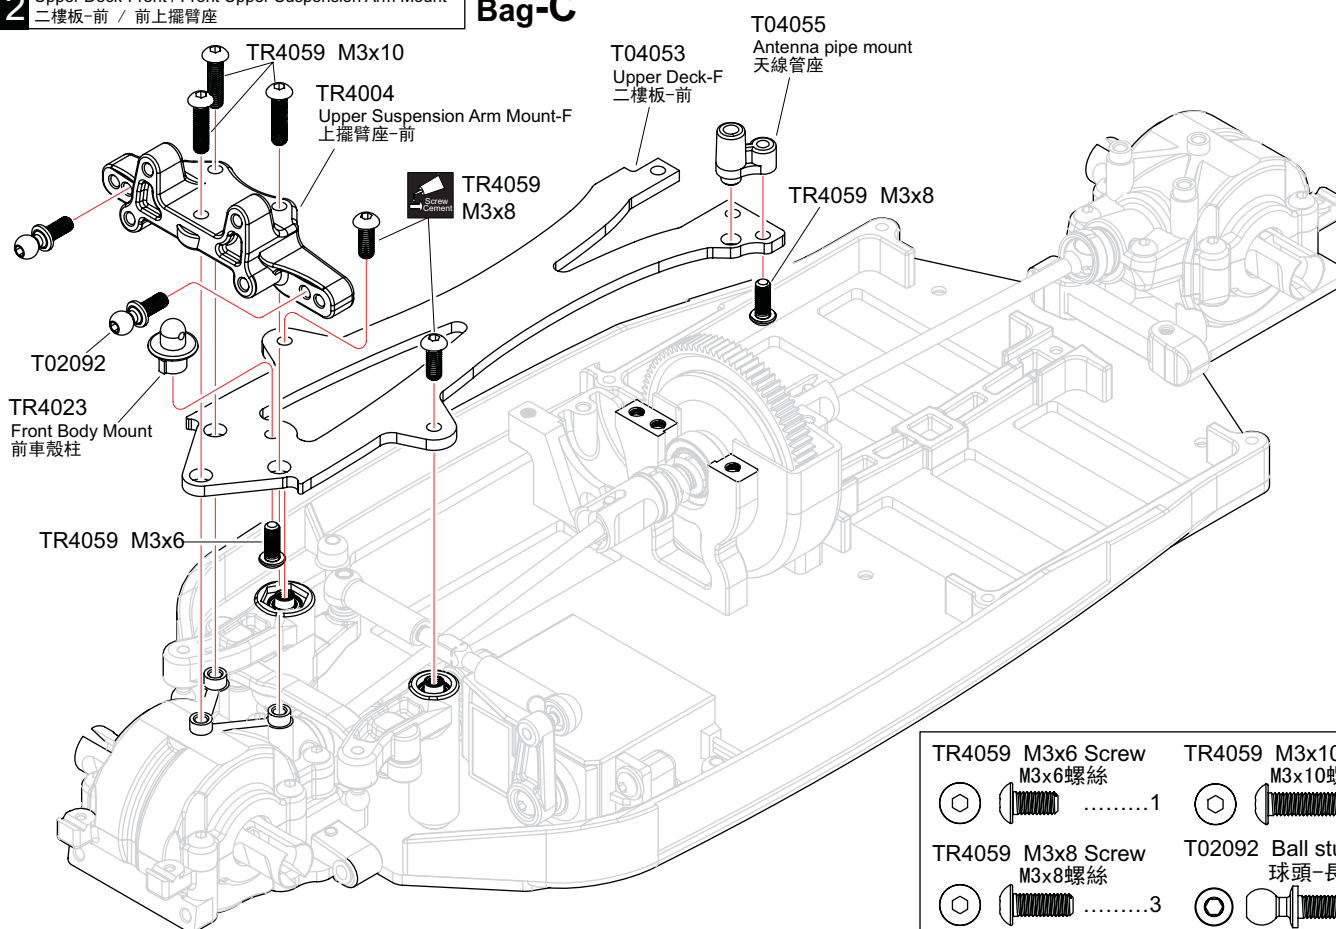

13 Upper Deck-Rear / Rear Upper Suspension Arm Mount 二樓板-後


Bag-C

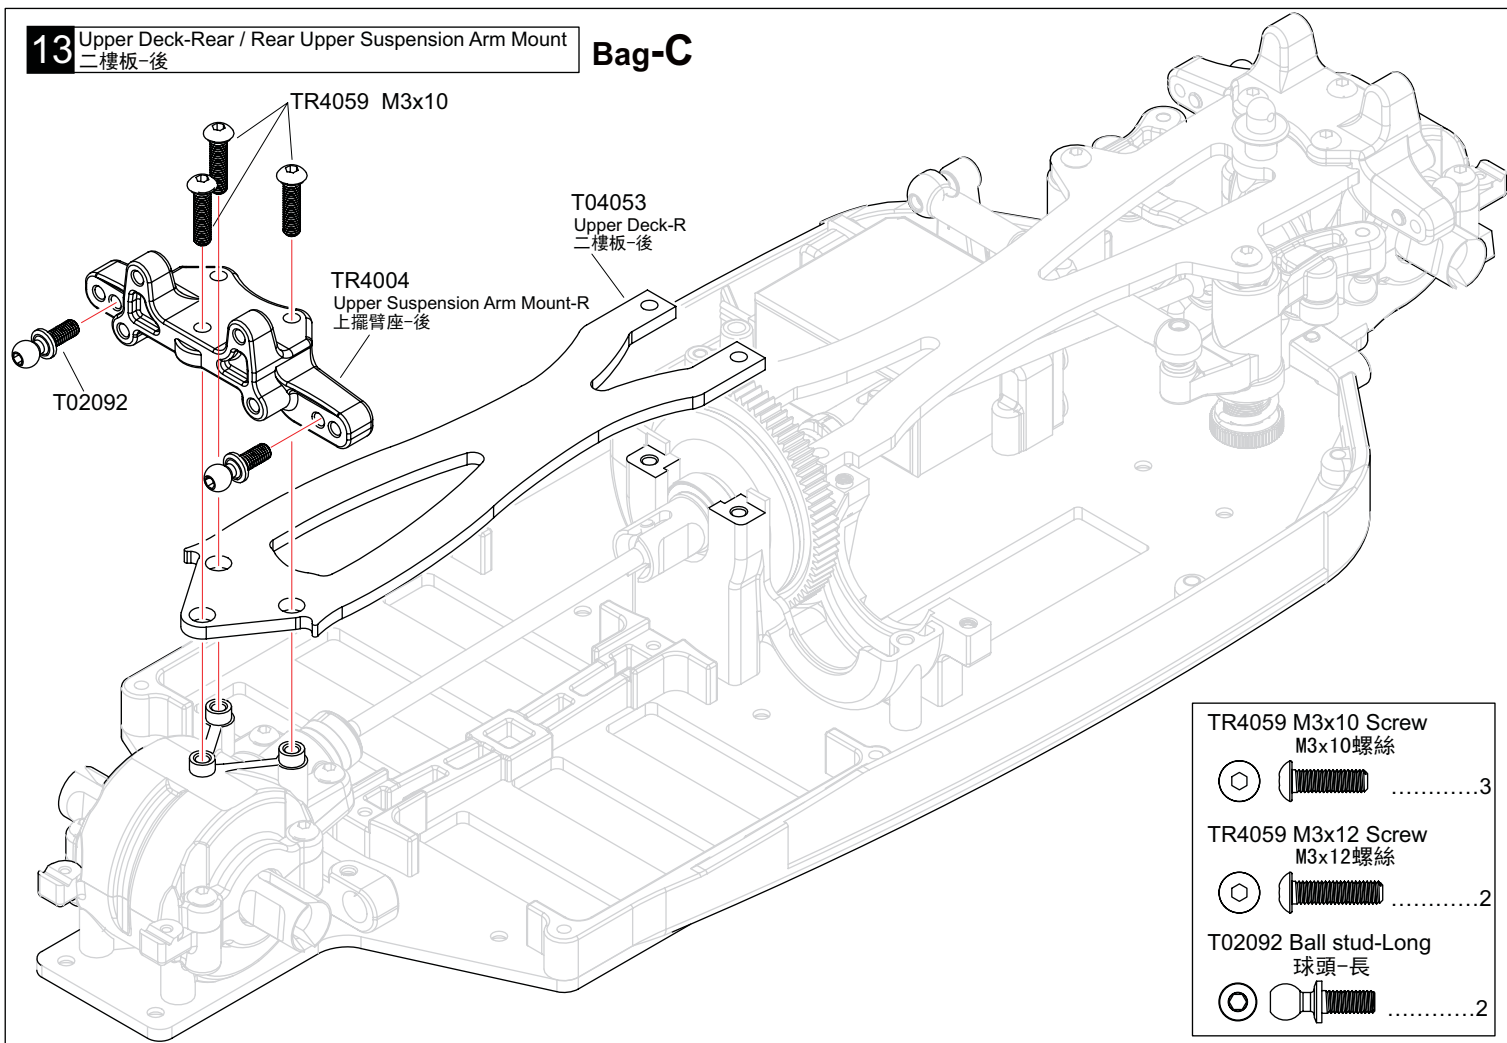

14 Front Shock Tower 前避震架


Bag-C

TR4059 M3x8 Screw M3x8螺絲	2
TR4059 M3x12 Screw M3x12螺絲	2

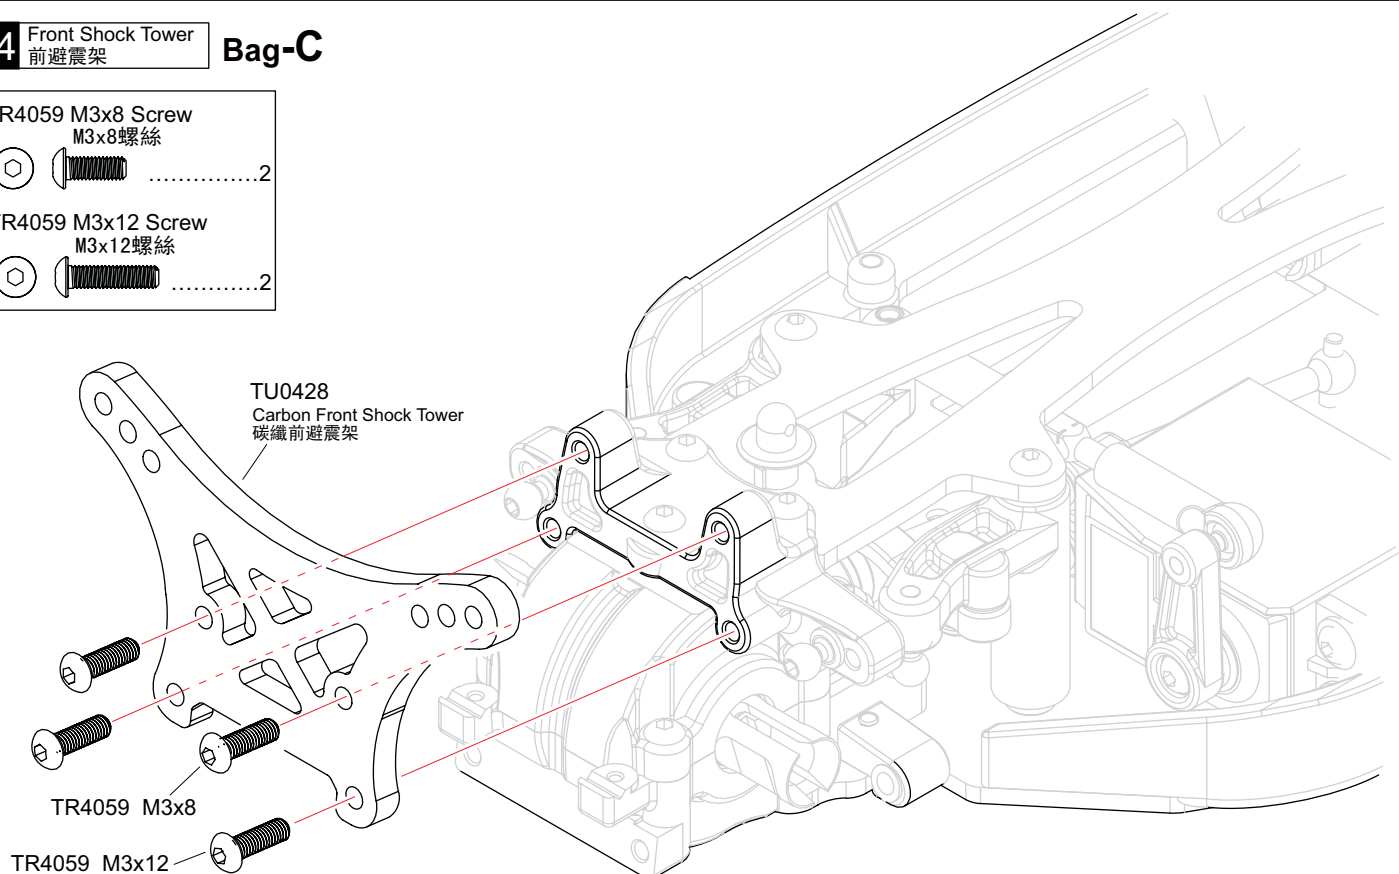


15 Rear Shock Tower 後避震架

Bag-C

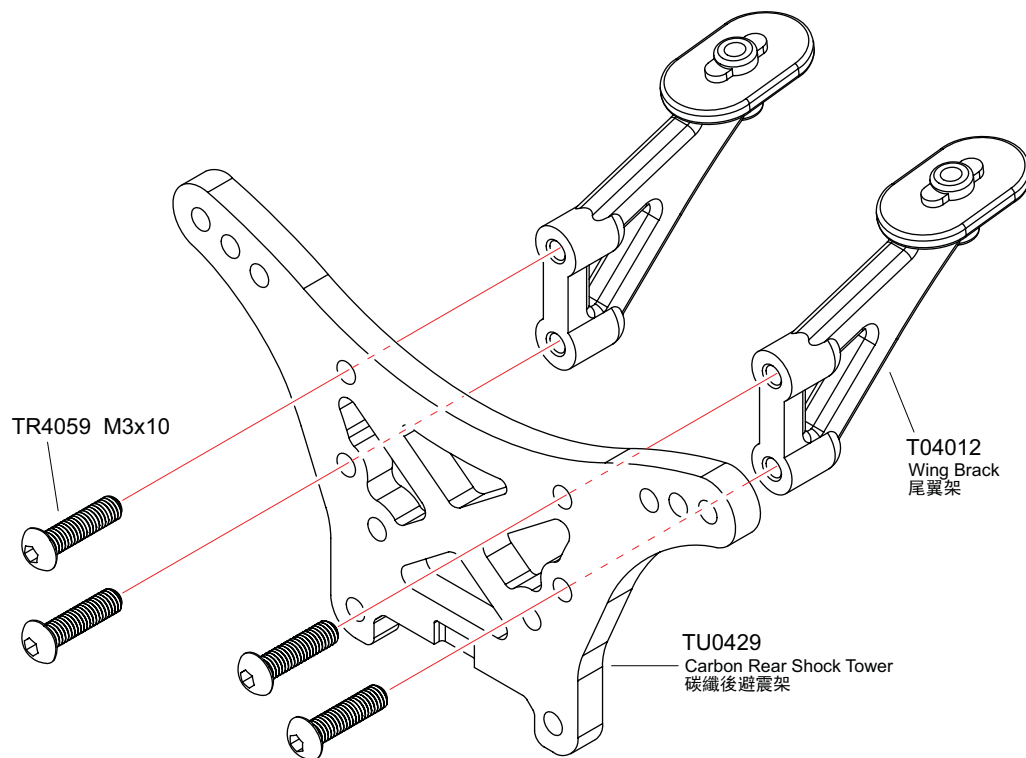


TR4059 M3x10 Screw
M3x10螺絲




16 Rear Shock Tower 後避震架

Bag-C

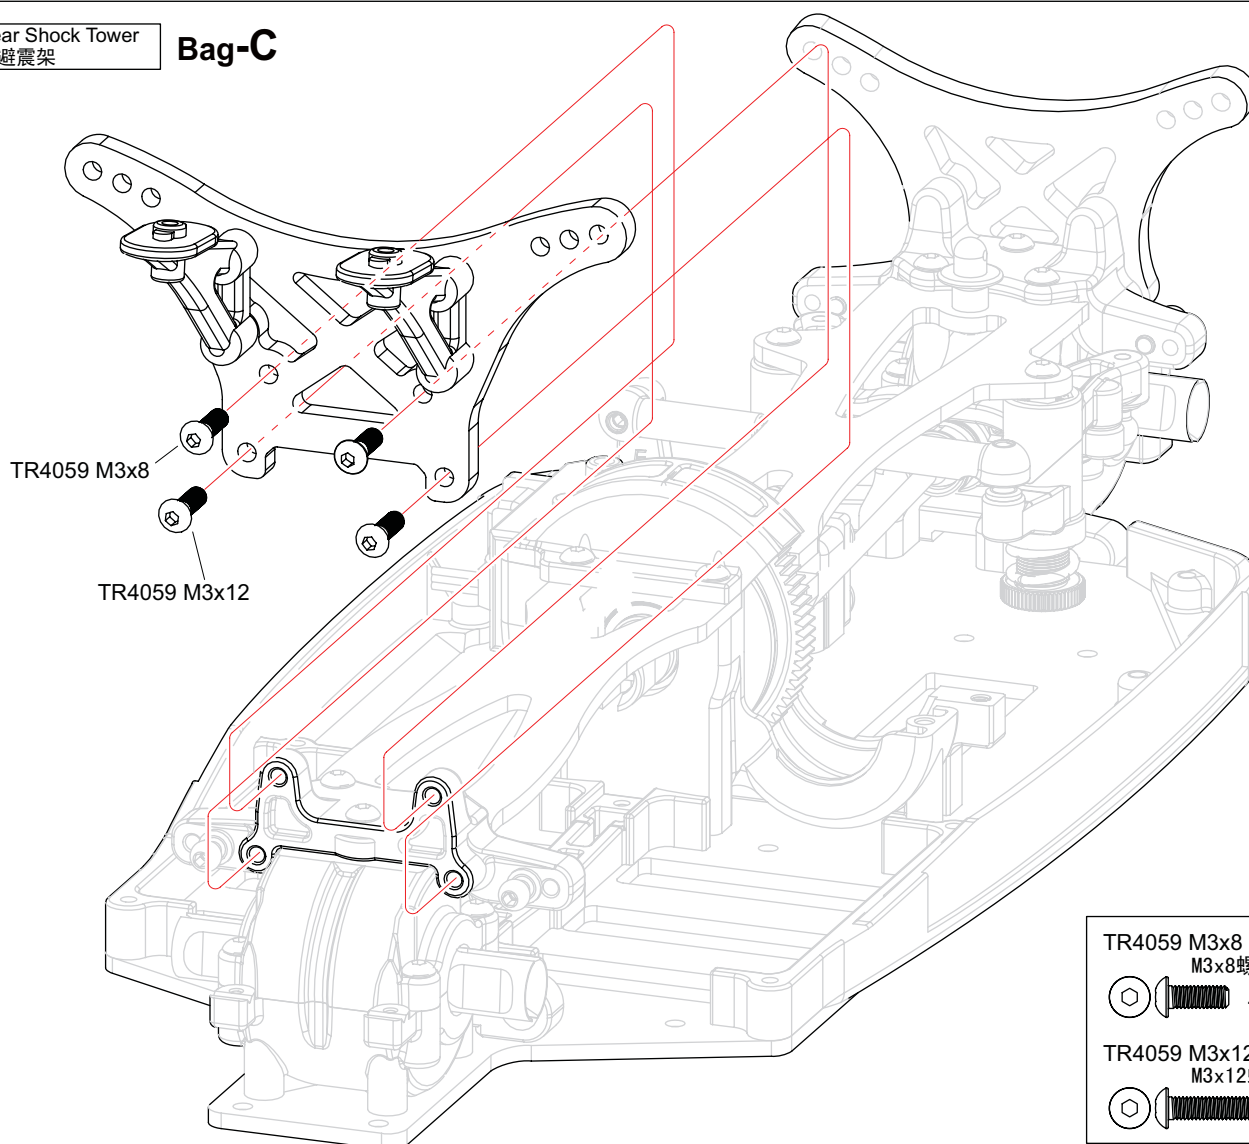

TR4059 M3x8 Screw
M3x8螺絲




TR4059 M3x12 Screw
M3x12螺絲



17 Spur Gear Cover 減速齒輪蓋

Bag-C

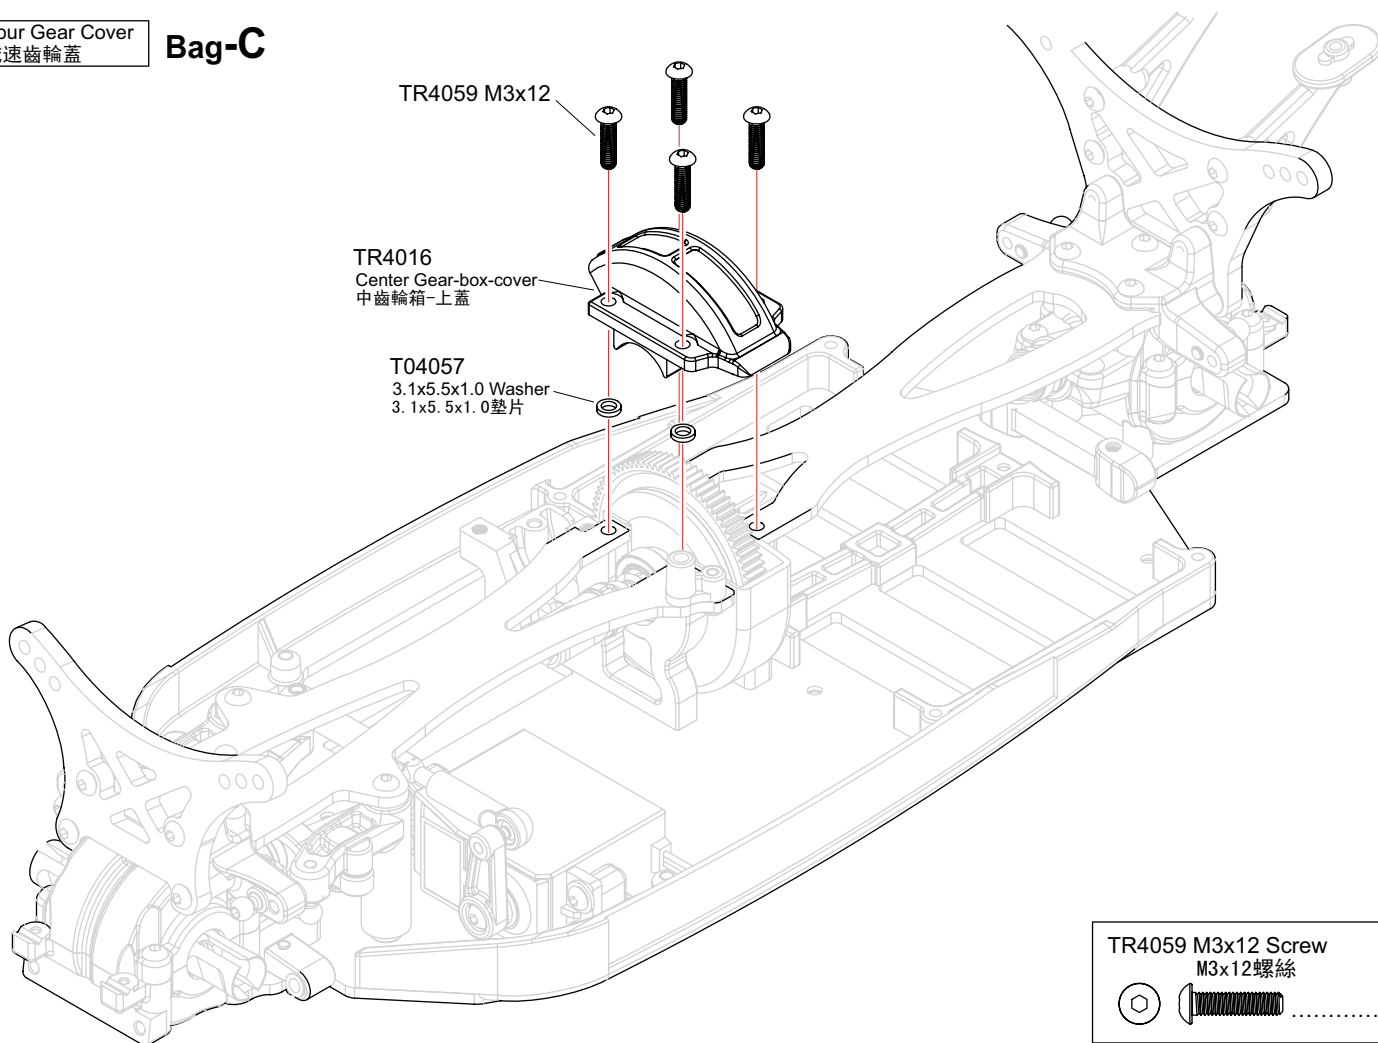


TR4059 M3x12 Screw
M3x12 螺絲

.....4

18 Front Hub Carrier 前輪座

Bag-D

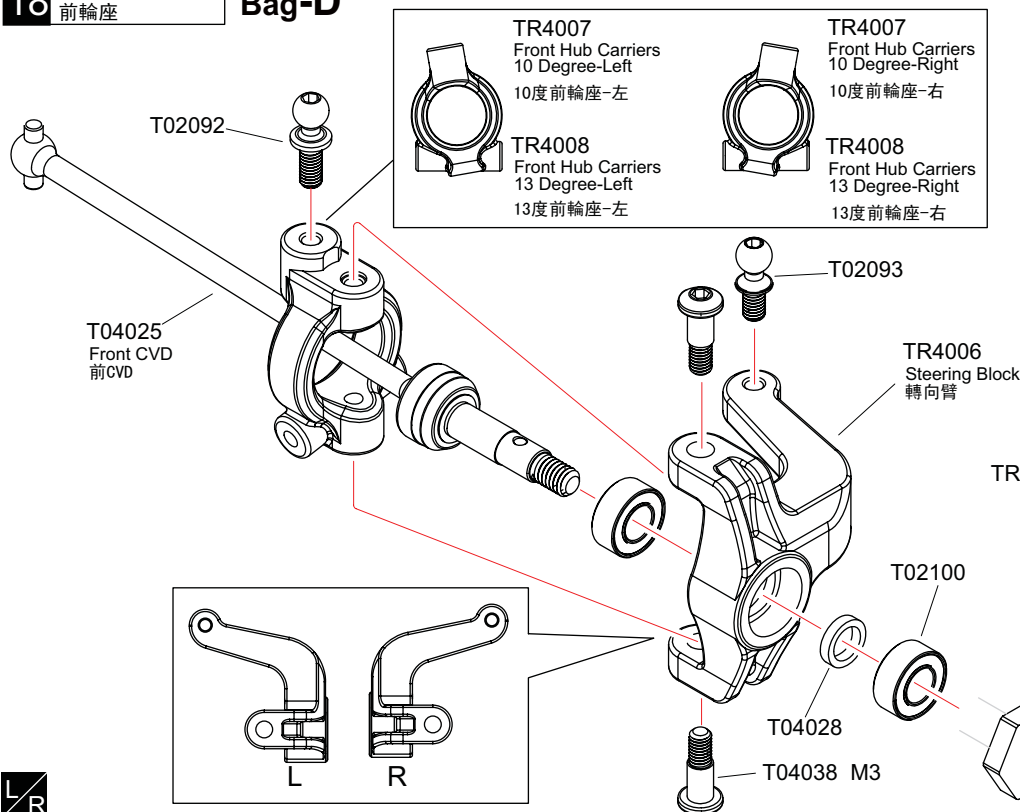

TR4011 1.6x11 Spring Pin
1.6x11 彈簧銷

c2

T04028 Front bearing collar
前輪軸套

.....2

T02093 Ball stud-Short
球頭-短

.....2

T02092 Ball stud-Long
球頭-長

.....2

T04038 M3 Screw
M3 螺絲

.....4

T02100 5x10x4 Ball Bearing
5x10x4 軸承

.....4




Assemble both Left and Right
組裝左和右



19 Front Hub Carrier 前輪座

Bag-D


TR4059 M2.5x4 Screw
M2.5x4螺絲



TR4046 2.5x30 Arm Pin
2.5x30擺臂軸

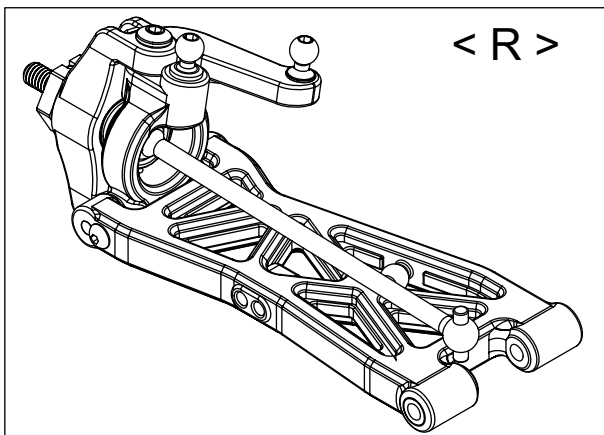

T04007
Front Lower Arm
前下擺臂

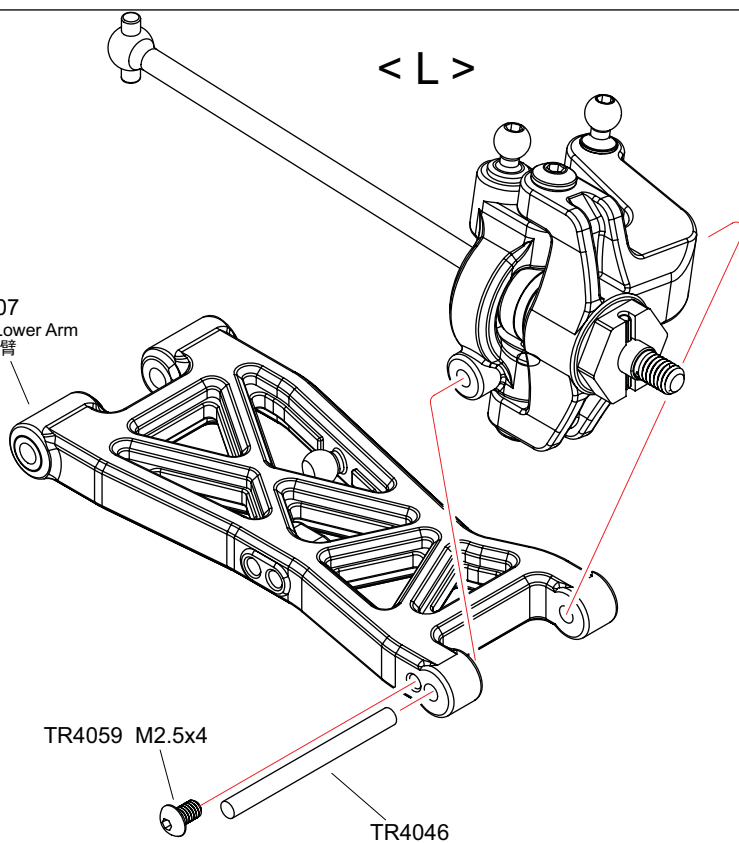


TR4059 M2.5x4

TR4046

20 Front Suspension Arm 前擺臂

Bag-D

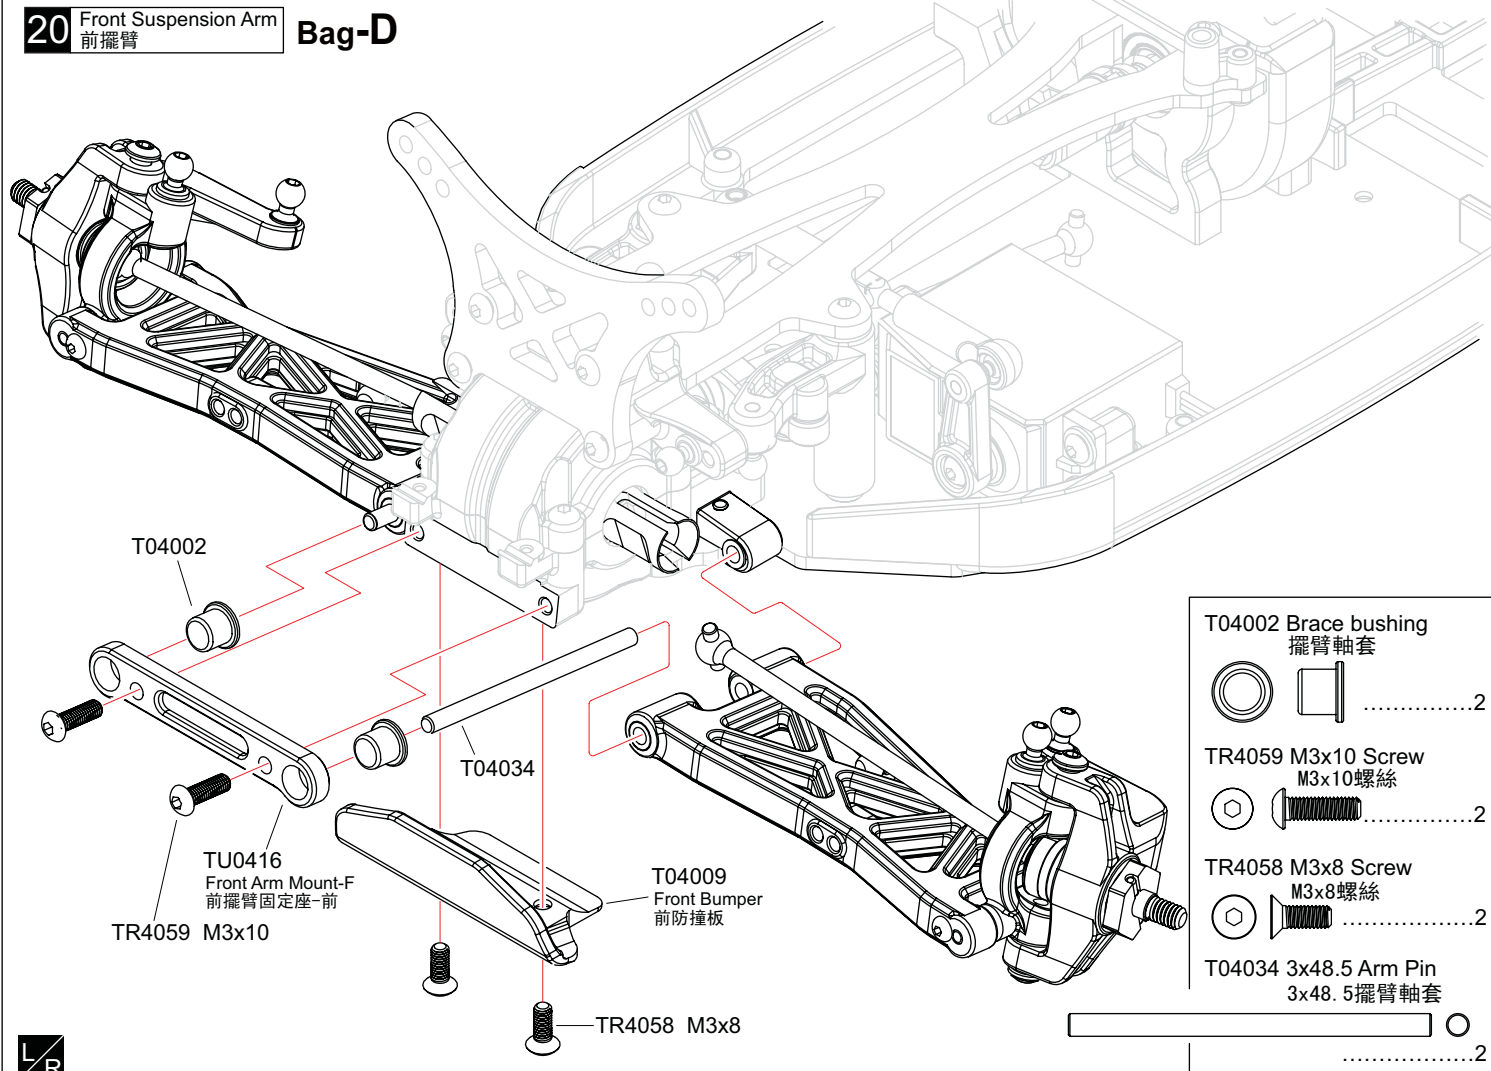

T04002

T04034


TU0416
Front Arm Mount-F
前擺臂固定座-前

TR4059 M3x10


T04009
Front Bumper
前防撞板

TR4058 M3x8


T04002 Brace bushing
擺臂軸套




TR4059 M3x10 Screw
M3x10螺絲



TR4058 M3x8 Screw
M3x8螺絲





T04034 3x48.5 Arm Pin
3x48.5擺臂軸套




Assemble both Left and Right
組裝左和右

21 Turnbuckle 拉桿

Bag-D

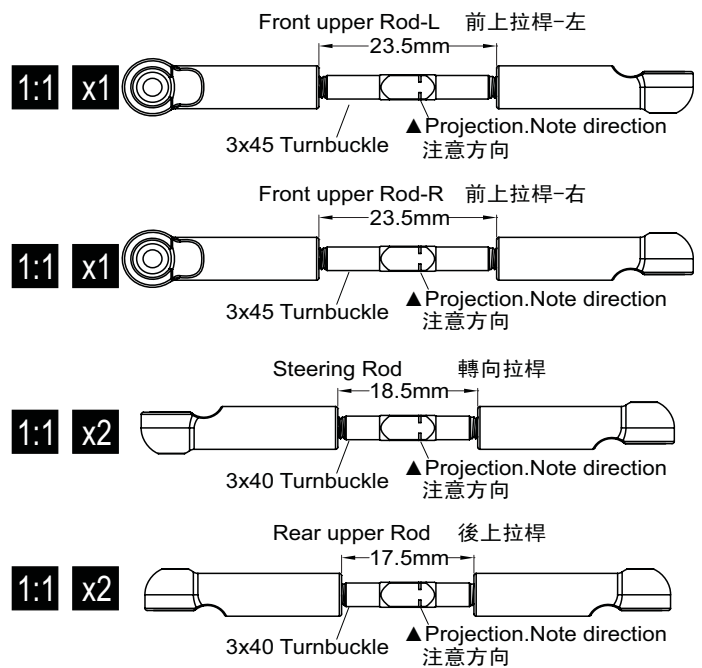
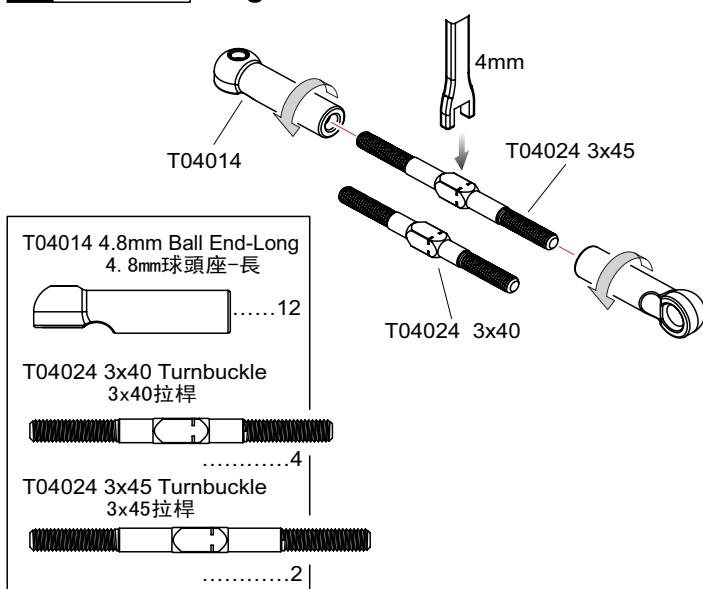


22 Front Turnbuckle 前拉桿

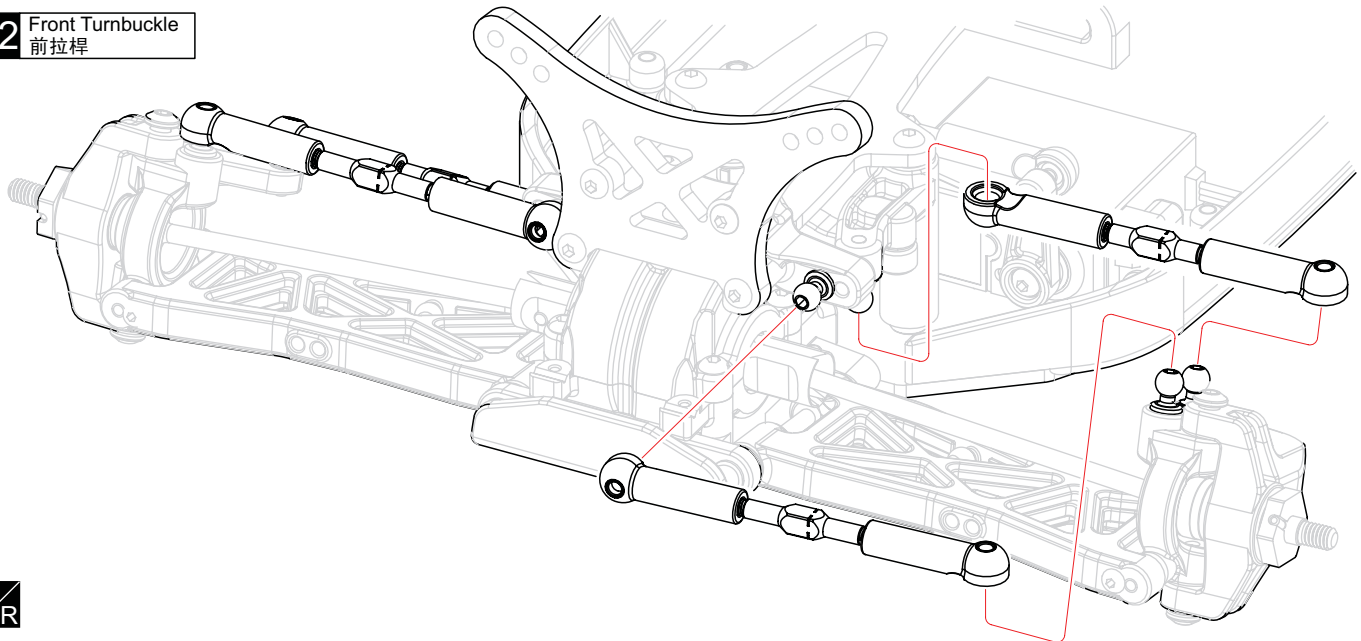

23 Rear Hub Carrier 後輪座

Bag-D

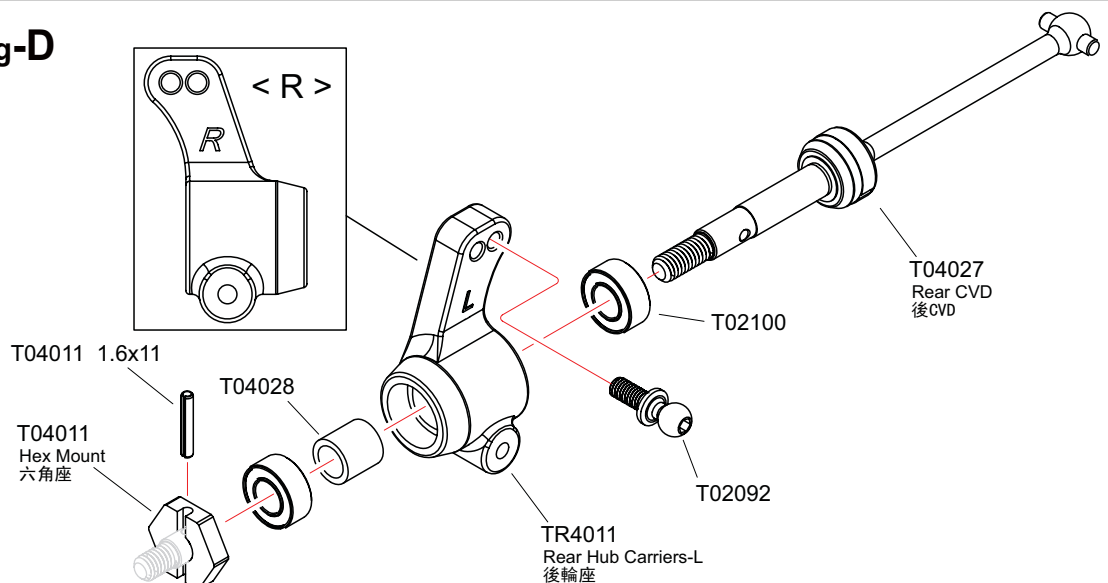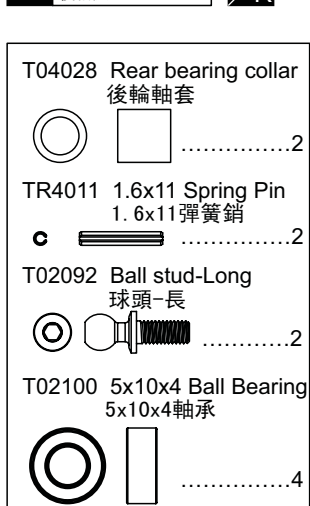

1:1 True-to-scale diagram
圖形比例

x2 Assemble as many times as specified
需組裝數量

L/R Assemble both Left and Right
組裝左和右

24 Rear Hub Carrier 後輪座


Bag-D

TR4011 2.5x6x1 Washer
2.5x6x1 墊片4

TR4059 M2.5x4 Screw
M2.5x4 螺絲2

TR4046 2.5x30 Arm Pin
2.5x30 擺臂軸2

< L >

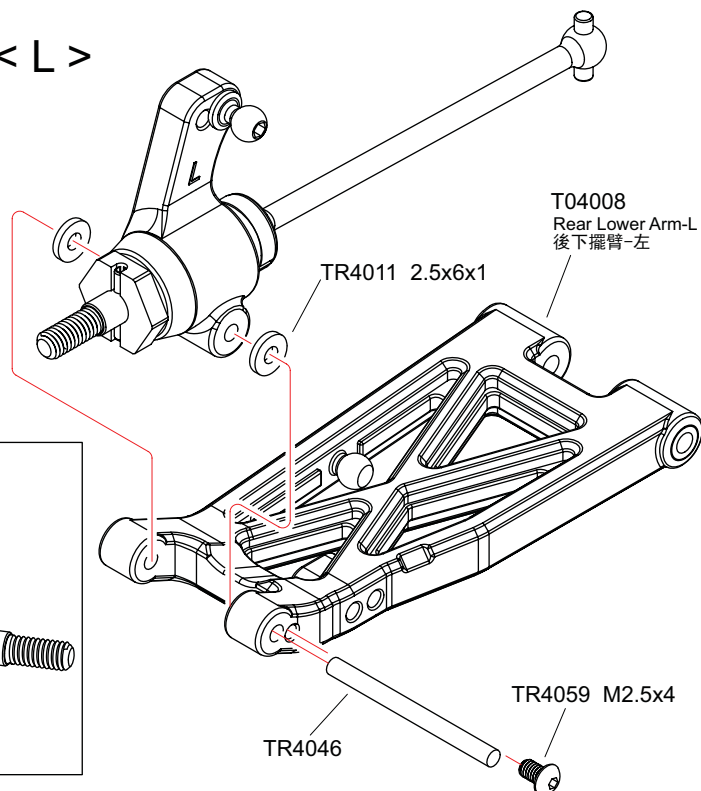


T04008
Rear Lower Arm-L
後下擺臂-左

TR4011 2.5x6x1

TR4046

TR4059 M2.5x4

< R >

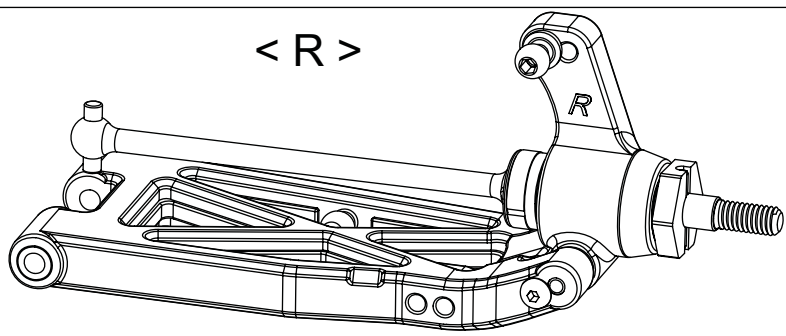


25 Rear Suspension Arm 後擺臂

Bag-D

T04035 3x51 Arm Pin
3x51 擺臂軸

TR4058 M3x10 Screw
M3x10 螺絲2

TU0418 Rear Arm Mount-Ball
後擺臂固定座-球珠4

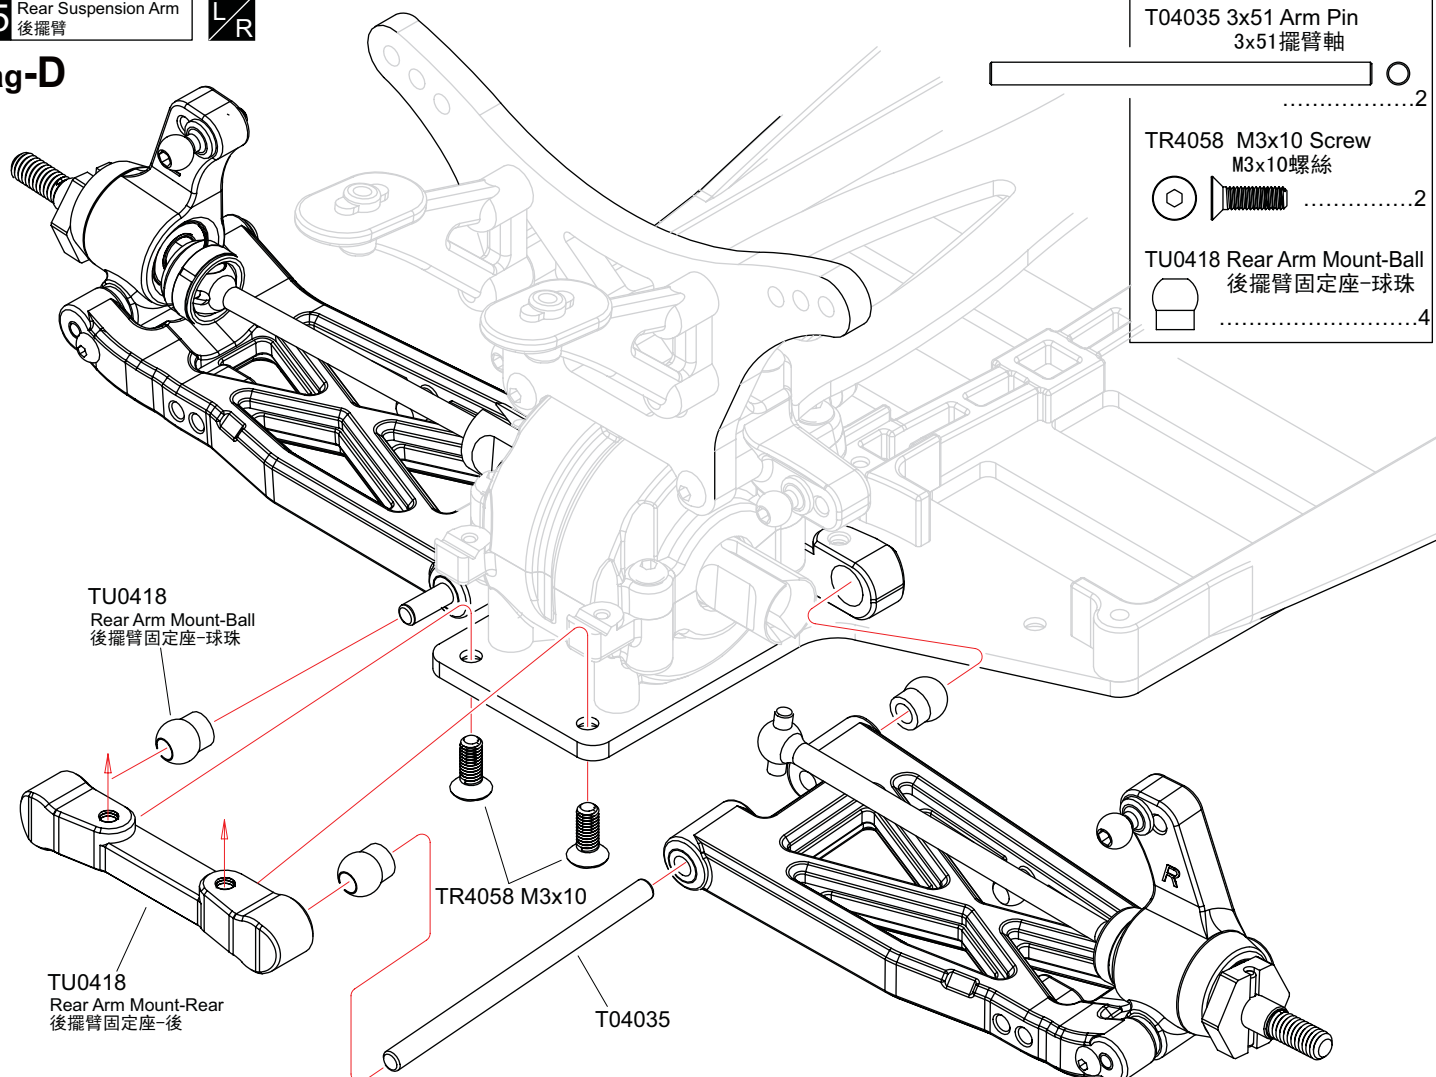

TU0418
Rear Arm Mount-Ball
後擺臂固定座-球珠


TR4058 M3x10

T04035

TU0418
Rear Arm Mount-Rear
後擺臂固定座-後

Assemble both Left and Right
組裝左和右

26 Rear Turnbuckle 拉桿

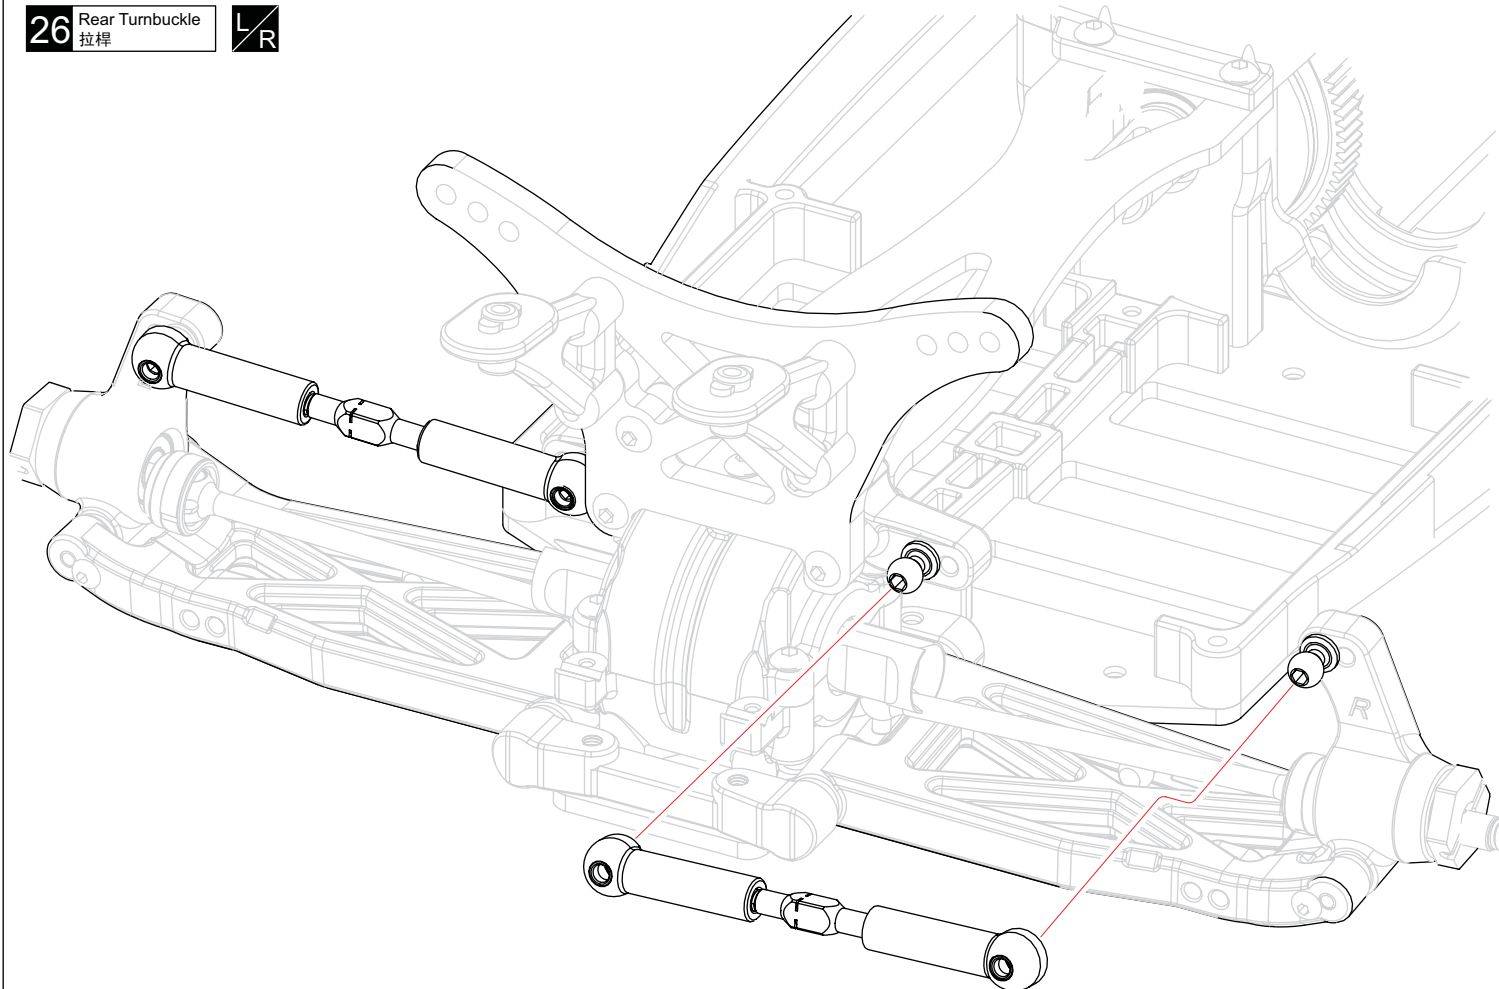

27 Shock Absorber 避震器

Bag-E

F/R x2

TU0250-8 Spring
彈簧

.....4

TU0250-8 1mm Washer-Black
1mm壓墊-黑色

.....4

TU0250-8 1mm Washer-White
1mm壓墊-白色

.....4

TU0250-8 2.5mm Washer-White
2.5mm壓墊-白色

.....4

TU0250-8 2.8x1.9 O-ring
2.8x1.9 O環

.....8

TU0250-8 9x1 O-ring
9x1 O環

.....8



TU0250-8
Spring
彈簧



TU0250-8
1mm Washer-Black
1mm壓墊-黑色



TU0250-8
2.8x1.9 O-ring
2.8x1.9 O環




TU0250-8
2.5mm Washer-White
2.5mm壓墊-白色




TU0250-8
2.8x1.9 O-ring
2.8x1.9 O環




TU0250-8
1mm Washer-White
1mm壓墊-白色




TU0250-8
9x1 O-ring
9x1 O環

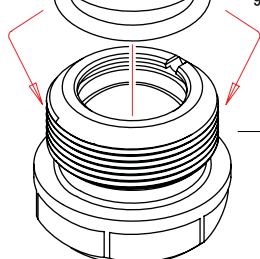

TU0250-3
Shock Below Cover
避震下蓋

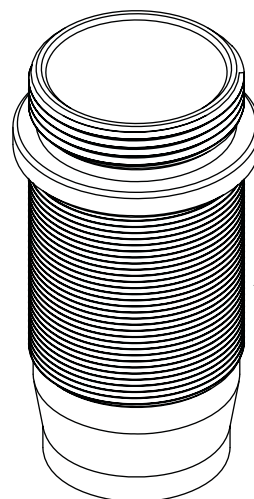

TU0250-3
Front Shock Absorber Body-Short
前避震器筒身-短

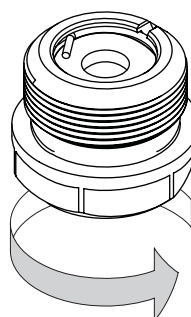

TU0250-4
Rear Shock Absorber Body-Long
後避震器筒身-長



Assemble both Left and Right
組裝左和右



Assemble both front and rear
組裝前面和後面



Assemble as many times as specified
需組裝數量

TU0250-1/TU0250-2 2.3 E-ring
2.3 E扣

.....4

TU0250-7 Front Piston-Black
前活塞-黑色

.....4

TU0250-7 Rear Piston-White
後活塞-白色

.....4

TU0250-8 12x1 O-ring
12x1 O環

.....4


T02031 5.8 Ball End
5.8球頭-座

.....4

T02062 5.8 Ball Stud
5.8球頭

.....4

TU0250-7
Front Piston-Black
Rear Piston-White
前活塞-黑色
後活塞-白色

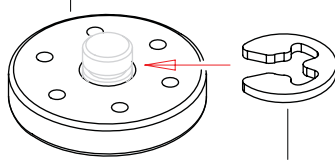

TU0250-1/TU0250-2
2.3 E-ring
2.3 E扣




TU0250-1/TU0250-2
2.3 E-ring
2.3 E扣

TU0250-1
Front Shock Absorber Shaft
前避震器軸



TU0250-2
Rear Shock Absorber Shaft
後避震器軸



F/R x2

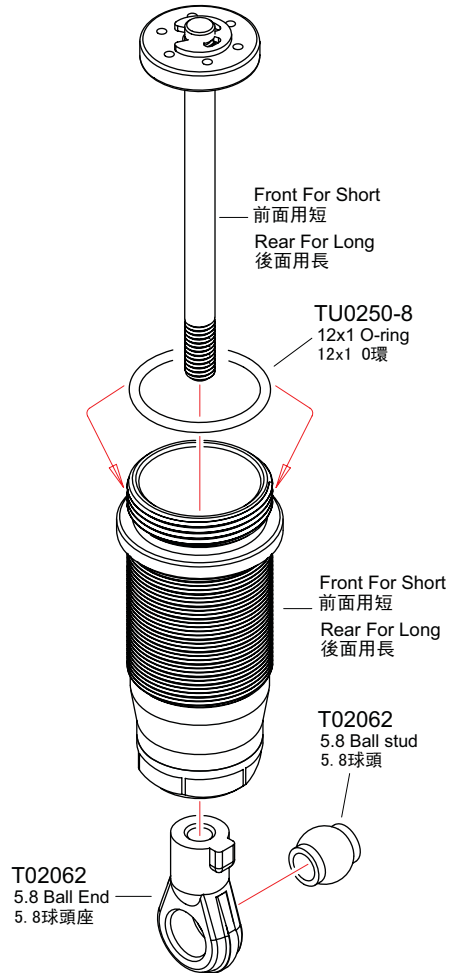


F/R x2

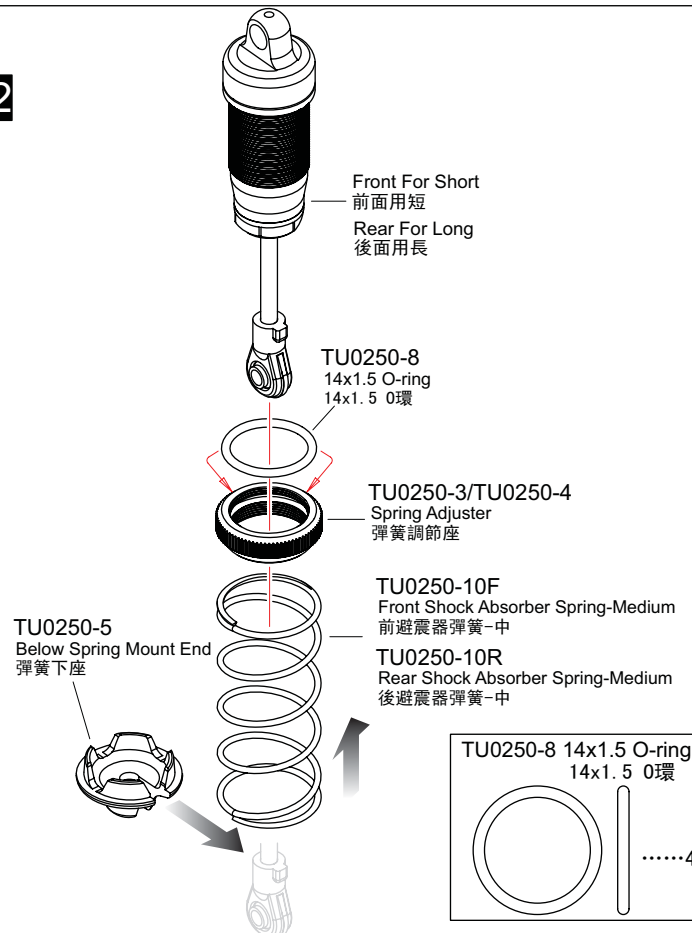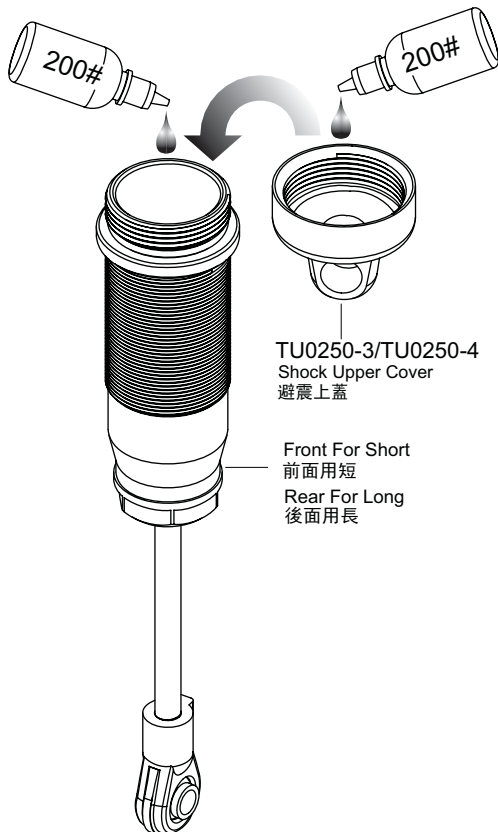

30 Front Shock Absorber 前避震器


Bag-E

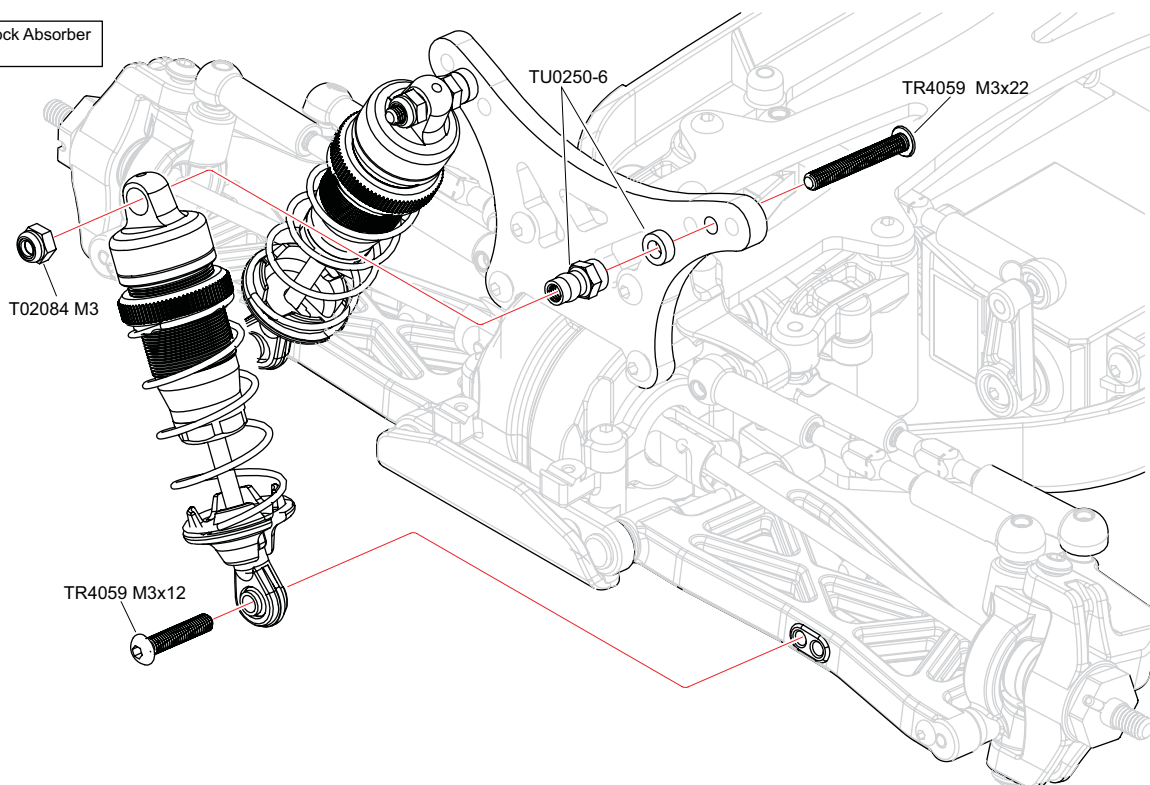

TU0250-6 Shock cap ball 避震蓋球頭	TU0250-6 3.1x5.5x2.0 Aluminium Washer 3.1x5.5x2.0鋁墊片	T02084 M3 Nylon Nut M3尼龍螺母	TR4059 M3x12 Screw M3x12螺絲	TR4059 M3x22 Screw M3x22螺絲
.....2	2	2	2	2

30 Rear Shock Absorber 后避震器

Bag-E

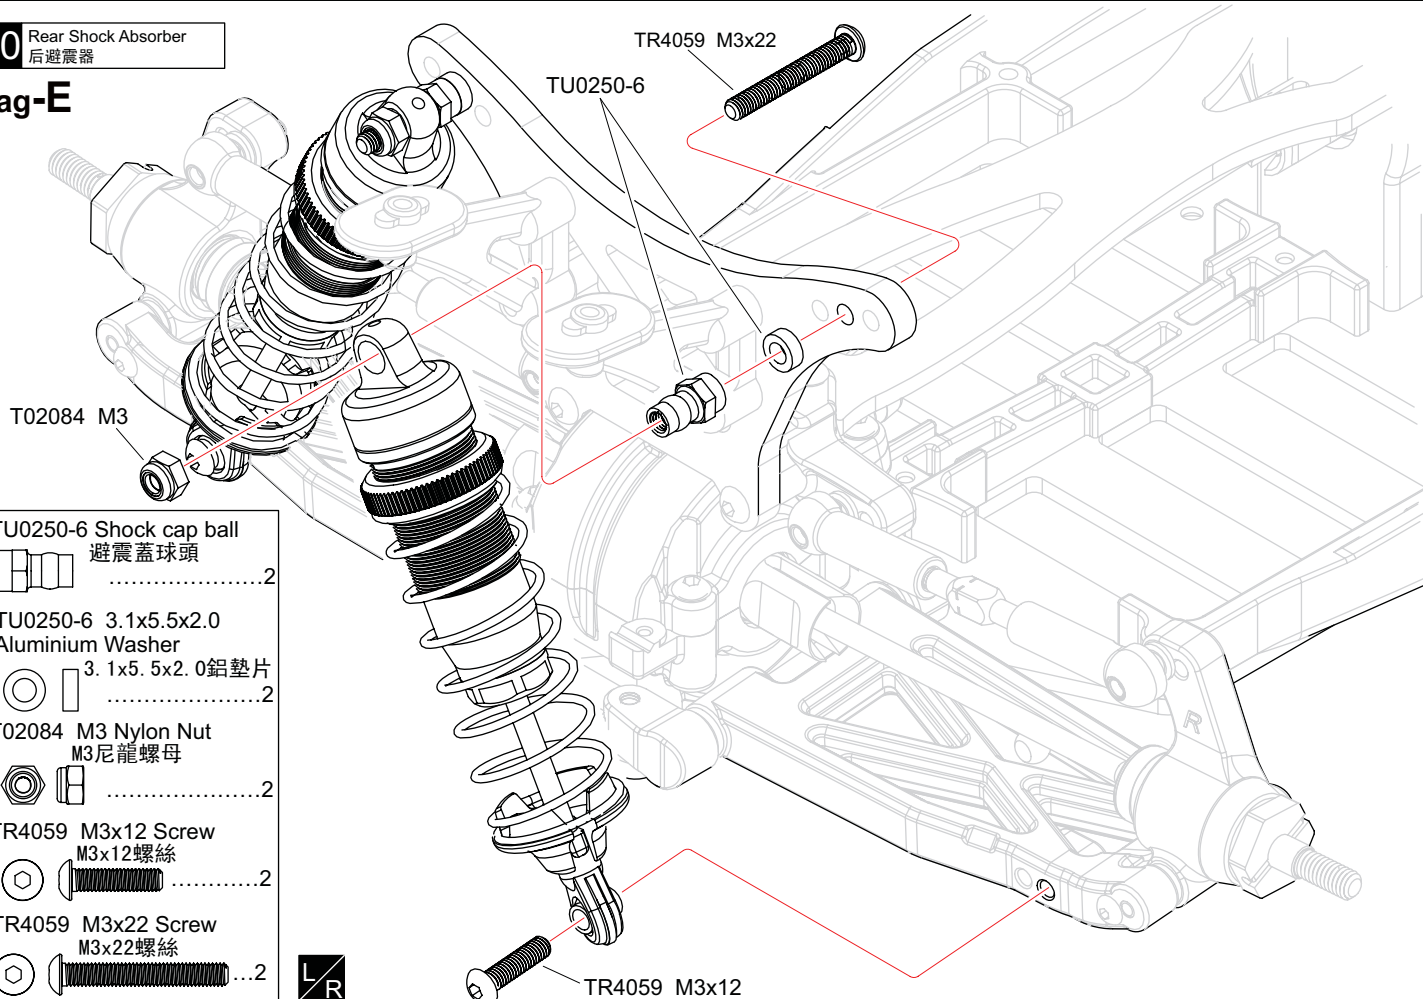

TU0250-6 Shock cap ball 避震蓋球頭	2
TU0250-6 3.1x5.5x2.0 Aluminium Washer 3.1x5.5x2.0鋁墊片	2
T02084 M3 Nylon Nut M3尼龍螺母	2
TR4059 M3x12 Screw M3x12螺絲	2
TR4059 M3x22 Screw M3x22螺絲	2




Assemble both Left and Right
組裝左和右

32 Battery Column 電池柱 Bag-A

TR4058 M3x10 Screw
M3x10螺絲



T04054
Battery Column
電池扣支柱

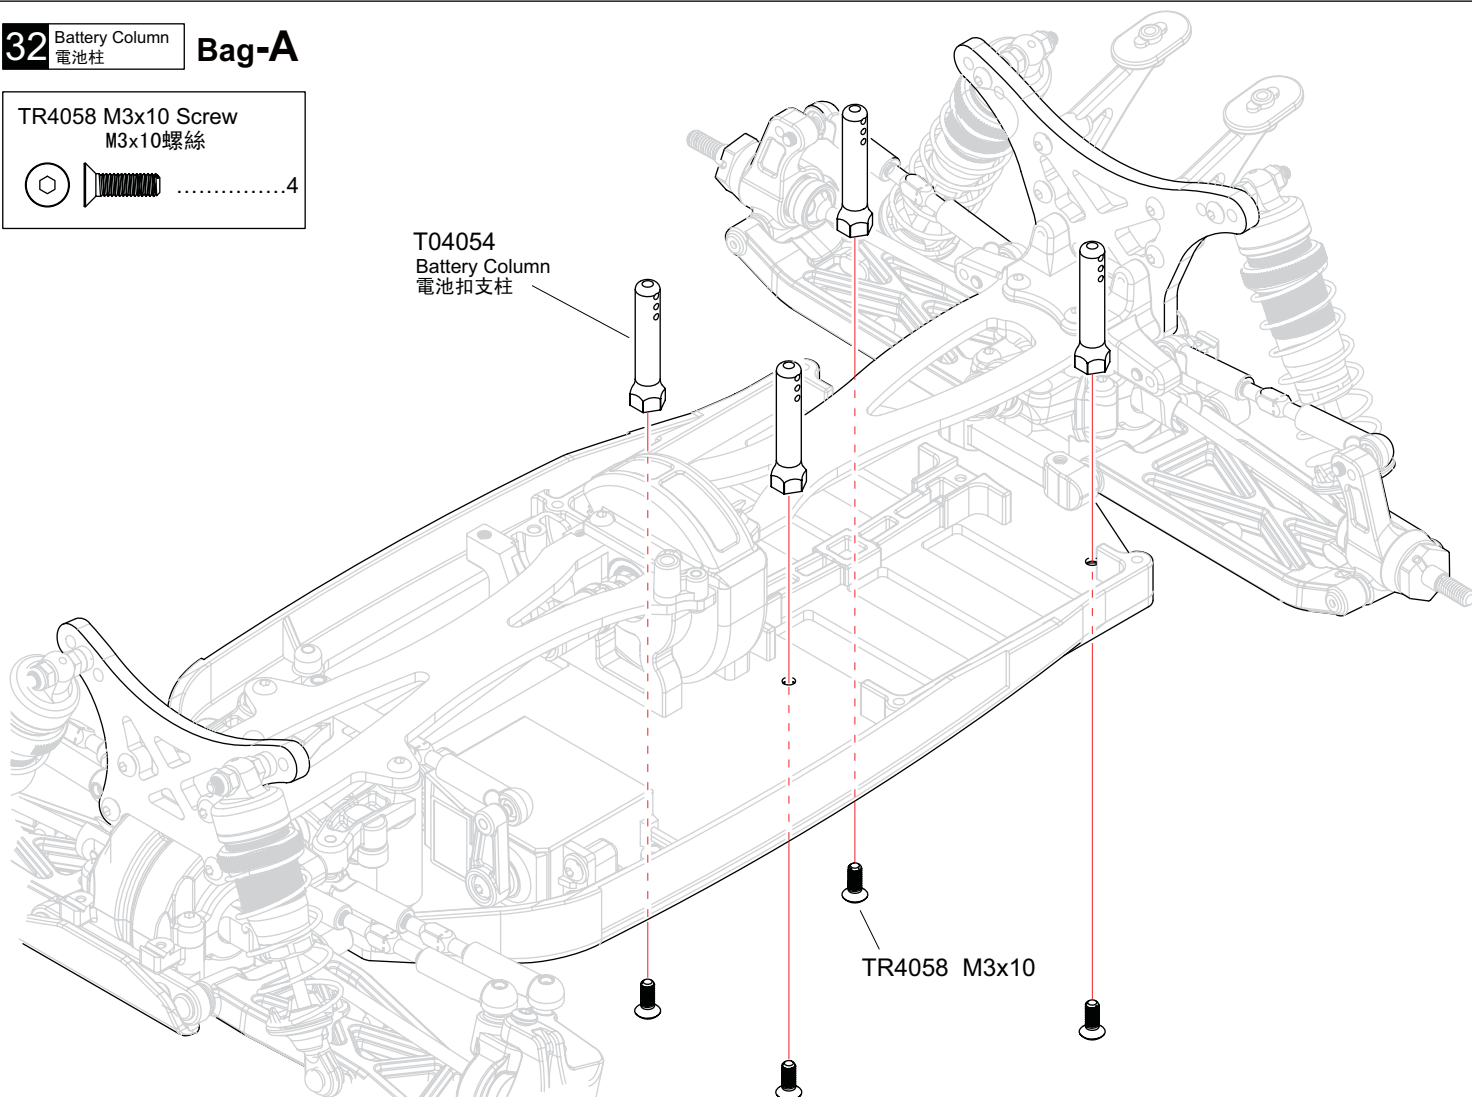


33 Motor 馬達 Bag-A

X Motor
馬達

TU0415
Motor Cam
馬達凸輪

TR4059 M3x8

H481 M3x3 Screw
M3x3螺絲




TR4059 M3x8 Screw
M3x8螺絲




H481 M3x3

H481
21T Pinion Gear
21T馬達齒

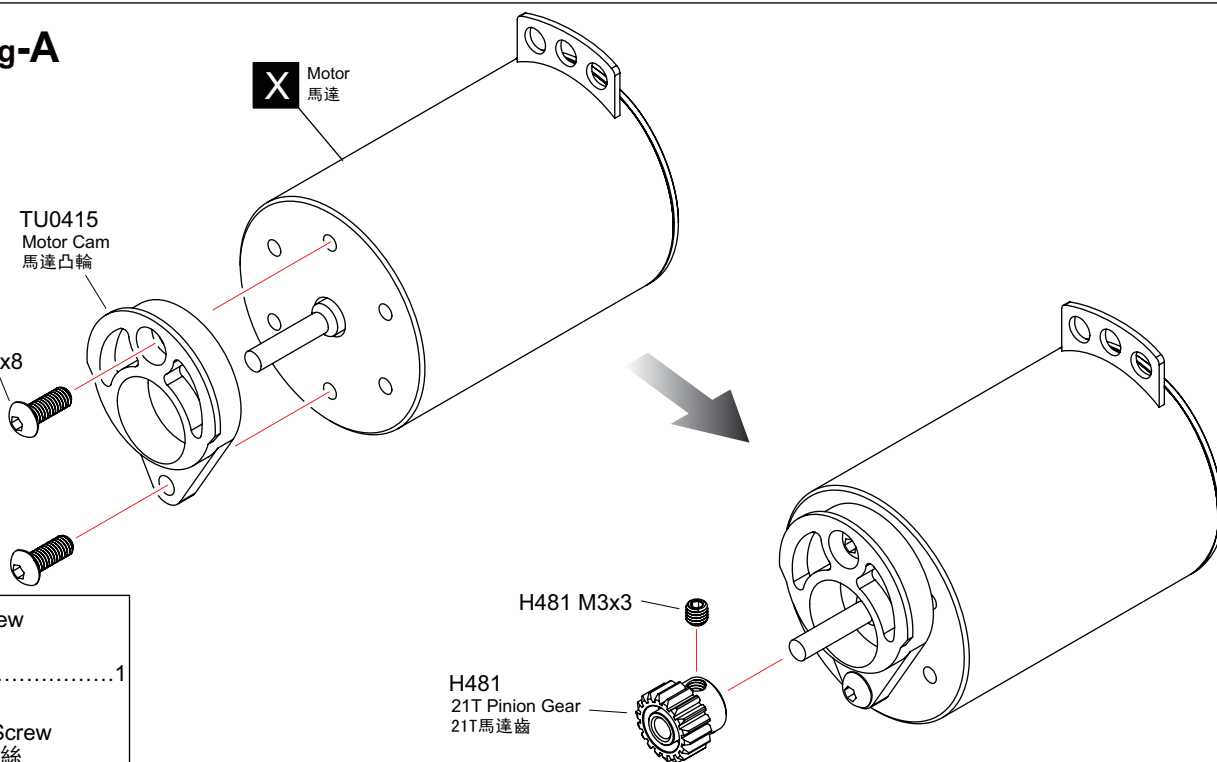

X Must be purchased separately
需另購物品

TR4059 M3x8 Screw
M3x8螺絲TR4059 M3x10 Screw
M3x10螺絲TR4059 M3x12 Screw
M3x12螺絲

TR4059 M3x10

TR4059 M3x12

TU0415
Motor Clamp
馬達夾塊

T04013 M2.5x13

X H380
Fan
風扇T04013
Fan Mount
風扇座



TR4059 M3x8

TR4016
Spur Gear Cover
減速齒輪罩

TR4058 M3x8



Tighten the screws with one sheet of paper
inserted between both gears.

兩齒輪間間隙大約為一張普通紙的厚度。

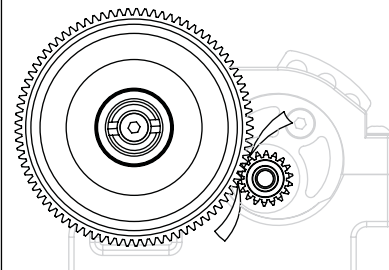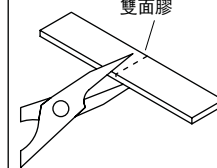
T02087
Antenna Cap
天線帽X Receiver
接收機X ESC
電子變速器T02087
Antenna Tube
天線管T02087
Double-sided Tape
雙面膠

36 Battery 電池 L/R Bag-A


T02086 Small clip
小號插銷

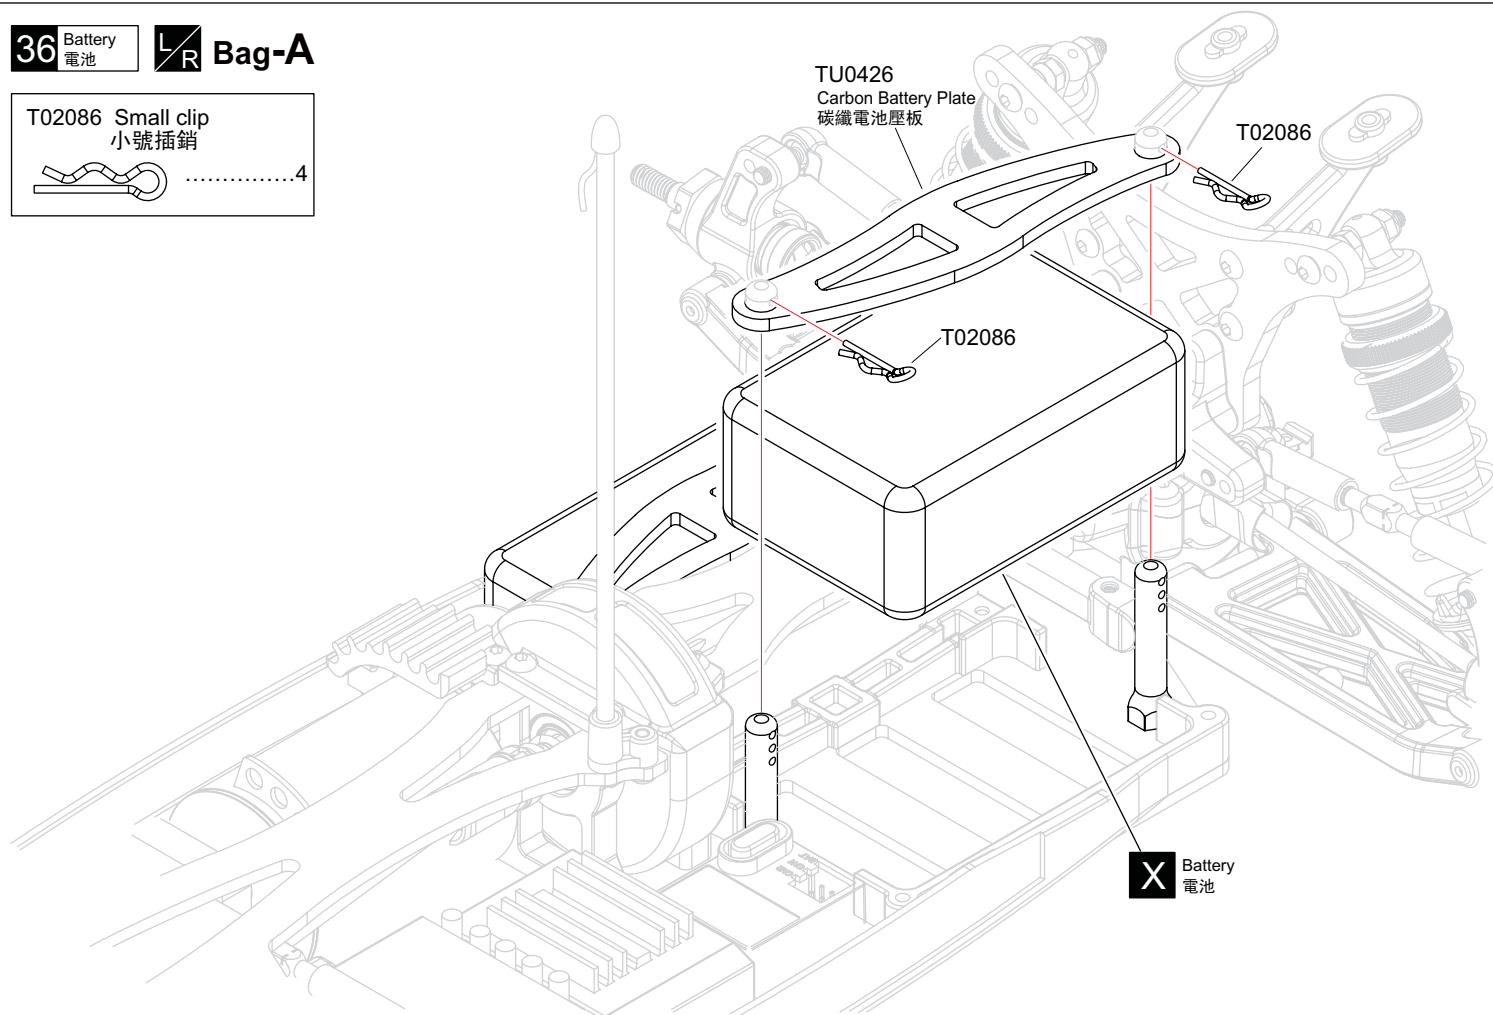

37 Wheel 輪胎 Bag-F < Front > x2

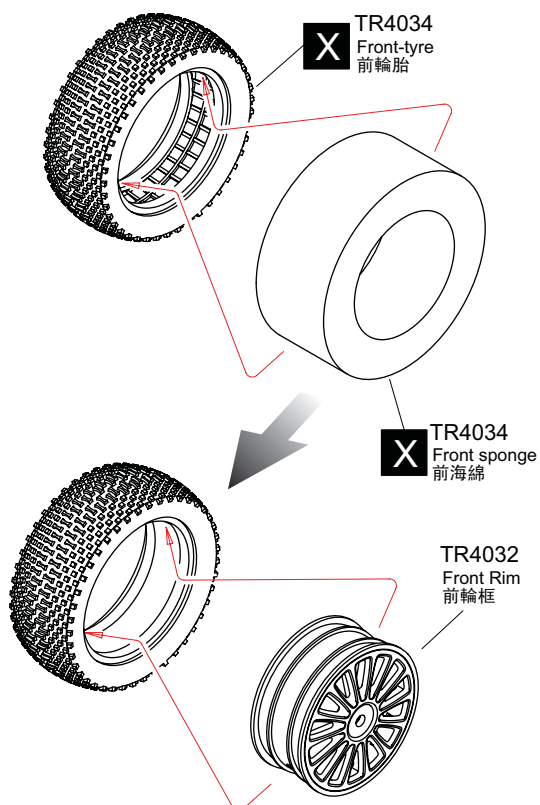


< Rear > x2

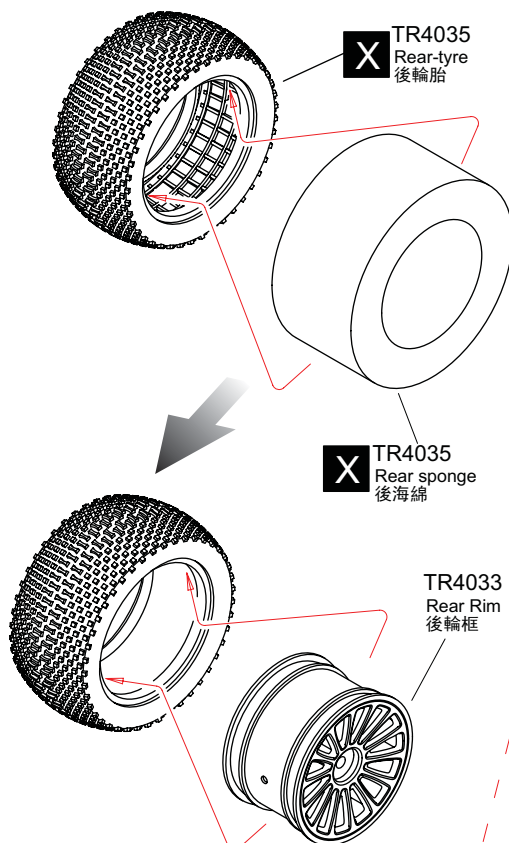

F/R x2

After fitting wheels to tyres,
apply instant glue as shown.
輪胎裝好後如圖示打膠水。

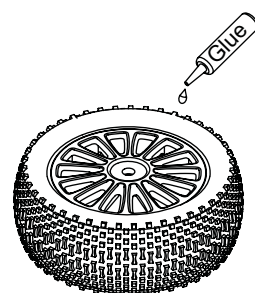


X Must be purchased separately
需另購物品

L/R Assemble both Left and Right
組裝左和右

x2 Assemble as many times as specified
需組裝數量


F/R Assemble both Front and Rear
組裝前面和後面

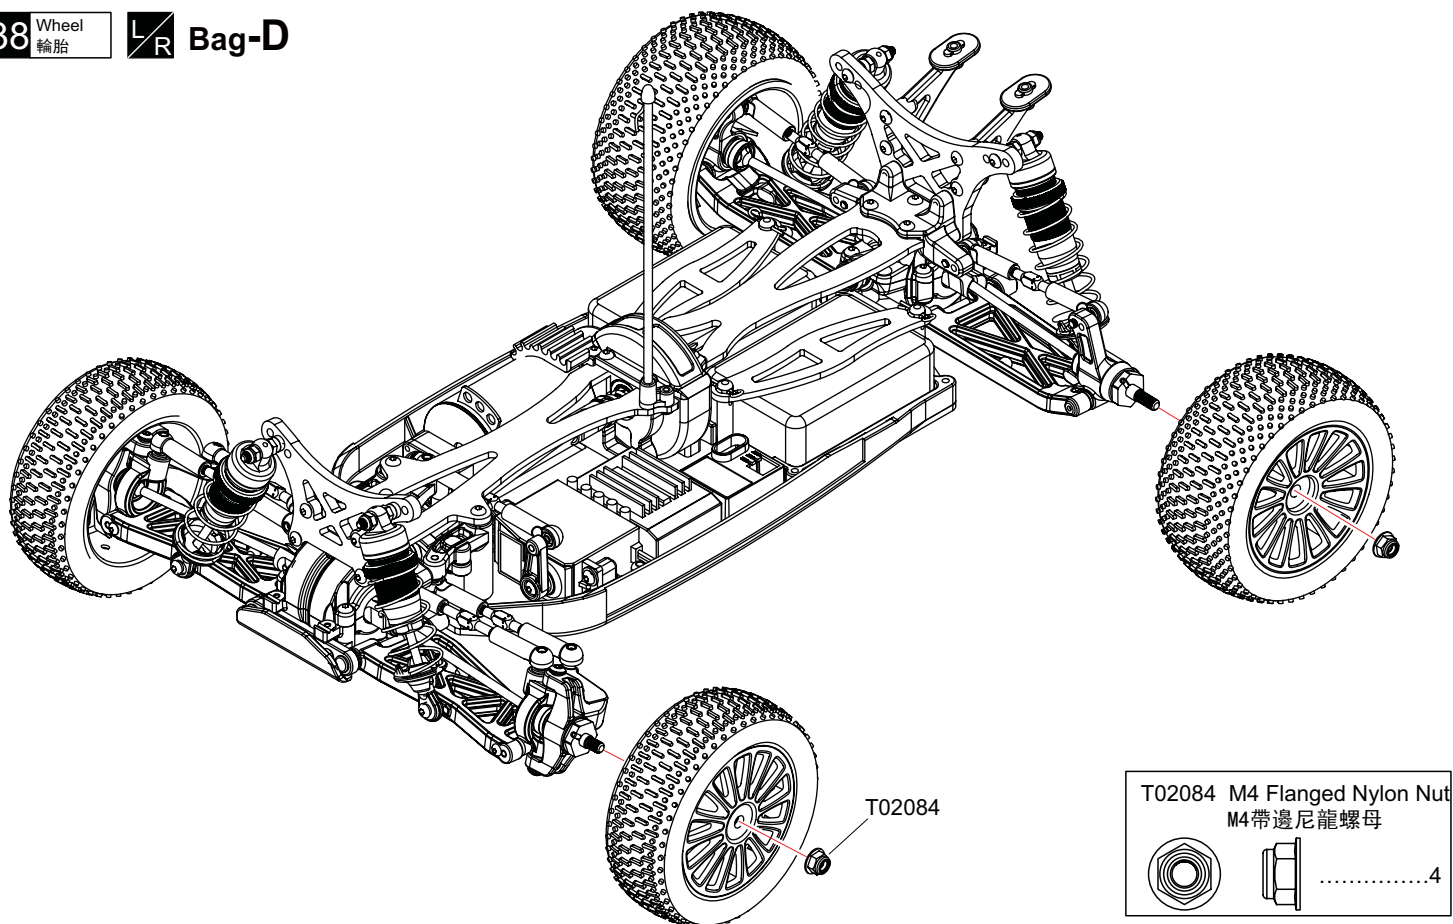



TR4858 M3x10 Screw
M3x10螺絲



T04012 Wing washer
尾翼墊片




T04012 Wing angle shim-3°
尾翼調整墊片-3°

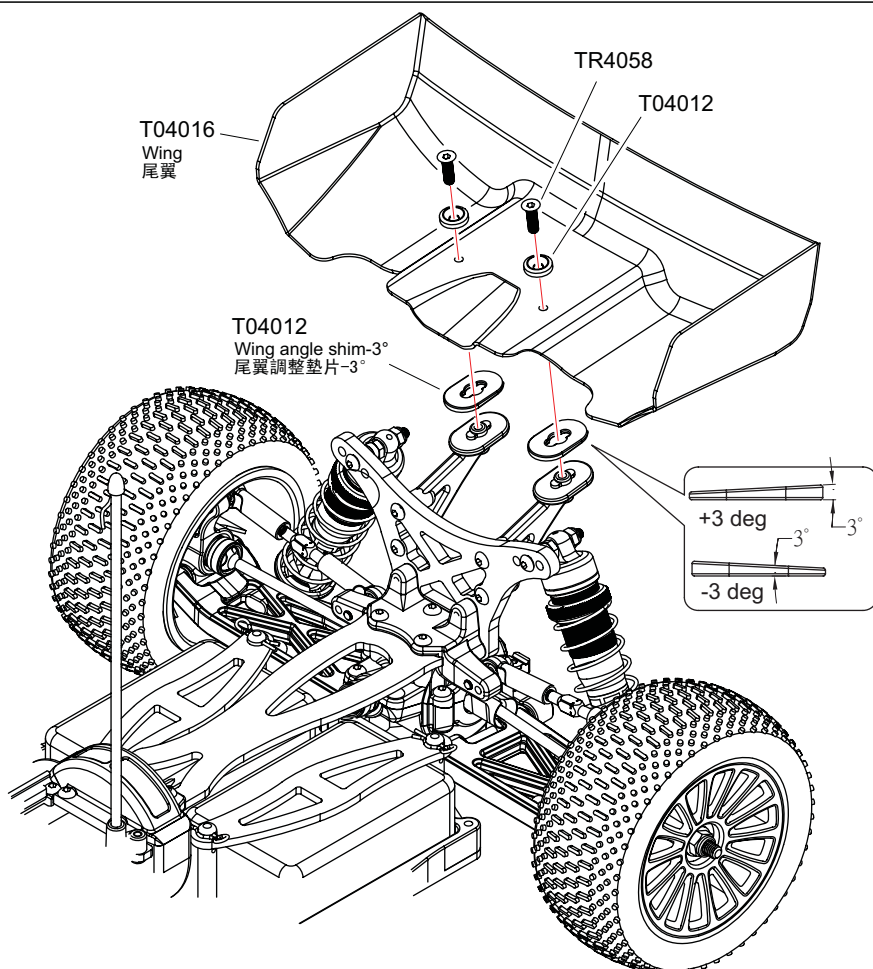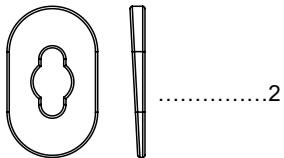

40 Bottom Cover 底盤蓋


Bag-J

Before you install the bottom cover, pls removed you have already installed some parts.
安裝底盤蓋之前，請先把前面安裝好的零件拆下來。

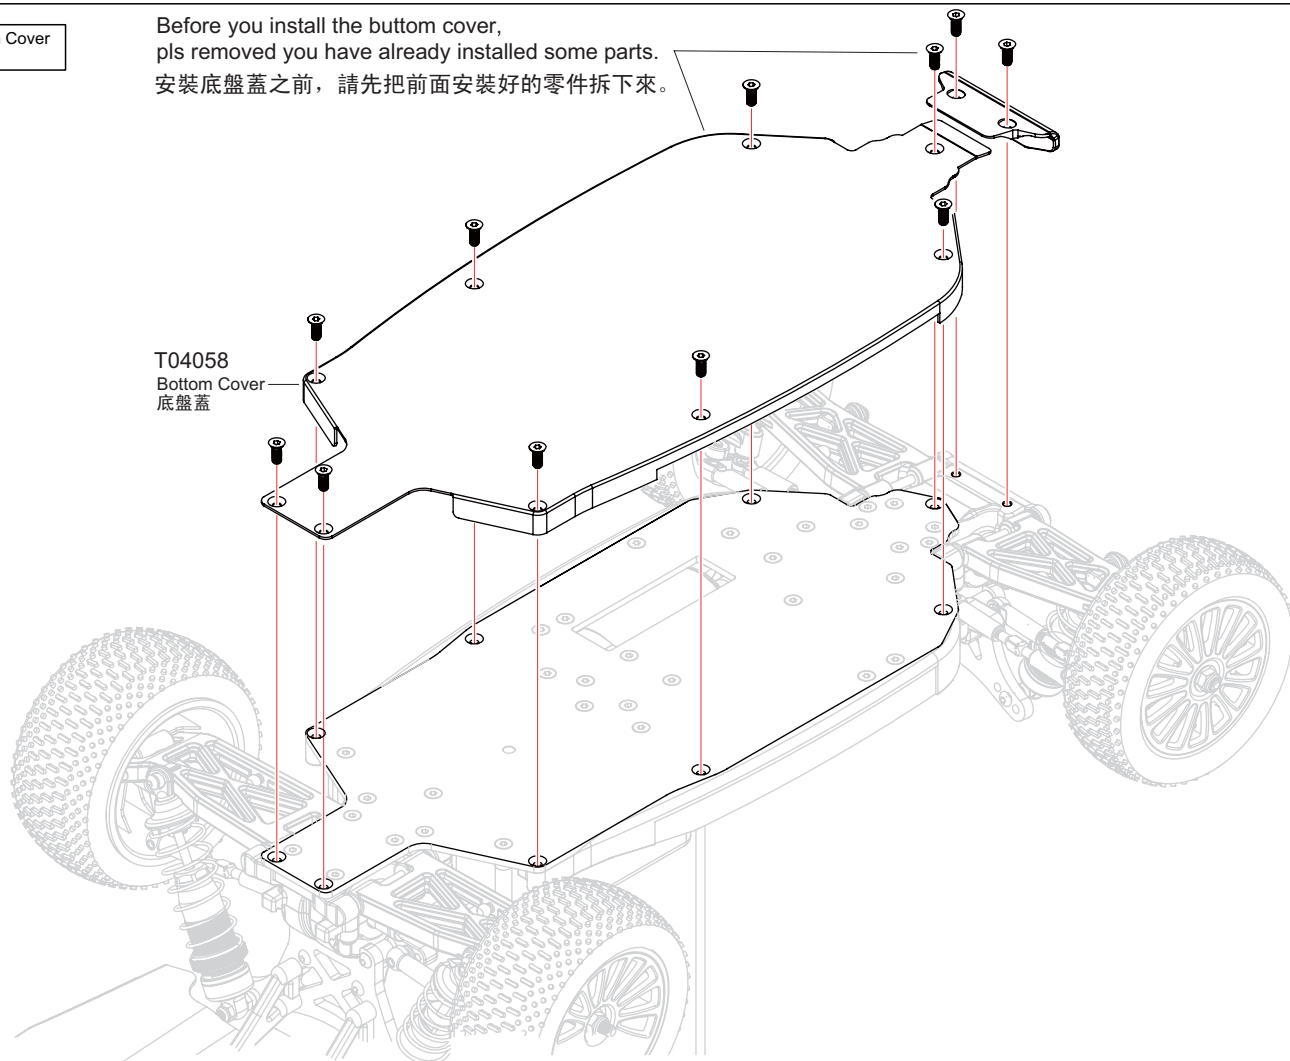


41 Body 車殼

Bag-J Bag-H

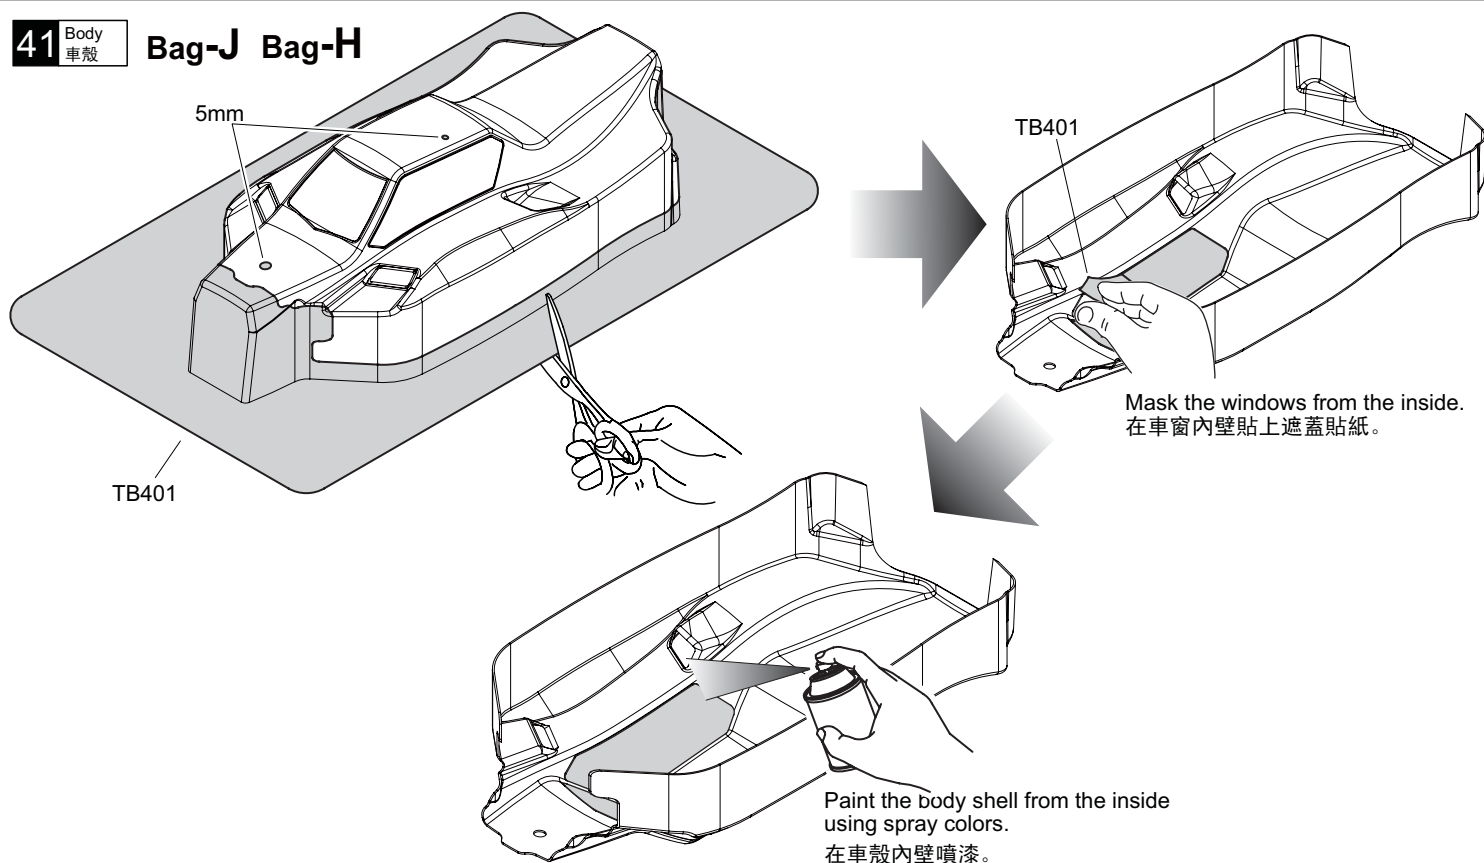


42 Body-Velcro Tape
車殼-魔鬼粘

Bag-A

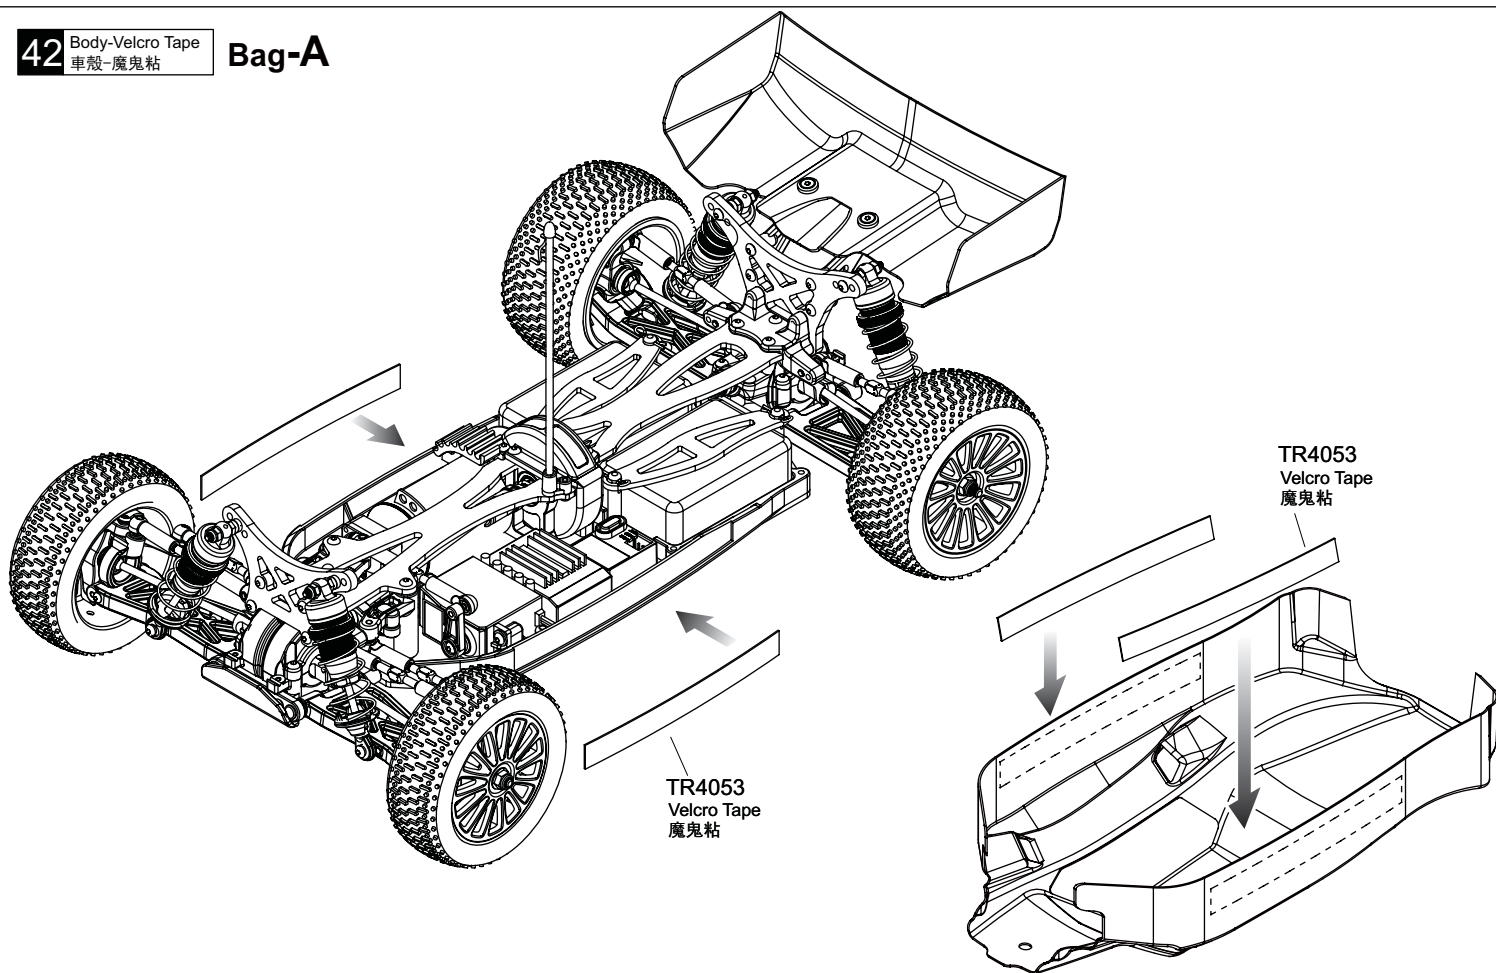


43 Body
車殼





















Bag-C

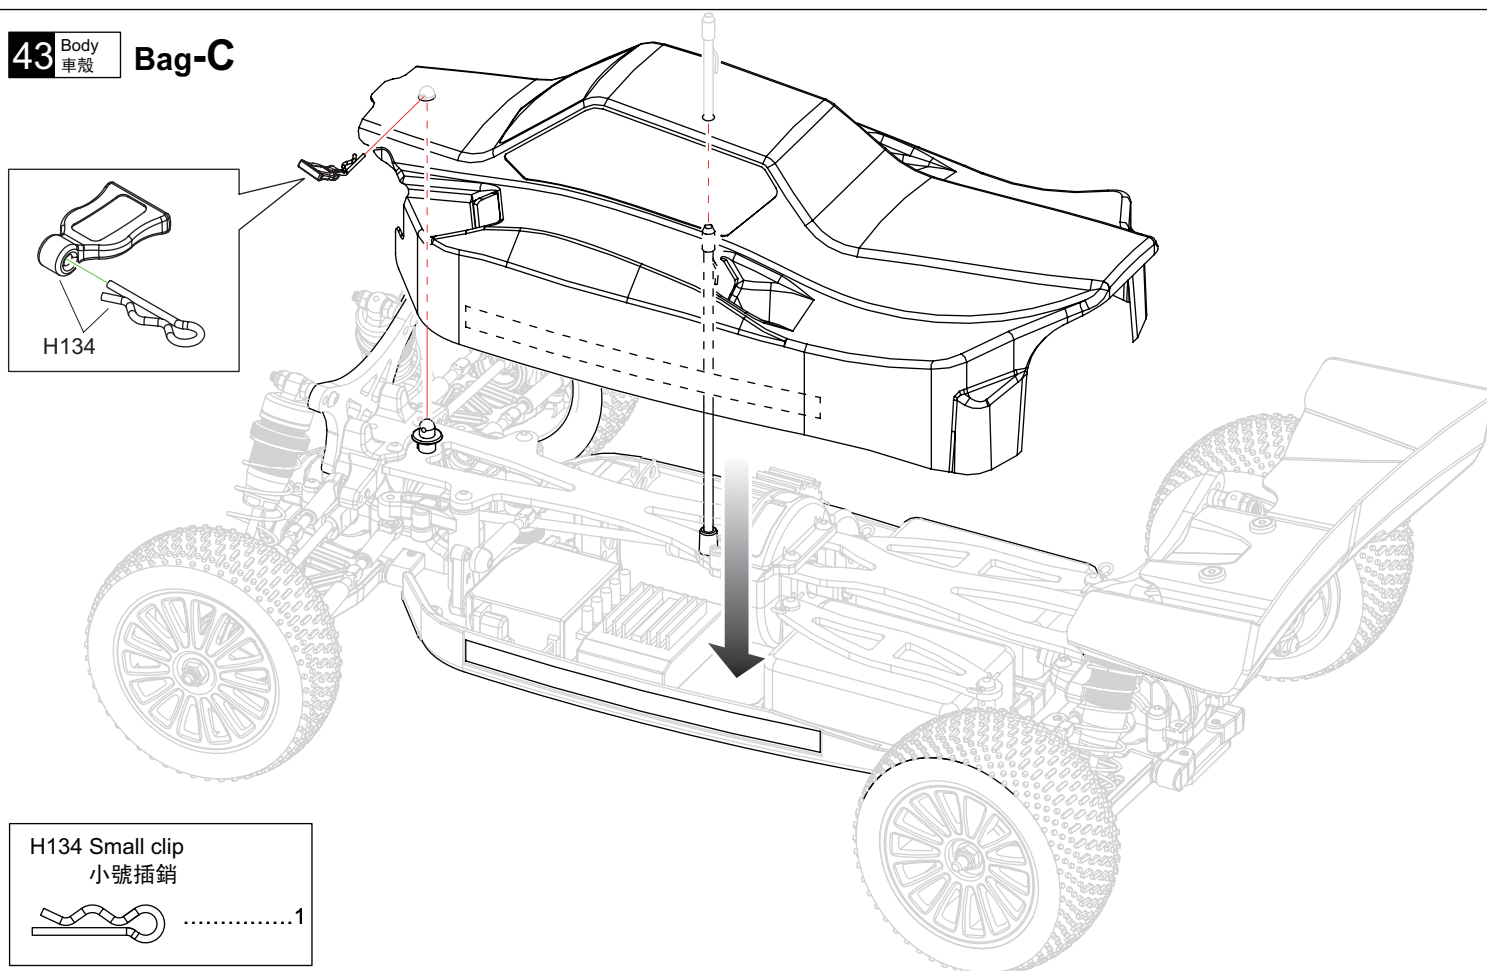

Exploded View 爆炸圖



























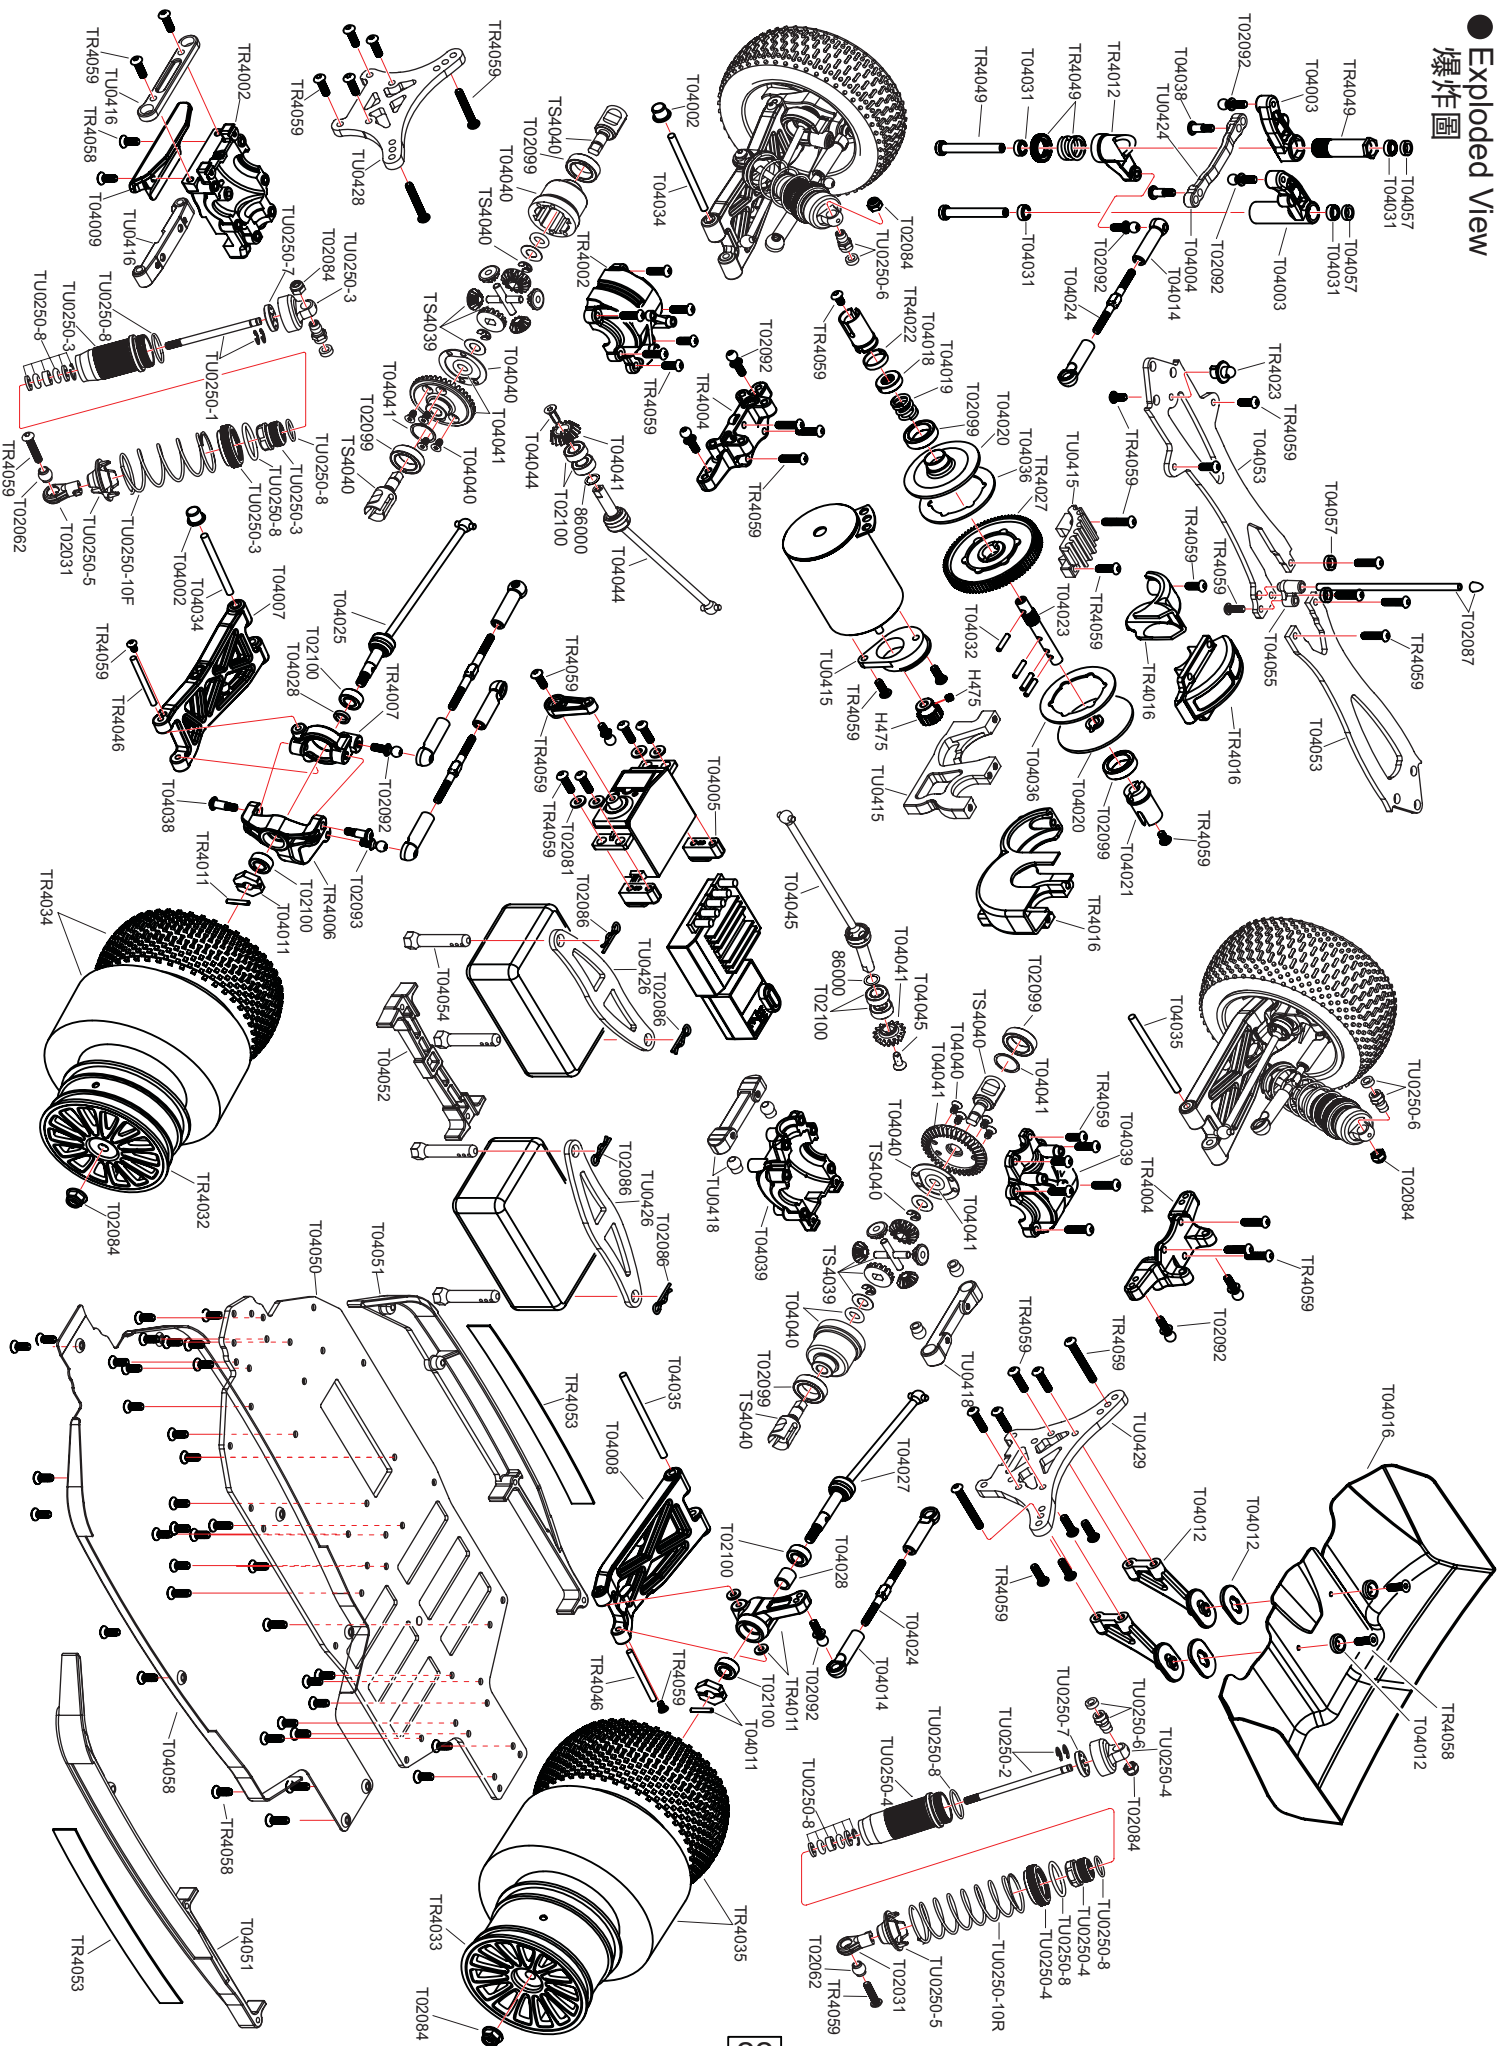


Parts list for T4 V2 off-road buggy - 1 T4V2越野車配件-1

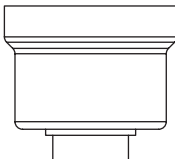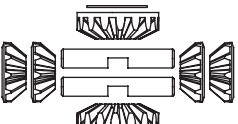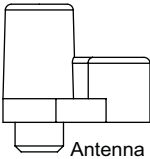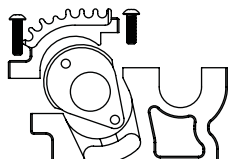T04040   4.8x1.6 O-ring 4.8x1.6 O環 1pcs  10x12x0.2 Washer 10x12x0.2墊片 2pcs  M2.5x6 Screw M2.5x6螺絲 4pcs  Diff Pads 差速墊片 1pcs Diff Housing 差速殼 1pcs	T04041  16T Gear 16T齒輪 1pcs  40T Gear 40T齒輪 1pcs  10x12x0.2 Washer 10x12x0.2墊片 2pcs  4.8x1.6 O-ring 4.8x1.6 O環 1pcs	T04044  M3x8 Screw M3x8螺絲 1pcs  T4 83mm Center Front CVD T4 83mm中前CVD 1pcs		
T04045  M3x8 Screw M3x8螺絲 1pcs  T4 78mm Center Rear CVD T4 78mm中後CVD 1pcs	TS4039  Diff Gear Set 差速齒輪組	TS4040  3.0 E-ring 3.0 E扣 2pcs  Diff Connecting Cup 差速接杯 2pcs	T02156  4.8x1.6 O-ring 4.8x1.6 O環 4pcs	TB401  Body-lexan 車殼-PC透明 1pcs
T04050  Chassis 底盤 1pcs	T04051  Side plate-Left 側板-左 1pcs  Side plate-Right 側板-右 1pcs	T04052  Battery Mount 電池座 1pcs	T04053  Upper Deck 二樓板 Front 1pcs Rear 1pcs	T04054  Battery Column 電池扣支柱 4pcs
T04055  Antenna pipe mount 天線管座 1pcs	T04057  4.1x6x2.1 Washer 4.1x6x2.1墊片 2pcs  3.1x5.5x1.0 Washer 3.1x5.5x1.0墊片 2pcs	T04058  Bottom Cover 底盤蓋 1pcs	TU0415  Motor Mount 馬達座 1Set	TU0416  Front Arm Mount 前擺臂固定座 1pcs  Rear Arm Mount 後擺臂固定座 1pcs
TU0418  Front 1pcs  Rear 1pcs Rear Arm Mount 後擺臂固定座 4pcs	TU0423  8pcs Rear Arm Mount-Ball 後擺臂固定座-球珠	TU0426  Carbon Battery Plate 碳纖電池壓板 2pcs	TU0428  Carbon Front Shock Tower 碳纖前避震架 1pcs	TU0429  Carbon Rear Shock Tower 碳纖後避震架 1pcs
TU0250-1  2.3 E-ring 2.3 E扣 4pcs  Front Shock Absorber Shaft 前避震器軸 2pcs	TU0250-2  2.3 E-ring 2.3 E扣 4pcs  Rear Shock Absorber Shaft 後避震器軸 2pcs	TU0250-3  2pcs  2pcs Front Shock Absorber Body 前避震器筒身	TU0250-4  2pcs  2pcs Rear Shock Absorber Body 後避震器筒身	TU0250-5  Below Spring mount end 彈簧下座 4pcs
TU0250-6  3.1x5.5x2.0 Aluminium Washer 3.1x5.5x2.0鋁墊片 4pcs  Shock cap ball 避震蓋球頭 4pcs	TU0250-7  Front Piston-Black 前活塞-黑色 2pcs  Rear Piston-White 後活塞-白色 2pcs	TU0250-8  1mm Washer-White 1mm壓墊-白色 4pcs  1mm Washer-Black 1mm壓墊-黑色 4pcs  2.5mm Washer-White 2.5mm壓墊-白色 4pcs  Spring 彈簧 4pcs  2.8x1.9 O-Ring 2.8x1.9 O環 4pcs  9x1 O-Ring 9x1 O環 4pcs  12x1 O-Ring 12x1 O環 4pcs  14x1.5 O-Ring 14x1.5 O環 4pcs		

Parts list for T4 V2 off-road buggy - 2

T4 V2越野車配件-2

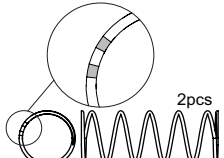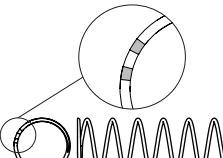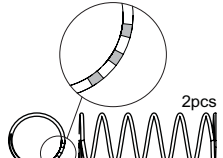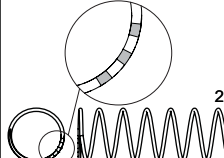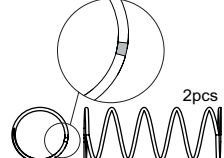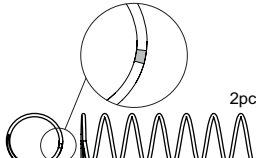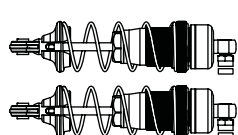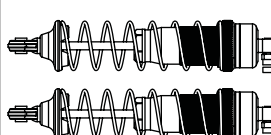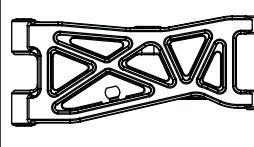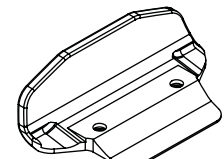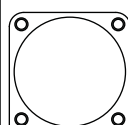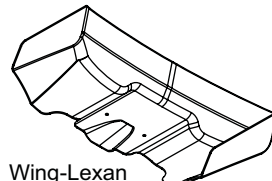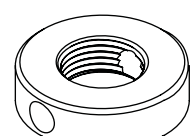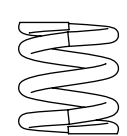TU0250-10F  2pcs Front Shock Absorber Spring-Medium 前避震器彈簧-中	TU0250-10R  2pcs Rear Shock Absorber Spring-Medium 後避震器彈簧-中	TU0262-F  2pcs Front Shock Absorber Spring-Soft 前避震器彈簧-軟	TU0262-R  2pcs Rear Shock Absorber Spring-Soft 後避震器彈簧-軟	TU0260-F  2pcs Front Shock Absorber Spring-Hard 前避震器彈簧-硬
TU0260-R  2pcs Rear Shock Absorber Spring-Hard 後避震器彈簧-硬	TU0250  Front Shock Absorber 前避震器	TU0252  Rear Shock Absorber 後避震器	T04002  Front - 1pcs  Rear - 1pcs Front Arm Mount 前擺臂固定座	T04003 Top - 1pcs  Left 1pcs Bottom 1pcs  Servo Saver 緩衝座
T04004  Steering Rack 緩衝連接板 1pcs	T04005 2pcs  1mm Spacer 2pcs  2mm Spacer Servo Mount 伺服機座	T04006 1pcs  F 1pcs  H 1pcs  S Steering Servo Horn 轉向伺服臂	T04007  Front Lower Arm 前下擺臂 2pcs	T04008  Left-1pcs  Right-1pcs Rear Lower Arm 後下擺臂
T04009  Front Bumper 前防撞板 1pcs	T04011  Hex Mount 六角座 4pcs  1.6x11 Spring Pin 1.6x11彈簧銷 4pcs	T04012  Wing Angle Shim 尾翼調整片 2pcs  Front Body Mount 前車軀柱 1pcs  Wing Brack 尾翼架 2pcs	T04013  Fan Mount 風扇座 1pcs  M2.5x13 Fan Screw M2.5x13風扇螺絲	T04014  4.8mm Ball End - Long 4.8mm球頭座-長 7pcs
T04016  Wing-Lexan 尾翼 1pcs	T04018  Slipper Nut 扭限螺母 1pcs	T04019  Slipper Spring 扭限彈簧 1pcs	T04020  1pcs Slipper Hub-F 扭限座-前  1pcs Slipper Hub-R 扭限座-後	T04021  Mid Connecting Hub-F 中接杯-前 1pcs  Mid Connecting Hub-R 中接杯-後 1pcs
T04022  Spring Buckle 彈簧扣 1pcs	T04023  Center Shaft 中軸 1pcs	T04024  3x40 Turnbuckle 3x40拉桿 5pcs  3x45 Turnbuckle 3x45拉桿 2pcs	T04025  Front CVD 前CVD 2pcs	T04027  Rear CVD 後CVD 2pcs
T04028  Front Bearing Collar 前輪軸套 2pcs  Rear Bearing Collar 後輪軸套 2pcs	T04031  4x7x2.5 Ball Bearing 4x7x2.5軸承 6pcs	T04032  2x9.8 Pin 2x9.8鋼針 6pcs	T04034  3x48.5 Arm Pin 3x48.5擺臂軸 2pcs	T04035  3x51 Arm Pin 3x51擺臂軸 2pcs

Parts list for T4 V2 off-road buggy - 3

T4 V2越野車配件-3

T04036




Slipper pad
扭限摩擦片
2pcs

T04038




M3 Screw
M3螺絲 6pcs

T04039

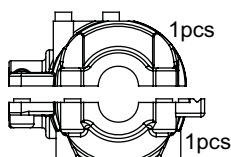


Rear Gear-box
後齒輪箱

TR4002

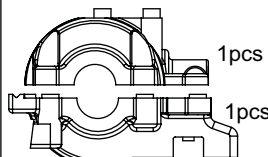


Front Gear-box
前齒輪箱

TR4004

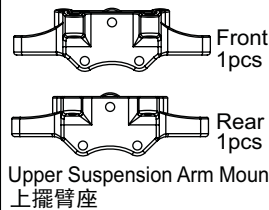


Upper Suspension Arm Mount
上擺臂座

TR4006

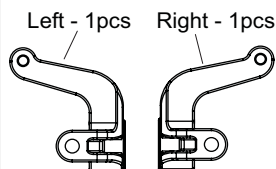


Steering Block
轉向臂

TR4007

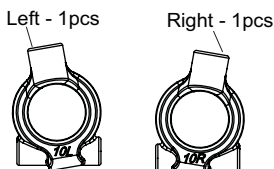


Front Hub Carriers 10 Degree
前輪座10°

TR4008

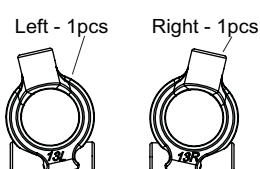


Front Hub Carriers 13 Degree
前輪座13°

TR4011

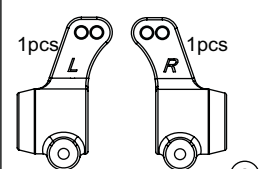


Rear Hub Carriers
後輪座

TR4016

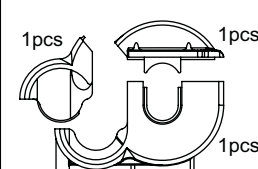


Center Gear-box
中齒輪箱

TR4027

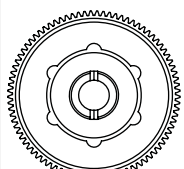


Supr Gear-85T
減速齒-85T 1pcs

TR4032

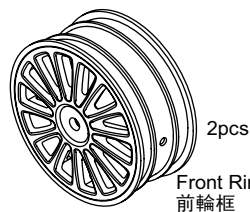

Front Rim
前輪框

TR4033

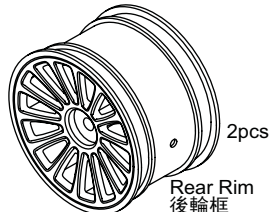

Rear Rim
後輪框

TR4046



2.5x30 Arm Pin
2.5x30擺臂軸 2pcs

TR4053




Velcro Tape
魔鬼粘 1 Set

TR4049




Servo Saver Post 緩衝柱 2pcs
Servo Saver Body 緩衝筒身 1pcs
Servo Saver Nut 緩衝螺帽 1pcs
Servo Saver Spring 緩衝彈簧 1pcs

TR4055




M3 Nut
M3螺帽 6pcs

TR4056

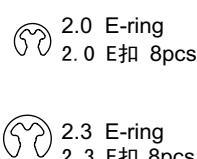


2.0 E-ring
2.0 E扣 8pcs
2.3 E-ring
2.3 E扣 8pcs

TR4057




10x12x0.2 Washer
10x12x0.2墊片 8pcs

TR4058

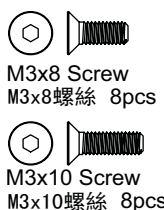

M3x8 Screw
M3x8螺絲 8pcs
M3x10 Screw
M3x10螺絲 8pcs

TR4059

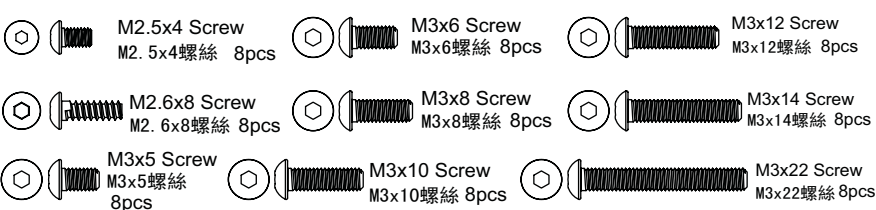


M2.5x4 Screw
M2.5x4螺絲 8pcs
M3x6 Screw
M3x6螺絲 8pcs
M3x12 Screw
M3x12螺絲 8pcs
M2.6x8 Screw
M2.6x8螺絲 8pcs
M3x8 Screw
M3x8螺絲 8pcs
M3x14 Screw
M3x14螺絲 8pcs
M3x5 Screw
M3x5螺絲 8pcs
M3x10 Screw
M3x10螺絲 8pcs
M3x22 Screw
M3x22螺絲 8pcs

TR4063




2.8x1.9 O-ring
2.8x1.9 O-環 2pcs

H380

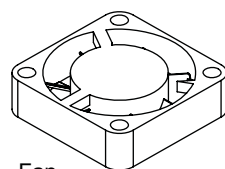


Fan
風扇 1pcs

T02031

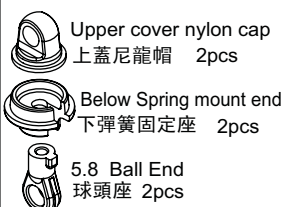


Upper cover nylon cap
上蓋尼龍帽 2pcs
Below Spring mount end
下彈簧固定座 2pcs
5.8 Ball End
球頭座 2pcs

H481

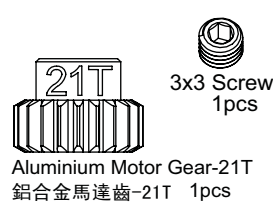


Aluminium Motor Gear-21T
鋁合金馬達齒-21T 1pcs

T02092

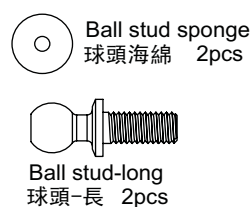


Ball stud sponge
球頭海綿 2pcs
Ball stud-long
球頭-長 2pcs

T02093

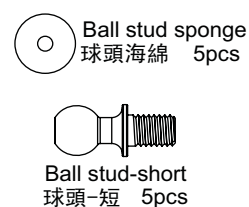


Ball stud sponge
球頭海綿 5pcs
Ball stud-short
球頭-短 5pcs

T02062




5.8x6 Ball stud
5.8x6球頭 4pcs

T02099

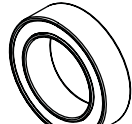


10x15x4 Ball Bearing
10x15x4軸承 6pcs

T02100

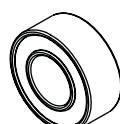

5x10x4 Ball bearing
5x10x4軸承 6pcs

T02081



3x7x0.8 Washer
3x7x0.8墊片 10pcs

T02084



M4 Flanged Nylon Nut
M4帶邊尼龍螺母 6pcs
M3 Nylon Nut
M3尼龍螺母 6pcs

T4 V2越野車配件-4

[illegible]

T4 V2

SETUP SHEET for the TeamC T4 V2

Driver _____

Track / City _____

Event _____ Date ____ / ____ / ____

Conditions

☐ Smooth

☐ Bumpy

☐ Low traction

☐ Med traction

☐ High traction

☐ Sandy

☐ Soft dirt

☐ Grass

☐ Hard soil

☐ Clay

☐ Wet


☐ Dry

☐ Dusty

☐ Other

Front Suspension

Shock Mounting&Camber link

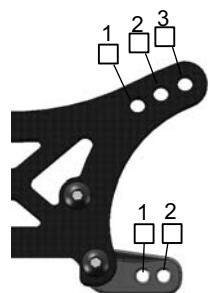


Anti-roll bar: ☐ _____ mm

Camber _____ °

Washers
_____ mm

Toe-in (+)/Out (-) _____ °
Bump Steep Spacer _____

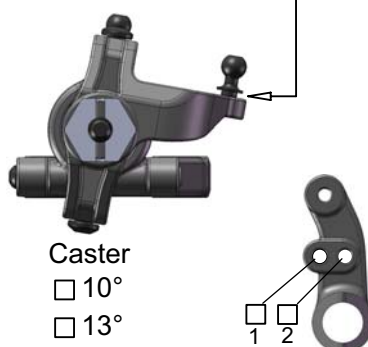


Caster

☐ 10°

☐ 13°

Ride height _____

Front Shocks

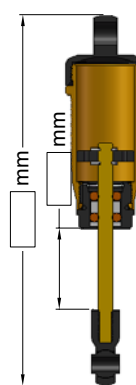

Spring(color)

☐ Black


☐ _____

Oil _____ wt

Piston # _____


Rear Suspension

Shock Mounting&Camber link

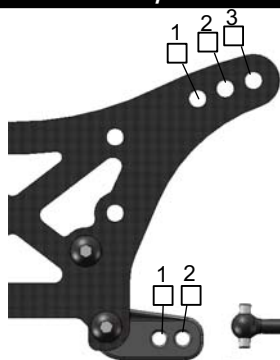

Anti-roll bar: ☐ _____ mm

Camber _____ °

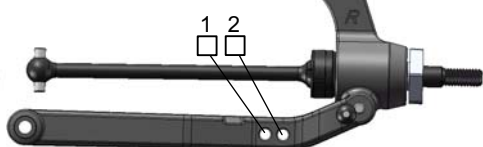


Wheelbase

☐ Long


☐ Medium

☐ Short

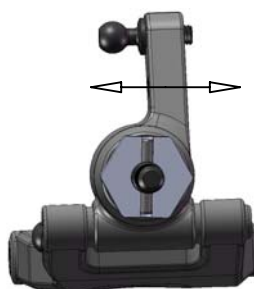

Ride height _____

Rear Shocks

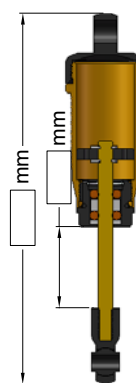

Spring(color)

☐ Black

☐ _____

Oil _____ wt

Piston # _____

Front Diff

Brand _____

Oil wt _____

Rear Diff

Brand _____

Oil wt _____

Front Tires&Wheels

Front Tires _____

Inserts _____ Wheels _____

Rear Tires&Wheels

Rear Tires _____

Inserts _____ Wheels _____

Batteries

Servo _____

Esc _____

Batteries _____

Motor

Motor _____

Pinion/Spur _____ / _____

Other

Wing _____

Wing Angle ☐ 4° ☐ 10°



www.teamcracing.net