



TM2 V2

Instruction manual

***1:10 SCALE RADIO CONTROLLED ELECTRIC
POWERED 2WD RACING BUGGY***

Dimensions 尺寸:


Length 長度.....400mm

Width 寬度.....250mm

Height 高度.....145mm

Transmitter Preparation

調整遙控器

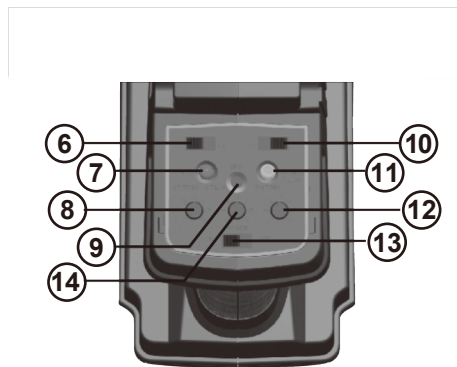


GLG20
2.4GHz

- 1 Control Panel 控制面板
- 2 Steering Wheel 轉向輪
- 3 Throttle Trigger 油門板扣
- 4 Battery Compartment 電池盒
- 5 Charging Jack 充電接口
- 6 Sterring Servo Reverse 轉向正逆轉開關
- 7 Power LED 電源指示燈
- 8 Steering Trim 轉向調節
- 9 Bind Button 設定按鈕
- 10 Throttle Servo Reverse 油門正逆轉開關
- 11 Battery Voltage 電池電壓
- 12 Steering Dual Rate 轉向大小微調
- 13 Power Switch 電源開關
- 14 Throttle Trim 油門微調



Transmitter Battery Installation 遙控器電池安裝

Open battery cover at the bottom of transmitter. Install batteries. Follow the direction of batteries designated in the inside of battery box.

在遙控器的底部打開電池蓋子，安裝電池。跟隨電池的指示在電池盒裡面指定。

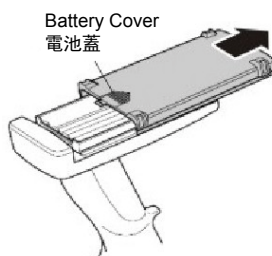


4X AA Alkaling Batteries
AA 碱性電池

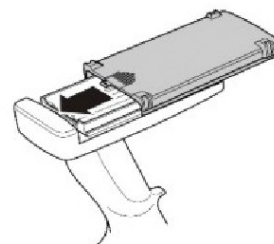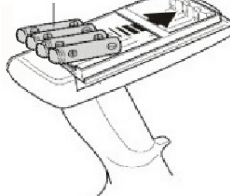

Transmitter Preparation

调整遥控器

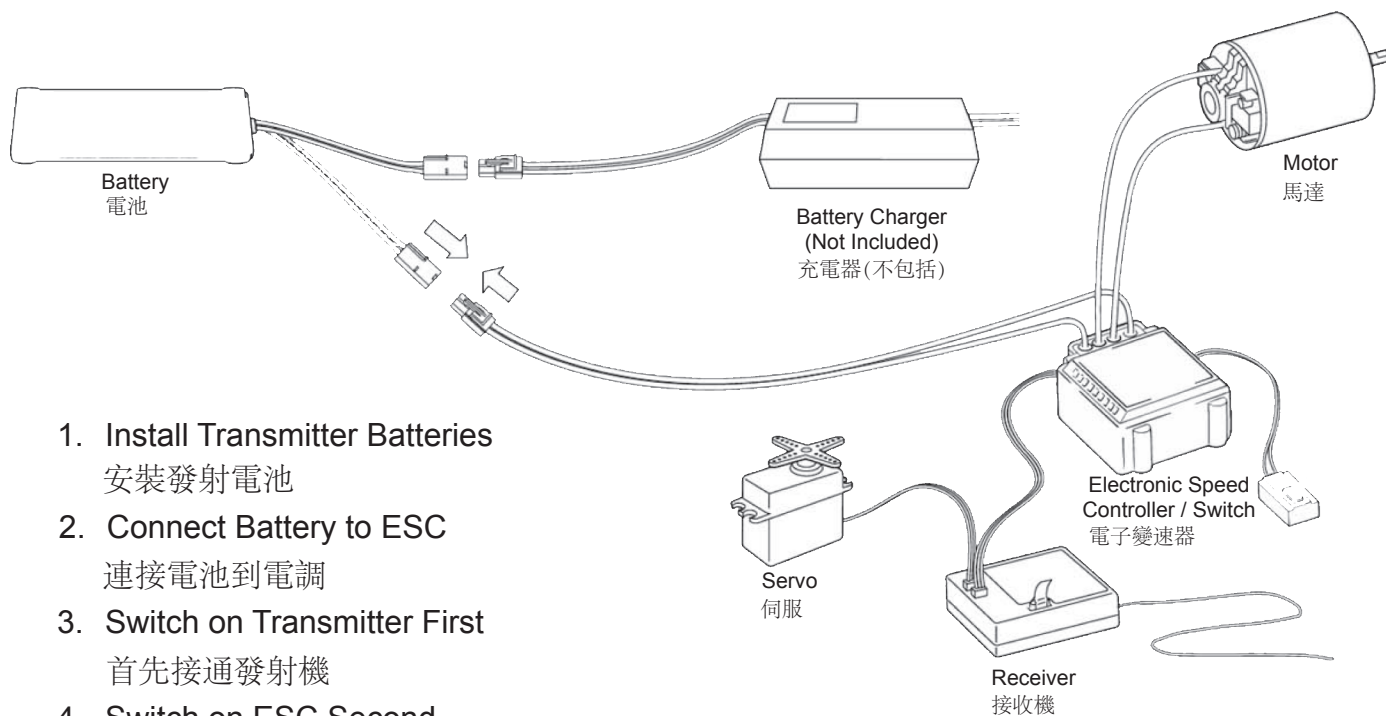

1. Install Transmitter Batteries
安裝發射電池
2. Connect Battery to ESC
連接電池到電調
3. Switch on Transmitter First
首先接通發射機
4. Switch on ESC Second
其次接通電調

Note: When done driving Turn Off the ESC and THEN Transmitter

注意: 當停止駕駛首先要關掉電調
其次再關掉發射機

Tools required

組裝需要的工具

- Needle Nose Pliers
尖嘴鉗



- Awl
錐



- Grease
潤滑油



- Screw Cement
螺絲膠水



- H162**
Instant Glue
瞬間膠水




- Differential Grease
差速油




- Molybdenum Grease(Black)
鉬油(黑)




- H154**
Body Reamer
車殼絞刀



- Wire Cutters
鋼絲鉗



- H096**
ROUND CUTTER
剪刀

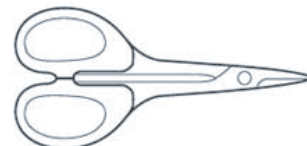

- Hex Wrench
六角扳手



- Hex Wrench
十字套筒




- No need to pre-drill precise holes
(1mm to 15mm) can be drilled
可以对预钻的孔准确的钻1mm-15mm

- Sharp Hobby knife
美工刀





For trimming bodies!
用于修剪車壳!


1 Front Suspension 前悬吊系统

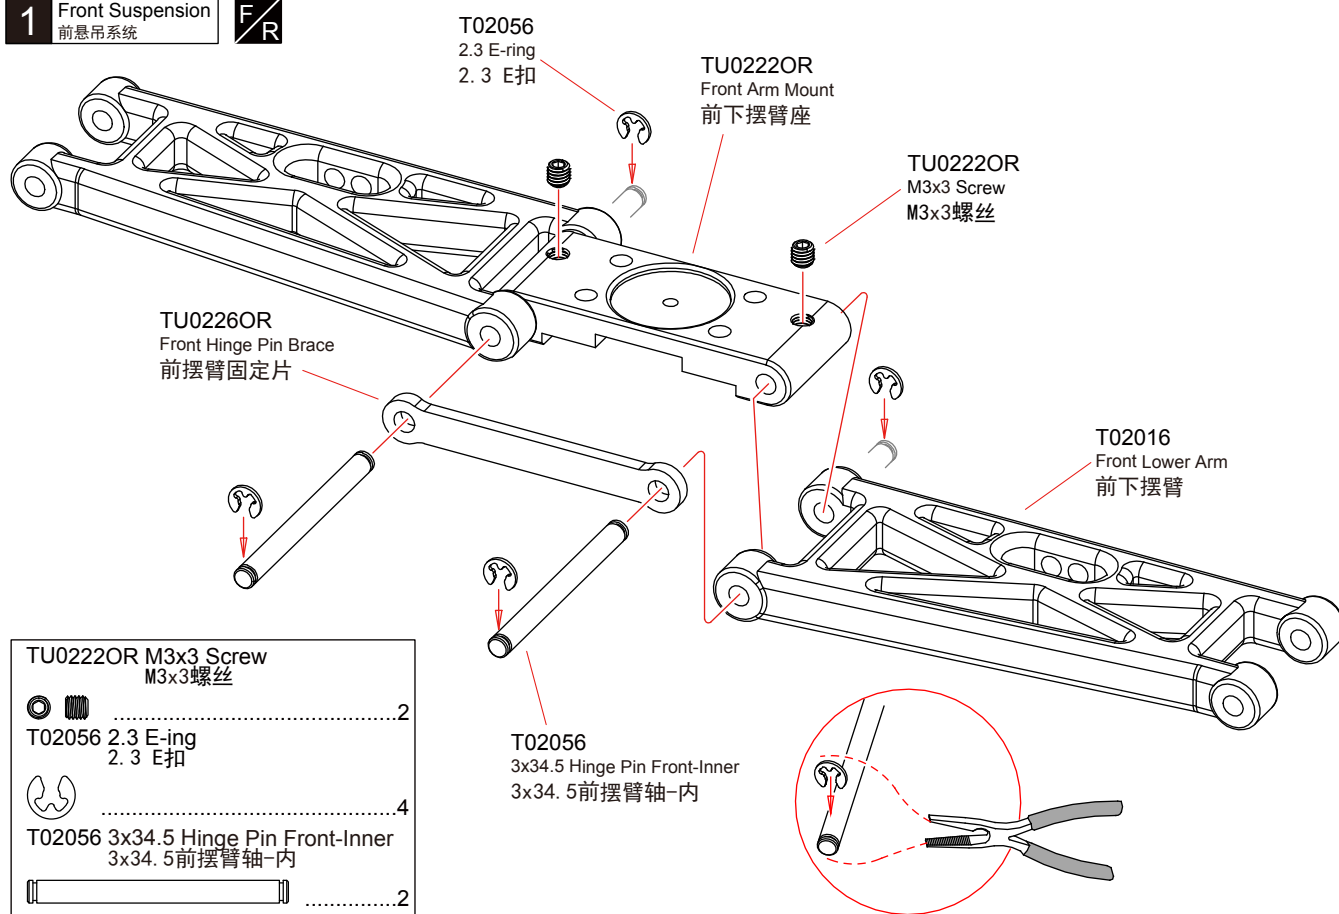

2 Front Suspension 前悬吊系统

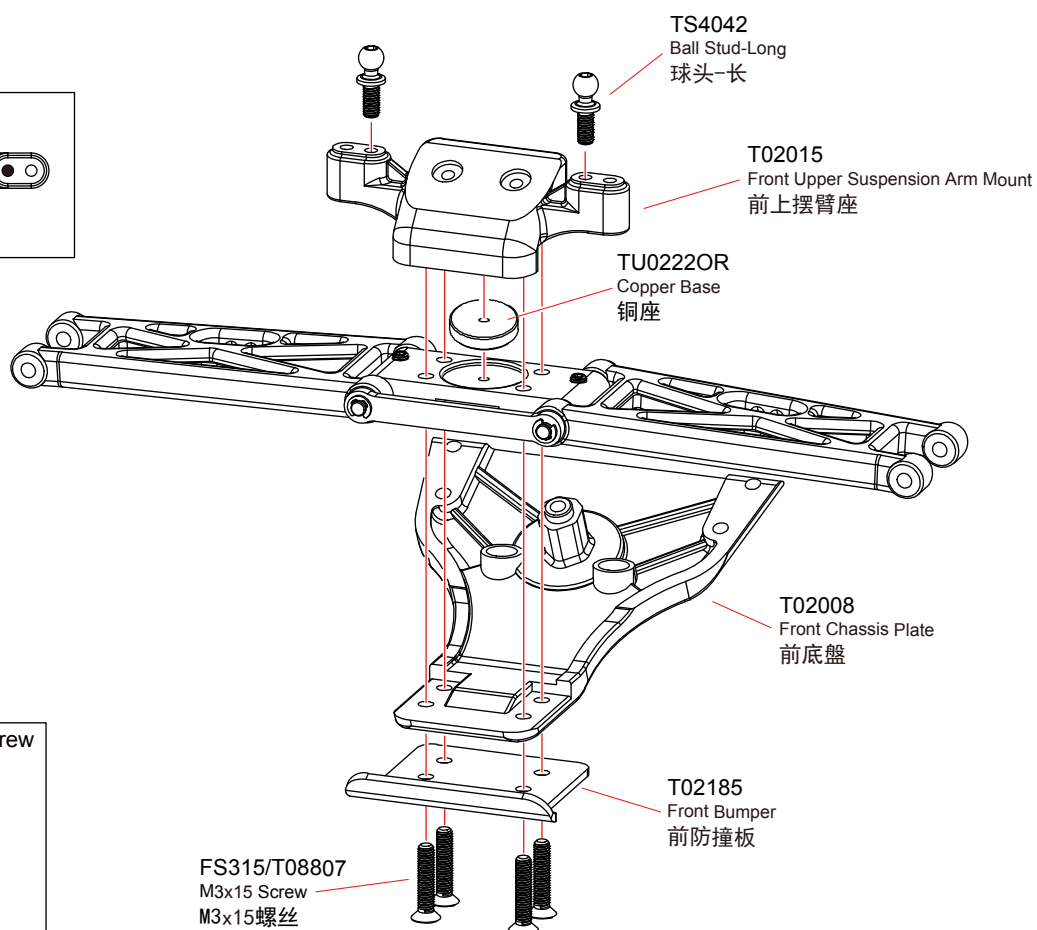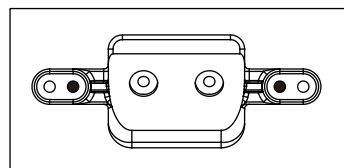

3 Buffer 缓冲

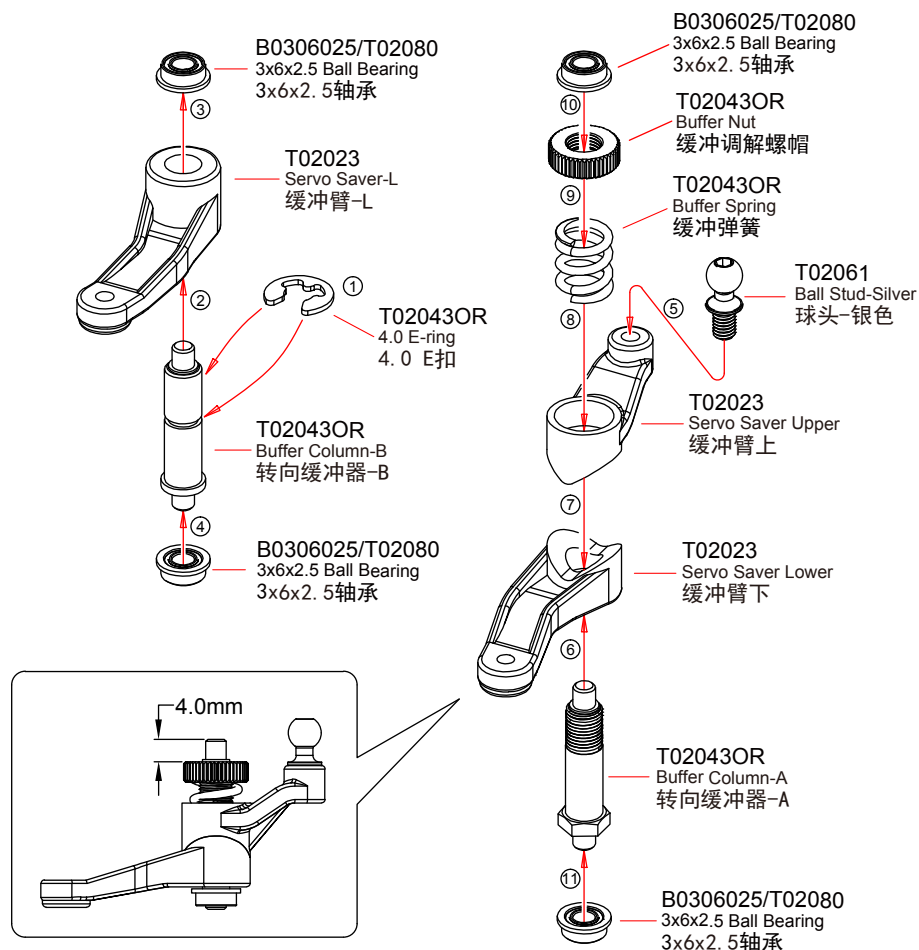

T02043OR 4.0 E-ring
4.0 E扣





B0306025/T02080
3x6x2.5 Ball Bearing
3x6x2.5轴承



T02061 Ball Stud-Silver
球头-银色



4 Buffer 缓冲

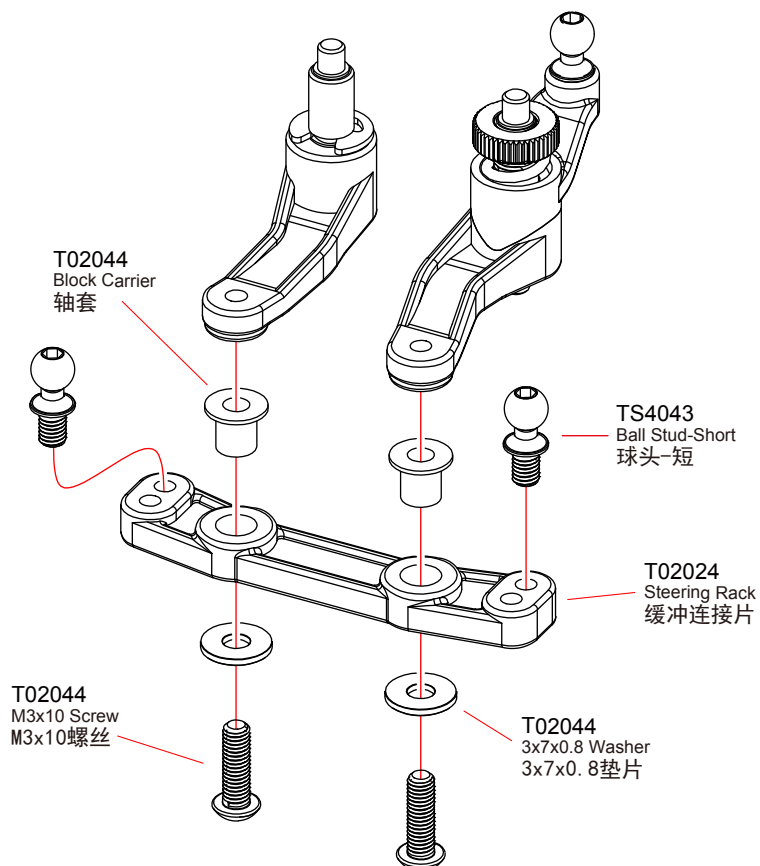

T02044 Block Carrier
轴套



T02044 M3x10 Screw
M3x10螺丝




TS4043 Ball Stud-Short
球头-短




T02044 3x7x0.8 Washer
3x7x0.8垫片




5 Chassis/Side Plate 底盘/侧板

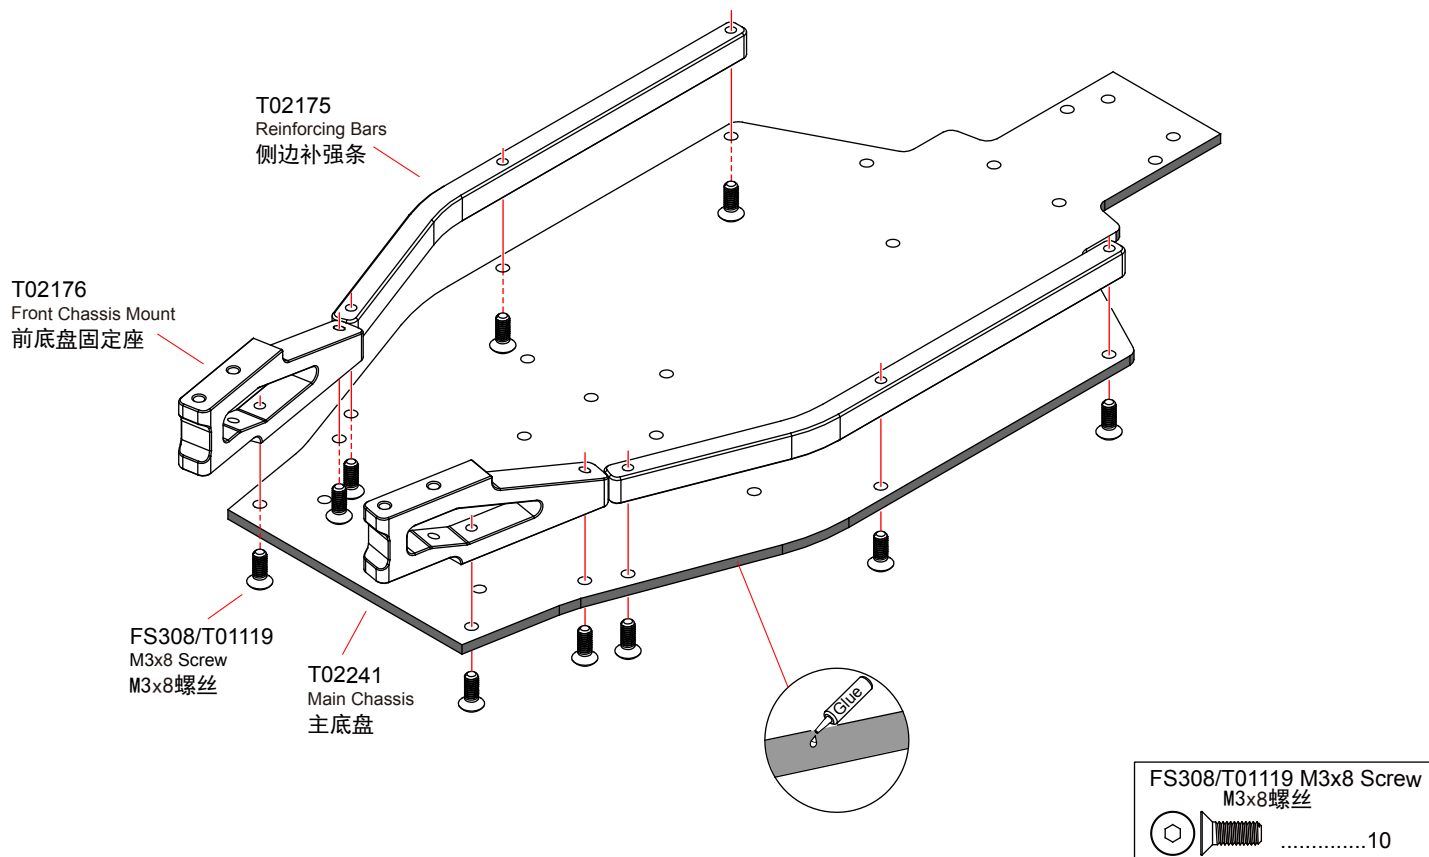


6 Front Suspension 前悬吊系统

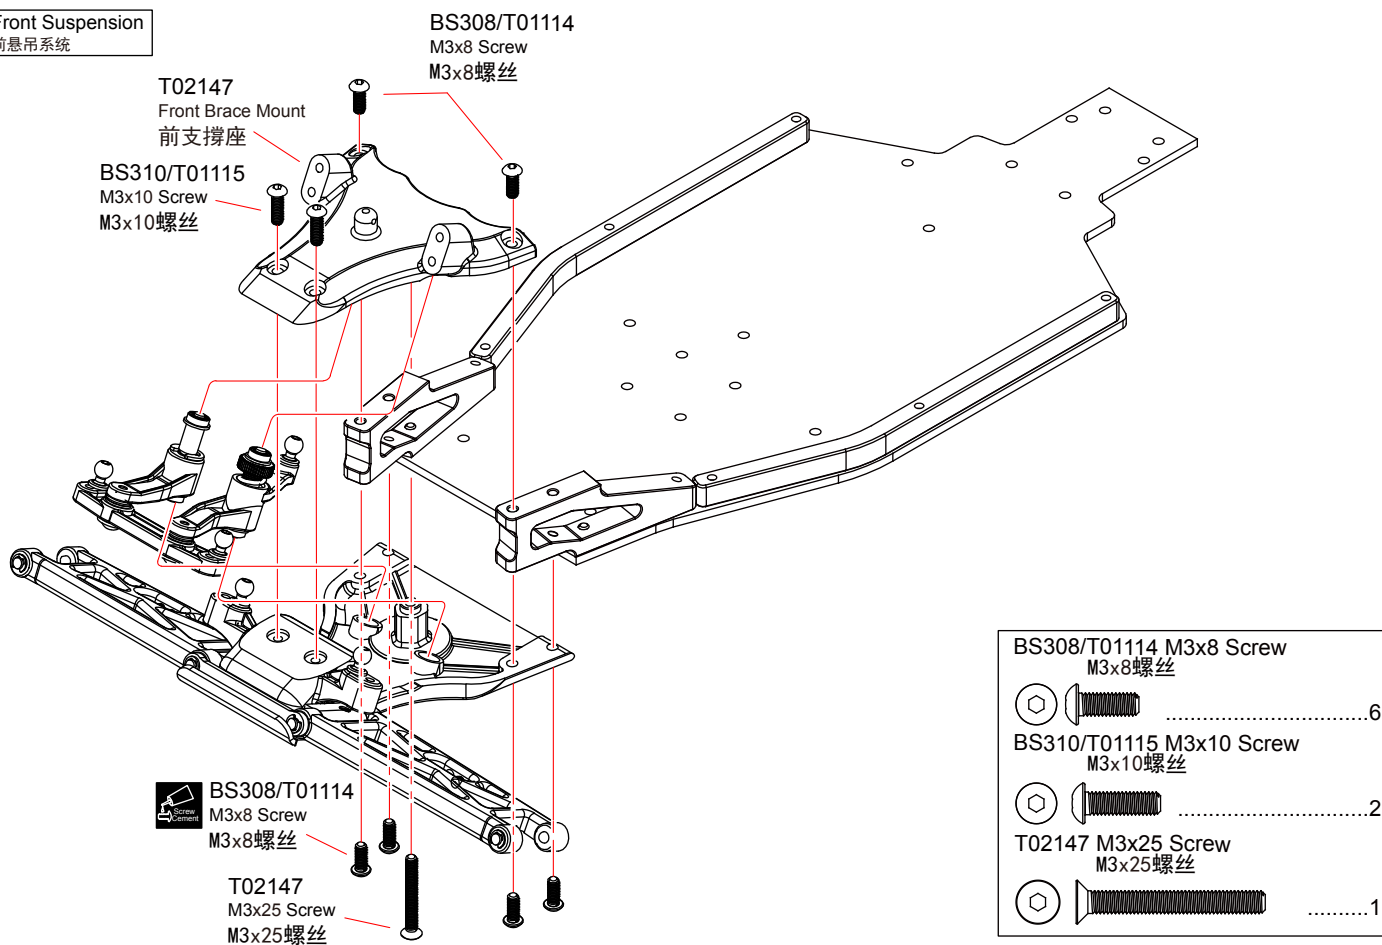


7 Front Suspension 前悬吊系统

T02054 2.3 E-ring 2.3 E 扣	T02054 3X27.5 Hinge Pin Front-Outer 前摆臂销-外
	
8	4
T02042 4.0 E-ring 4.0 E 扣	TS4043 Ball Stud-Short 球头-短
	
2	4
T02042 2x9.8 Pin 2x9.8 钢针	B051004/T02100 5x10x4 Ball Bearing 5x10x4 轴承
	
2	4

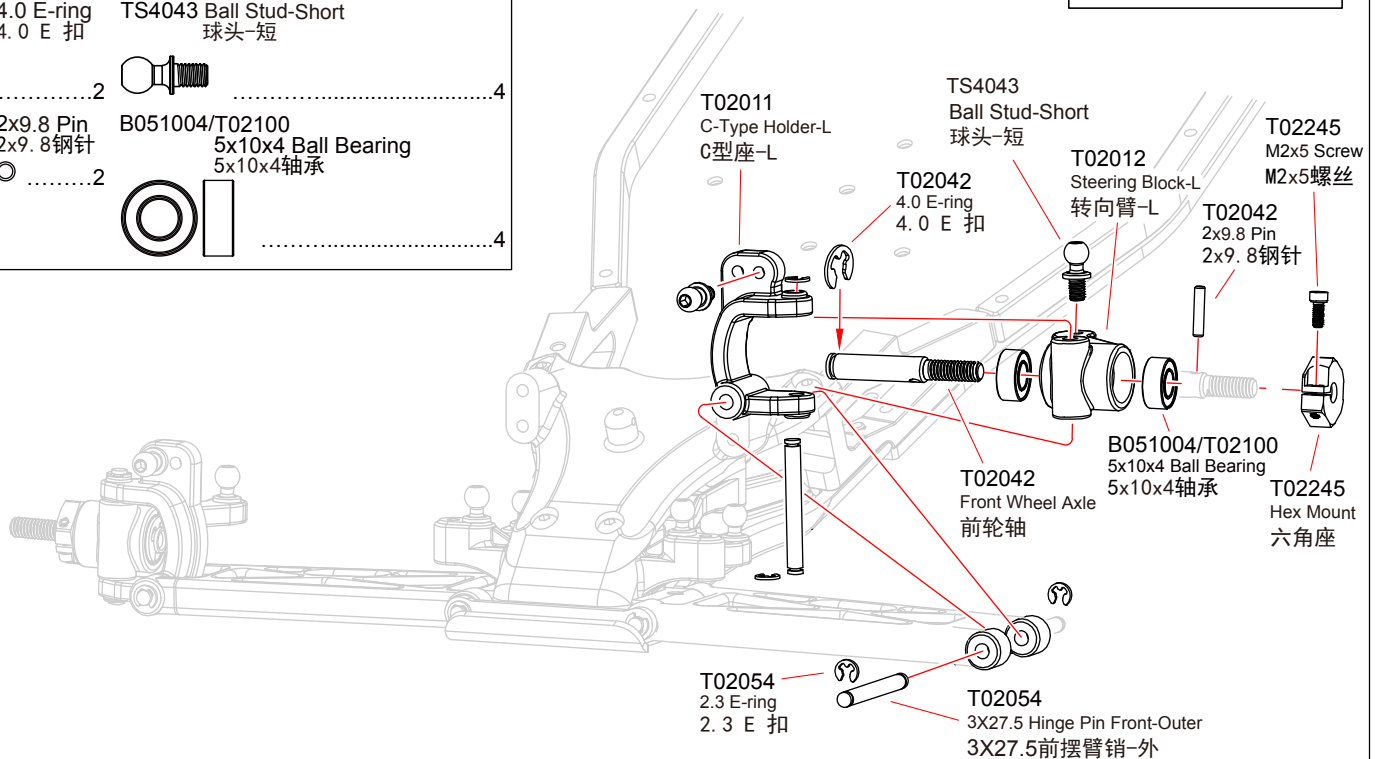


8 Turnbuckle 拉杆


1:1 x1 Front Upper-L
前上拉杆-左

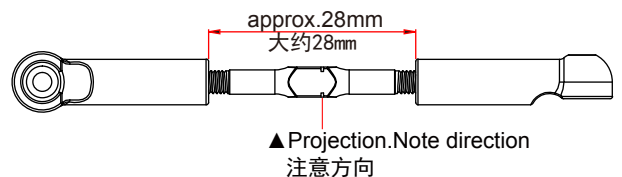



1:1 x1 Front Upper-R
前上拉杆-右

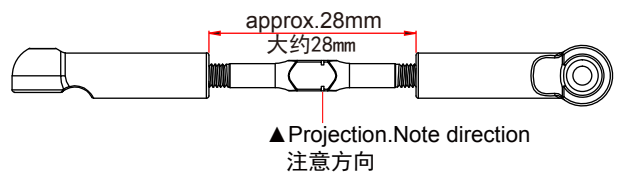

1:1 x2 Steering Tip
转向拉杆

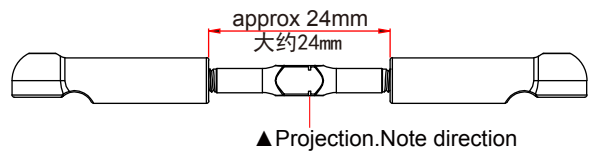

1:1 x2 Rear Upper
后上拉杆

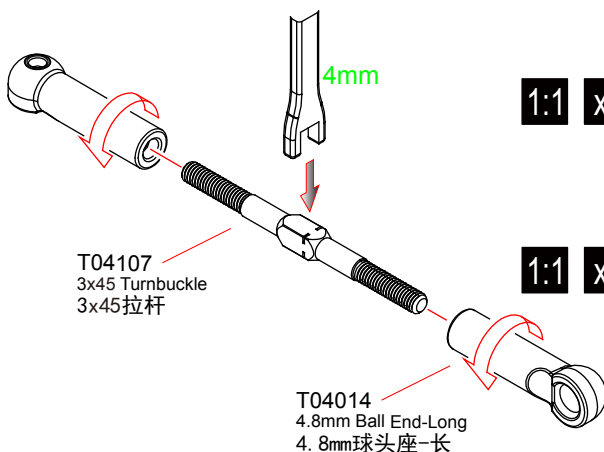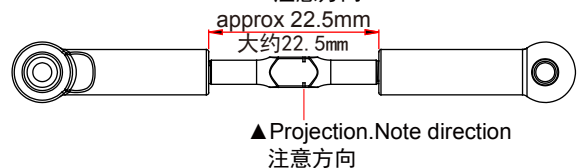


T04107 3x45 Turnbuckle
3x45 拉杆


T04014 4.8mm Ball End-Long
4.8mm 球头座-长

	
6	12

9 Front Suspension
前悬吊系统

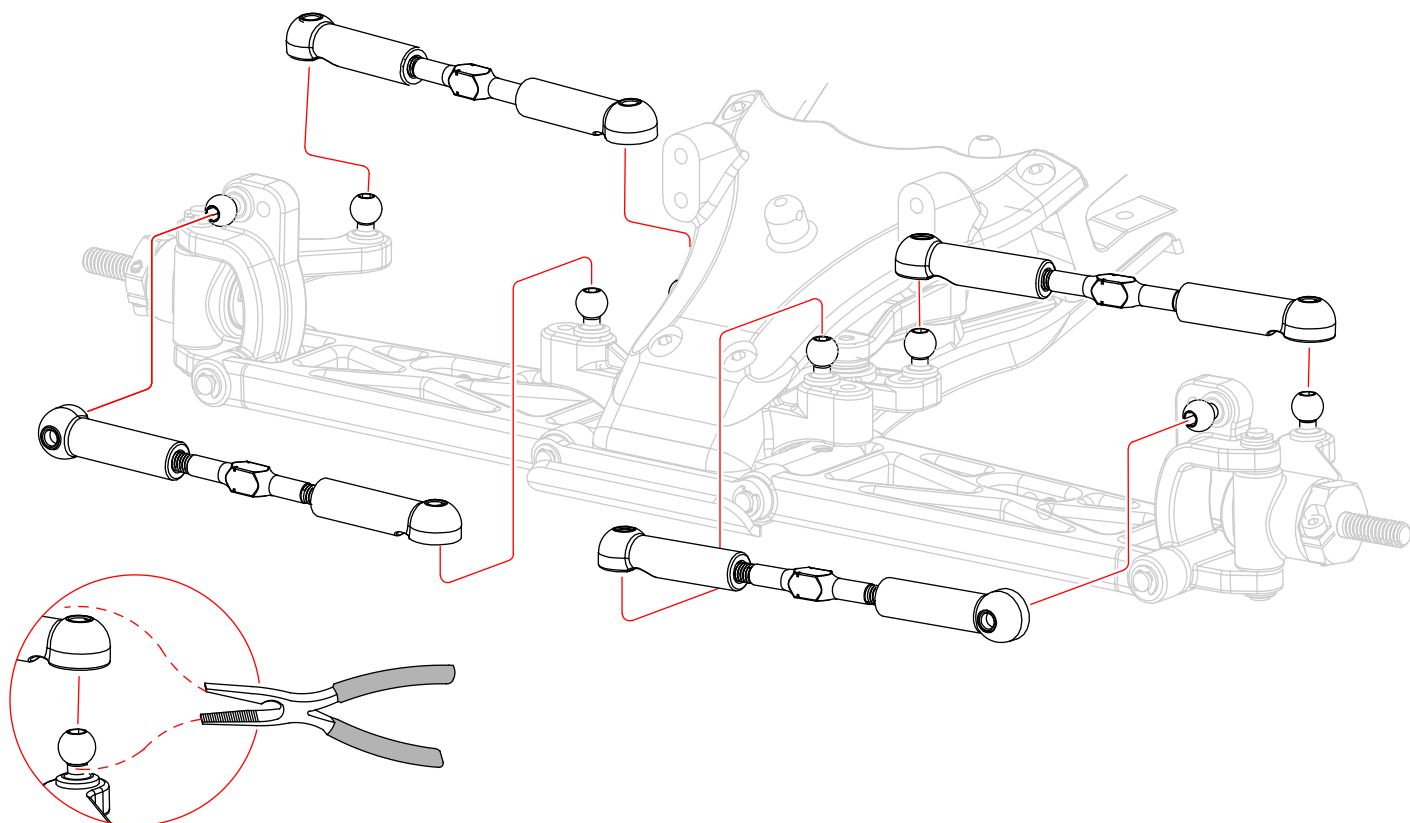


10 Front Suspension
前悬吊系统

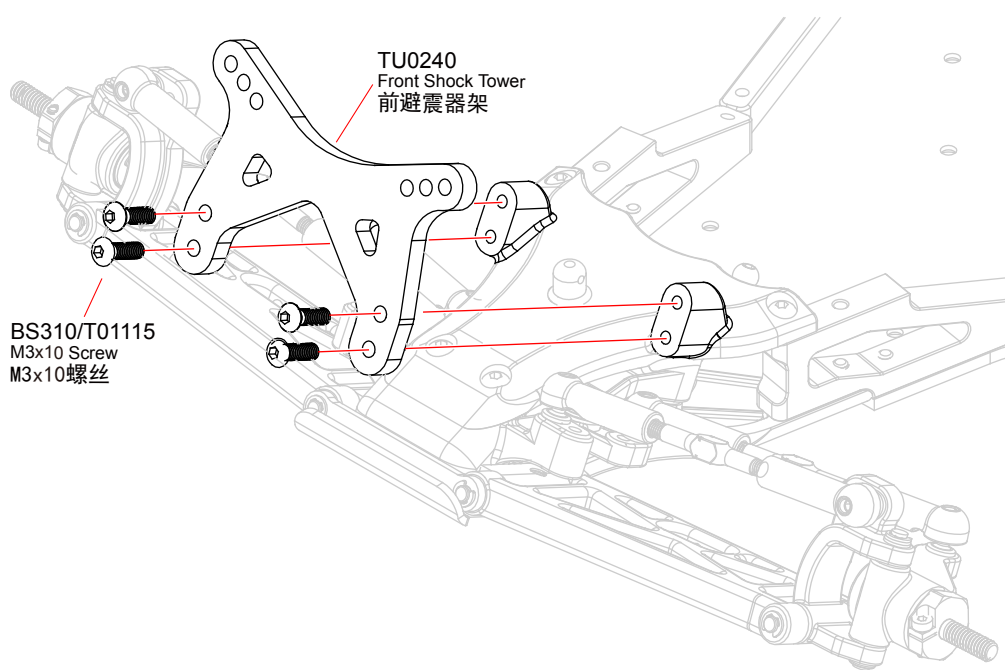

BS310/T01115
M3x10 Screw
M3x10螺丝


TU0240
Front Shock Tower
前避震器架

BS310/T01115 M3x10 Screw
M3x10螺丝



11 Steering Servo 转向伺服系统

Select for your servo
根据伺服器选择


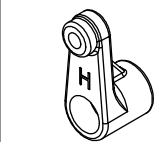


Steering Servo-H(24T)
转向伺服臂H(24T)



Steering Servo-S(23T)
转向伺服臂S(23T)


Sanwa servo

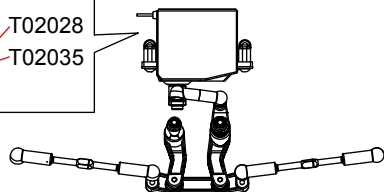

T02030 4.8 Ball End-Short
球头座-短




T02061 Ball Stud-Silver
球头-银色




W3708/T02081 3x7x0.8 Washer
3x7x0.8垫片




BS308/T01114 M3x8 Screw
M3x8螺丝



FS308/T01119 M3x8 Screw
M3x8螺丝



SS310 M3x10 Screw
M3x10螺丝

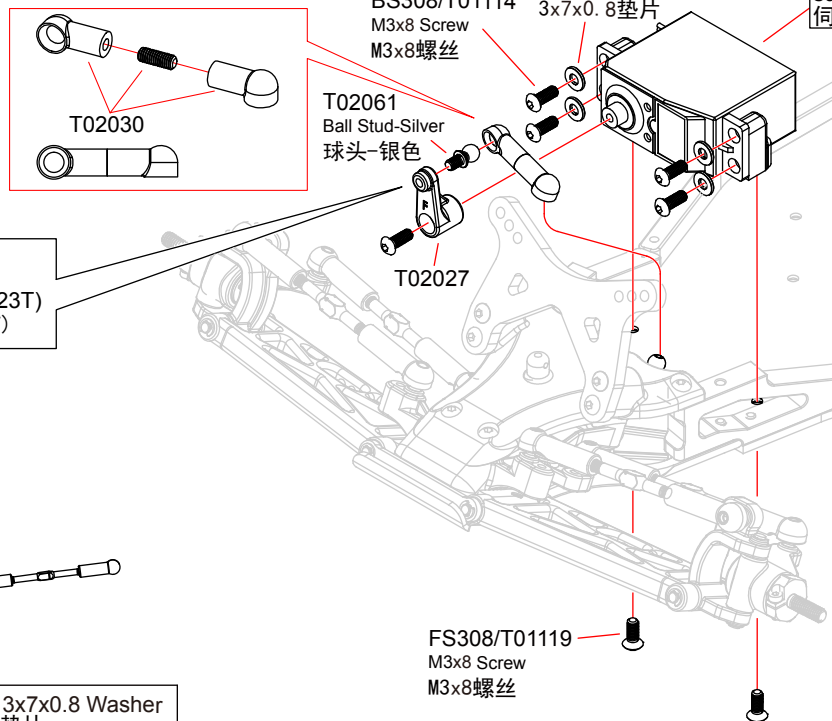


Servo
伺服器 X

12 Motor Mount 马达座

T02197
Center Diff Mount
中差座

T02196
Motor Mount
马达座

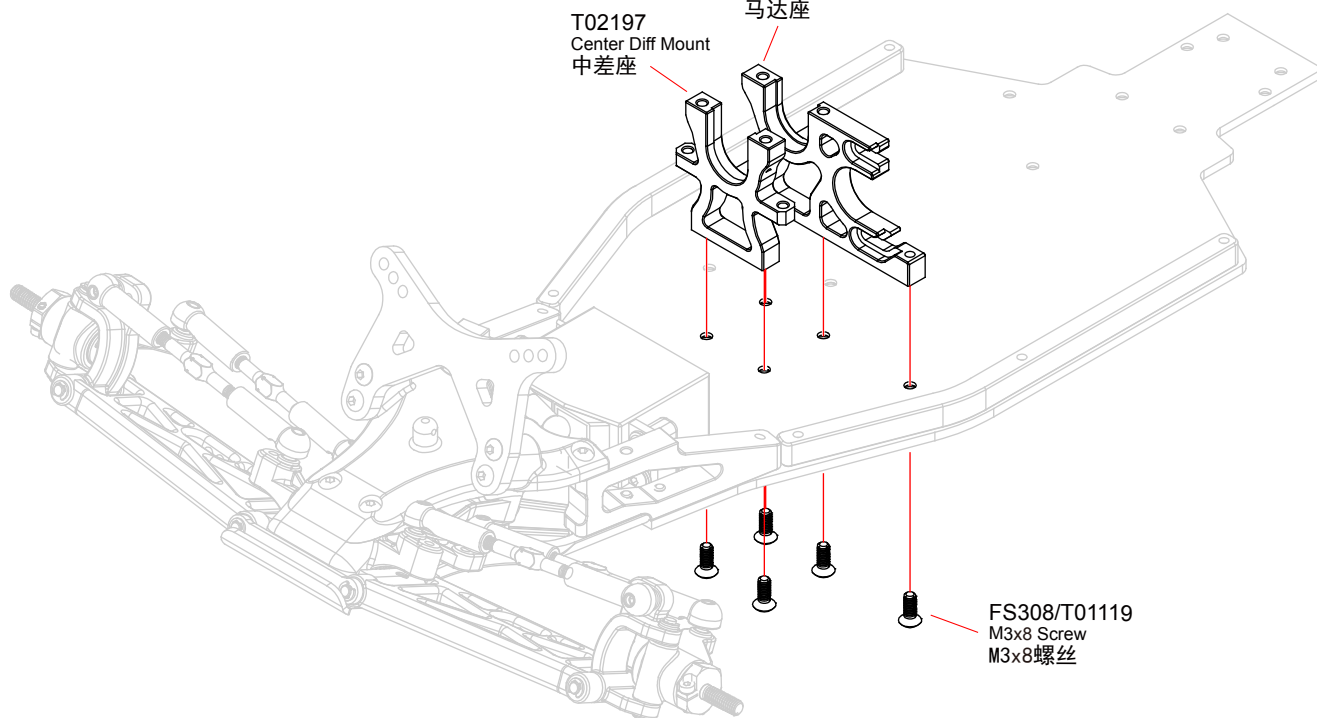

FS308/T01119
M3x8 Screw
M3x8螺丝


FS308/T01119 M3x8 Screw
M3x8螺丝



X Must be purchased separately
需另购物品

Apply threadlocker(screw cement)
打螺丝胶水




13 Upper Deck-Front 二楼板-前

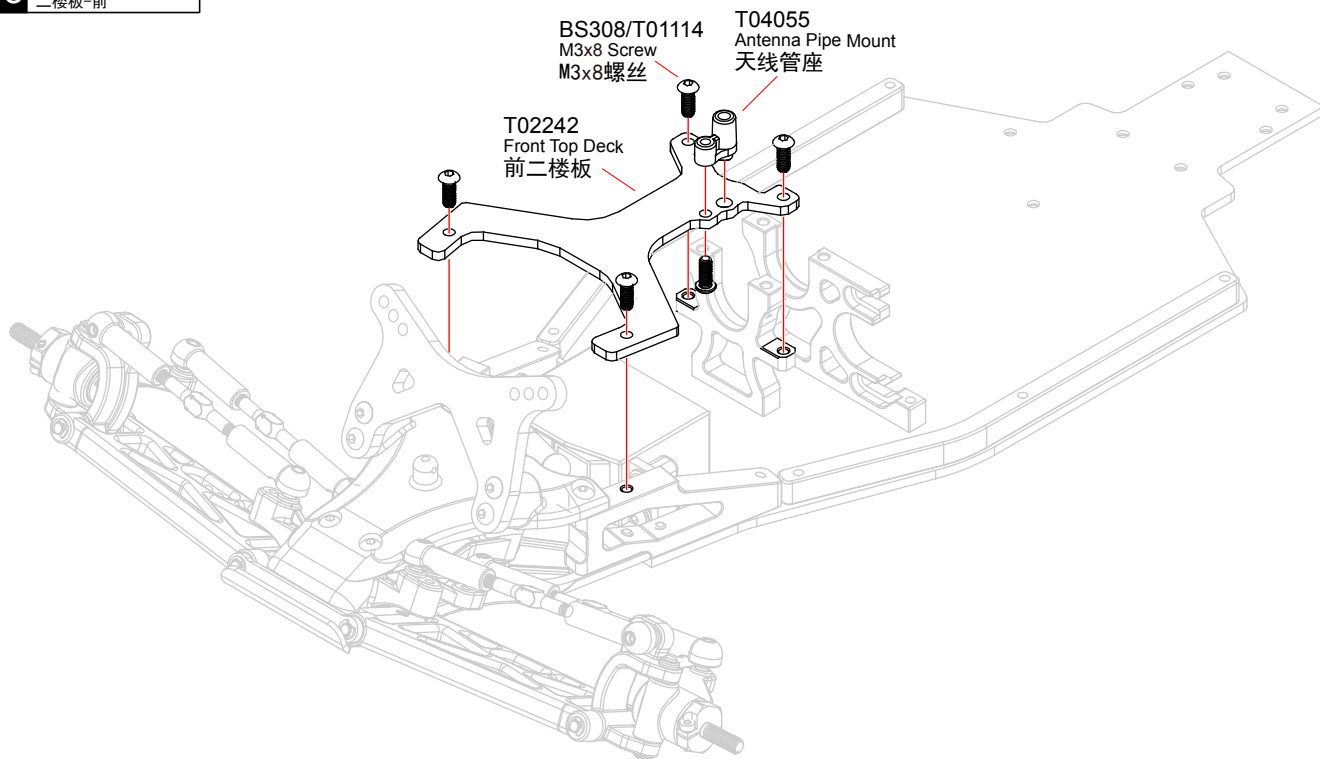

BS308/T01114 M3x8 Screw
M3x8螺丝

.....5

14 Mid Gear 中齿轮

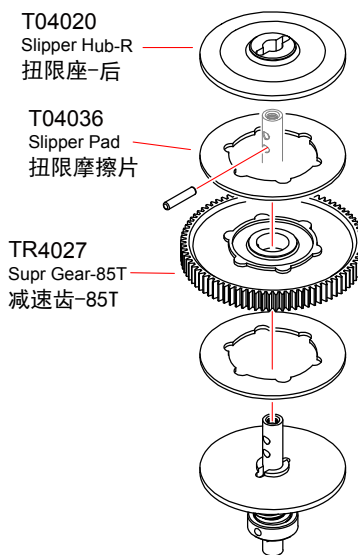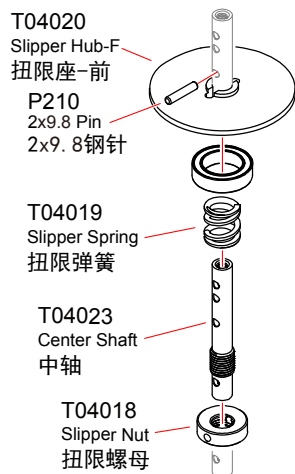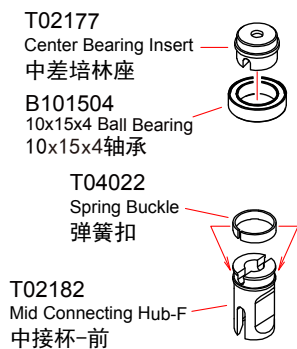

BS305/T08788 M3x5 Screw
M3x5螺丝


P210/T04032 2x9.8 Pin
2x9.8钢针

B101504/T02099 10x15x4 Ball Bearing
10x15x4轴承




.....2

.....4



.....2

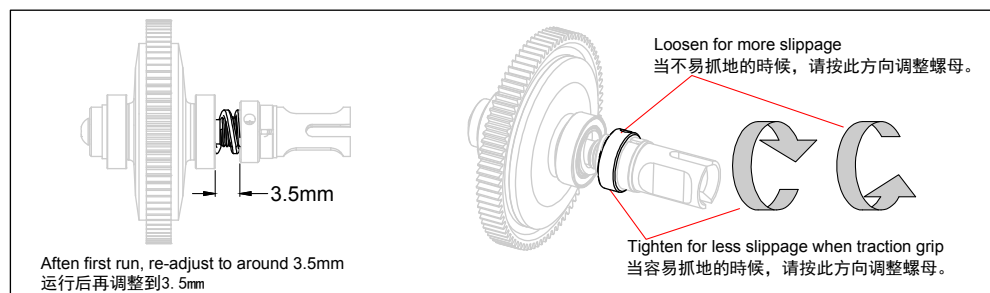

15 Diff 差速器

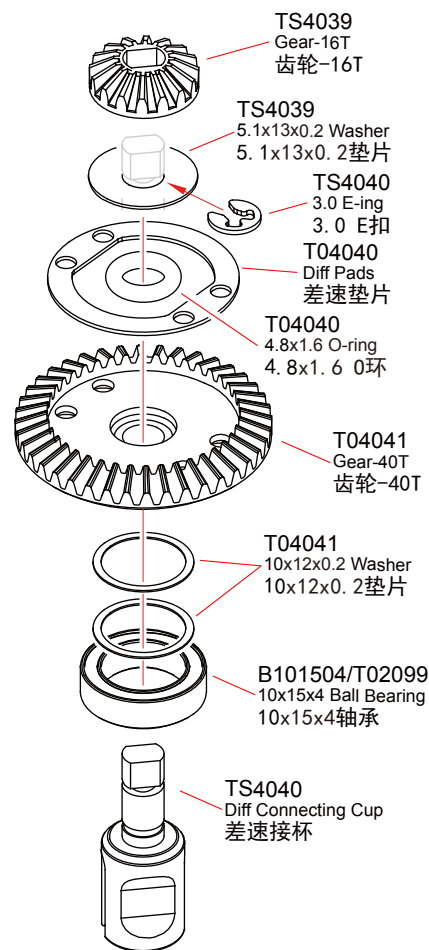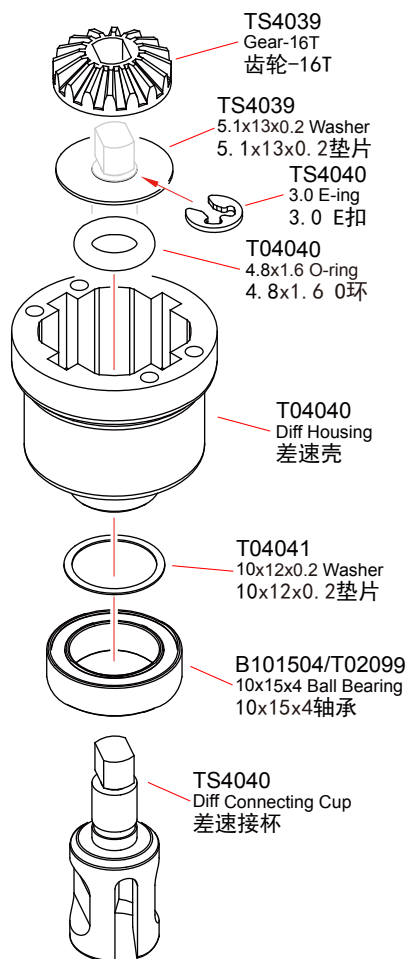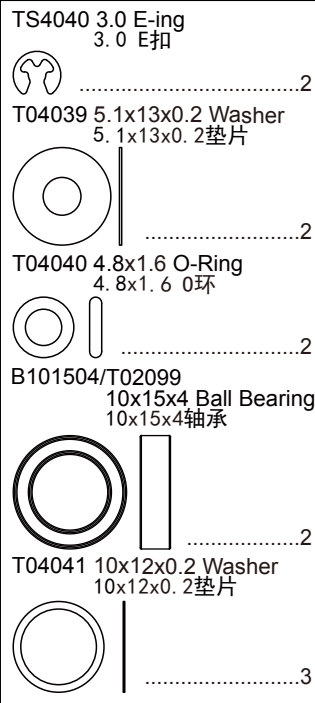


16 Diff 差速器

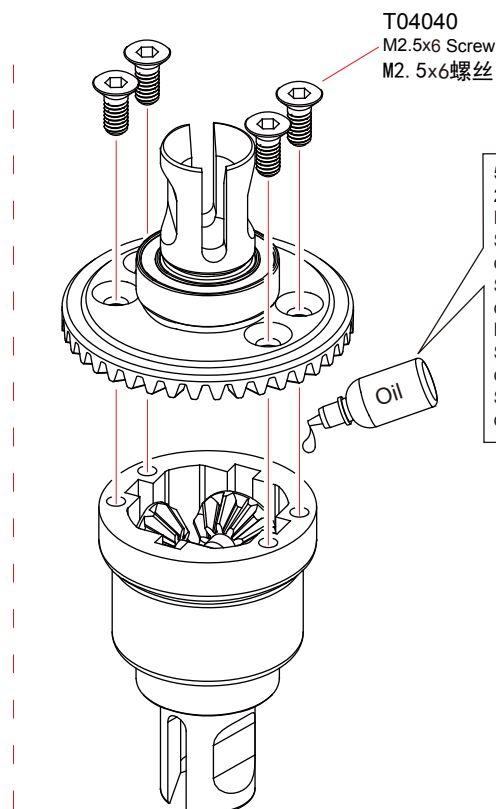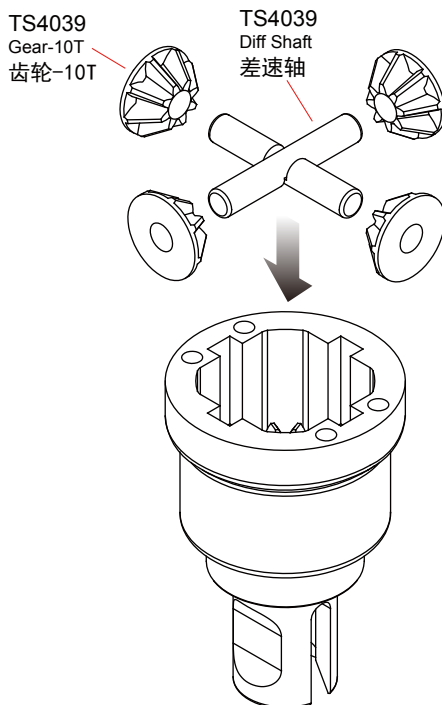


5000# for Front diff, 2000# for Rear diff.
High grip:
Suggest using 7000# differential oil for front,
Suggest using 3000# differential oil for rear;
Low grip:
Suggest using 3000# differential oil for front,
Suggest using 1000# differential oil for rear.

5000#用於前差速器, 2000#用於後差速器。
高抓地力:
前面建議使用7000#差速油,
後面建議使用3000#差速油;
低抓地力:
前面建議使用3000#差速油,
後面建議使用1000#差速油。

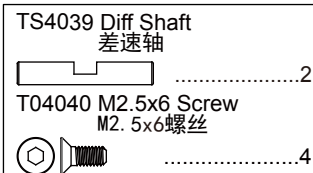


17 Rear Gear-box 后齿轮箱

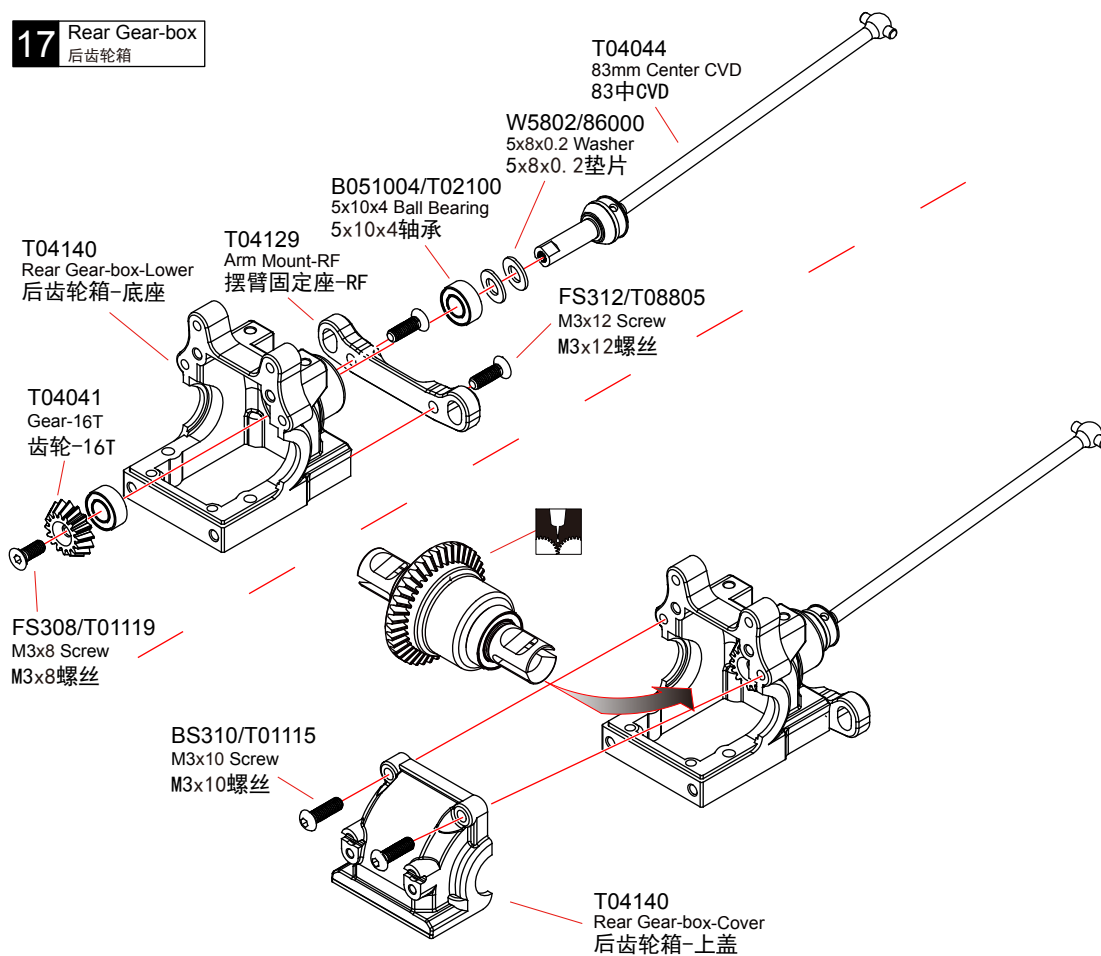



BS310/T01115 M3x10 Screw M3x10螺丝	2
B051004/T02100 5x10x4 Ball Bearing 5x10x4轴承	2
W5802/86000 5x8x0.2 Washer 5x8x0.2垫片	2
FS312/T08805 M3x12 Screw M3x12螺丝	2
FS308/T01119 M3x8 Screw M3x8螺丝	1

18 Battery Column 电池柱

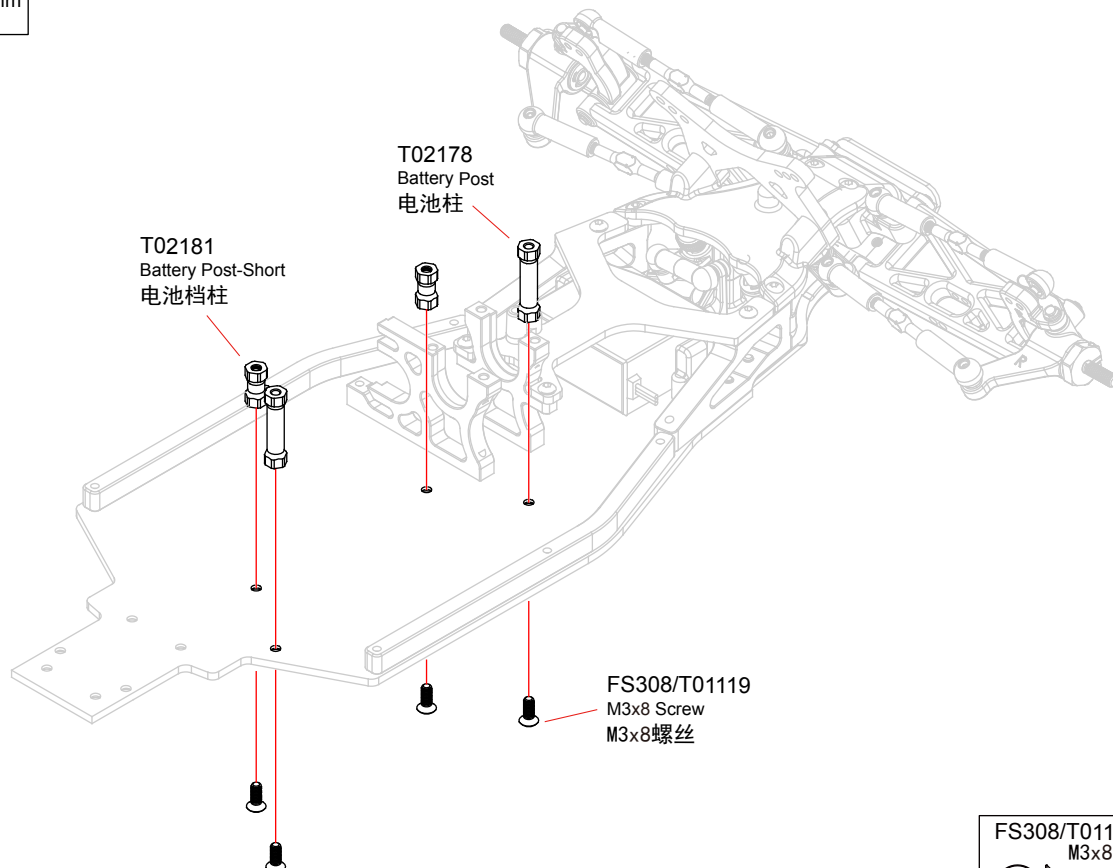


FS308/T01119 M3x8 Screw M3x8螺丝	4
-----------------------------------	--------


19 Rear Gear-box 后齿轮箱

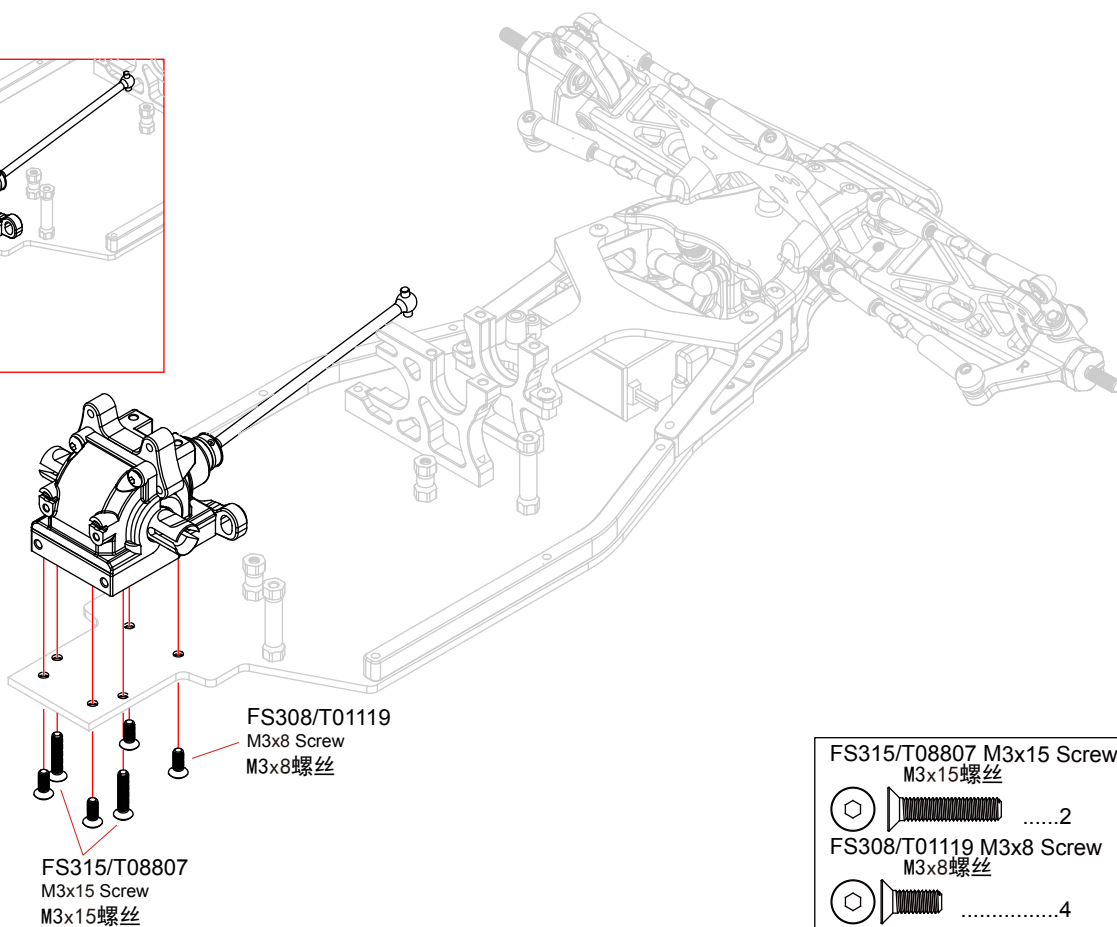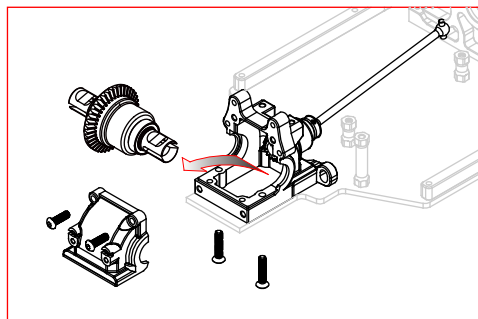

20 Center Gear 中齿轮

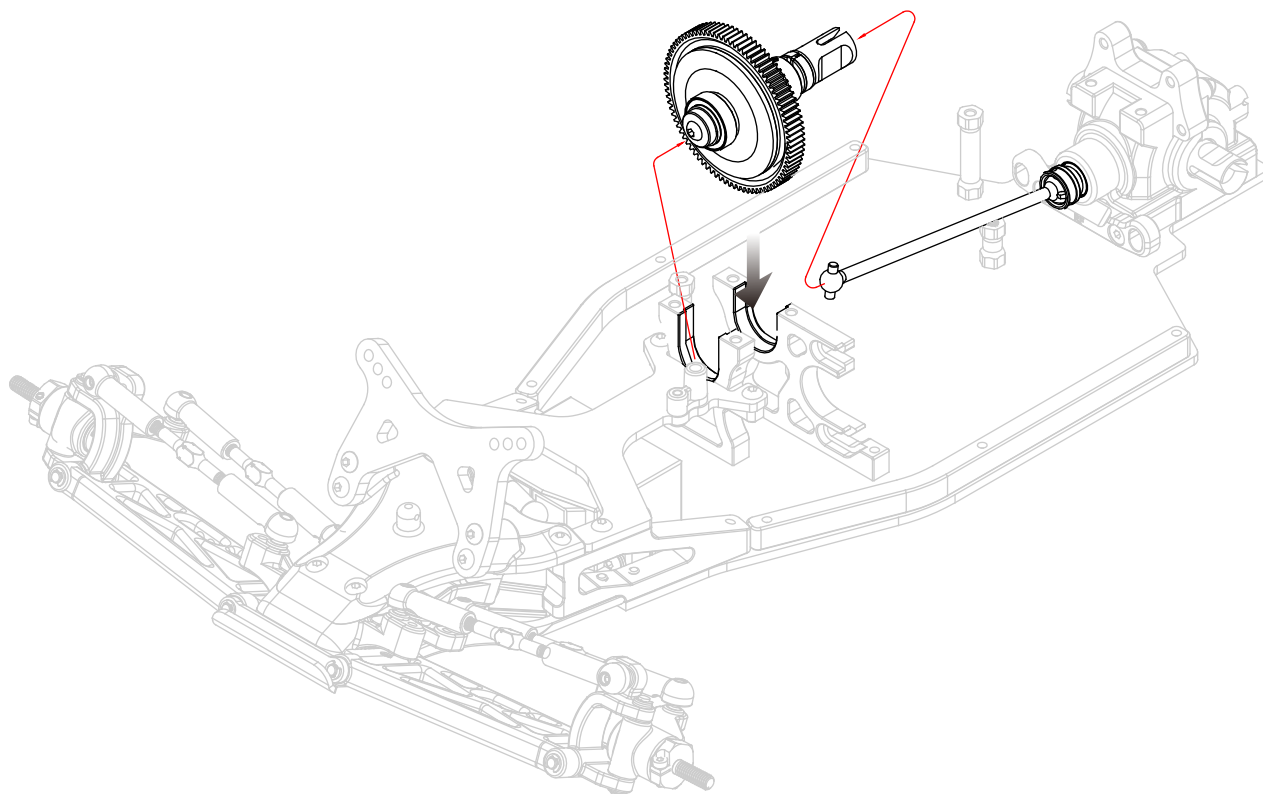


21 Upper Deck-Rear 二楼板-后

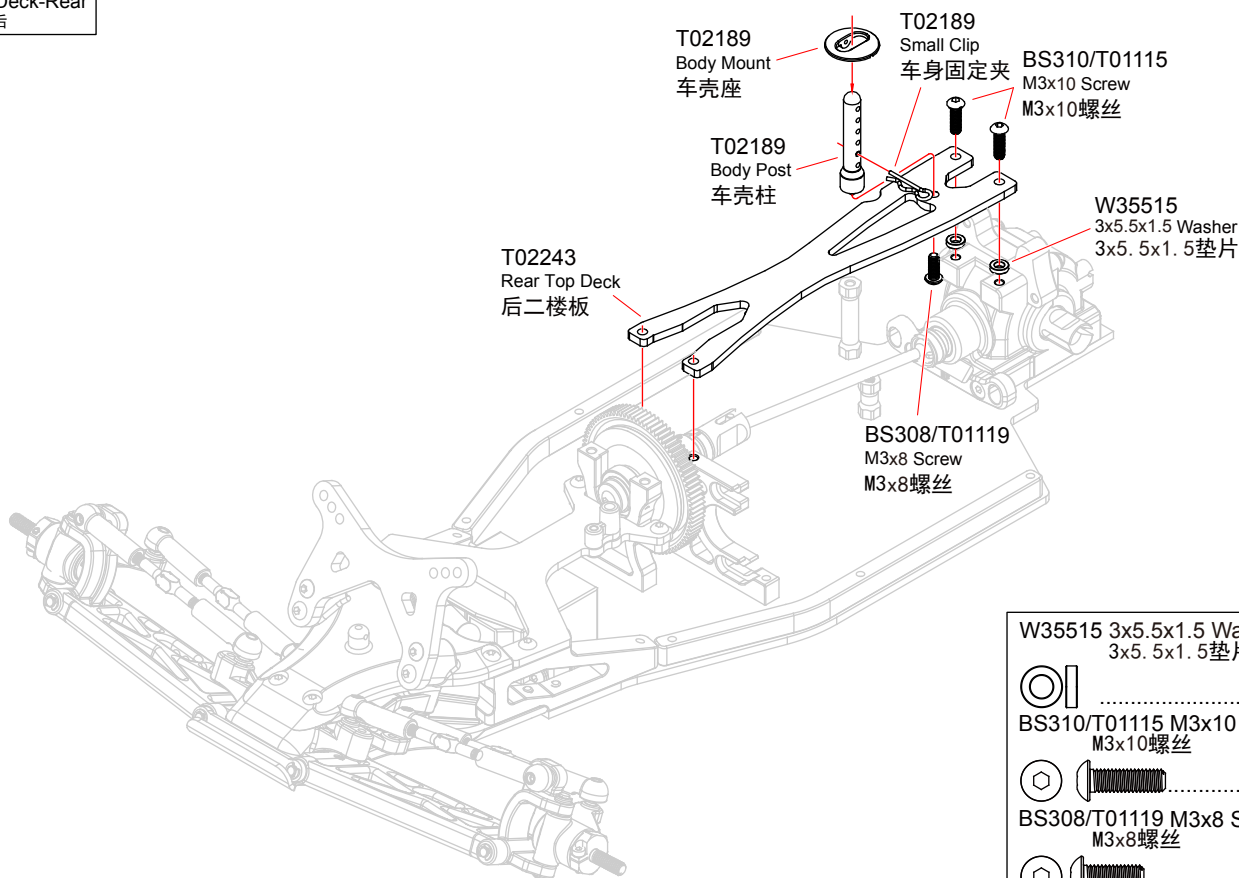


W35515 3x5.5x1.5 Washer 3x5. 5x1. 5垫片	
	2
BS310/T01115 M3x10 Screw M3x10螺丝	
	2
BS308/T01119 M3x8 Screw M3x8螺丝	
	1

22 Rear Shock Tower 后避震架

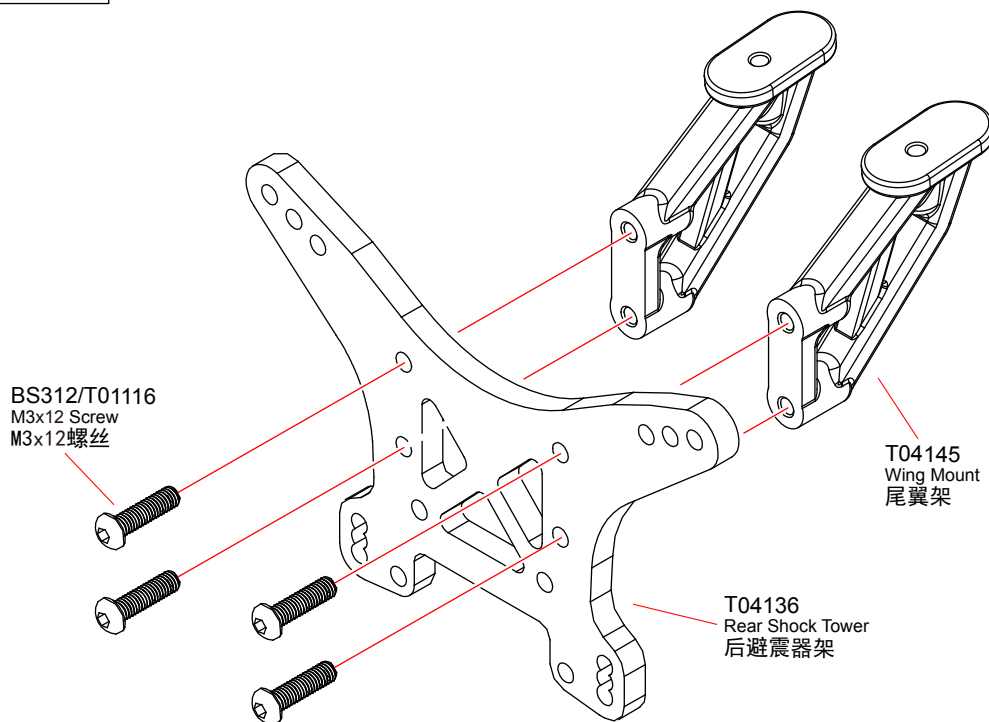

BS312/T01116 M3x12 Screw M3x12螺丝	
	4

23 Rear Shock Tower
后避震架

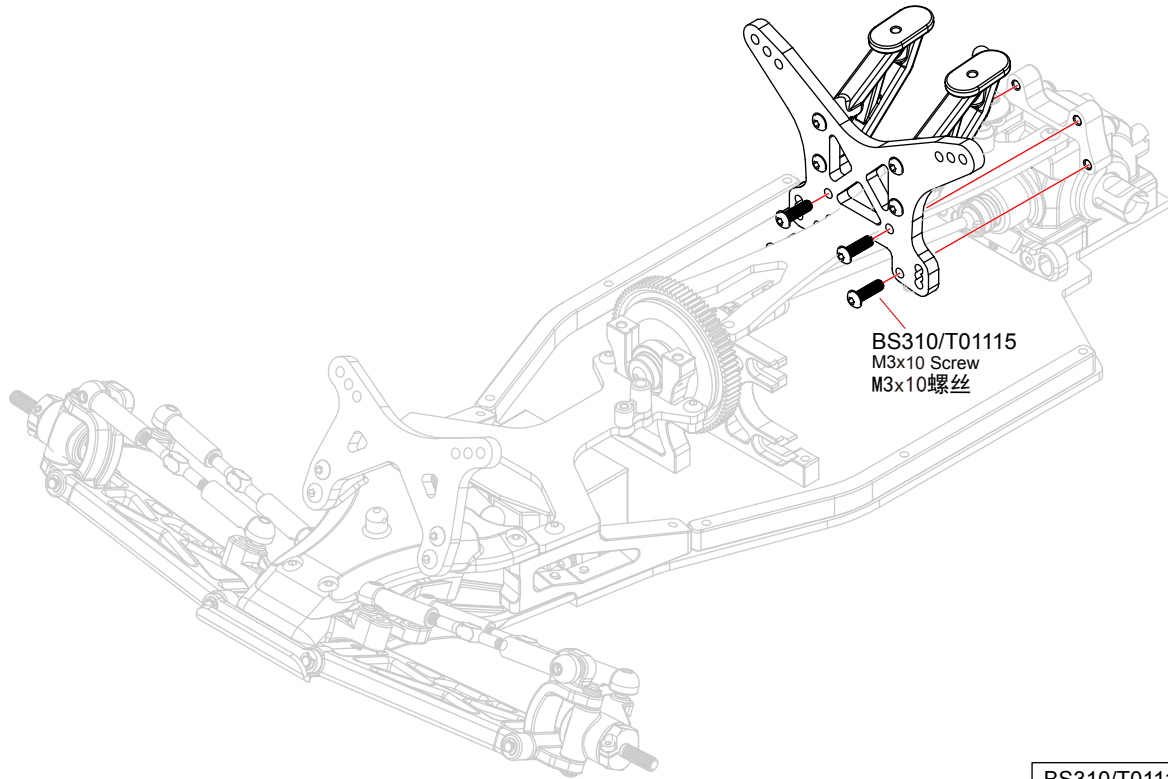


BS310/T01115
M3x10 Screw
M3x10螺丝

BS310/T01115 M3x10 Screw
M3x10螺丝



24 Spur Gear Cover
减速齿轮盖

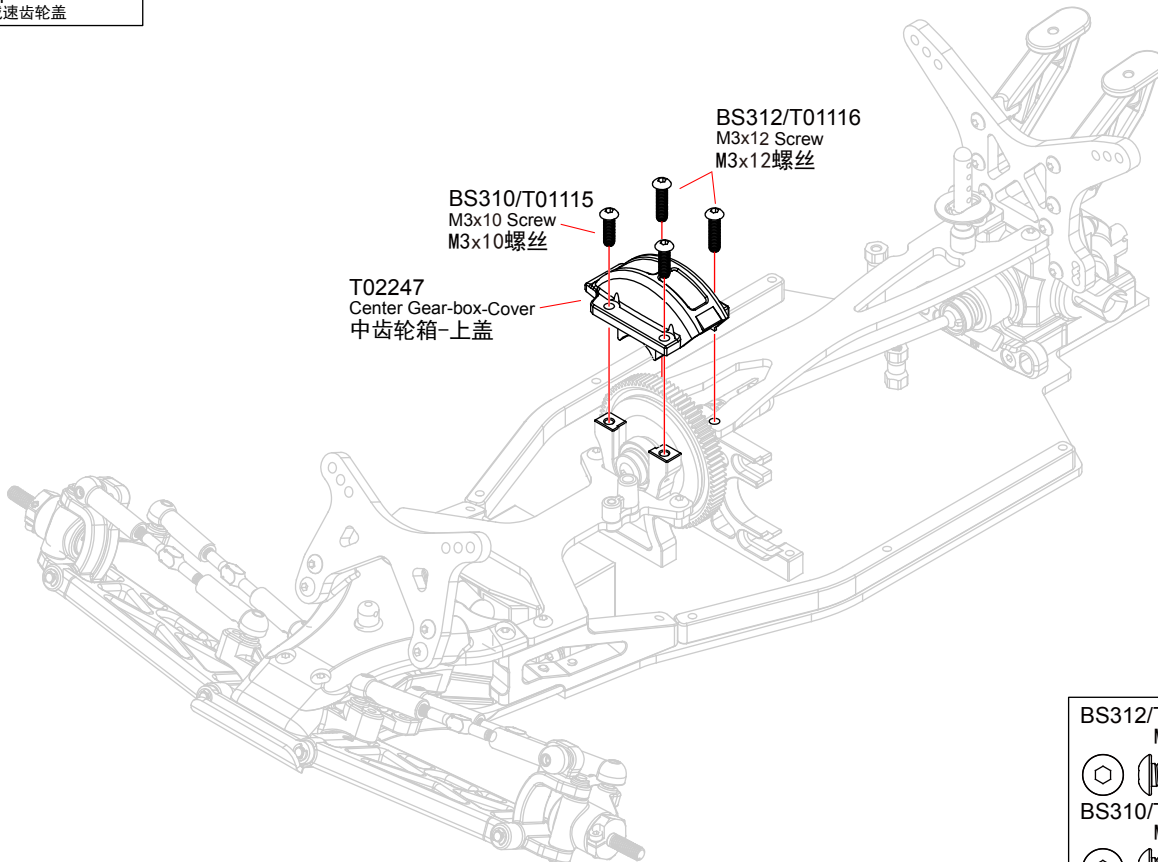

BS310/T01115
M3x10 Screw
M3x10螺丝

BS312/T01116
M3x12 Screw
M3x12螺丝

T02247
Center Gear-box-Cover
中齿轮箱-上盖


BS312/T01116 M3x12 Screw
M3x12螺丝




BS310/T01115 M3x10 Screw
M3x10螺丝





25 Rear Hub Carrier 后轮座

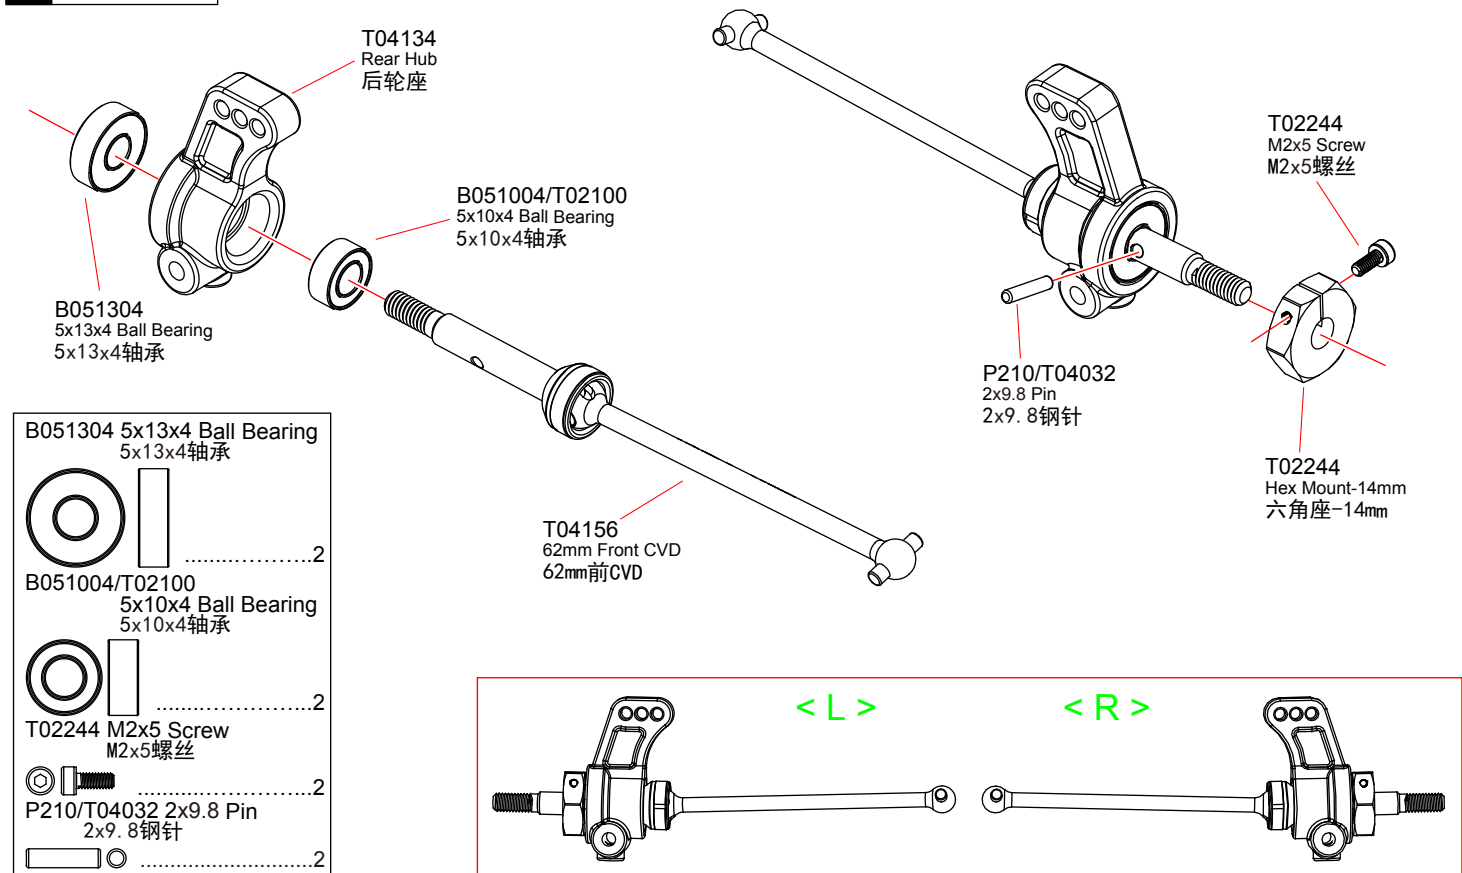

26 Rear Lower Arm 后下摆臂

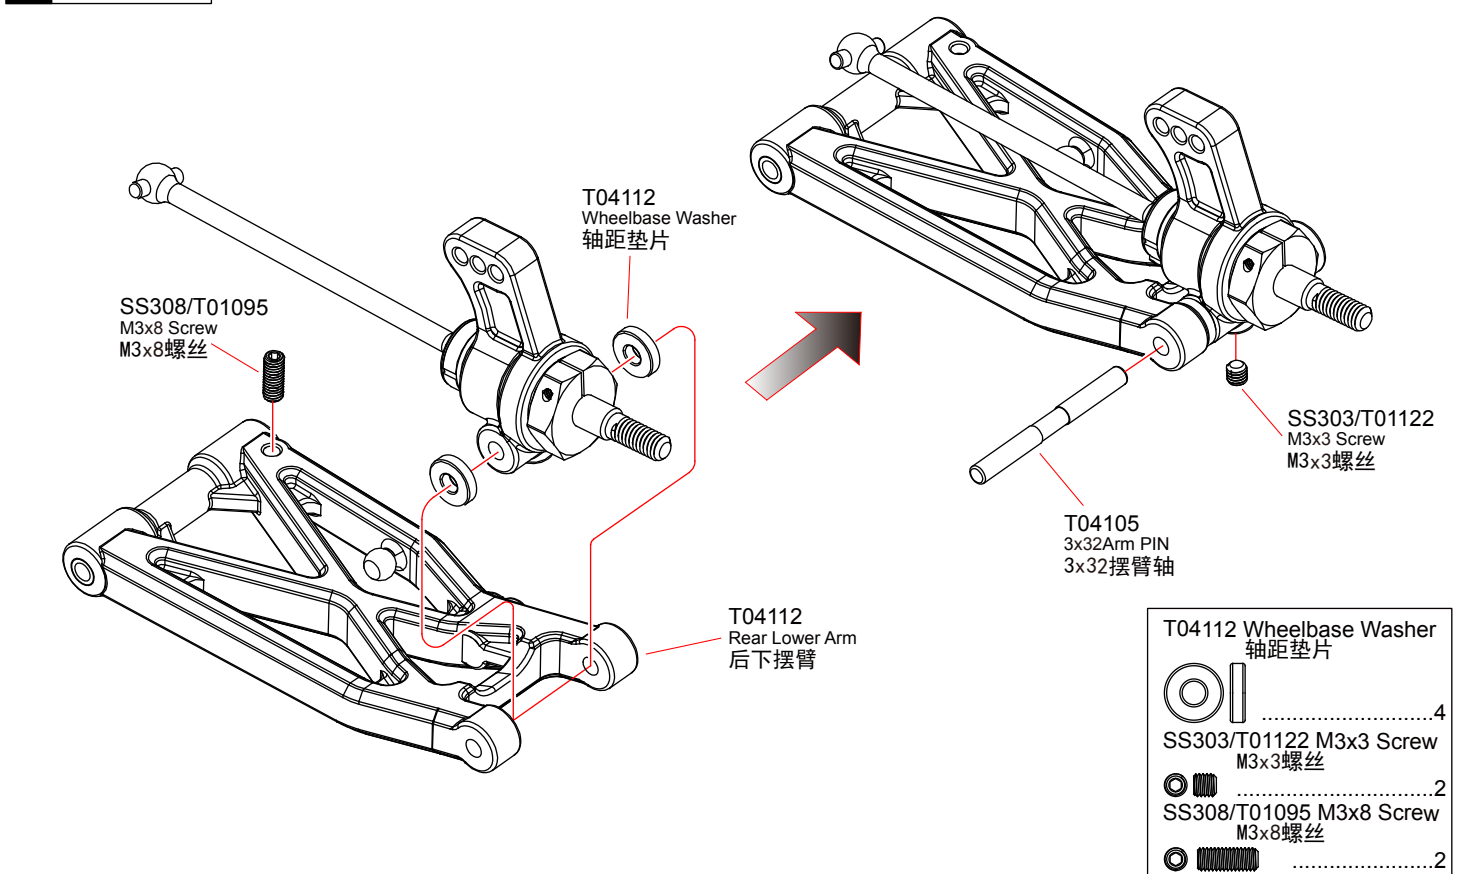

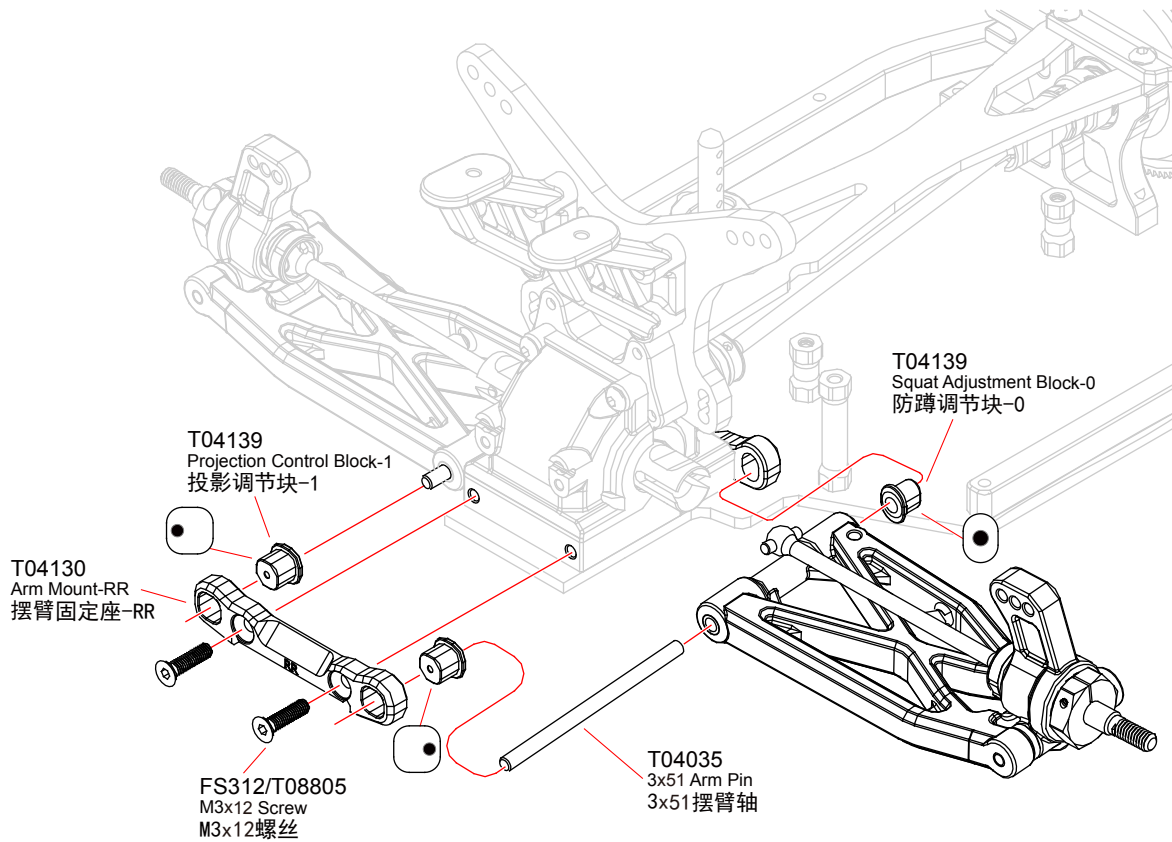

ANTI-SQUAT

RF	RR	(°)
		=2°
		=1°
		=3°
		=3°
		=2°
		=4°
		=1°
		=0°
		=2°


ROLL-CENTER

FF	FF	(mm)
		=+0.9mm
		=0mm
		=-0.9mm

TOE-IN




RF	RR	(°)
		=2.5°
		=3.5°
		=1.5°

29 Rear Turnbuckle 后拉杆

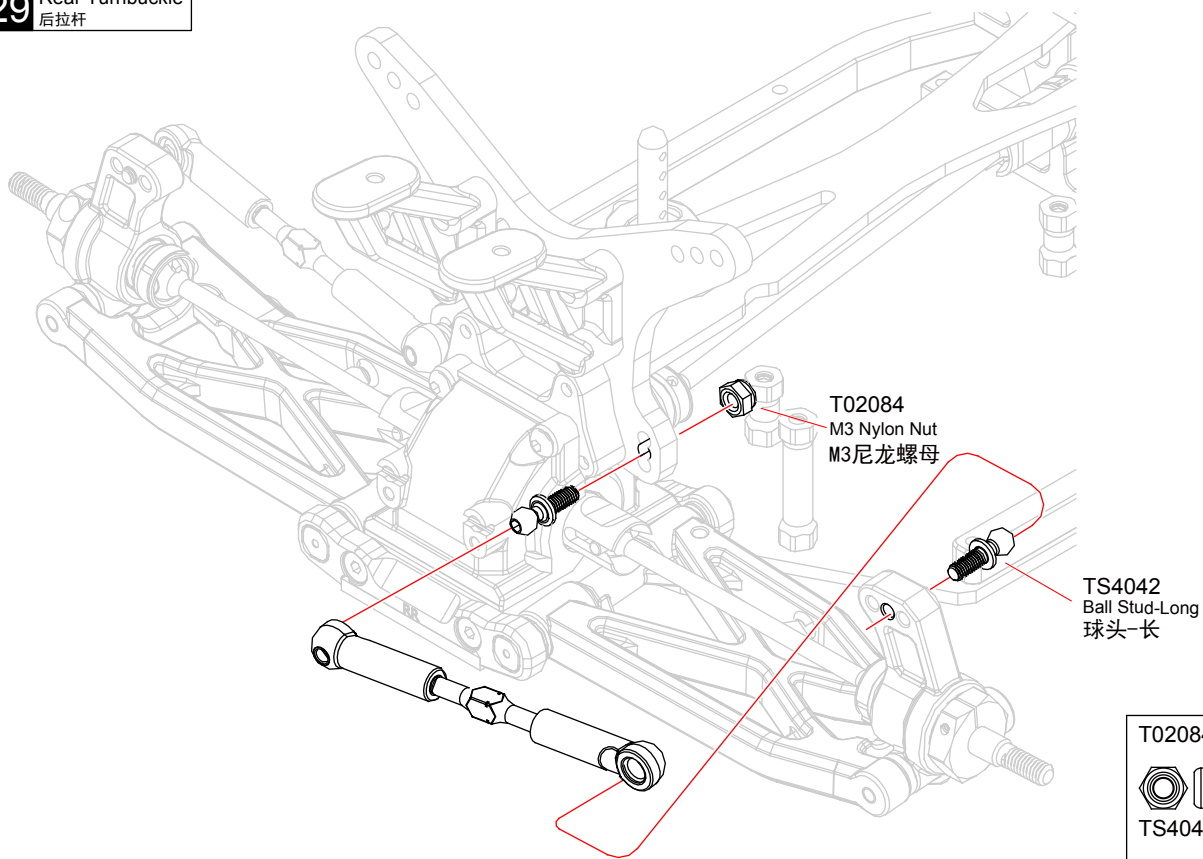


T02084 M3 Nylon Nut M3尼龙螺母	2
TS4042 Ball Stud-Long 球头-长	4

30 Rear Swaybar 后防倾杆

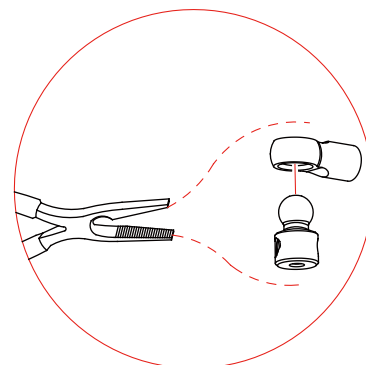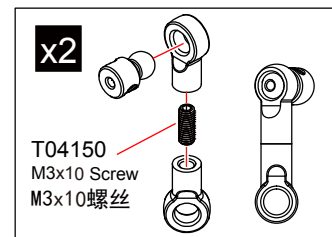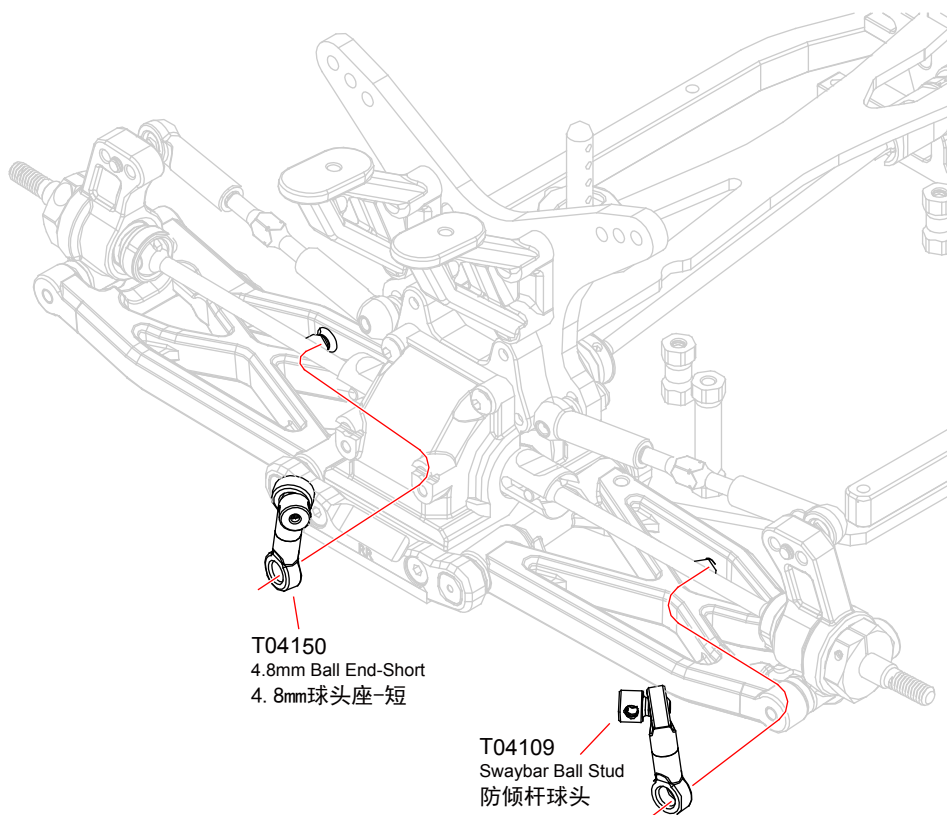

31 Rear Swaybar 后防倾杆

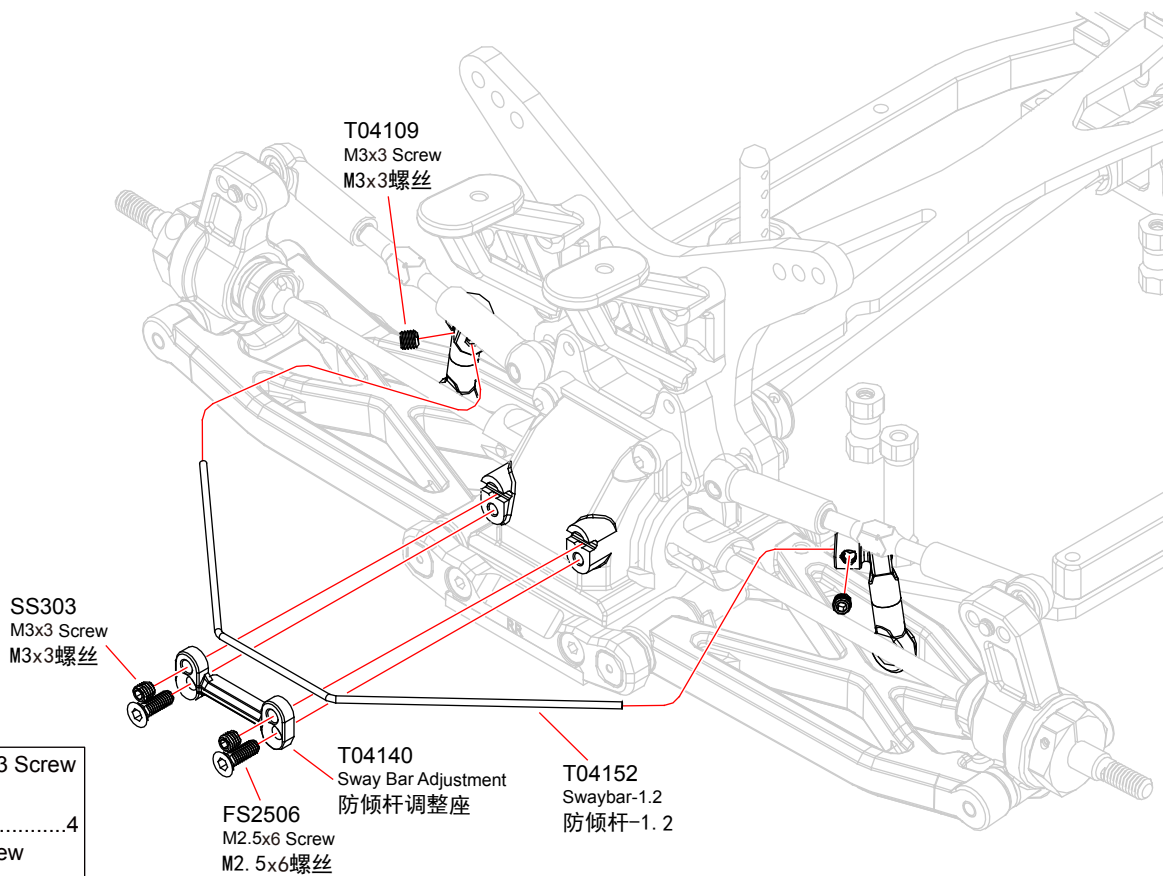

SS303/T04109 M3x3 Screw
M3x3 螺丝

FS2506 M2.5x6 Screw
M2.5x6 螺丝

.....4
.....2

32 Shock Absorber 避震器

TU0250-8 Spring
弹簧

TU0250-8 1mm Washer-Black
1mm 压垫-黑色


TU0250-8 1mm Washer-White
1mm 压垫-白色

TU0250-8 2.5mm Washer-White
2.5mm 压垫-白色


TU0250-8 2.8x1.9 O-ring
2.8x1.9 O 环

TU0250-8 9x1 O-ring
9x1 O 环

.....4
.....4
.....4
.....4
.....8
.....8

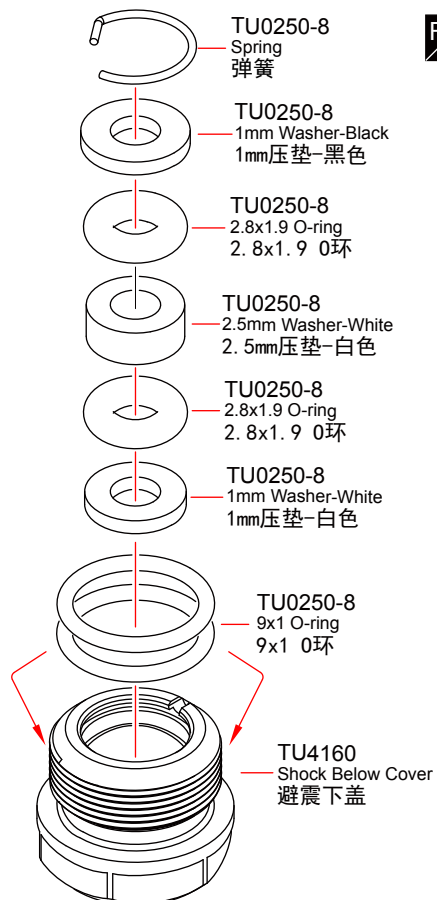

F/R x2


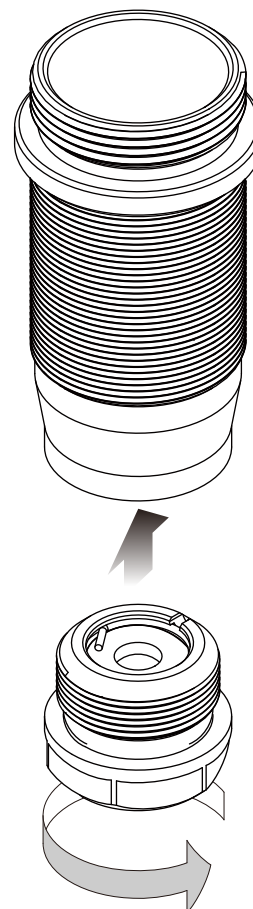


33 Shock Absorber 避震器

TU0250-1/TU0250-2 2.3 E-ring 2.3 E扣	8
TU0250-7 Front Piston-Black 前活塞-黑色	2
TU0250-7 Rear Piston-White 后活塞-白色	2
TU0250-8 12x1 O-ring 12x1 O环	4
T02187 5.8 Ball End 5.8球头座	4
T02062 5.8 Ball Stud 5.8球头	4



TU0250-7
Front Piston-Black
前活塞-黑色
后活塞-白色

F/R x2

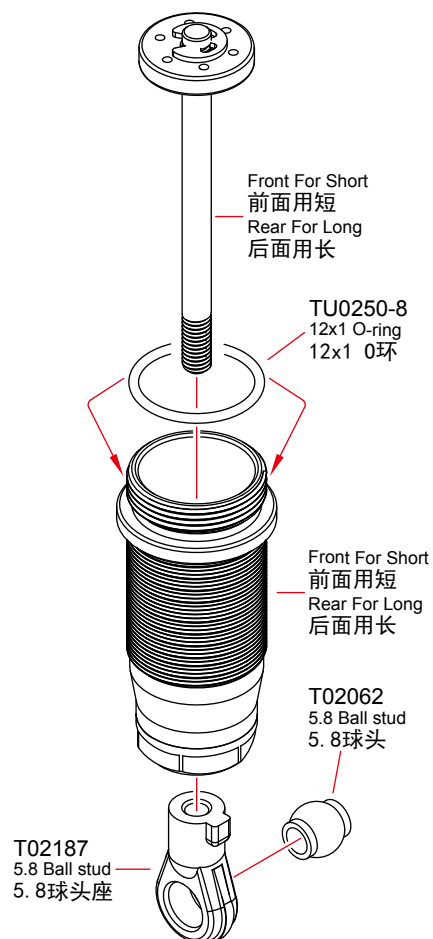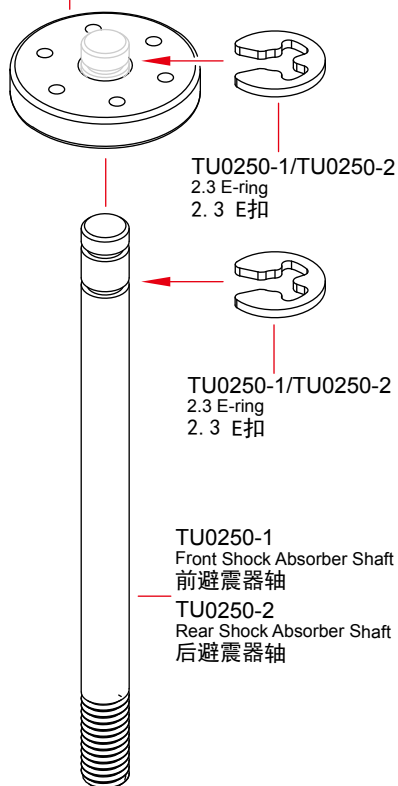

34 Shock Absorber 避震器

F/R x2

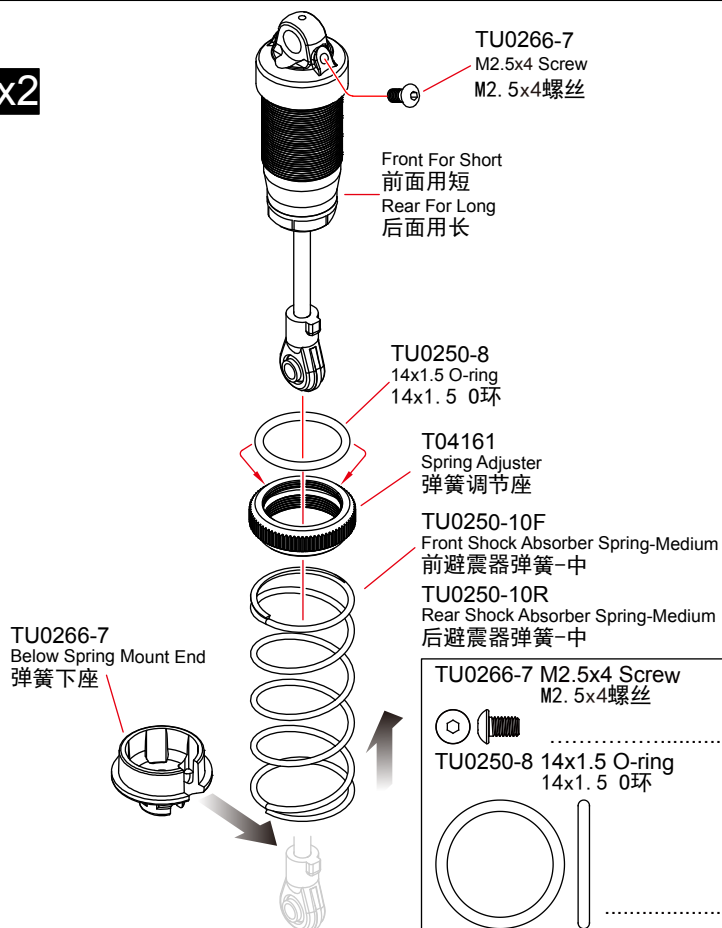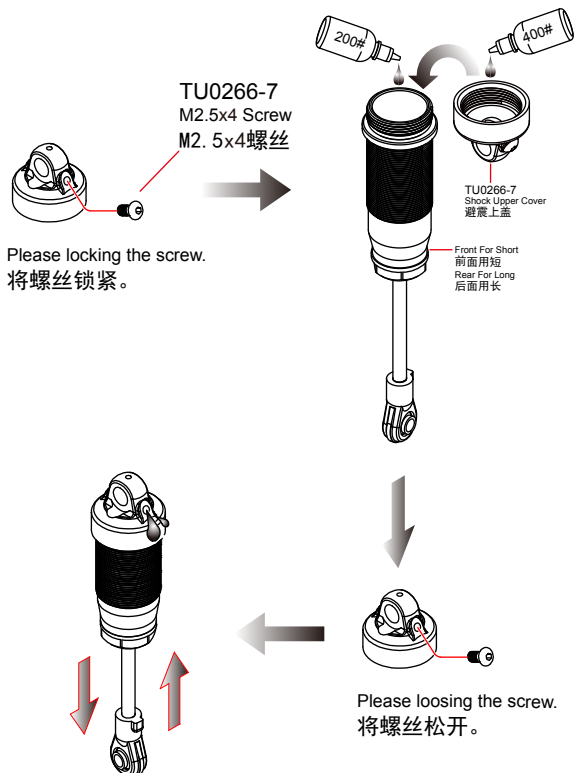

35 Front Shock Absorber 前避震器

T04141
Shock Ball Stud
带牙避震上球珠

T02084
M3 Nylon Nut
M3尼龙螺母

BS315/T08793
M3x15 Screw
M3x15螺丝

T04041 Shock Ball Stud
带牙避震上球珠



.....2

T02084 M3 Nylon Nut
M3尼龙螺母



.....4


BS315/T08793 M3x15 Screw
M3x15螺丝



.....2

36 Rear Shock Absorber 后避震器

T04041 Shock Ball Stud
带牙避震上球珠



.....2

T02084 M3 Nylon Nut
M3尼龙螺母



.....4

BS312/T01116 M3x12 Screw
M3x12螺丝




.....2

T02084
M3 Nylon Nut
M3尼龙螺母

T04141
Shock Ball Stud
带牙避震上球珠

BS312/T01116
M3x12 Screw
M3x12螺丝


37 Motor 马达

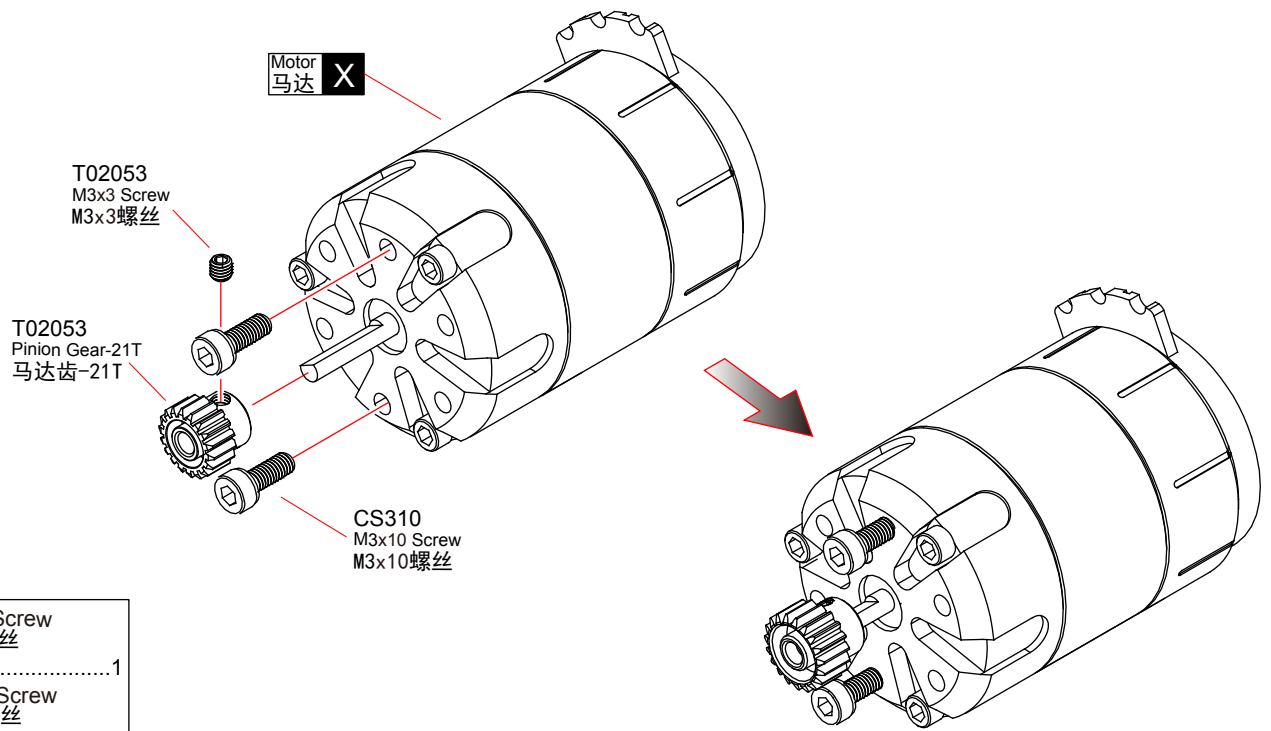


T02053 M3x3 Screw M3x3螺丝	
	1
CS310 M3x10 Screw M3x10螺丝	
	2

Gear Ratio 齿轮比	12.5	11.8	11.18	10.63	10.12	9.66	9.24	8.85	8.5	8.19
Pinion Gear 马达齿	17T	18T	19T	20T	21T	22T	23T	24T	25T	26T


38 Motor 马达

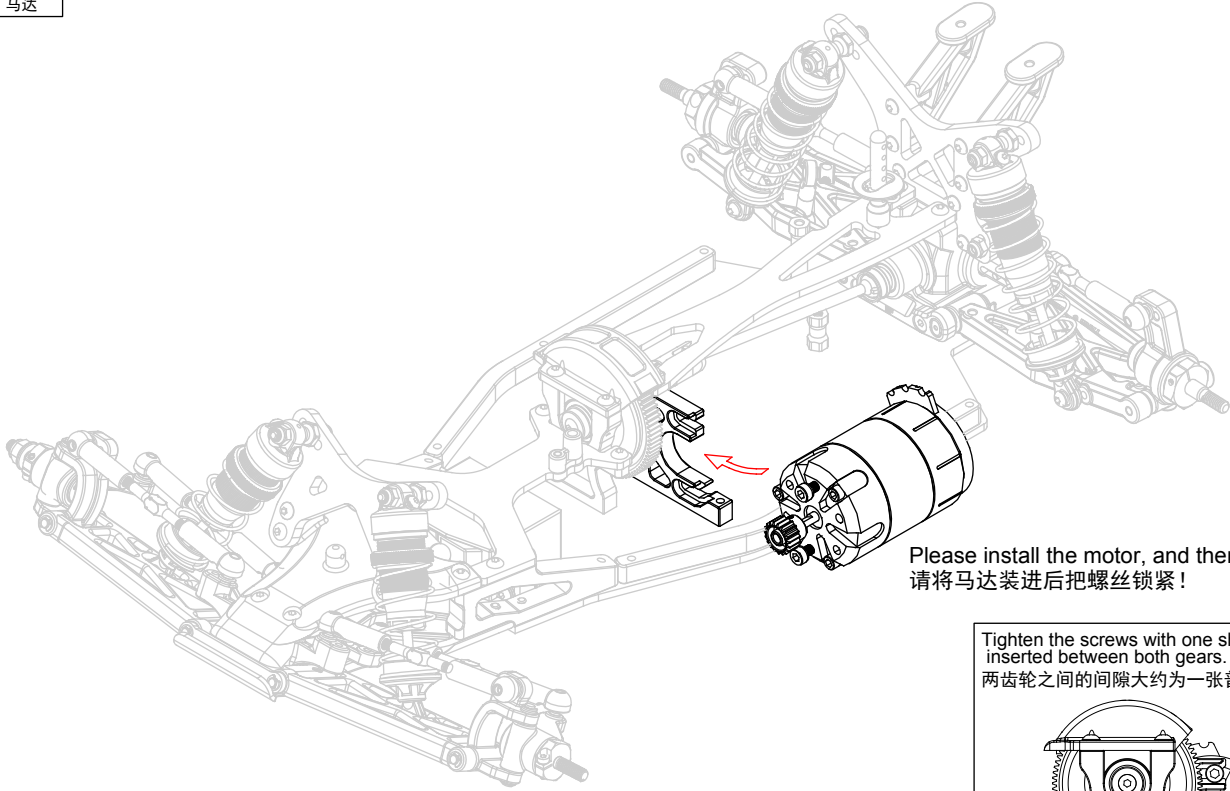


Tighten the screws with one sheet of paper inserted between both gears.
两齿轮之间的间隙大约为一张普通纸的厚度。

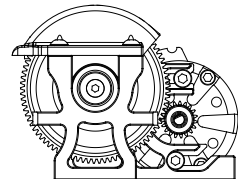

39 ESC/Receiver 电子变速器/接收机

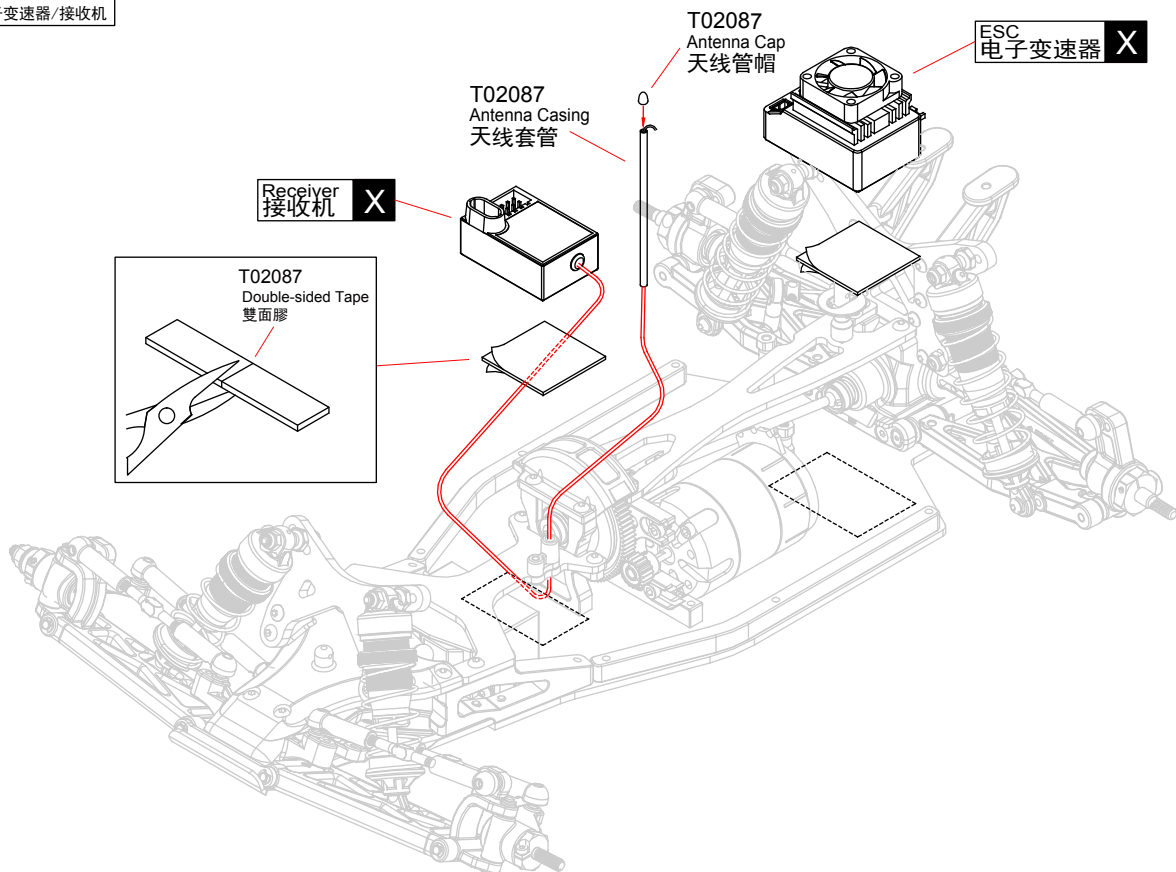

40 Battery 电池

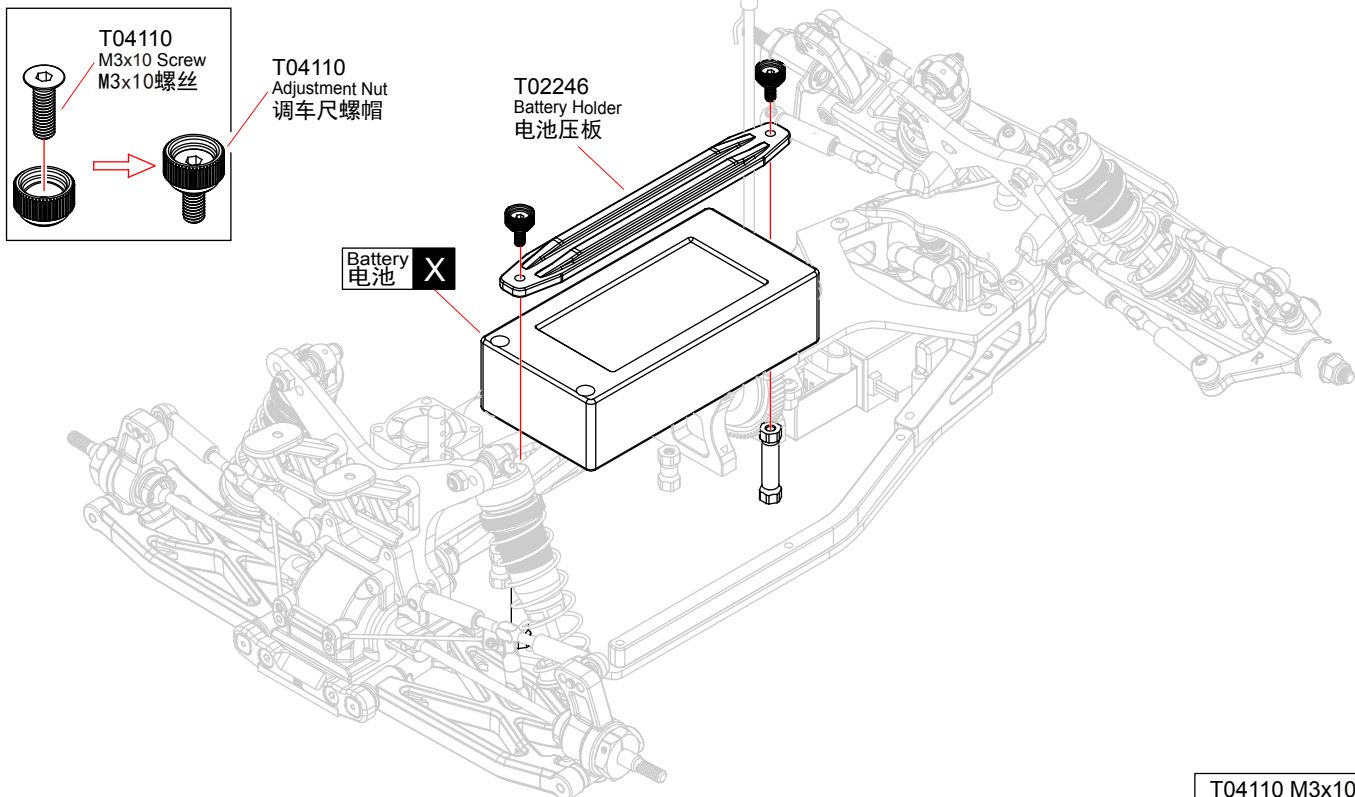

T04110 M3x10 Screw
M3x10螺丝
.....2

X Must be purchased separately
需另购物品

L/R Assemble both Left and Right
组装左和右

x2 Assemble as many times as specified
需组装数量




41 Wheel 轮胎

< Front > x2


< Rear > x2

F/R x2

After fitting wheels to tyres,
apply instant glue as shown
轮胎装好后如图打胶水

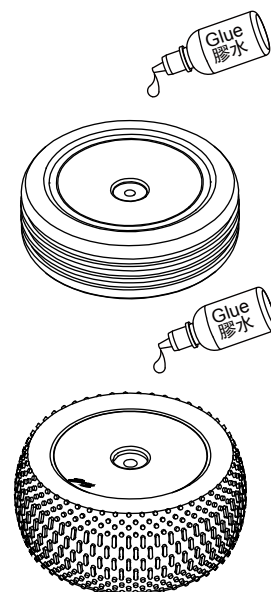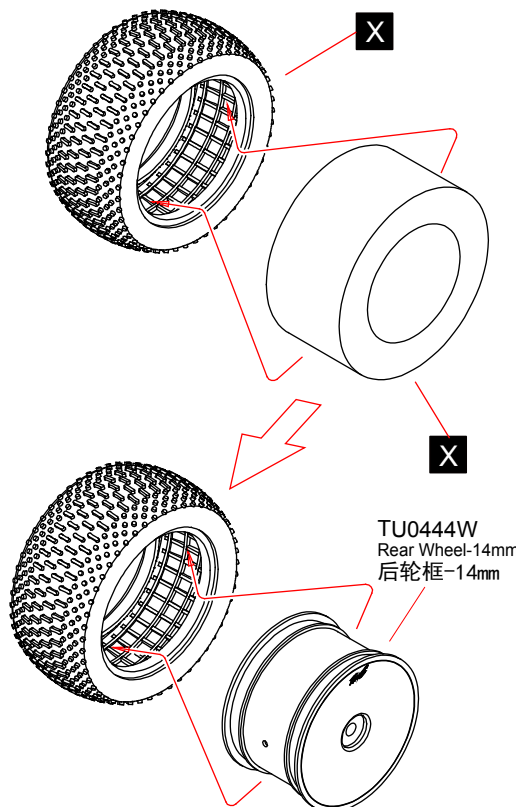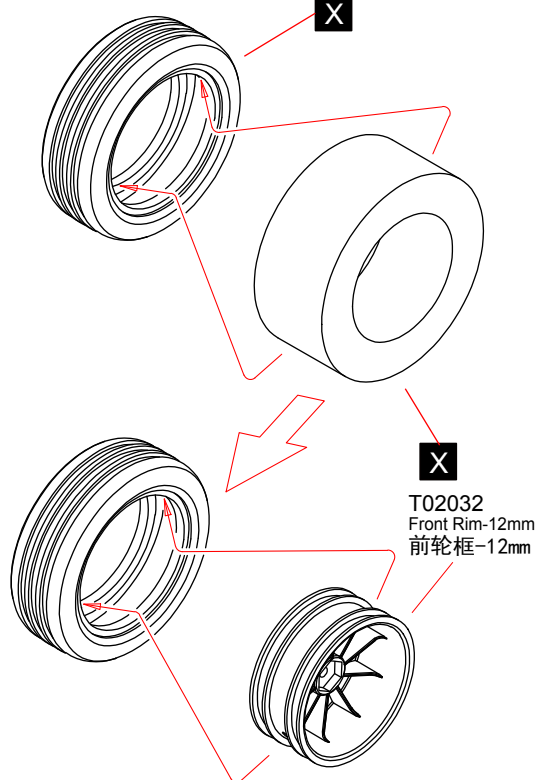

42 Wheel 轮胎

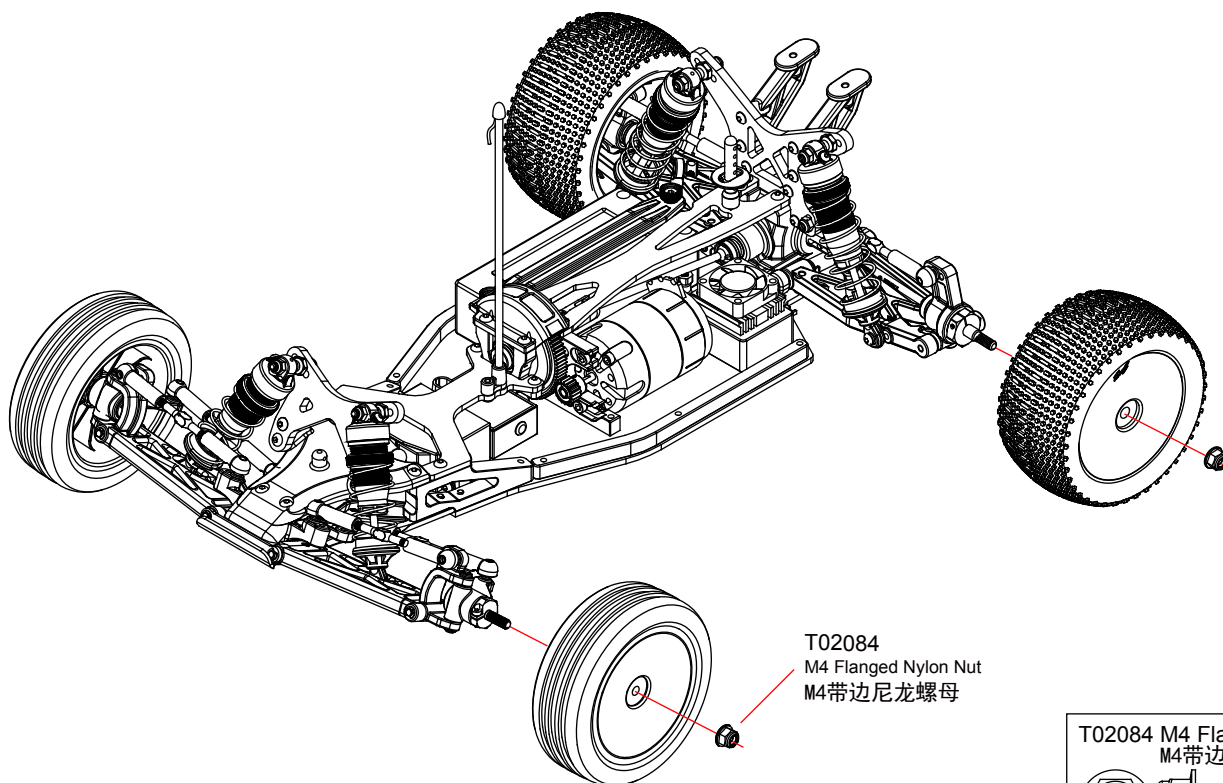

T02084 M4 Flanged Nylon Nut
M4带边尼龙螺母




4

43 Wing 尾翼

FS310/T01120 M3x10 Screw
M3x10螺丝





T04145 Tail Gasket
尾翼垫片




FS310/T01120
M3x10 Screw
M3x10螺丝

T04145
Tail Gasket
尾翼垫片

T04164
Wing-Lexan
尾翼

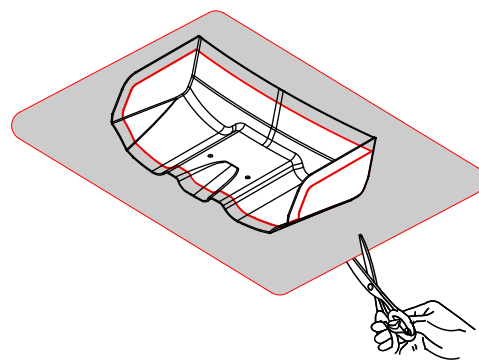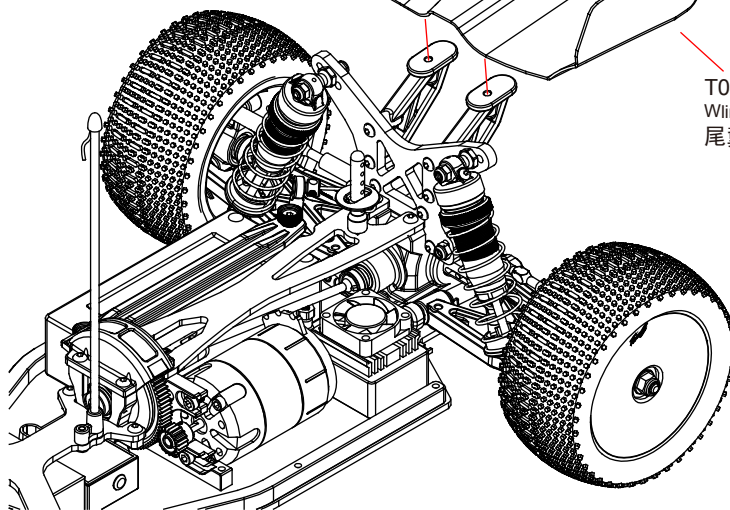



44 Body-Velcro Tape 车壳-魔鬼粘

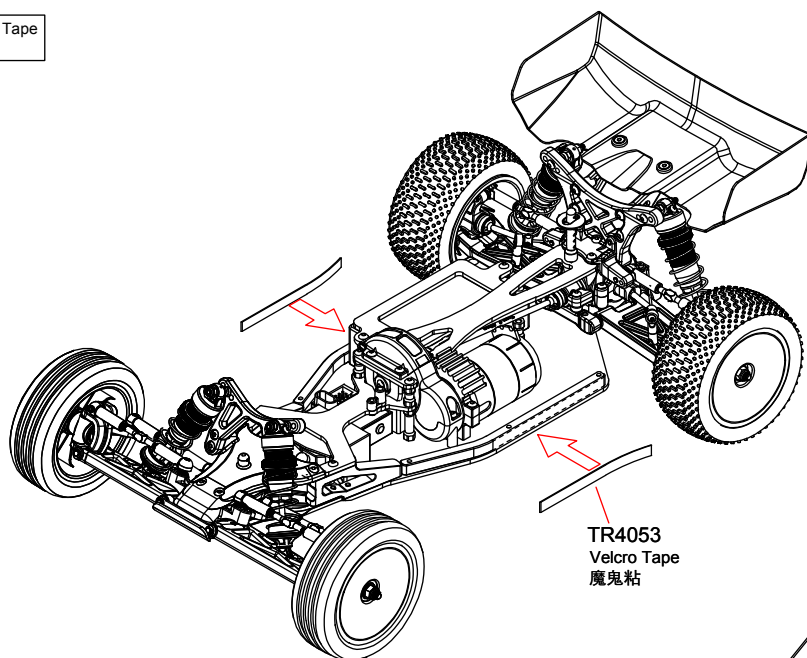


TR4053
Velcro Tape
魔鬼粘

TR4053
Velcro Tape
魔鬼粘























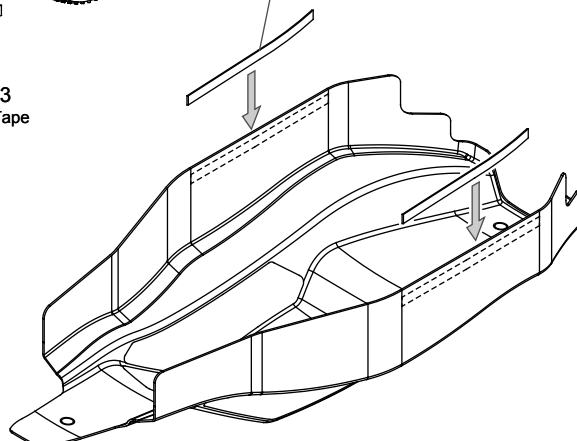


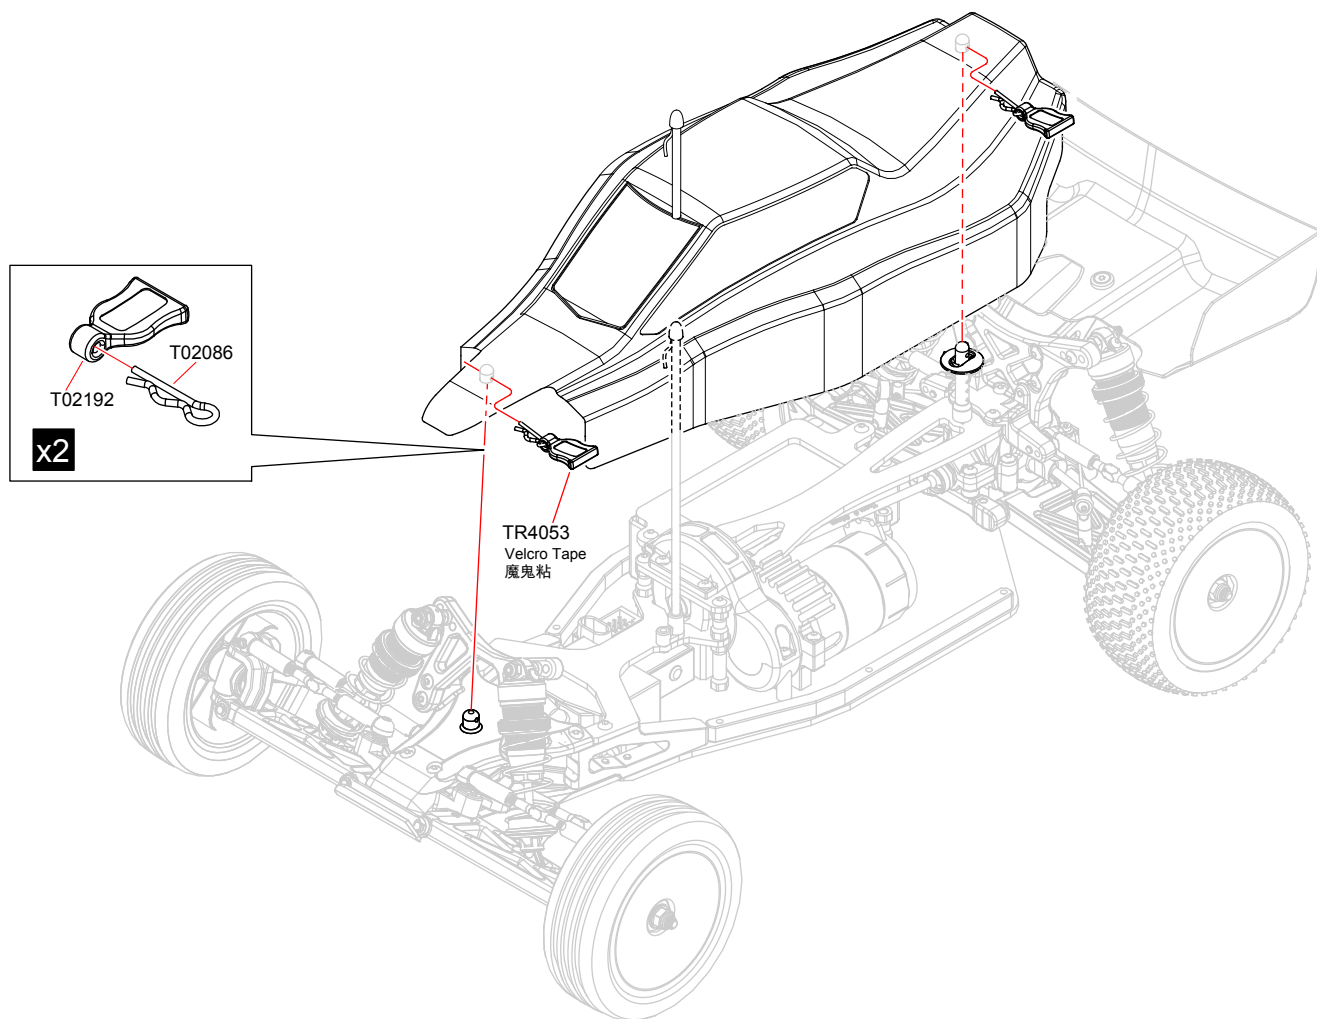





















爆炸圖

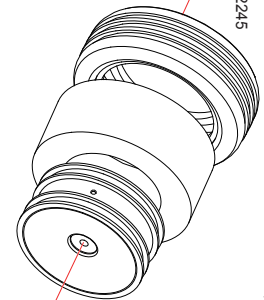
























Parts list for TM2 V2 off-road buggy - 1 TM2 V2配件包-1

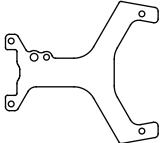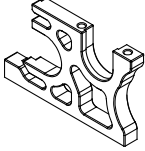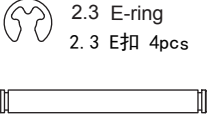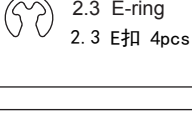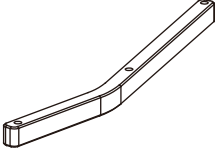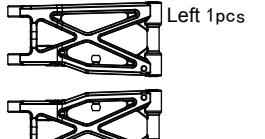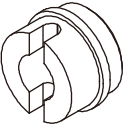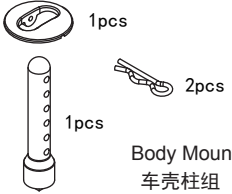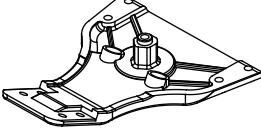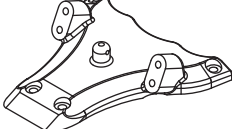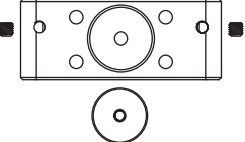T02241  Main Chassis 主底盘 1pcs	T02242  Front Top Deck 前二楼板 1pcs	T02243  Rear Top Deck 后二楼板 1pcs	T02196  Motor Mount 马达座 1pcs	T02197  Center Diff Mount 中差座 1pcs
T04105  3x32 Arm Pin 3x32摆臂轴 2pcs	T02054  2.3 E-ring 2.3 E扣 4pcs 3x27.5 Hinge Pin Front-Outer 3x27.5前摆臂销-外 2pcs	T04107  3x45 Turnbuckle 3x45拉杆 2pcs	T02056  2.3 E-ring 2.3 E扣 4pcs 3x34.5 Hinge Pin Front-Inner 3x34.5前摆臂销-内 2pcs	T04109  M3x3 Screw 螺丝 2pcs Swaybar Ball Stud 防倾杆球头 2pcs
T02175  Reinforcing Bars 侧边补强条 2pcs	T02176  Front Chassis Mount 前底盘固定座 1pcs	T04112  Left 1pcs Right 1pcs Rear Lower Arm 后下摆臂	 Wheelbase Washer 轴距垫片 4pcs	T02177  Center Bearing Insert 中差培林座 1pcs
T02032  Front Rim-12mm 前轮框-12mm 2pcs	TU0444W  Rear Wheel-14mm 后轮框-14mm 2pcs	T04114  62mm Rear CVD Bone 62mm后CVD骨 2pcs	T02178  Battery Post 电池柱 2pcs	T02181  Battery Post -Short 电池档柱 2pcs
T04044  M3x8 Screw 螺丝 1pcs 83mm Center CVD 83mm中CVD 1pcs	T02185  Front Bumper 前防撞板 1pcs	T04119  Rear CVD Axle 后CVD轴 2pcs	T04023  Center Shaft 中轴 1pcs	T04019  Slipper Spring 扭限弹簧 1pcs
T02182  Mid Connecting Hub-F 中接杆-前 1pcs	T02189  1pcs 2pcs 1pcs Body Mount 车壳柱组	T02008  Front Chassis Plate 前底盘 1pcs	T02019  Front Brace Mount 前支撑座 1pcs	T04018  Slipper Nut 扭限螺母 1pcs
TR4027  Spur Gear-85T 减速齿-85T 1pcs	TU0226OR  Front Hinge Pin Brace 前摆臂固定片 1pcs	TU0222OR  Front Arm Mount 前摆臂固定座 1set	T04129  Arm Mount-RF 摆臂固定座-RF 1pcs	T04130  Arm Mount-RR 摆臂固定座-RR 1pcs



















Parts list for TM2 V2 off-road buggy - 2 TM2 V2配件包-2

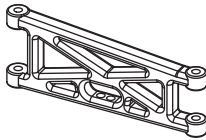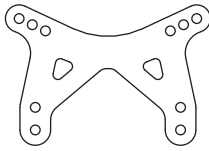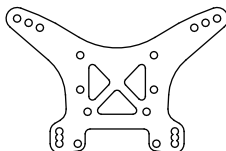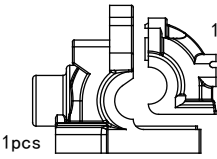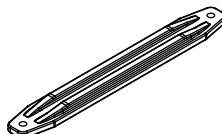H134  Small Clip 小号插销 6pcs Small Clip Holder 小号插销固定座 6pcs	T02011  Left 1pcs Right 1pcs C-type Holder C型座	T02015  Front Upper Suspension Arm Mount 前上摆臂座 1pcs	T02087  Double-sided Tape 双面胶 1pcs Antenna Cap 天线管帽 1pcs Antenna Casing 天线套管 1pcs	T02016  Front Lower Arms 前下摆臂 2pcs
T02012  Left 1pcs Right 1pcs Steering Block 转向臂	T04134  Left 1pcs Right 1pcs Rear Hub 后轮座	TU0240  Front Shock Tower 前避震器架 1pcs	T04136  Rear Shock Tower 后避震器架 1pcs	T02027  Steering Servo Horn-F 转向伺服臂-F 1pcs Steering Servo Horn-H 转向伺服臂-H 1pcs Steering Servo Horn-S 转向伺服臂-S 1pcs
T02023  Servo Saver Upper 缓冲臂上 1pcs Servo Saver Lower 缓冲臂下 1pcs Servo Saver - L 缓冲臂-L 1pcs	T02024  Steering Rack 缓冲连接片 1pcs	T04139  Projection Control Block-0 投影调节块-0 2pcs Projection Control Block-1 投影调节块-1 2pcs Projection Control Block-2 投影调节块-2 2pcs Squat Adjustment Block-0 防蹲调节块-0 6pcs Squat Adjustment Block-1 防蹲调节块-1 6pcs		
T04140  1pcs 1pcs Rear Gear-box 后齿轮箱 Sway Bar Adjustment 防倾杆调整座 1pcs	T02044  3x10 Screw 螺丝 2pcs Block Carrier 缓冲钢套 2pcs 3x7x0.8 Washer 3x7x0.8垫片 2pcs	T04141  Shock Ball Stud 带牙避震器上球珠 4pcs	T02244  2x5 Screw 螺丝 2pcs Hex Mount-14mm 六角座-14mm 2pcs	
T02042  4.0 E-ring 4.0 E扣 2pcs 2x9.8 pin 钢针 2pcs Front Wheel Axle 前轮轴 2pcs	T02246  Battery Holder 电池压板 1pcs	T04145  Tail Gasket 尾翼垫片 2pcs Wing Mount 尾翼架 2pcs	T02028  Servo Plate 伺服机座 2pcs	T02035  1.0 Servo Spacer 伺服机座垫片 2pcs 1.5 Servo Spacer 伺服机座垫片 2pcs
T02043OR  Buffer Column-A 转向缓冲器-A 1pcs Buffer Column-B 转向缓冲器-B 1pcs Buffer Spring 缓冲弹簧 1pcs Buffer Nut 缓冲调整螺帽 1pcs 4.0 E-ring 4.0 E扣 1pcs	T02030  M3x10 Screw M3x10螺丝 1pcs 4.8 Ball End - Short 球头座-短 2pcs	T04014  4.8mm Ball End-Long 4.8mm球头座-长 6pcs	T04150  M3x10 Screw 螺丝 4pcs 4.8mm Ball End-Short 4.8mm球头座-短 8pcs	
W35515  3x5.5x1.5 Washer 3x5.5x1.5垫片 10pcs	T04151  1.1 1pcs Swaybar 防倾杆 2pcs	T04152  1.2 1pcs Swaybar 防倾杆 2pcs	T04153  1.3 1pcs Swaybar 防倾杆 2pcs	T04154  1.4 1pcs Swaybar 防倾杆 2pcs

Parts list for TM2 V2 off-road buggy - 3 TM2 V2配件包-3

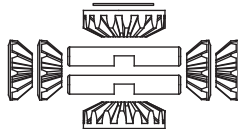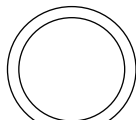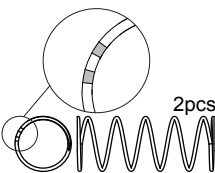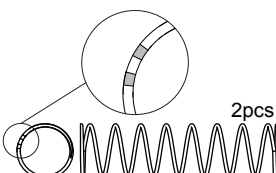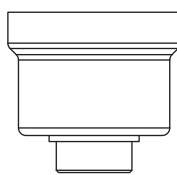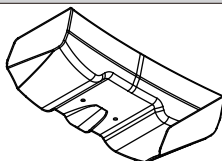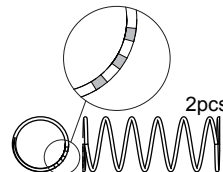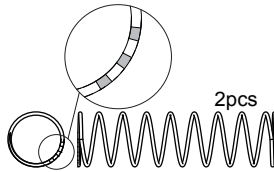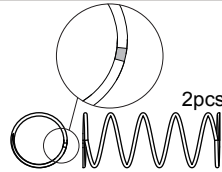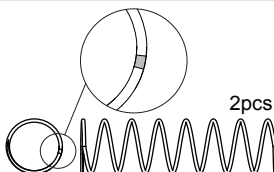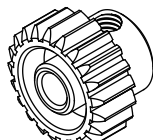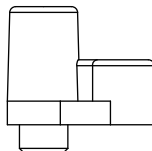T02061  Ball Stud -Silver 球头-银色 2pcs	T04156  62mm Rear CVD 62mm后CVD 2pcs	TS4039  Diff Gear Set 差速齿轮组	T02084  M4 Flanged Nylon Nut 带边尼龙螺母 6pcs  M3 Nylon Nut 尼龙螺母 6pcs	TS4040  3.0 E-ring 3.0 E扣 2pcs  Diff Connecting Cup 差速接杯 2pcs
TU0250-1  2.3 E-ring 2.3 E扣 4pcs  Front Shock Absorber Shaft 前避震器轴 2pcs	TU0250-2  2.3 E-ring 2.3 E扣 4pcs  Rear Shock Absorber Shaft 后避震器轴 2pcs	T04158  Front Shock Absorber Body 前避震器筒身 2pcs	B051004/T02100  5x10x4 Ball Bearing 5x10x4轴承 6pcs	B101504/T02099  10x15x4 Ball Bearing 10x15x4轴承 6pcs
T04159  Rear Shock Absorber Body 后避震器筒身 2pcs	TU0250-5  Below Spring Mount End 弹簧下座 4pcs	TU0250-8  1mm Washer-White 1mm压垫-白色 4pcs  1mm Washer-Black 1mm压垫-黑色 4pcs  2.5mm Washer-White 2.5mm压垫-白色 4pcs  Spring 弹簧 4pcs  9x1 O-Ring 9x1 O环 4pcs  2.8x1.9 O-Ring 2.8x1.9 O环 4pcs  12x1 O-Ring 12x1 O环 4pcs  14x1.5 O-Ring 14x1.5 O环 4pcs		
TU0250-7  Front Piston-Black 前活塞-黑色 2pcs  Rear Piston-White 后活塞-白色 2pcs	TU0250-10F  2pcs Front Shock Absorber Spring-Medium 前避震器弹簧-中	TU0250-10R  2pcs Rear Shock Absorber Spring-Medium 后避震器弹簧-中	T04160  Shock Below Cover 避震下盖 4pcs	T04161  Spring Adjuster 弹簧调节座 4pcs
T04040  Diff Housing 差速壳 1pcs  4.8x1.6 O-ring 4.8x1.6 O环 1pcs  10x12x0.2 Washer 10x12x0.2垫片 2pcs  M2.5x6 Screw M2.5x6螺丝 4pcs  Diff Pads 差速垫片 1pcs	T04041  16T Gear 16T齿轮 1pcs  40T Gear 40T齿轮 1pcs  10x12x0.2 Washer 10x12x0.2垫片 2pcs  4.8x1.6 O-ring 4.8x1.6 O环 1pcs	T04164  Wing-Lexan 尾翼 1pcs		
TU0262-F  2pcs Front Shock Absorber Spring-Soft 前避震器弹簧-软	TU0262-R  2pcs Rear Shock Absorber Spring-Soft 后避震器弹簧-软	TU0260-F  2pcs Front Shock Absorber Spring-Hard 前避震器弹簧-硬	TU0260-R  2pcs Rear Shock Absorber Spring-Hard 后避震器弹簧-硬	T02187  5.8 Ball End 球头座 4pcs
T02053  3x3 Screw 1pcs Pinion Gear-21T 马达齿-21T 1pcs	TS4042  Ball Stud-Long 球头-长 6pcs	T04055  Antenna Pipe Mount 天线管座 1pcs	TS4043  Ball Stud-Short 球头-短 6pcs	B0306025/T02080  3x6x2.5 Ball Bearing 3x6x2.5轴承 4pcs

Parts list for TM2 V2 off-road buggy - 4 TM2 V2配件包-4

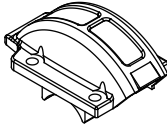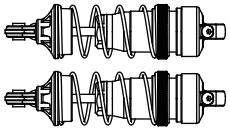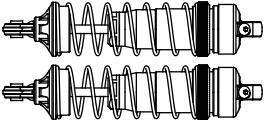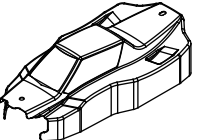TU0266-7  Below Spring Mount end-Plastic 弹簧下座-尼龙 4pcs  Shock Absorber Top cover-Plastic 避震器上盖-尼龙 4pcs  M2.5x4 Screw M2.5x4螺丝 4pcs	T04022  Spring Buckle 弹簧扣 1pcs	T01057  2x9.8 pin 钢针 4pcs  CVD Shaft CVD轴 4pcs	T02147  Front Brace Mount 1pcs  Front Chassis Plate 1pcs  M3x25 1pcs	T04020  Slipper Hub-F 扭限座-前 1pcs  Slipper Hub-R 扭限座-后 1pcs
BS305/T08788  M3x5 Screw M3x5螺丝 8pcs	BS308/T01114  M3x8 Screw M3x8螺丝 10pcs	BS310/T01115  M3x10 Screw M3x10螺丝 10pcs	FS308/T01119  M3x8 Screw M3x8螺丝 10pcs	FS310/T01120  M3x10 Screw M3x10螺丝 10pcs
BS315/T08793  M3x15 Screw M3x15螺丝 8pcs	FS315/T08807  M3x15 Screw M3x15螺丝 10pcs	CS310  M3x10 Screw M3x10螺丝 10pcs	SS303/T01122  M3x3 Screw M3x3螺丝 10pcs	SS308/T01095  M3x8 Screw M3x8螺丝 10pcs
P210/T04032  2x9.8 Pin 2x9.8钢针 6pcs	T04036  Slipper Pad 扭限摩擦片 2pcs	T02247  Center Gear-box-Cover 中齿轮箱 1pcs	B051304  5x13x4 Ball Bearing 5x13x4轴承 6pcs	W101202/TR4057  10x12x0.2 Washer 10x12x0.2垫片 8pcs
W5802/86000  5x8x0.2 Washer 5x8x0.2垫片 6pcs	T04110  Adjustment Nut 调车尺螺帽 2pcs  M3x10 Screw M3x10螺丝 2pcs	BS312/T01116  M3x12 Screw M3x12螺丝 10pcs	FS2506  M2.5x6 Screw M2.5x6螺丝 10pcs	T04035  3x51 Arm Pin 3x51摆臂轴 2pcs
T02245  M2x5 Screw 螺丝 2pcs  Hex mount 六角座 2pcs  5.1x8x0.2 Washer 垫片 6pcs	W3708/T02081  3x7x0.8 Washer 3x7x0.8垫片 10pcs	T02062  5.8 Ball Stud 球头 4pcs	T04162  Front Shock Absorber 前避震器	T04163  Rear Shock Absorber 后避震器
BS322  M3x22 Screw M3x22螺丝 10pcs	FS325  M3x25 Screw M3x25螺丝 10pcs	SS310  M3x10 Screw M3x10螺丝 10pcs	FS312/T08805  M3x12 Screw M3x12螺丝 8pcs	T02248  Body-Lexan 车壳 1pcs

TM2 V2

SETUP SHEET for the TeamC TM2 V2

Driver _____

Track / City _____

Event _____ Date ____ / ____ / ____

Conditions

☐ High traction
☐ Clay

☐ Smooth
☐ Sandy
☐ Wet


☐ Bumpy
☐ Soft dirt
☐ Dry

☐ Low traction
☐ Grass
☐ Dusty


☐ Med traction
☐ Hard soil
☐ Other

Front Suspension

Shock Mounting&Camber link

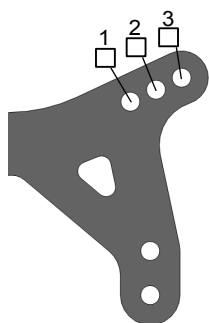


Ride height _____

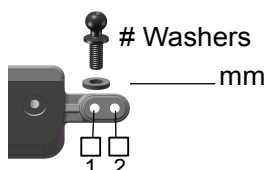


Camber _____°

Toe-in (+)/Out (-) _____°
Bump Steep Spacer _____

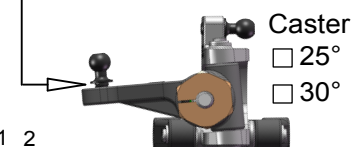


Caster
☐ 25°
☐ 30°

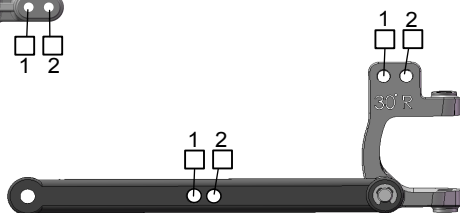

Washers
_____ mm



Front Shocks

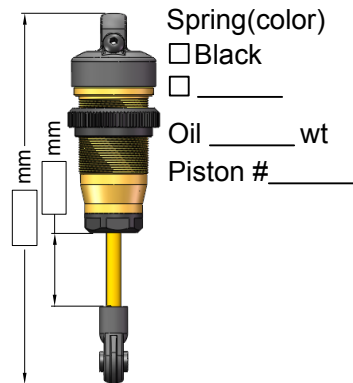

Spring(color)

☐ Black


☐ _____

Oil _____ wt

Piston # _____



Rear Suspension

Shock Mounting&Camber link

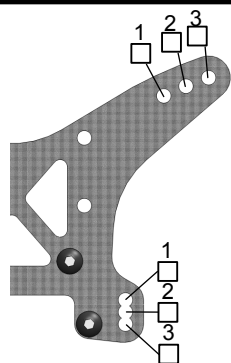

Ride height _____

Anti-roll bar: ☐ _____ mm
Camber _____°

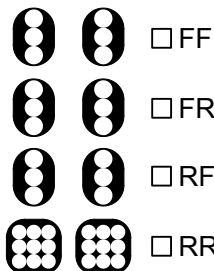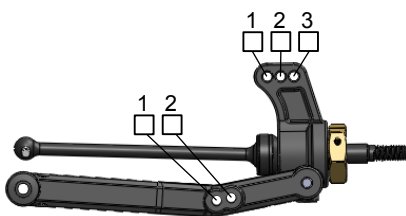


☐ FF

☐ FR


☐ RF

☐ RR

Wheelbase
☐ Long
☐ Medium
☐ Short

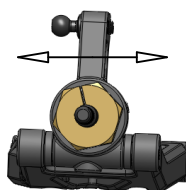

Rear Shocks

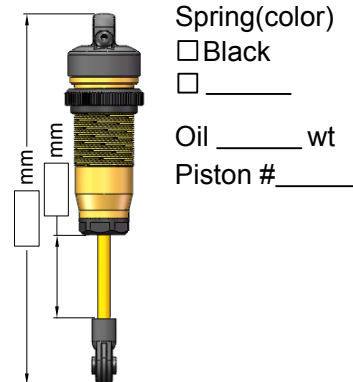

Spring(color)

☐ Black

☐ _____

Oil _____ wt

Piston # _____

Diff

Brand _____

Oil wt _____

Front Tires&Wheels

Front Tires _____

Inserts _____ Wheels _____

Front Tires&Wheels

Front Tires _____

Inserts _____ Wheels _____

Batteries

Servo _____

Esc _____

Batteries _____

Motor

Motor _____

Pinion/Spur _____ / _____

Other

Wing _____

Wing Angle ☐ 4° ☐ 10°

Comments

Notes _____

