



TM4

Instruction manual


***1:10 SCALE RADIO CONTROLLED ELECTRIC
POWERED 4WD RACING BUGGY***

Dimensions 尺寸:

Length 長度.....	400mm
Width 寬度	250mm
Height 高度.....	145mm

Transmitter Preparation

調整遙控器

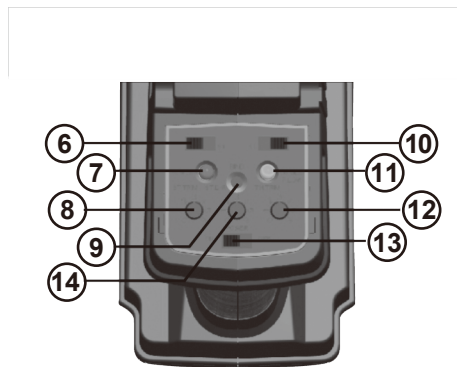


GLG20
2.4GHz

- 1 Control Panel 控制面板
- 2 Steering Wheel 轉向輪
- 3 Throttle Trigger 油門板扣
- 4 Battery Compartment 電池盒
- 5 Charging Jack 充電接口
- 6 Steering Servo Reverse 轉向正逆轉開關
- 7 Power LED 電源指示燈
- 8 Steering Trim 轉向調節
- 9 Bind Button 設定按鈕
- 10 Throttle Servo Reverse 油門正逆轉開關
- 11 Battery Voltage 電池電壓
- 12 Steering Dual Rate 轉向大小微調
- 13 Power Switch 電源開關
- 14 Throttle Trim 油門微調



Transmitter Battery Installation 遙控器電池安裝

Open battery cover at the bottom of transmitter.
Install batteries. Follow the direction of batteries
designated in the inside of battery box.

在遙控器的底部打開電池蓋子，安裝電池。
跟隨電池的指示在電池盒裡面指定。

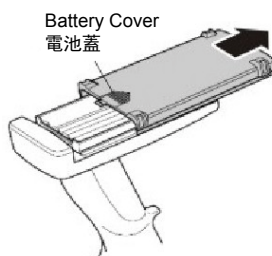


4X AA Alkaline Batteries
AA 碱性電池

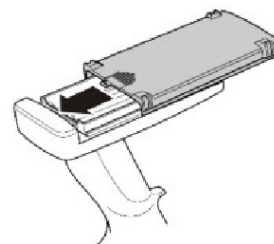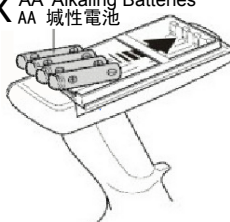

Transmitter Preparation

調整遙控器

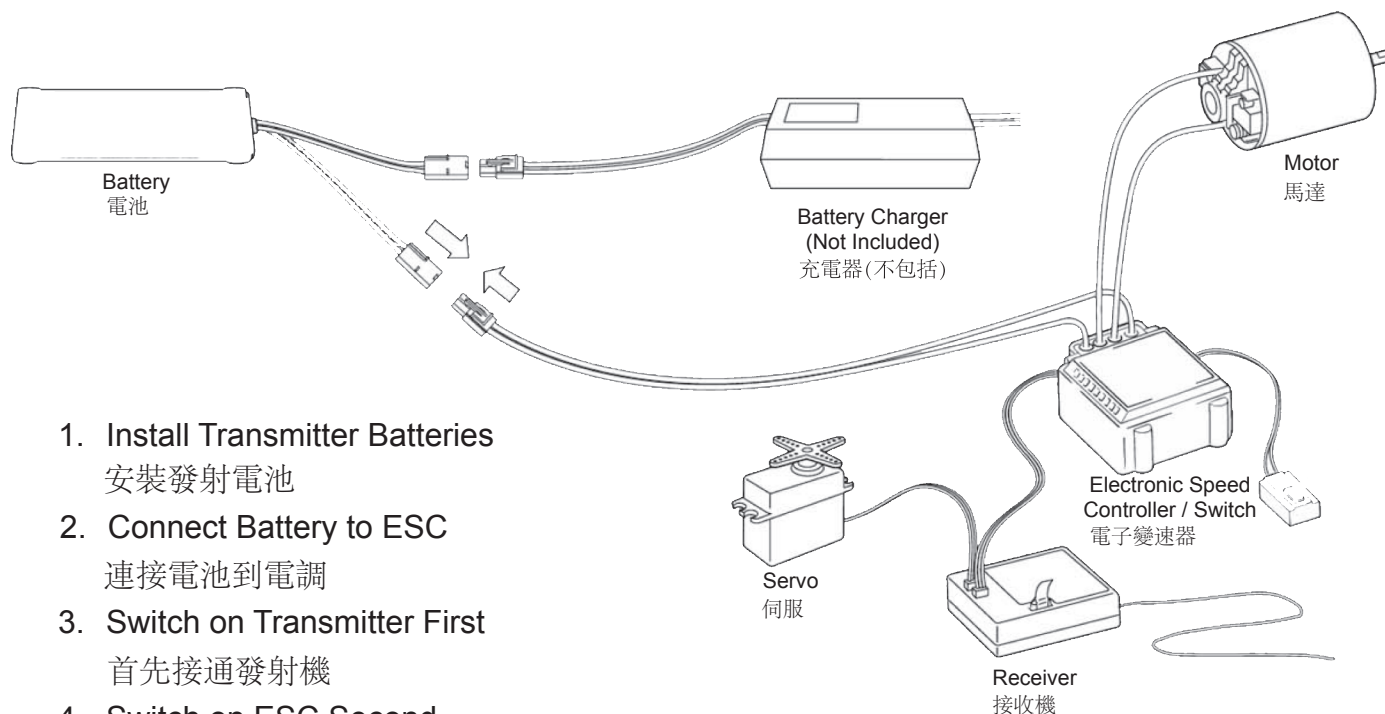

1. Install Transmitter Batteries
安裝發射電池
2. Connect Battery to ESC
連接電池到電調
3. Switch on Transmitter First
首先接通發射機
4. Switch on ESC Second
其次接通電調

Note: When done driving Turn Off the ESC and THEN Transmitter

注意: 當停止駕駛首先要關掉電調
其次再關掉發射機

Tools required

組裝需要的工具

- Needle Nose Pliers
尖嘴鉗



- Awl
錐



- Grease
潤滑油



- Screw Cement
螺絲膠水



- H162
Instant Glue
瞬間膠水




- Differential Grease
差速油




- Molybdenum Grease(Black)
鉬油(黑)




- H154
Body Reamer
車殼紋刀



- Wire Cutters
鋼絲鉗



- H096
ROUND CUTTER
剪刀

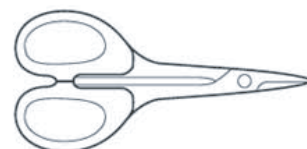

- Hex Wrench
六角扳手



- Hex Wrench
十字套筒



- Sharp Hobby knife
美工刀




No need to pre-drill precise holes
(1mm to 15mm) can be drilled

可以對預鑽的孔準確地鑽1mm-15mm

For trimming bodies!
用于修剪車殼!

1 Motor Mount/Side Panel 马达座/侧板

Bag-A


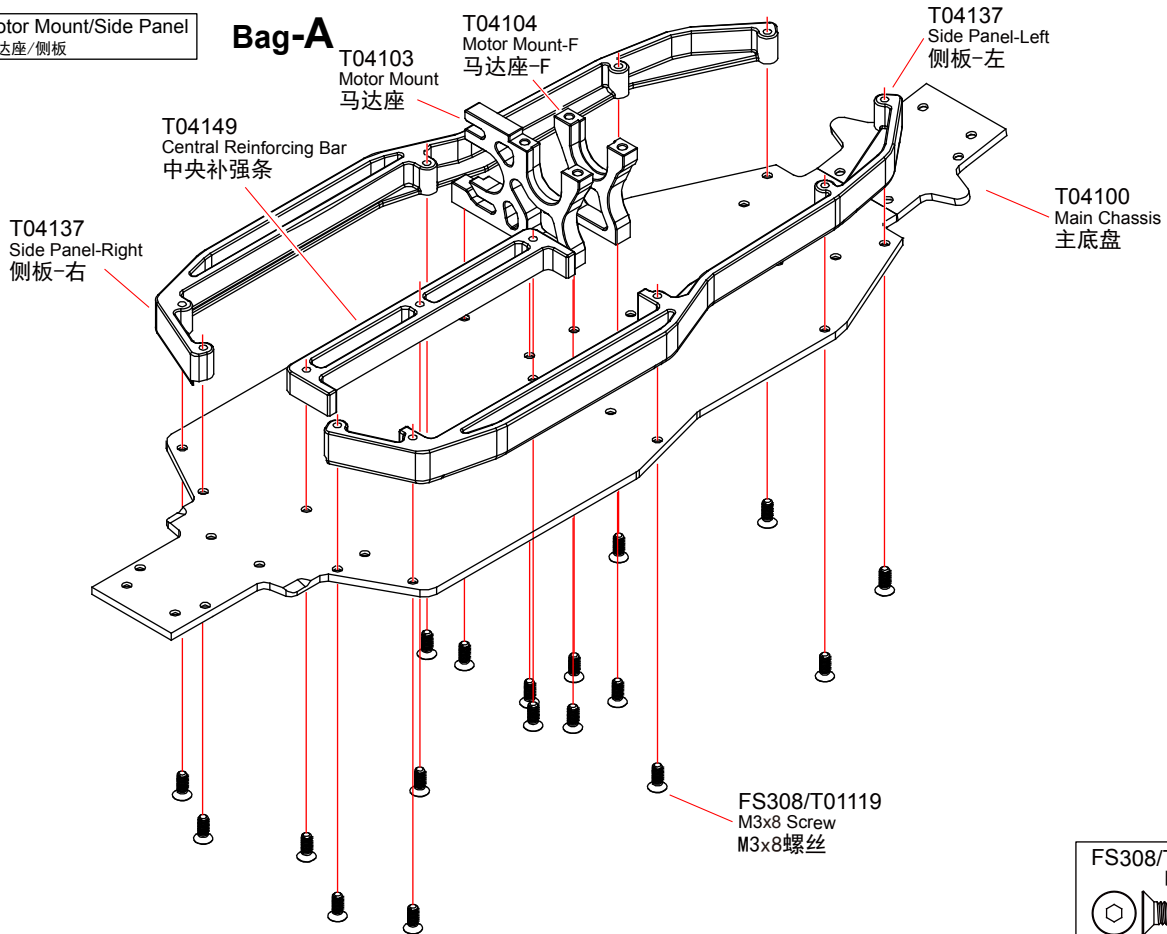


FS308/T01119 M3x8 Screw
M3x8螺丝
.....18

2 Diff 差速器


Bag-B x2

TS4040 3.0 E-ing 3.0 E扣	4
T04039 5.1x13x0.2 Washer 5.1x13x0.2垫片	4
T04040 4.8x1.6 O-Ring 4.8x1.6 O环	4
B101504/T02099 10x15x4 Ball Bearing 10x15x4轴承	4
T04041 10x12x0.2 Washer 10x12x0.2垫片	6

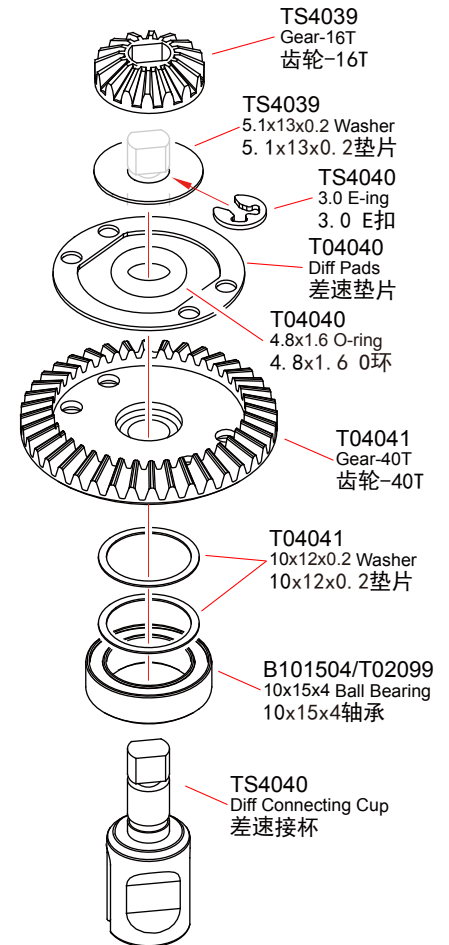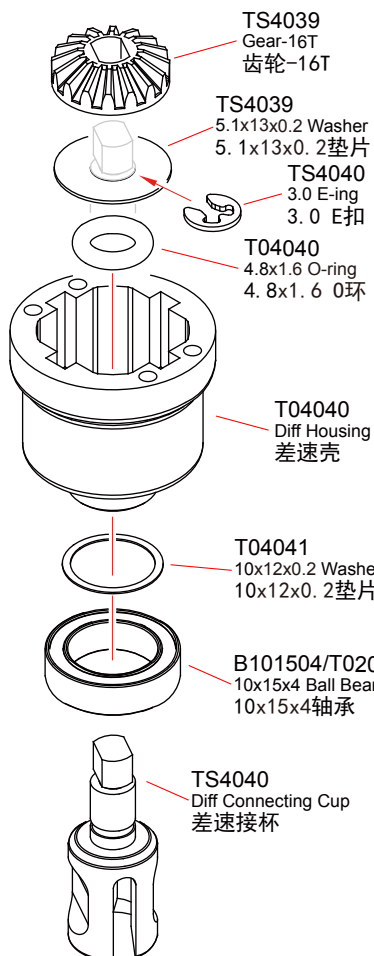


x2 Assemble as many times as specified
需組裝數量

3 Diff 差速器 Bag-B x2


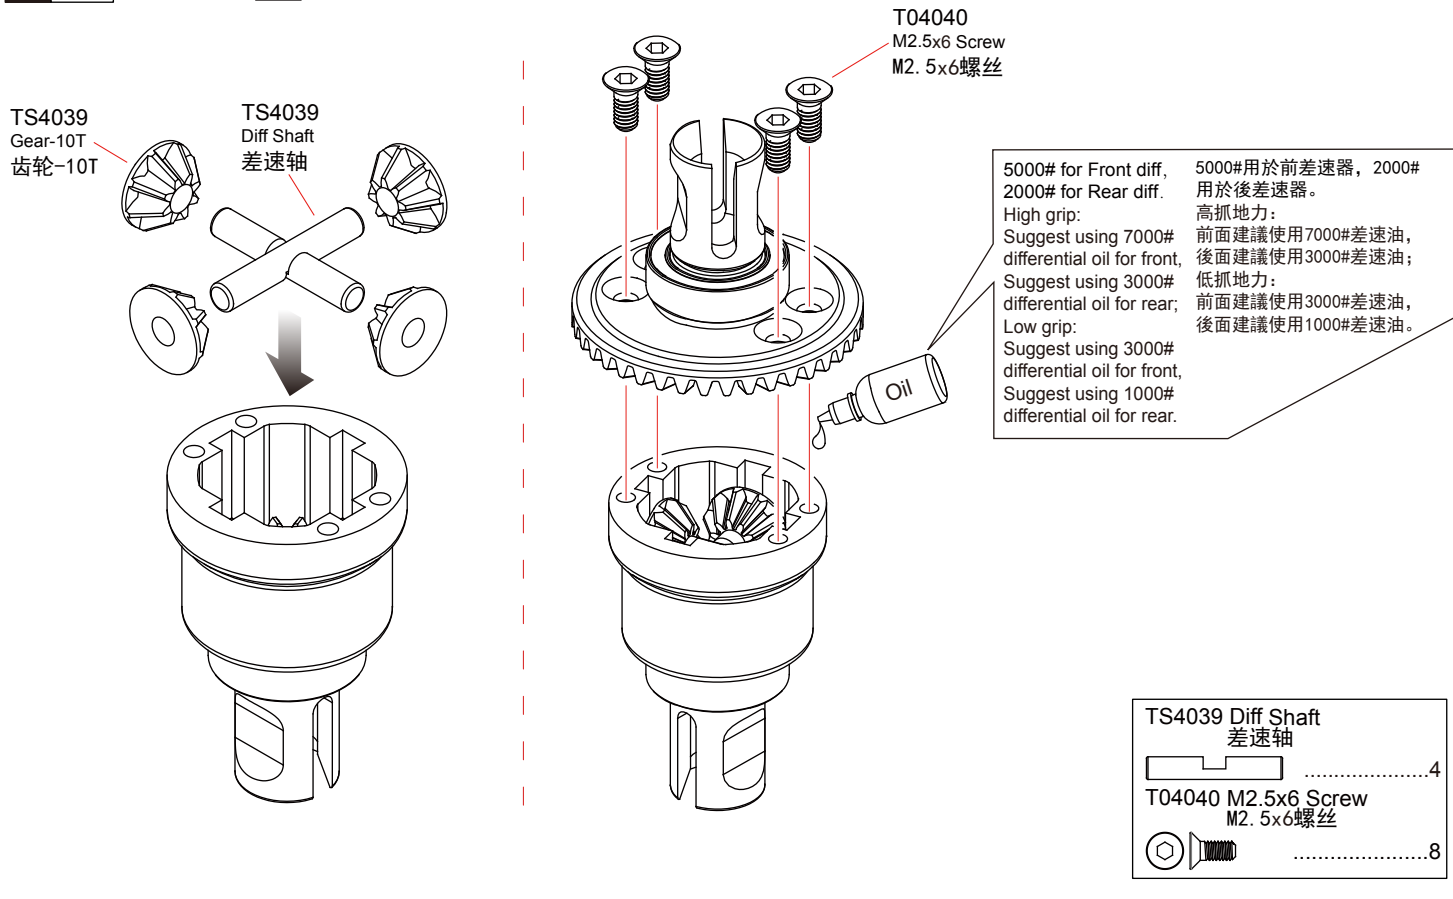


4 Front Gear-box 前齿轮箱 Bag-B

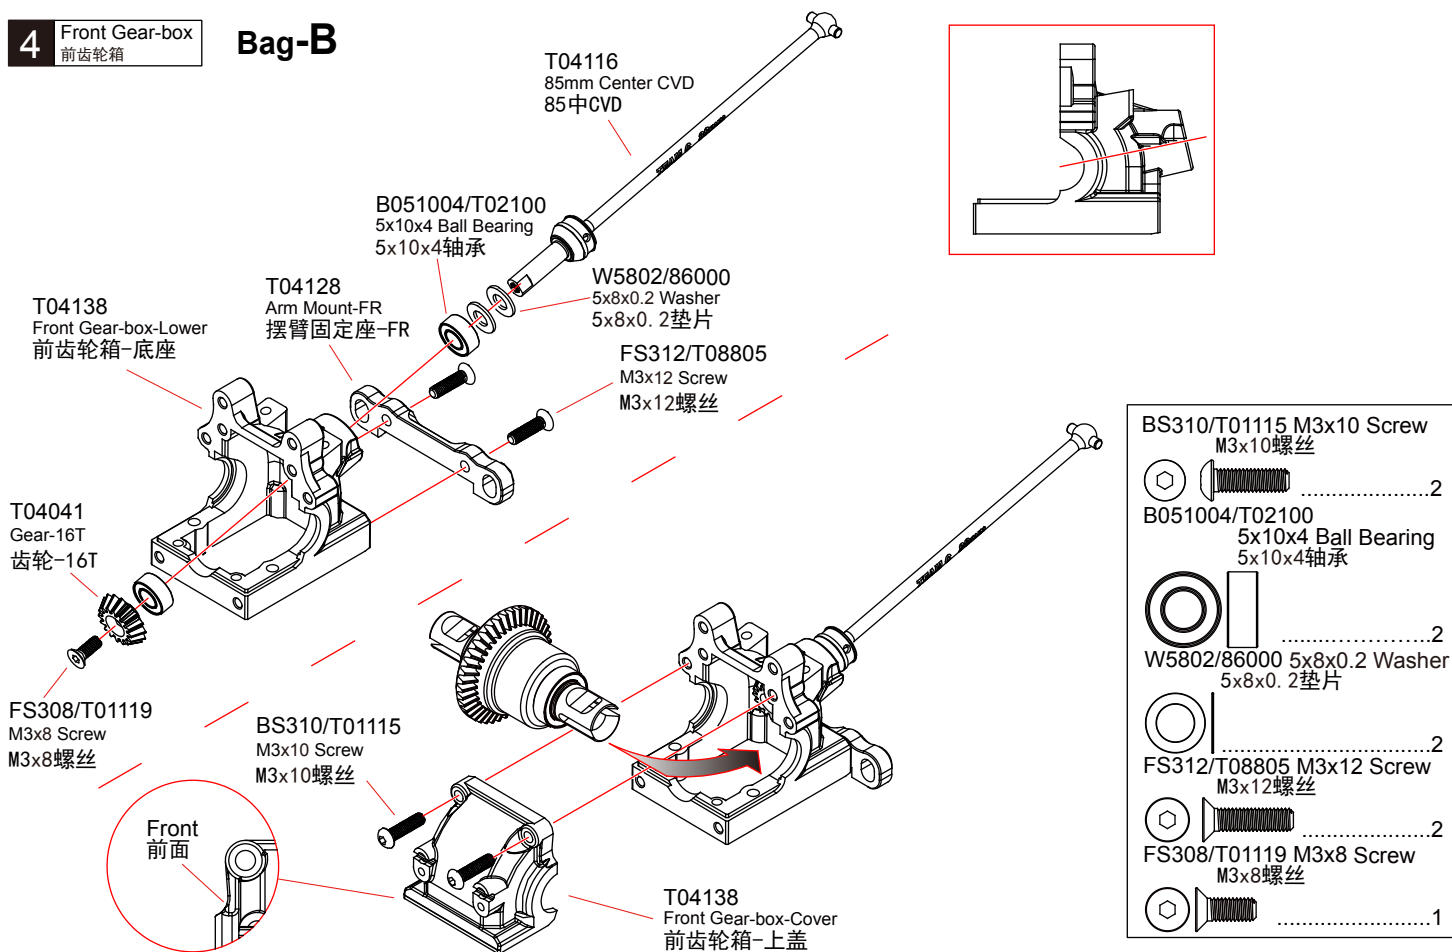

5 Front Gear-box 前齿轮箱

Bag-B

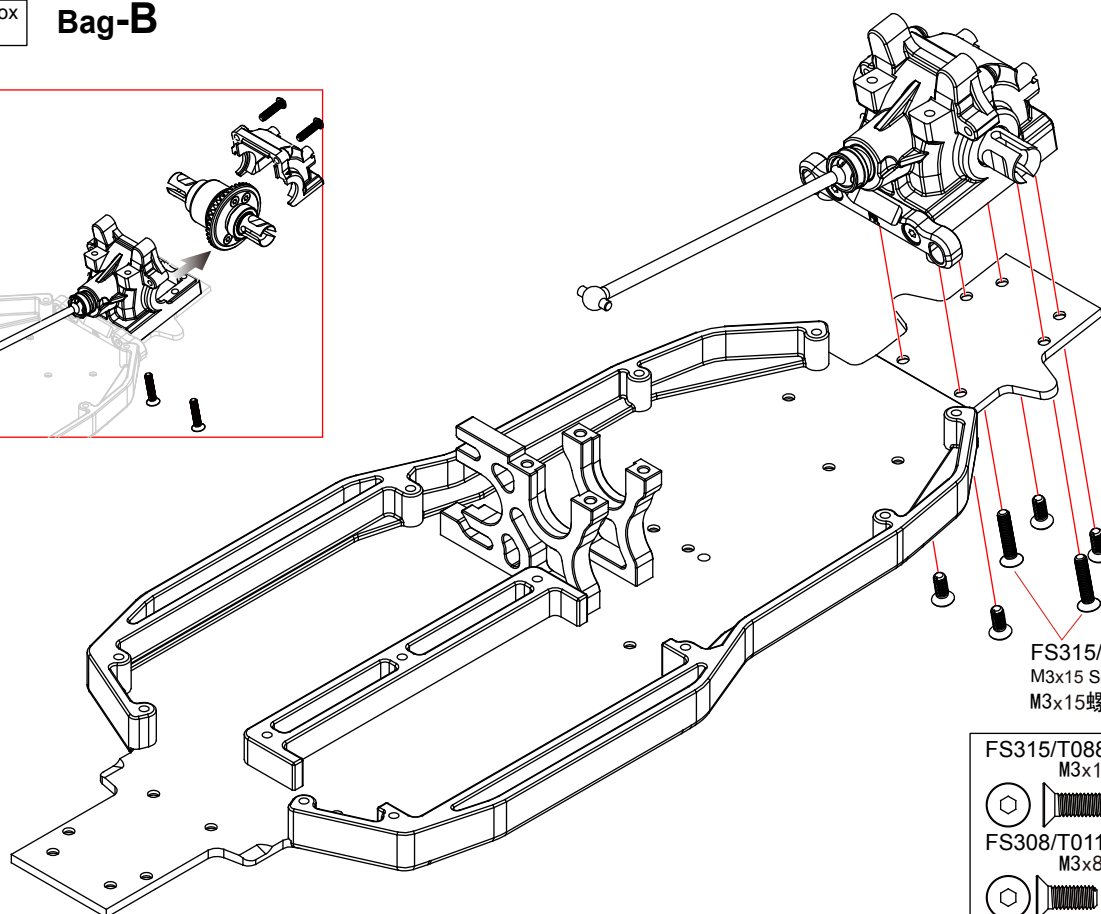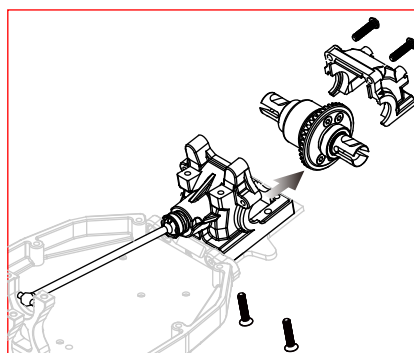



FS308/T01119
M3x8 Screw
M3x8螺丝

FS315/T08807
M3x15 Screw
M3x15螺丝

FS315/T08807 M3x15 Screw M3x15螺丝	2
FS308/T01119 M3x8 Screw M3x8螺丝	4

6 Rear Gear-box 后齿轮箱

Bag-B

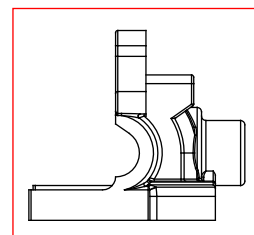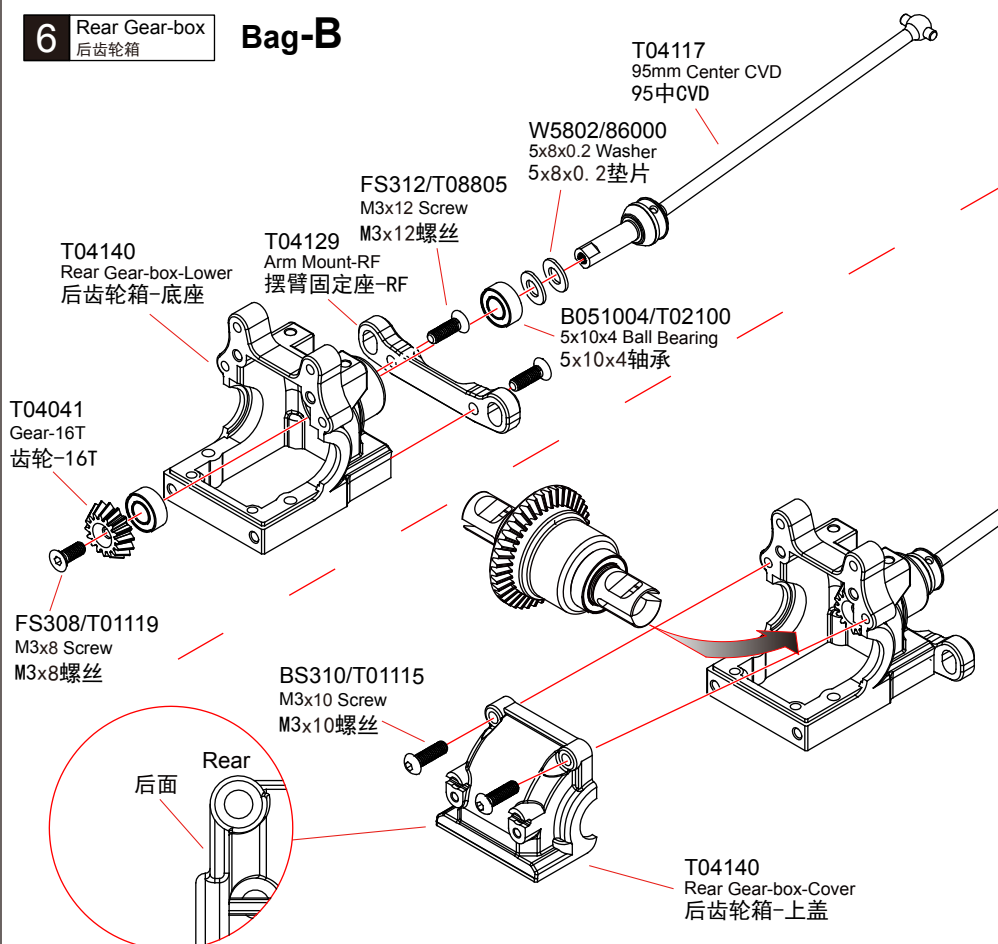

T04117
95mm Center CVD
95中CVD

W5802/86000
5x8x0.2 Washer
5x8x0.2垫片

FS312/T08805
M3x12 Screw
M3x12螺丝

T04129
Arm Mount-RF
摆臂固定座-RF

T04140
Rear Gear-box-Lower
后齿轮箱-底座

B051004/T02100
5x10x4 Ball Bearing
5x10x4轴承

T04041
Gear-16T
齿轮-16T

FS308/T01119
M3x8 Screw
M3x8螺丝


BS310/T01115
M3x10 Screw
M3x10螺丝

T04140
Rear Gear-box-Cover
后齿轮箱-上盖

BS310/T01115 M3x10 Screw M3x10螺丝	2
B051004/T02100 5x10x4 Ball Bearing 5x10x4轴承	2
W5802/86000 5x8x0.2 Washer 5x8x0.2垫片	2
FS312/T08805 M3x12 Screw M3x12螺丝	2
FS308/T01119 M3x8 Screw M3x8螺丝	1



7 Rear Gear-box 后齿轮箱

Bag-B

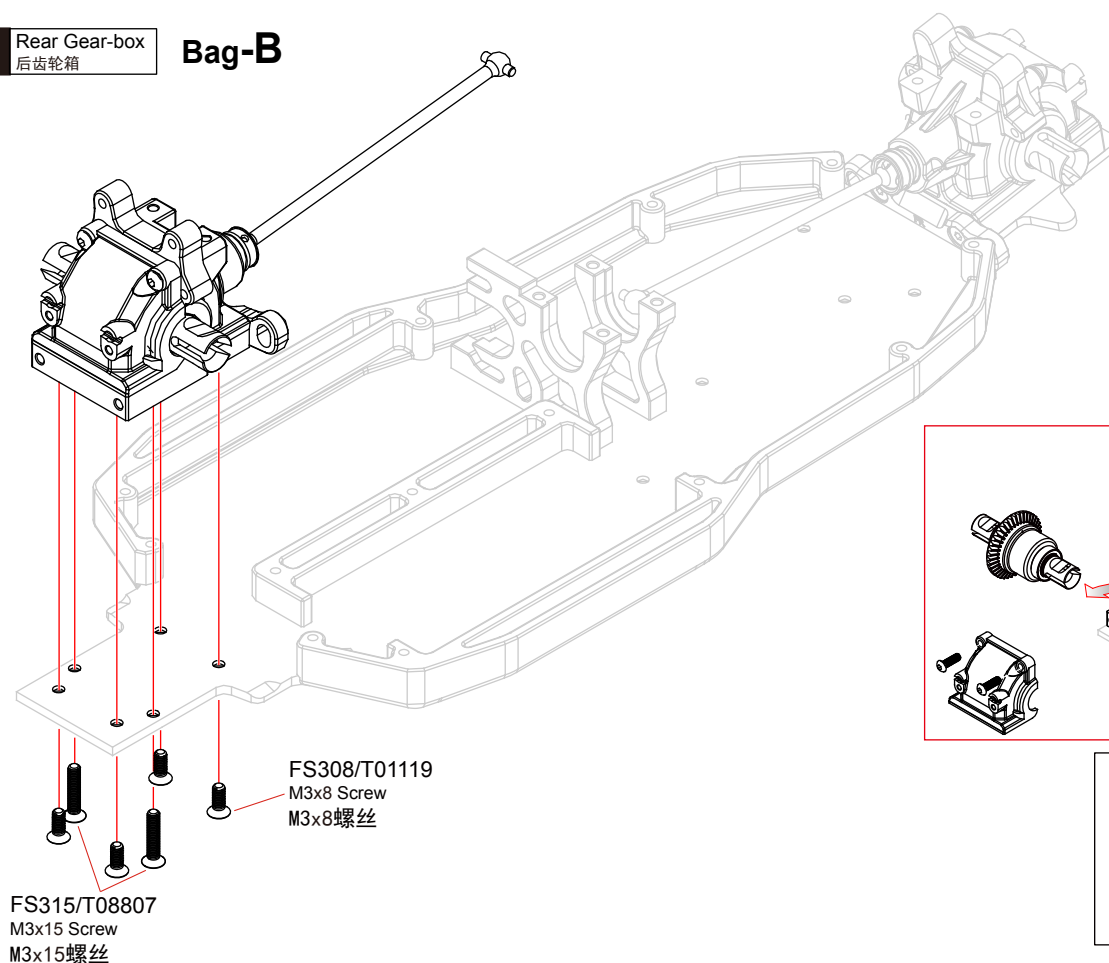


8 Slipper Set 扭限组

Bag-C

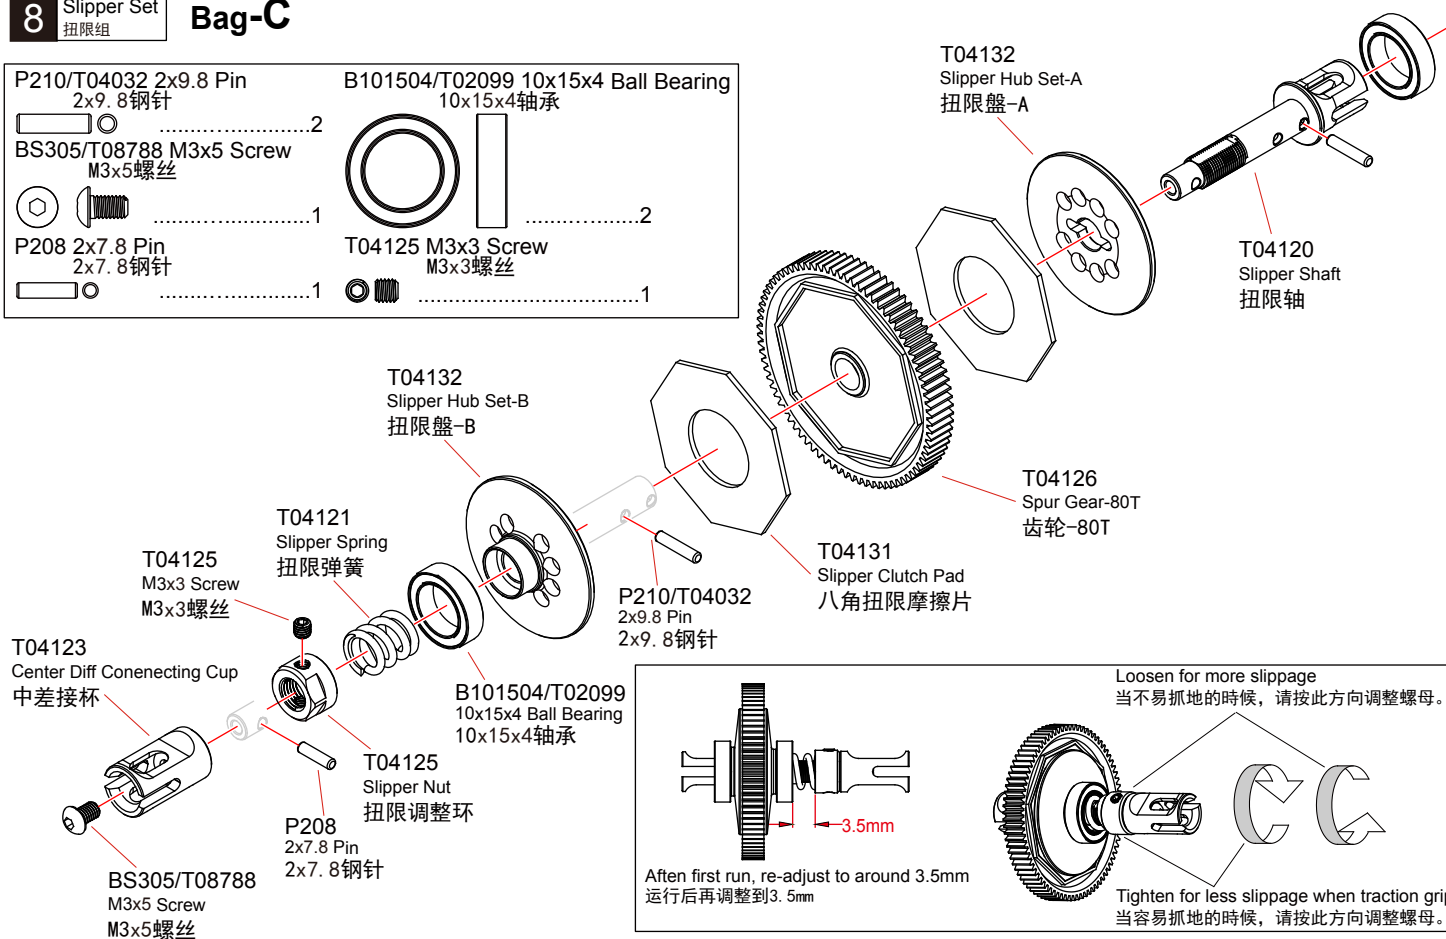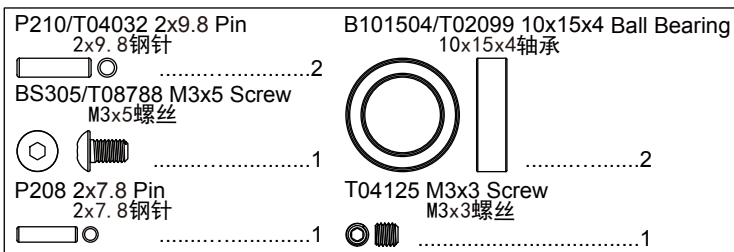

9 Center Gear 中齿轮


Bag-C

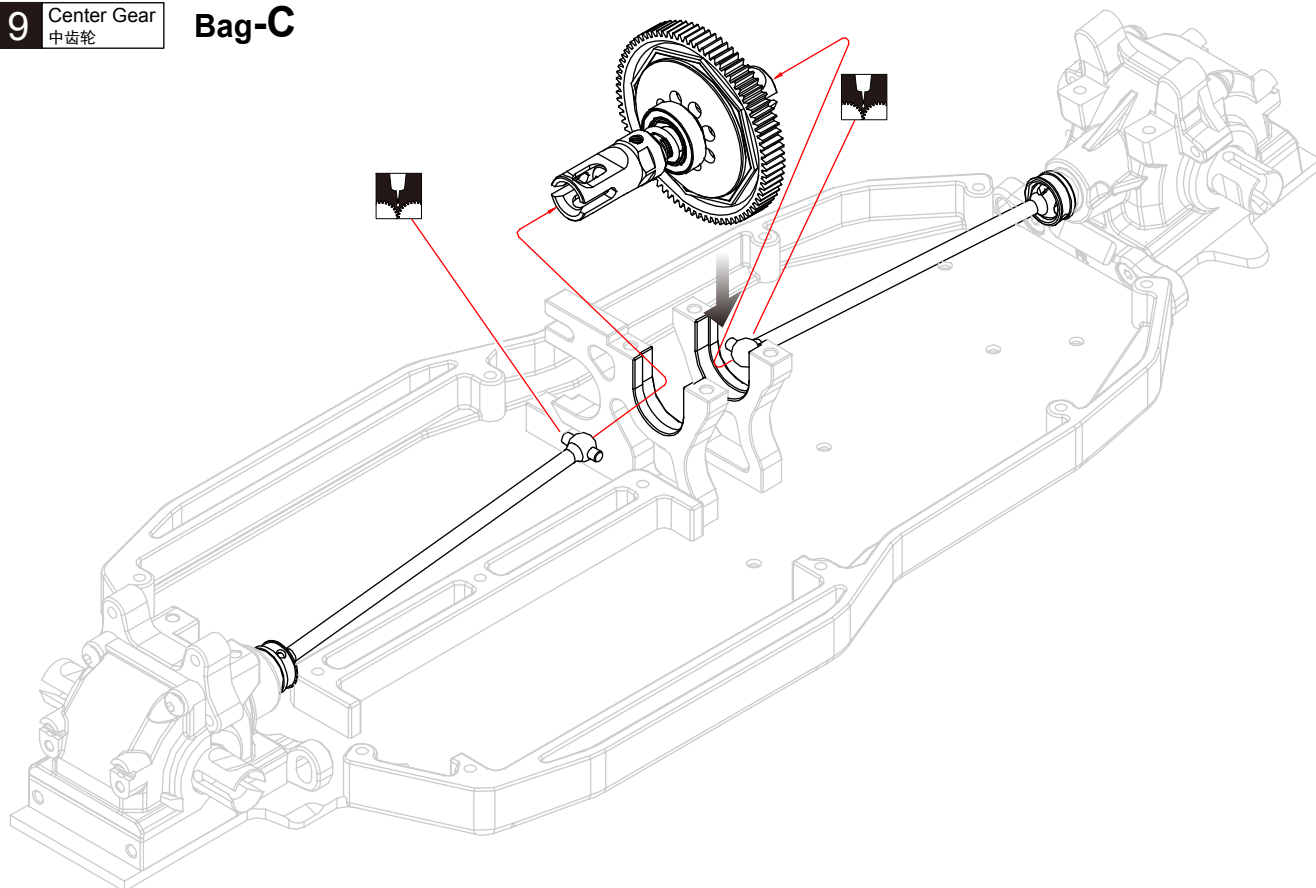


10 Steering Servo 转向伺服系统

Bag-C

Select the servo horn matching the servo being used.
根据舵机选择伺服臂。



Futaba - 25t





Hitec - 24t



Sanwa / JR / KO - 23t

BS308/T01114
M3x8 Screw
M3x8螺丝

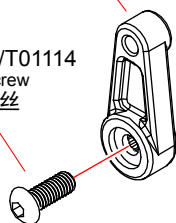

W3708/T02081
3x7x0.8 Washer
3x7x0.8 垫片

Servo
伺服机 X



T04005
Servo Mount
伺服机座

W3708/T02081 3x7x0.8 Washer
3x7x0.8 垫片



BS308/T01114 M3x8 Screw
M3x8螺丝

.....4
.....5

X Must be purchased separately
需另购物品

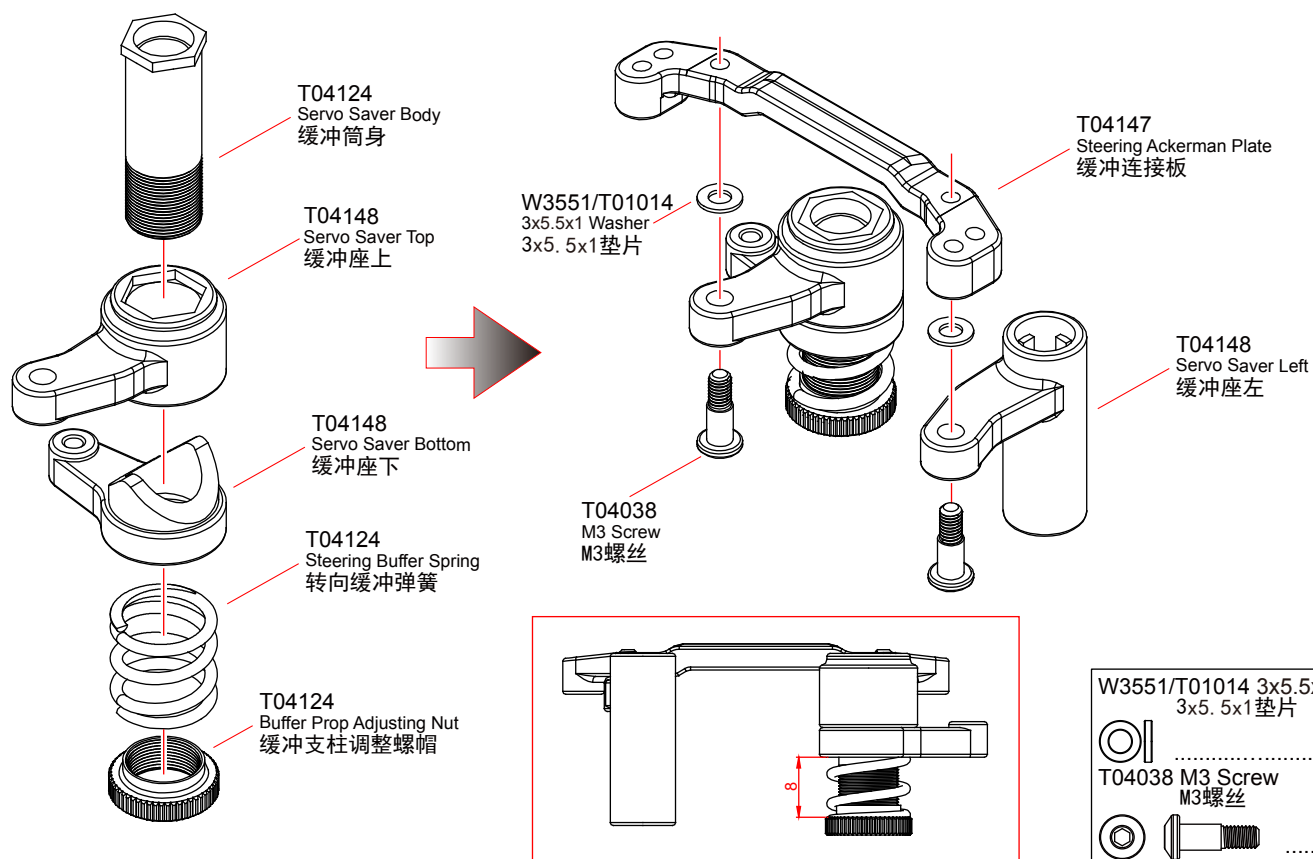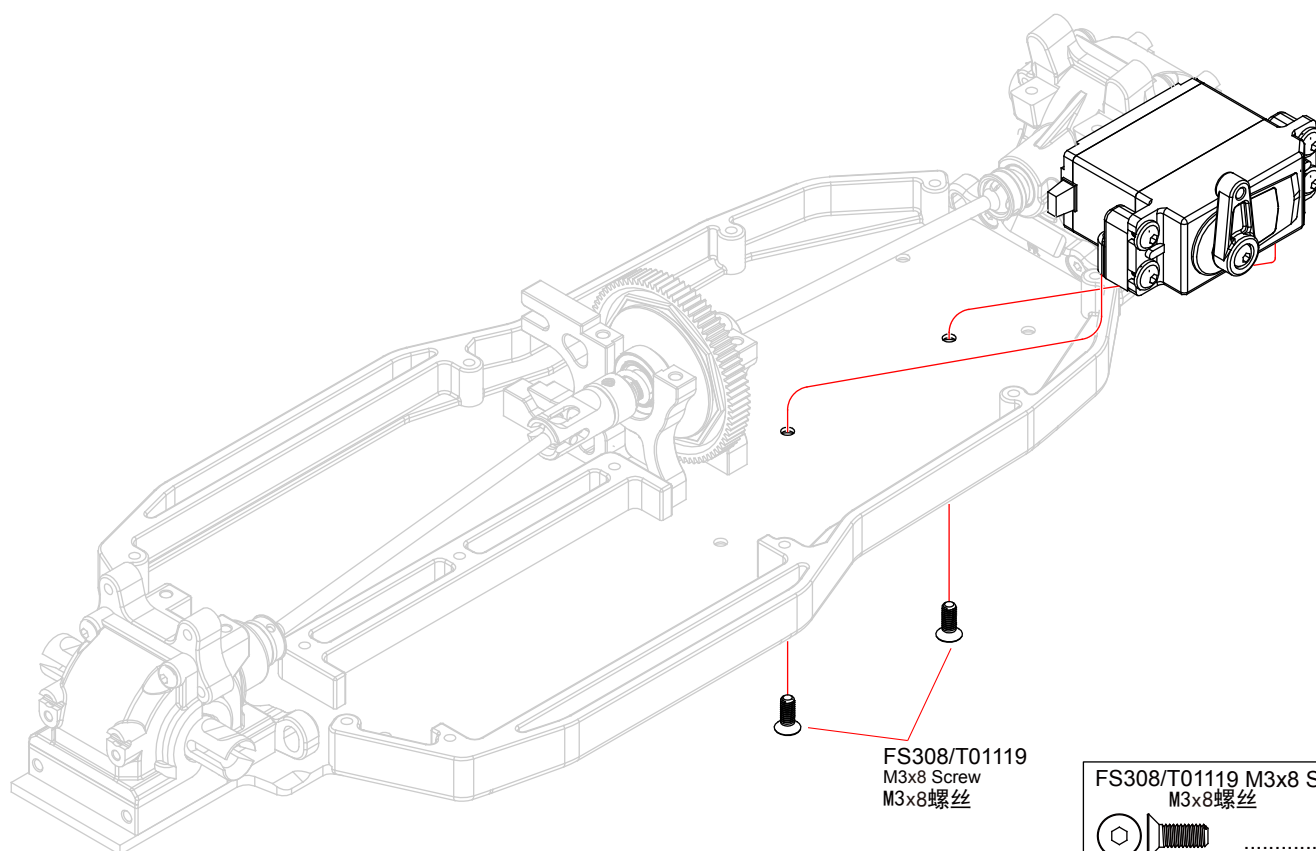



Bag-C

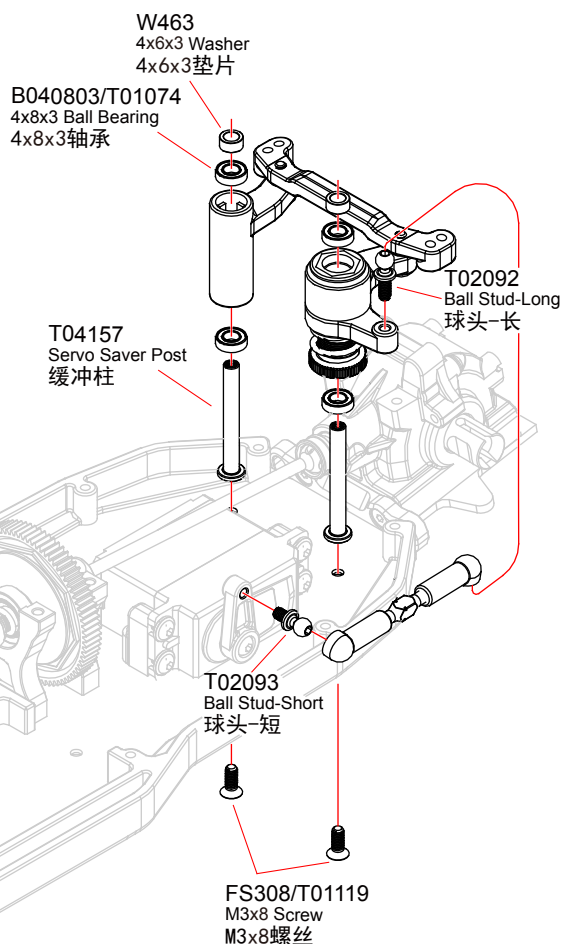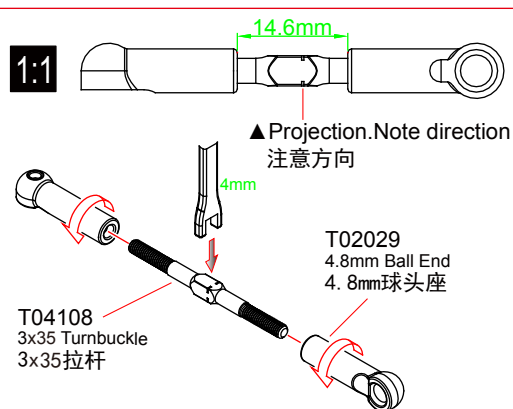

B040803/T01074	
	4x8x3 Ball Bearing
	4x8x3 轴承
.....2	
W463 4x6x3 Washer	
	4x6x3 垫片
	T02093 Ball Stud-Short
球头一短	
.....1	
T02092 Ball Stud-Long	
	T02092 Ball Stud-Long
球头一长	
.....1	
FS308/T01119 M3x8 Screw	
	M3x8 螺丝
	FS308/T01119 M3x8 Screw
.....2	
T02029 4.8mm Ball End	
	T02029 4.8mm Ball End
4.8mm 球头座	
.....2	
T04108 3x35 Turnbuckle	
	3x35 拉杆
	T04108 3x35 Turnbuckle
.....1	

14 Top Deck/Car Shell Column
二楼板/车壳柱

Bag-C

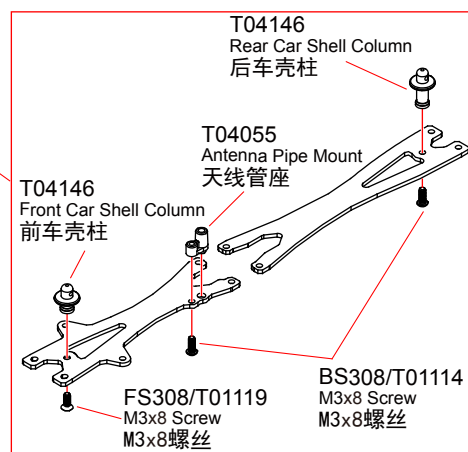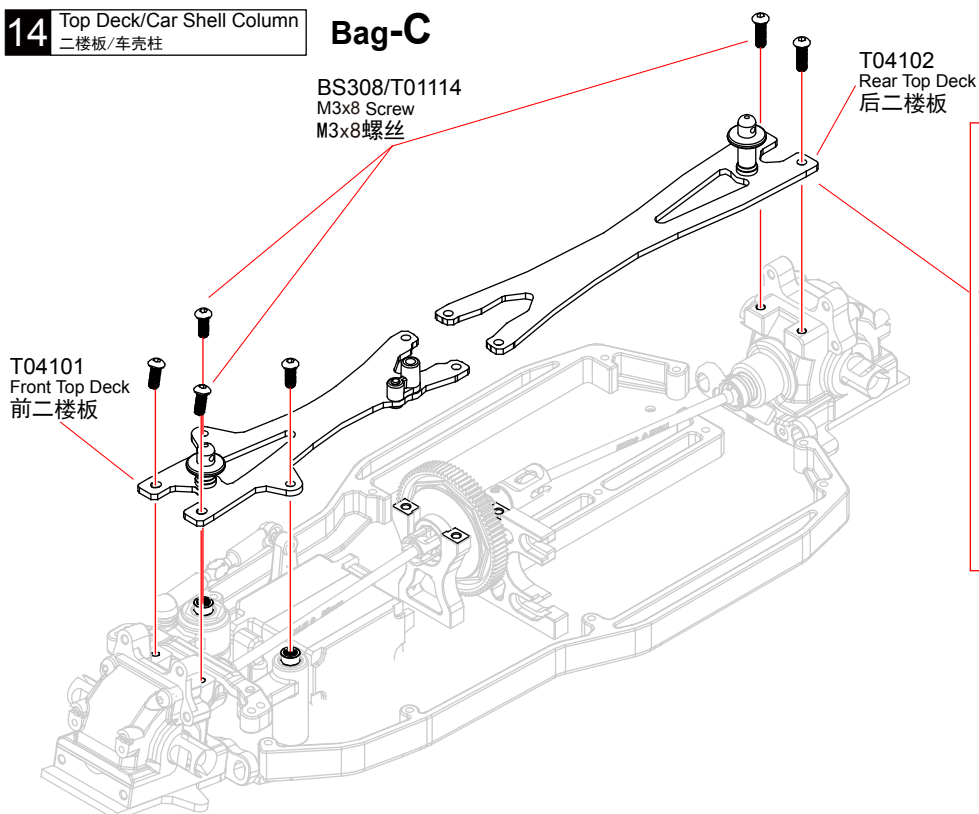

FS308/T01119 M3x8 Screw
M3x8螺丝




BS308/T01114 M3x8 Screw
M3x8螺丝



15 Front Shock Tower 前避震架


Bag-C

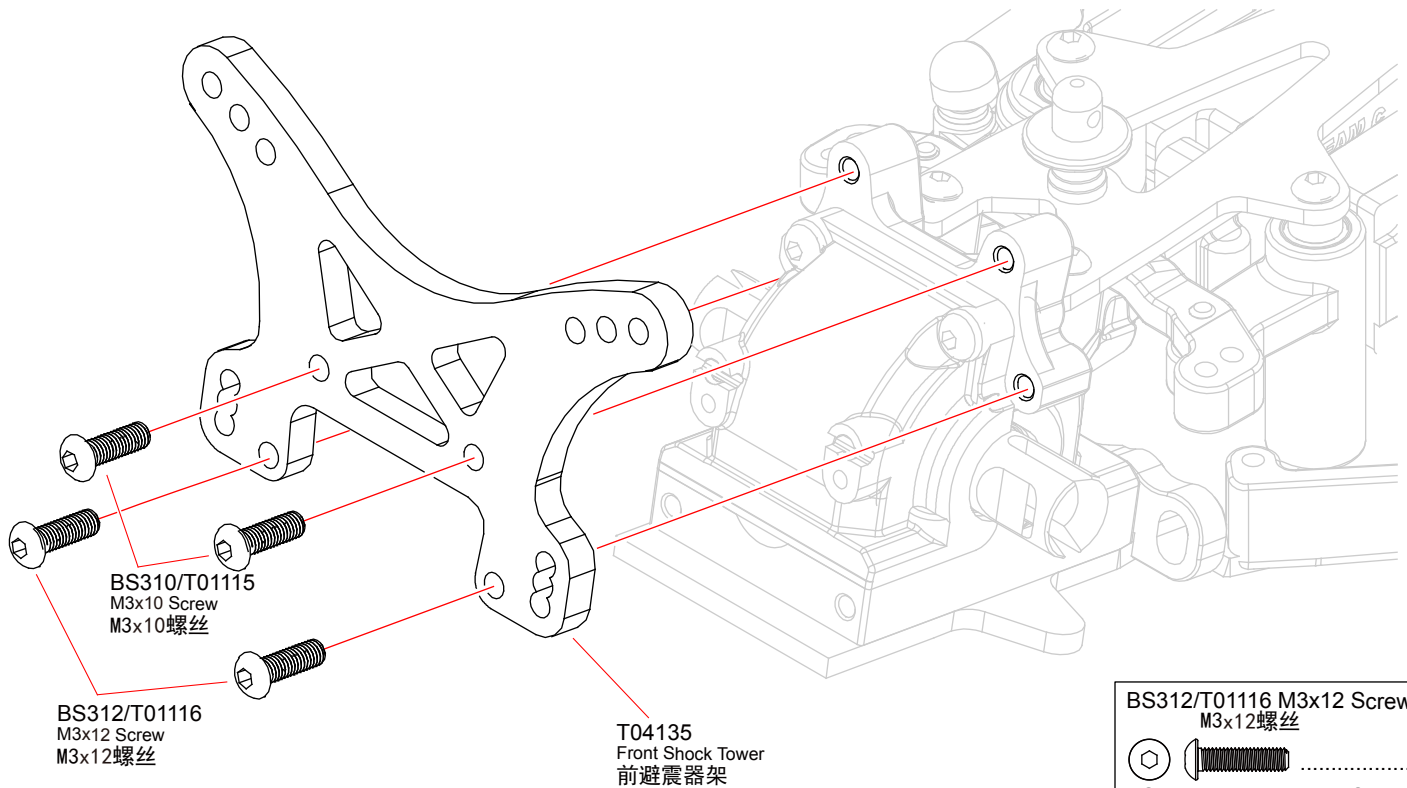

BS312/T01116 M3x12 Screw M3x12螺丝	
	2
BS310/T01115 M3x10 Screw M3x10螺丝	
	2

16 Rear Shock Tower 后避震架


Bag-C

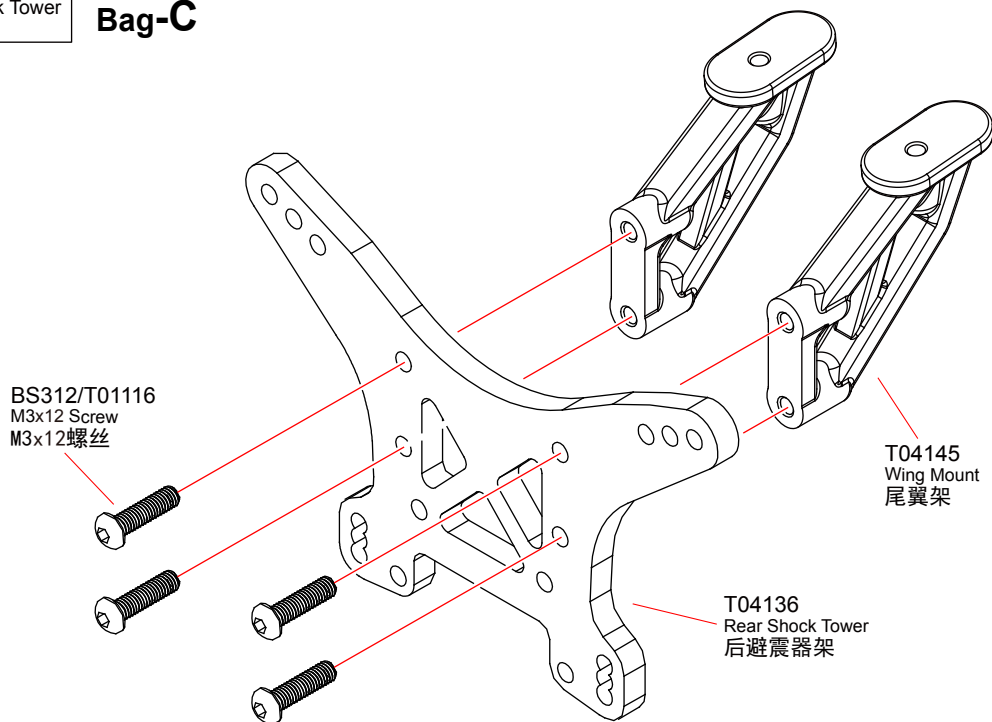

BS312/T01116 M3x12 Screw M3x12螺丝	
	4

17 Rear Shock Tower 后避震架

Bag-C

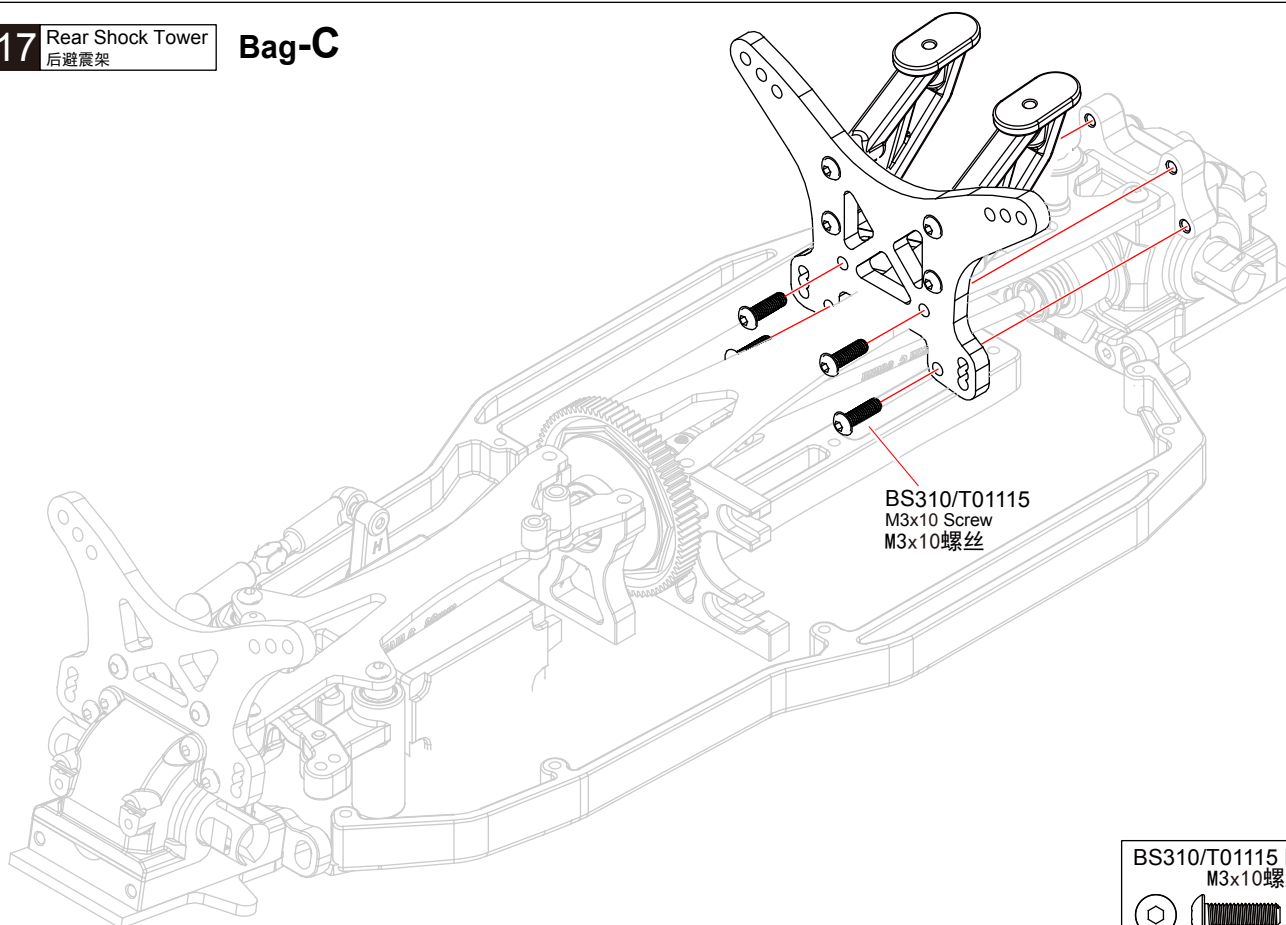


BS310/T01115 M3x10 Screw
M3x10螺丝

4


18 Difference On The Roof 中差上顶板

Bag-C

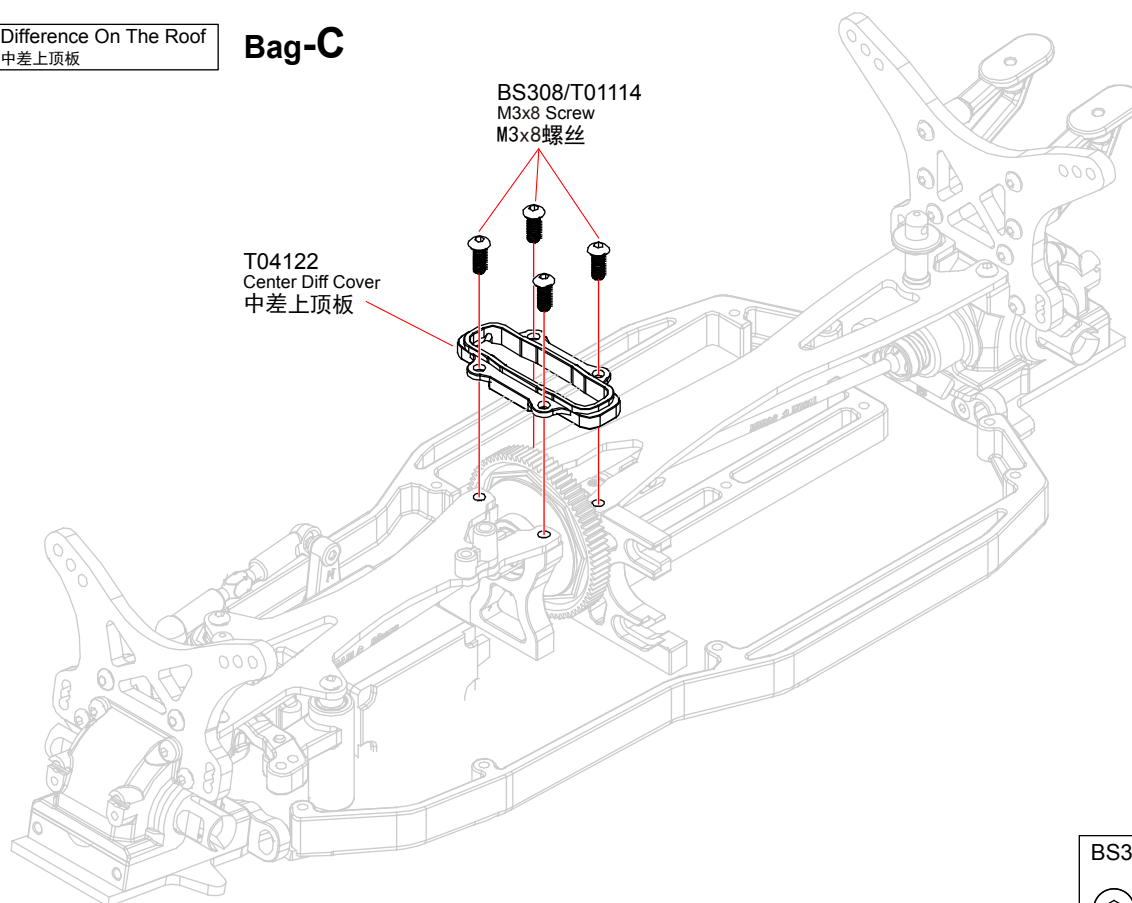

BS308/T01114 M3x8 Screw
M3x8螺丝

4

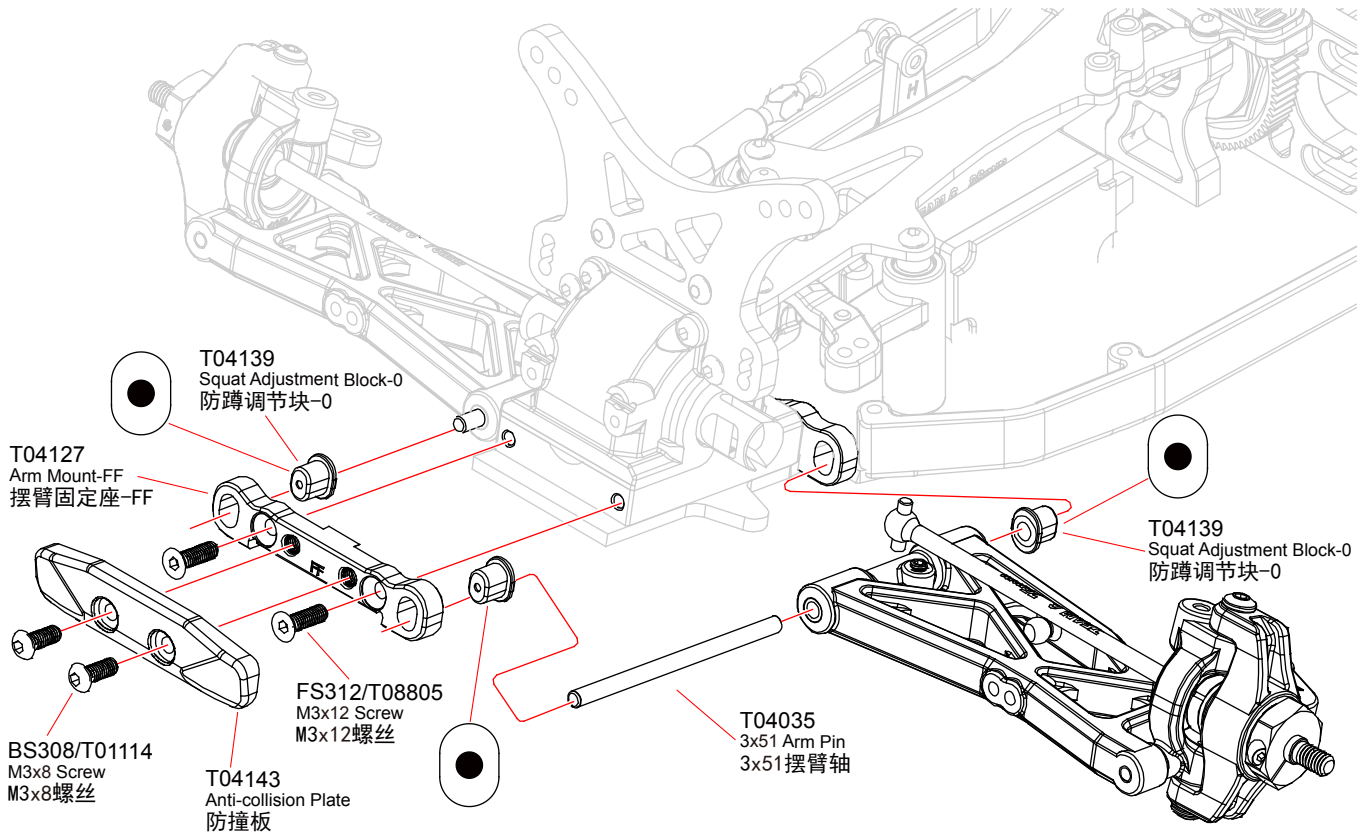

kick-up

FF	FR	(°)
		=10°
		=9°
		=11°
		=11°
		=10°
		=12°
		=9°
		=8°
		=10°

ROLL-CENTER


FF	FF	(mm)
		=+0.9mm
		=0mm
		=-0.9mm

T04035 3x51 Arm PIN
3x51摆臂轴


FS312/T08805 M3x12 Screw
M3x12螺丝

BS308/T01114 M3x8 Screw
M3x8螺丝




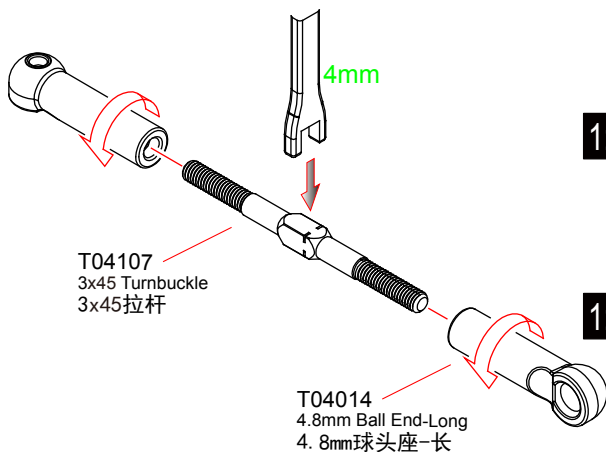


1:1 x1 Front Upper Rod-L
前上拉杆-L

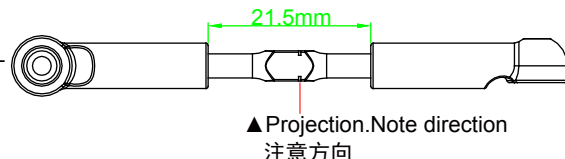


1:1 x1 Front Upper Rod-R
前上拉杆-R

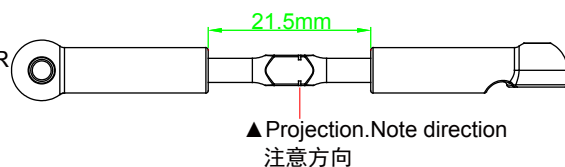

1:1 x2 Rear Upper Rod
后上拉杆

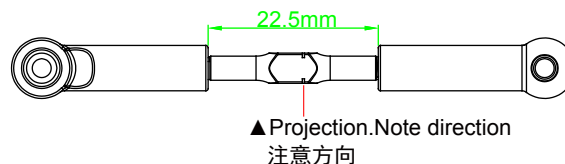

1:1 x2 Draglink
转向拉杆

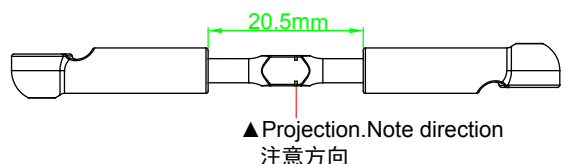


T04107 3x45 Turnbuckle
3x45拉杆

.....6

T04014 4.8mm Ball End-Long
4.8mm球头座-长

.....12

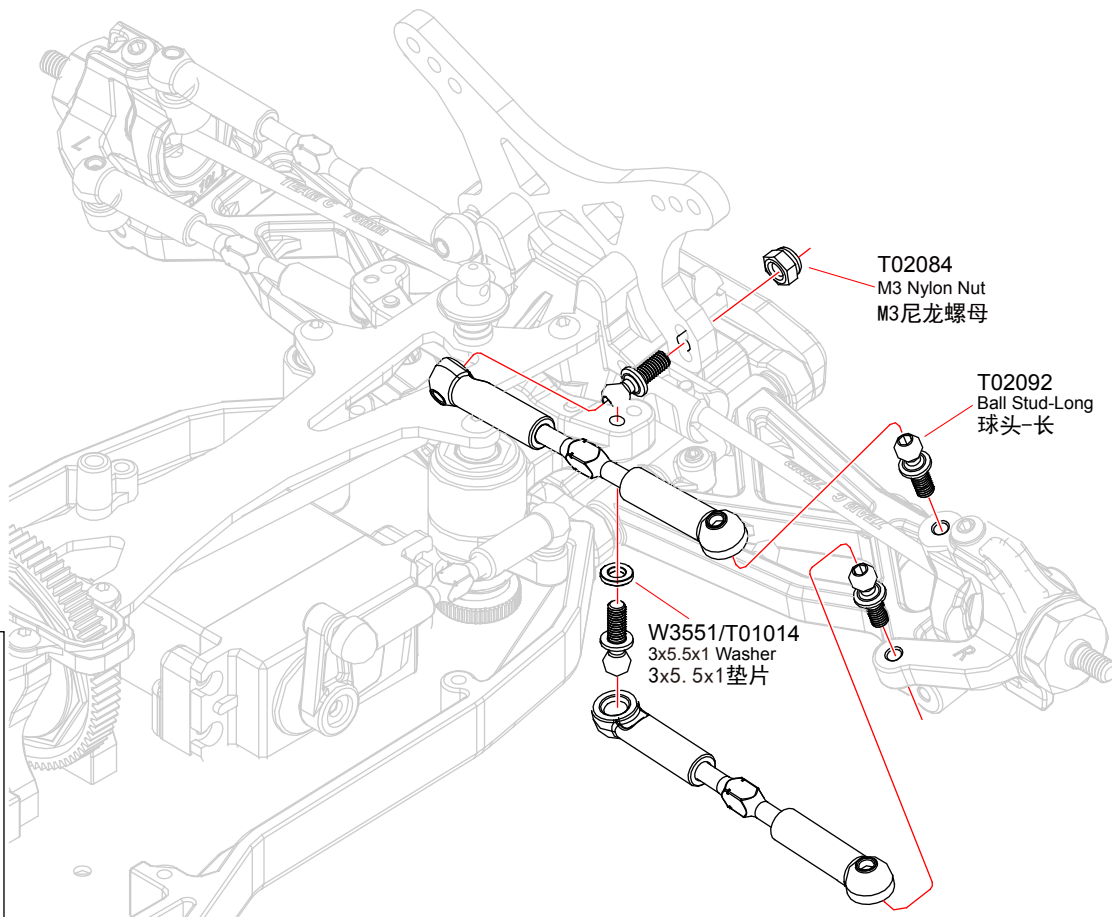

W3551/T01014 3x5.5x1 Washer
3x5.5x1垫片

.....2

T02084 M3 Nylon Nut
M3尼龙螺母


.....2

T02092 Ball Stud-Long
球头-长

.....8

24 Rear Hub Carriers 后轮座

Bag-D x2

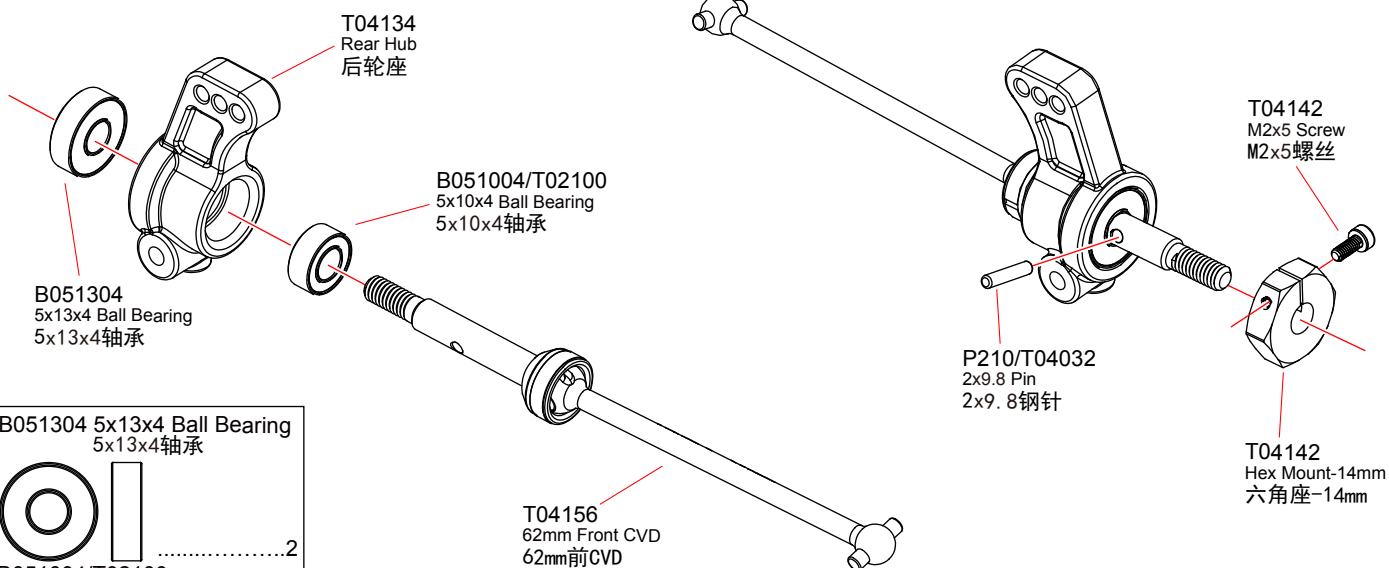

B051304 5x13x4 Ball Bearing
5x13x4轴承



.....2

B051004/T02100
5x10x4 Ball Bearing
5x10x4轴承



.....2

T04142 M2x5 Screw
M2x5螺丝




.....2

P210/T04032 2x9.8 Pin
2x9.8钢针




.....2

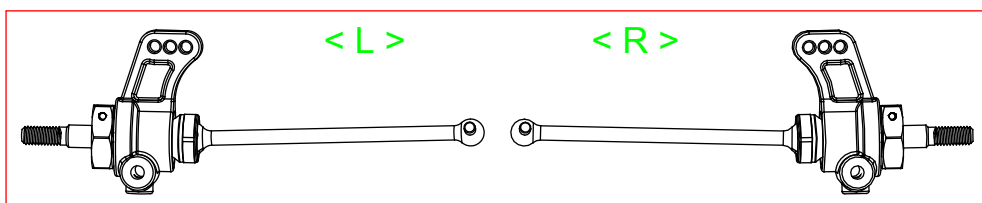

25 Rear Lower Arm 后下摆臂

Bag-D

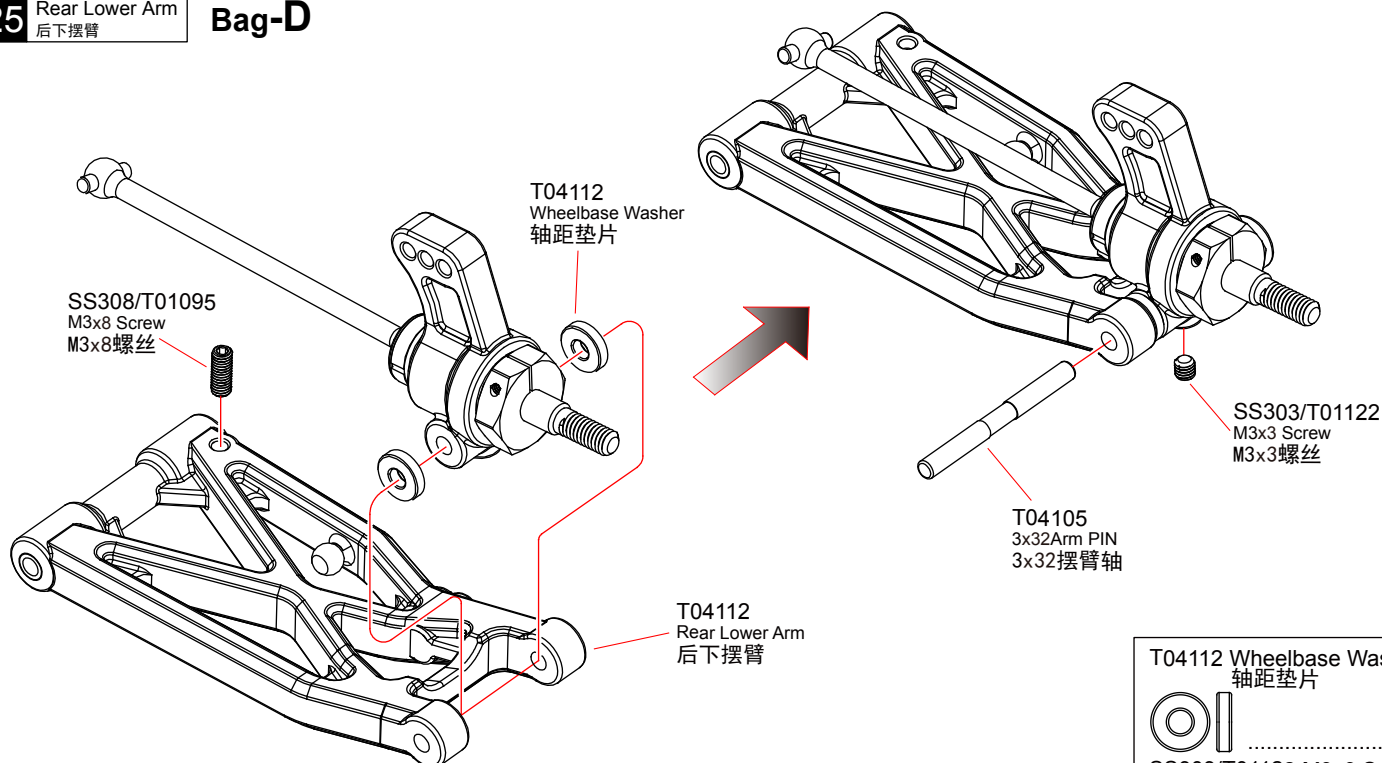

T04112 Wheelbase Washer
轴距垫片



.....4

SS303/T01122 M3x3 Screw
M3x3螺丝



.....2

SS308/T01095 M3x8 Screw
M3x8螺丝





.....2



Assemble both Left and Right
組裝左和右



Assemble as many times as specified
需組裝數量

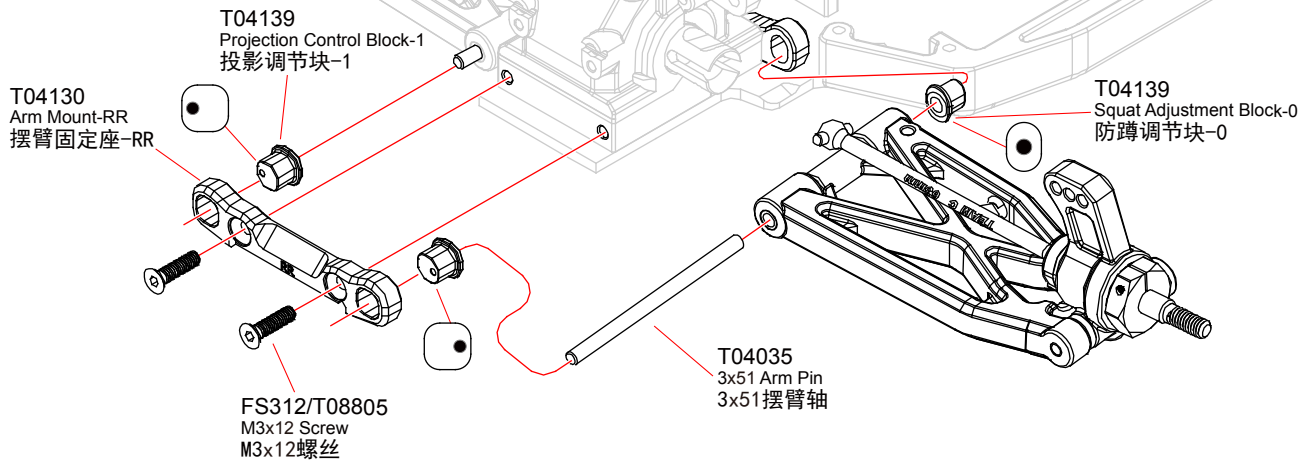

ANTI-SQUAT

RF	RR	(°)
		=2°
		=1°
		=3°
		=3°
		=2°
		=4°
		=1°
		=0°
		=2°

ROLL-CENTER


FF	FF	(mm)
		=+0.9mm
		=0mm
		=-0.9mm

TOE-IN

RF	RR	(°)
		=2.5°
		=3.5°
		=1.5°

27 Rear Turnbuckle 后拉杆


Bag-D

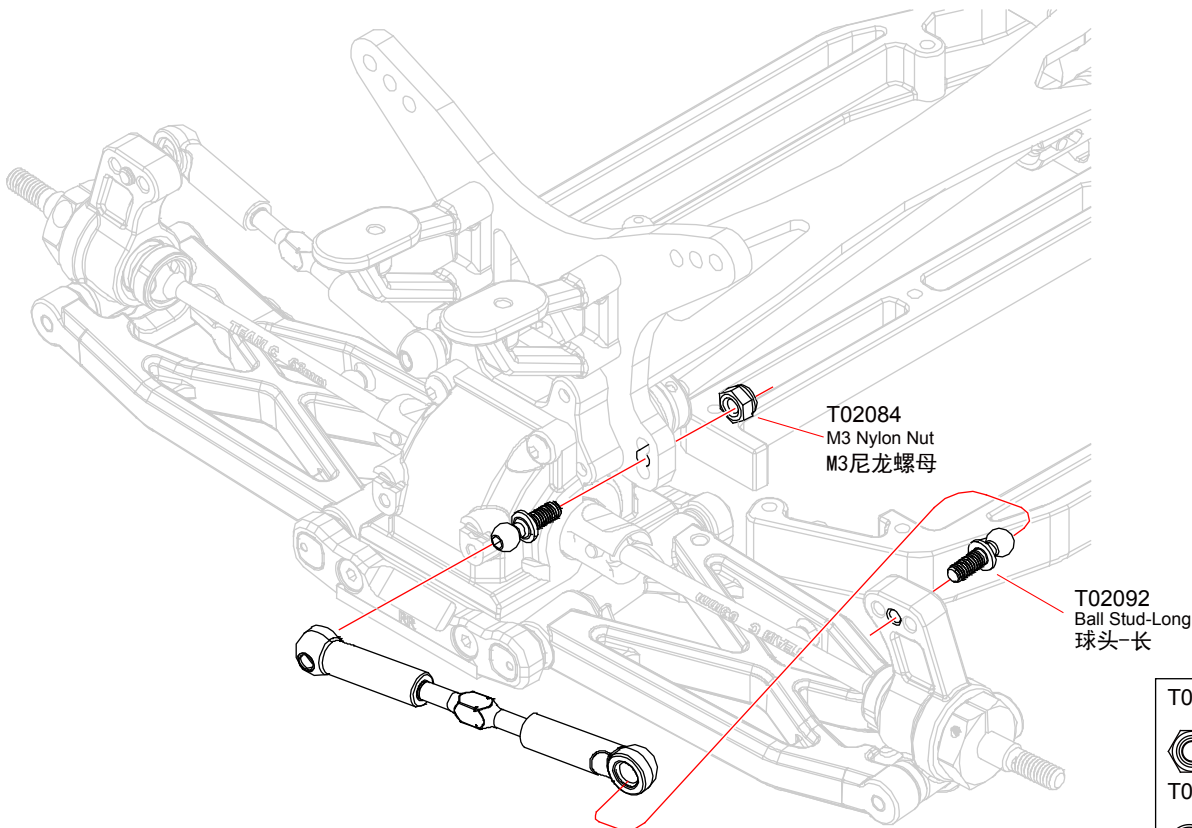


T02084 M3 Nylon Nut M3尼龙螺母	2
T02092 Ball Stud-Long 球头-长	4


28 Front Swaybar 前防倾杆

Bag-D

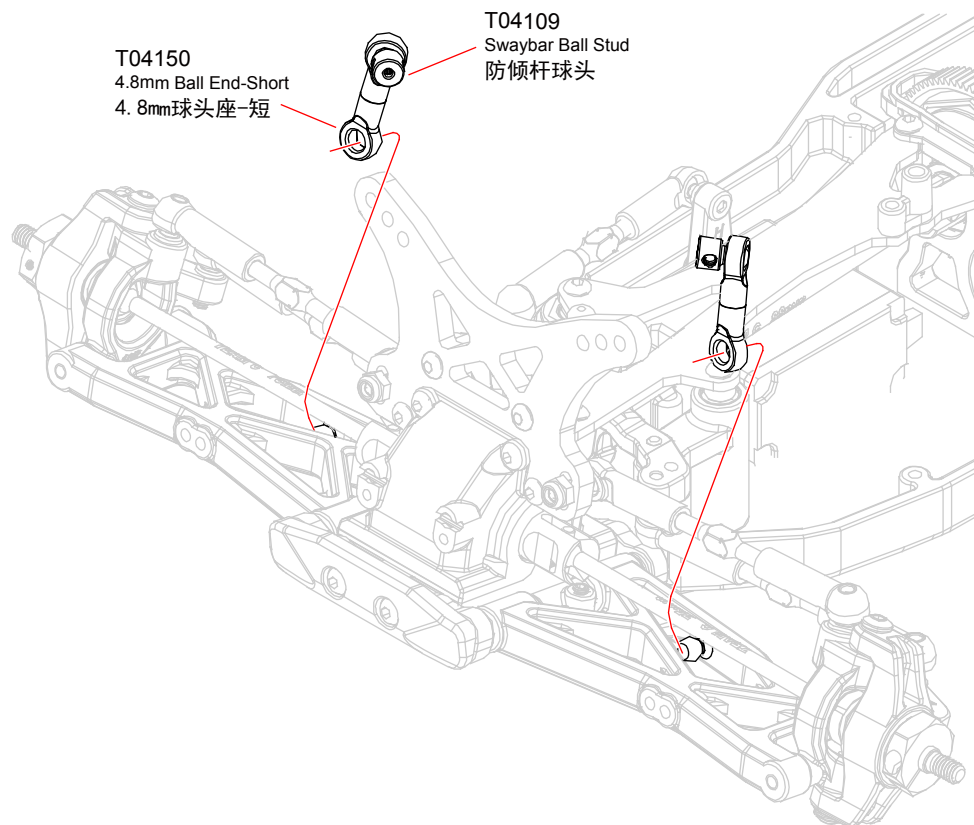

x2		
T04150 M3x10 Screw M3x10螺丝		

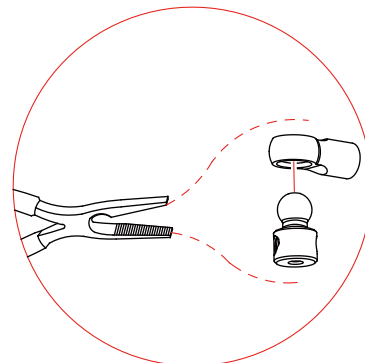

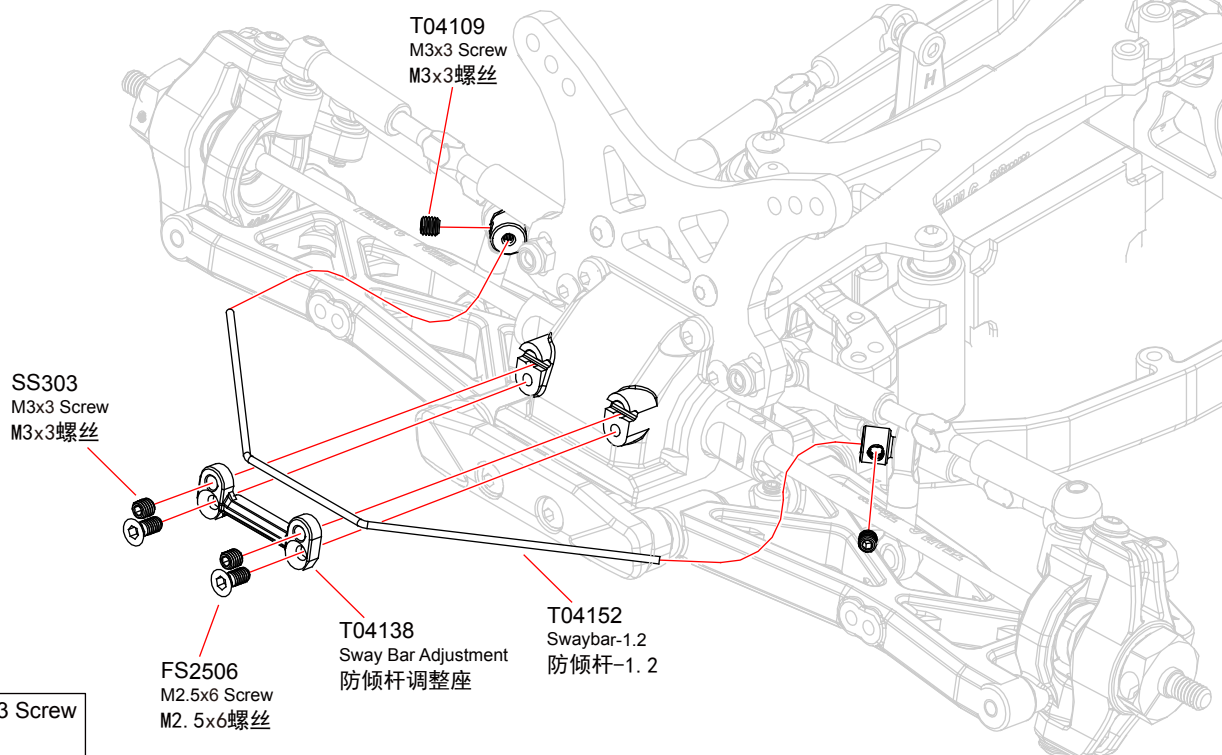


SS303/T04109 M3x3 Screw
M3x3螺丝

.....4


FS2506 M2.5x6 Screw
M2.5x6螺丝

.....2

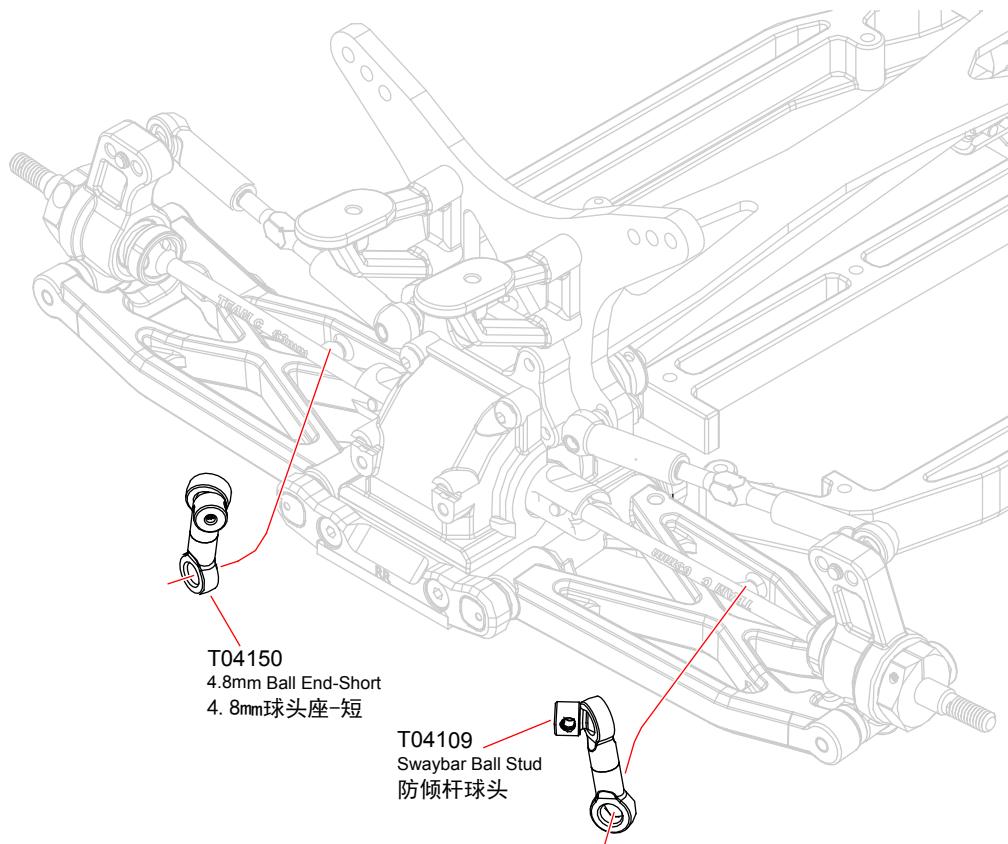


x2

T04150
M3x10 Screw
M3x10螺丝

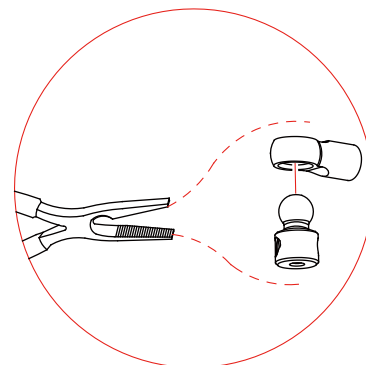

31 Rear Swaybar 后防倾杆

Bag-D

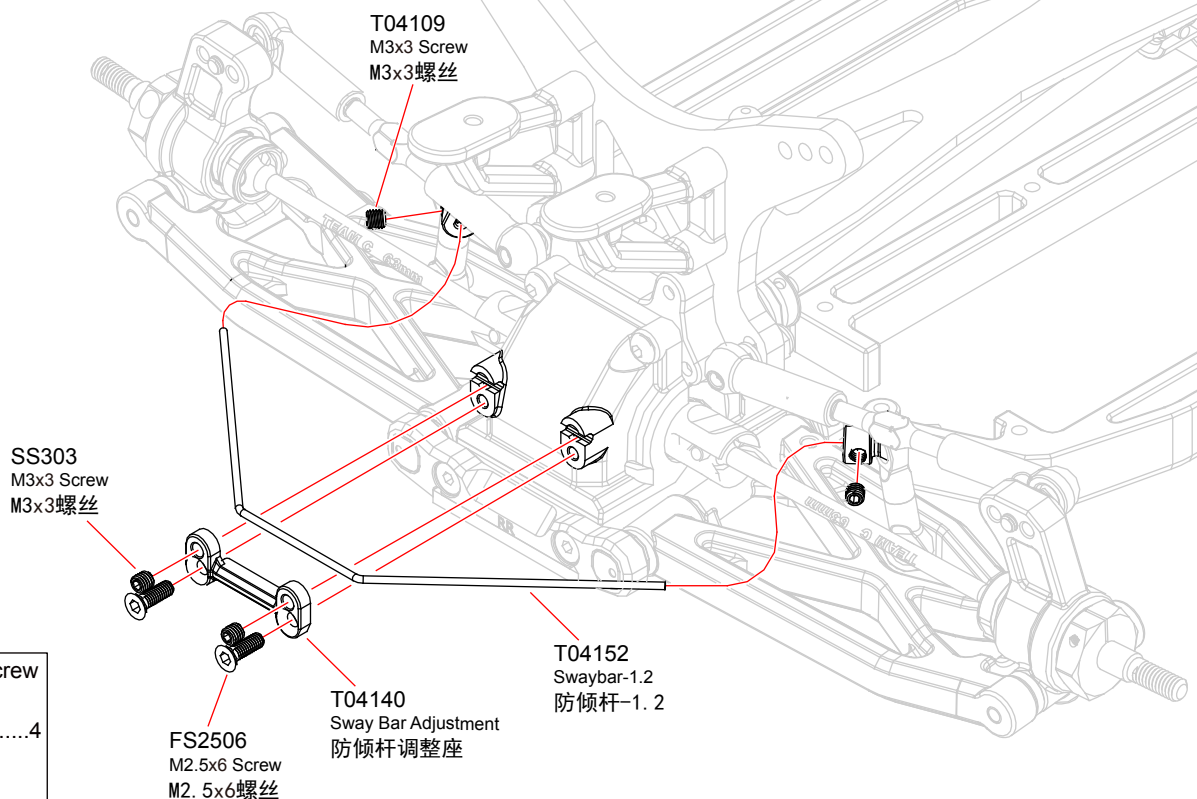

SS303/T04109 M3x3 Screw
M3x3螺丝


FS2506 M2.5x6 Screw
M2.5x6螺丝

.....4


.....2

32 Shock Absorber 避震器

Bag-E

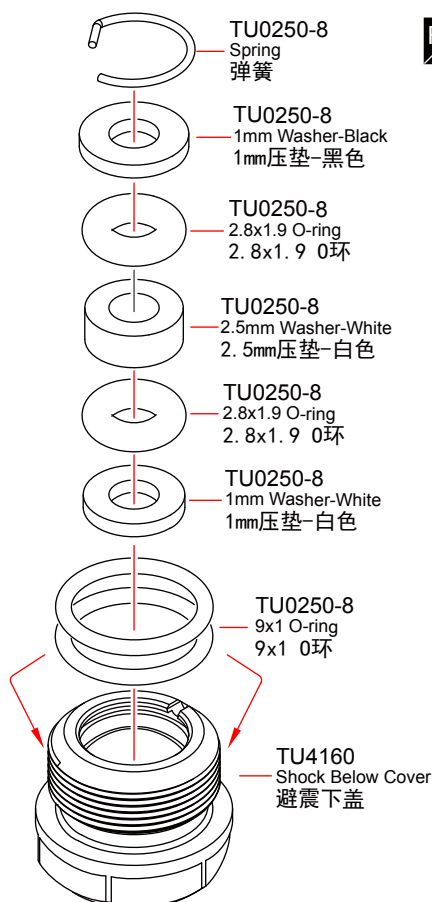

F/R x2

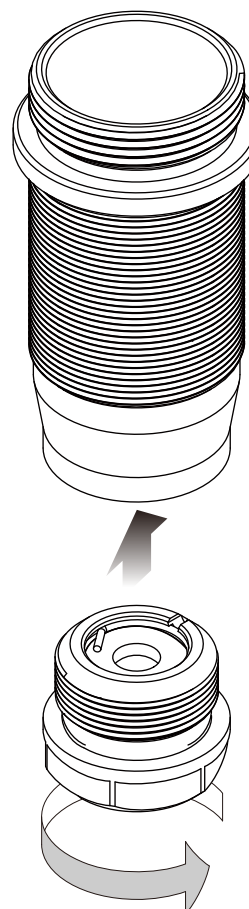

TU0250-8 Spring
弹簧

.....4

TU0250-8 1mm Washer-Black
1mm压垫-黑色

.....4

TU0250-8 1mm Washer-White
1mm压垫-白色

.....4

TU0250-8 2.5mm Washer-White
2.5mm压垫-白色

.....4

TU0250-8 2.8x1.9 O-ring
2.8x1.9 O环

.....8

TU0250-8 9x1 O-ring
9x1 O环

.....8

F/R Assemble both front and rear
组裝前面和後面

x2 Assemble as many times as specified
需组裝數量



33 Shock Absorber 避震器

Bag-E

TU0250-1/TU0250-2 2.3 E-ring 2.3 E扣	8
TU0250-7 Front Piston-Black 前活塞-黑色	2
TU0250-7 Rear Piston-White 后活塞-白色	2
TU0250-8 12x1 O-ring 12x1 O环	4
T02187 5.8 Ball End 5.8球头座	4
T02062 5.8 Ball Stud 5.8球头	4

TU0250-7
Front Piston-Black
Rear Piston-White
前活塞-黑色
后活塞-白色

F/R x2

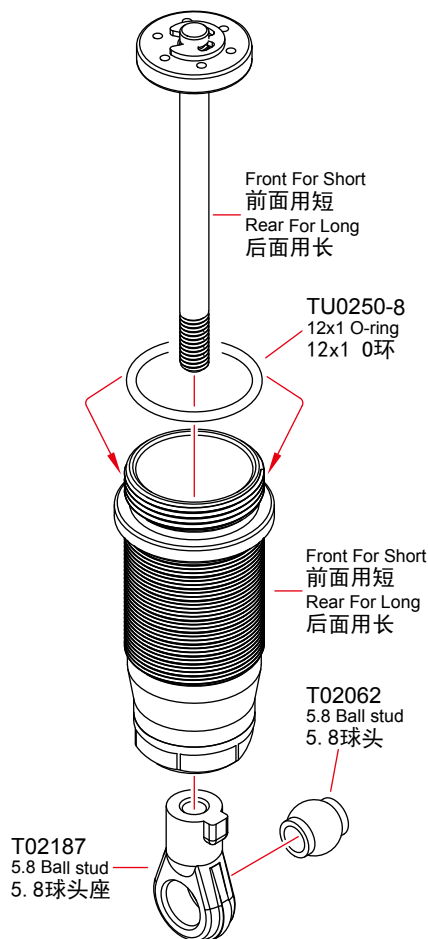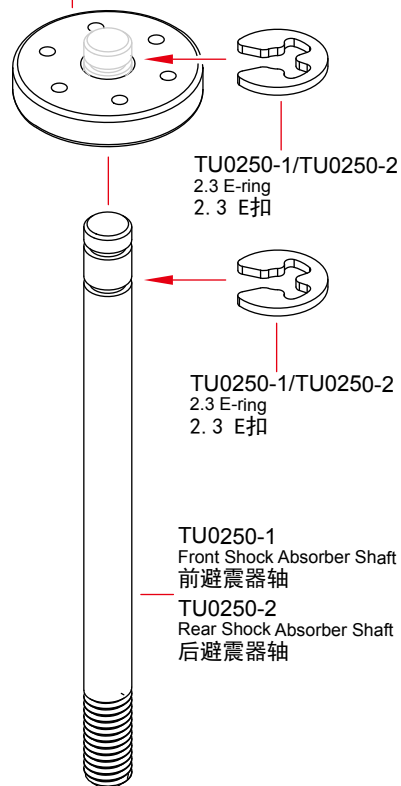


34 Shock Absorber 避震器

Bag-E



F/R x2

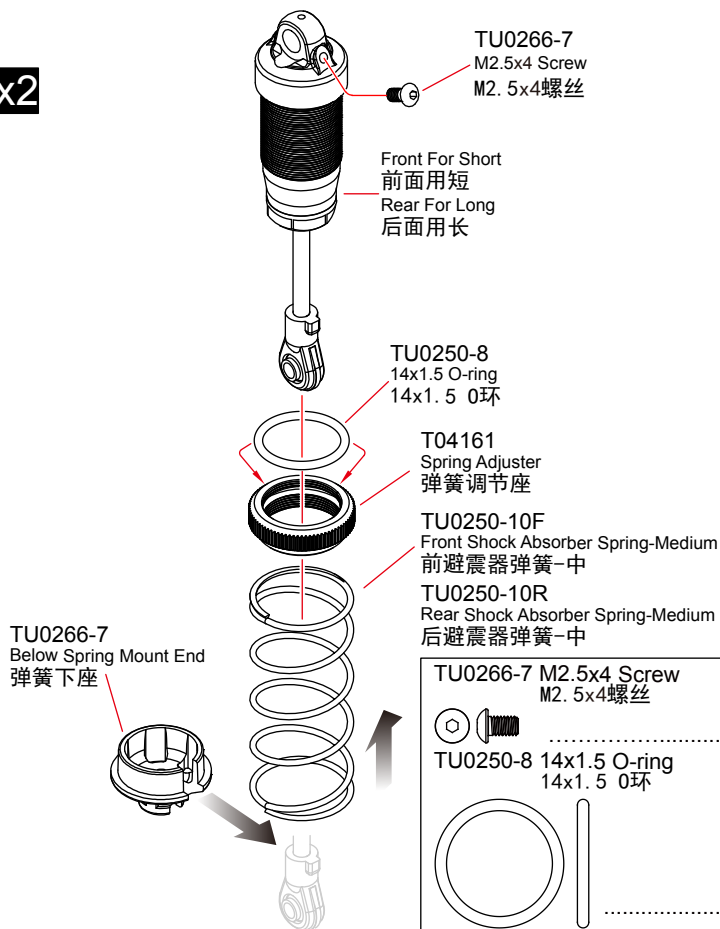

35 Front Shock Absorber 前避震器


Bag-E

T04141
Shock Ball Stud
带牙避震上球珠

T02084
M3 Nylon Nut
M3尼龙螺母

BS312/T01116
M3x12 Screw
M3x12螺丝

T04041 Shock Ball Stud
带牙避震上球珠



2

T02084 M3 Nylon Nut
M3尼龙螺母



4

BS312/T01116 M3x12 Screw
M3x12螺丝




2

36 Rear Shock Absorber 后避震器

Bag-E

T04041 Shock Ball Stud
带牙避震上球珠



2

T02084 M3 Nylon Nut
M3尼龙螺母



4

BS312/T01116 M3x12 Screw
M3x12螺丝



2



T02084
M3 Nylon Nut
M3尼龙螺母

T04141
Shock Ball Stud
带牙避震上球珠

BS312/T01116
M3x12 Screw
M3x12螺丝




Assemble both Left and Right
组裝左和右

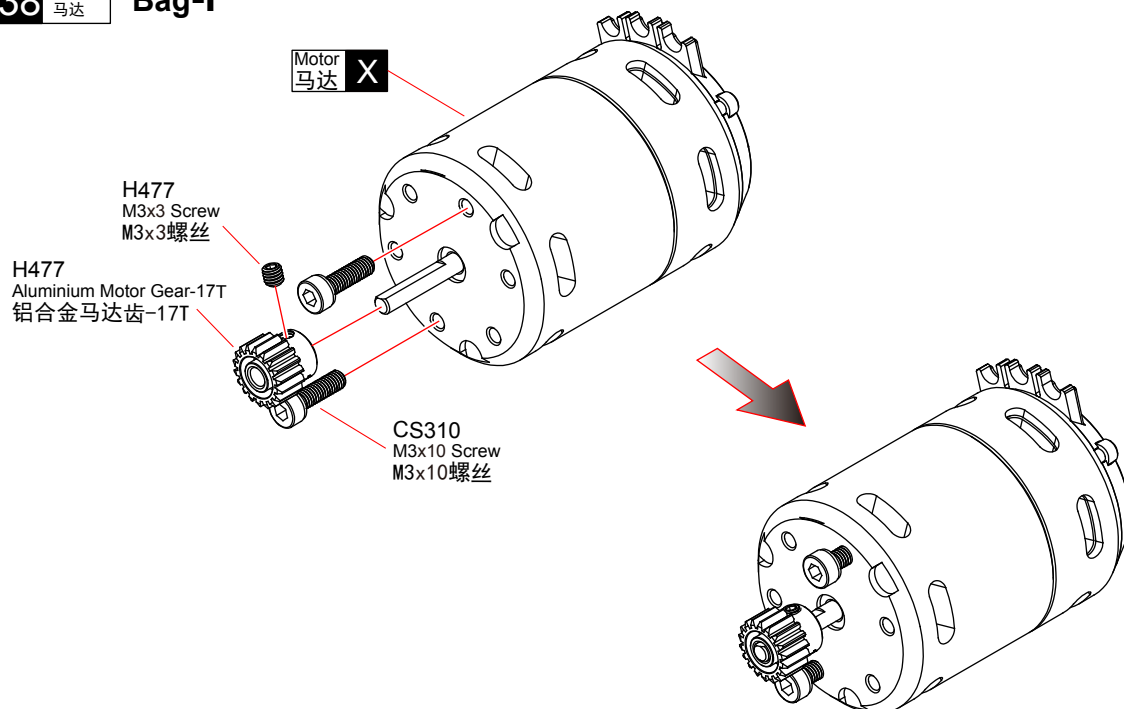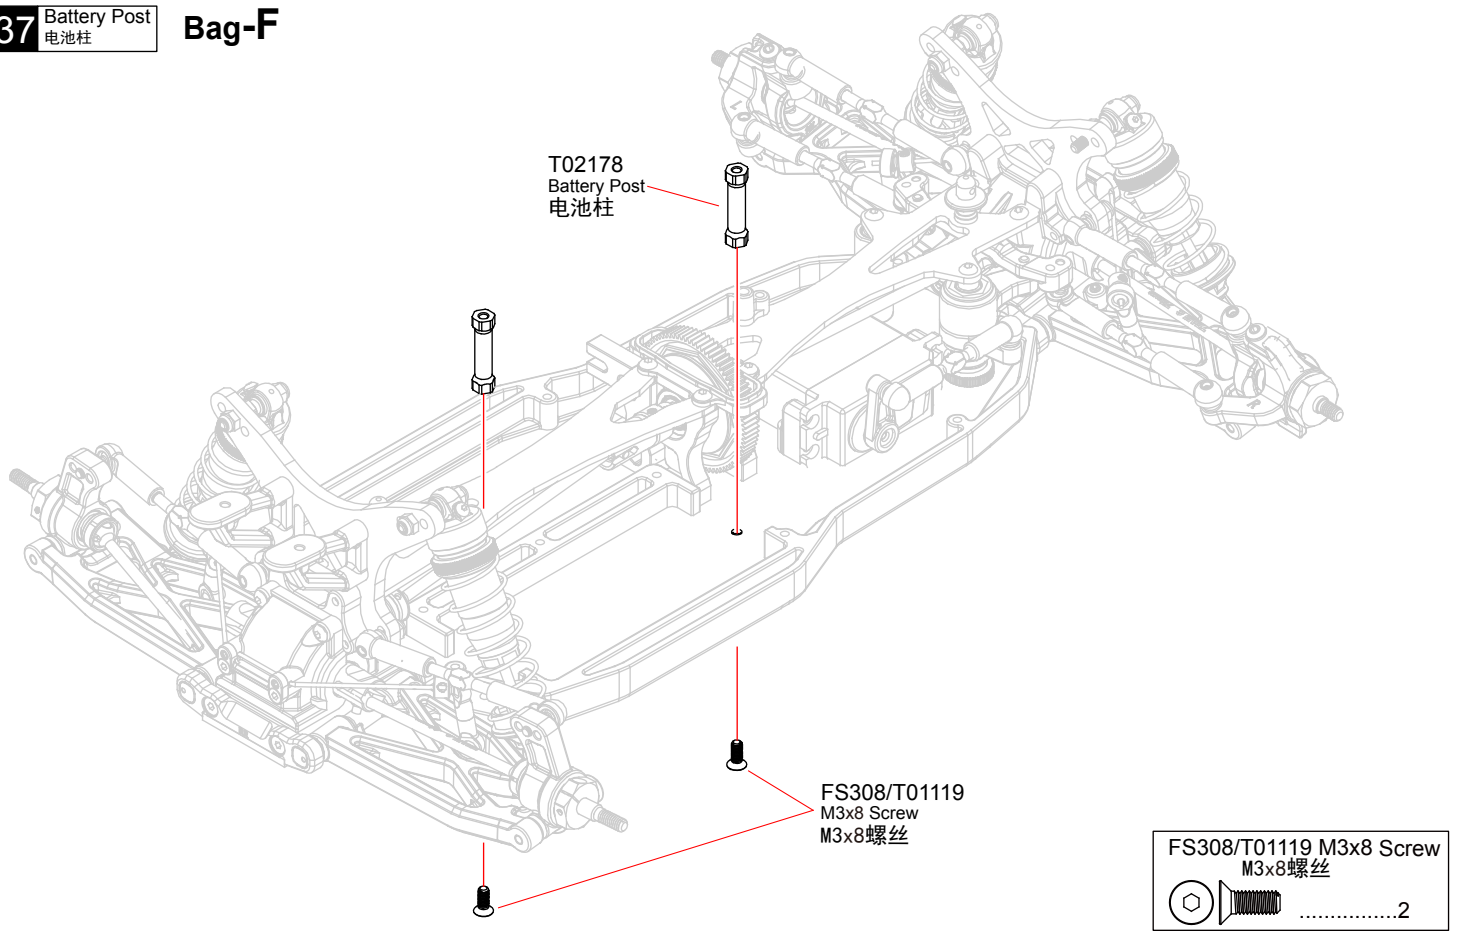



H477 M3x3 Screw M3x3螺丝	1
CS310 M3x10 Screw M3x10螺丝	2

Gear Ratio 齿 轮 比	12.5	11.7	11.1	10.5	10.0
Pinion Gear 马 达 齿	16T	17T	18T	19T	20T

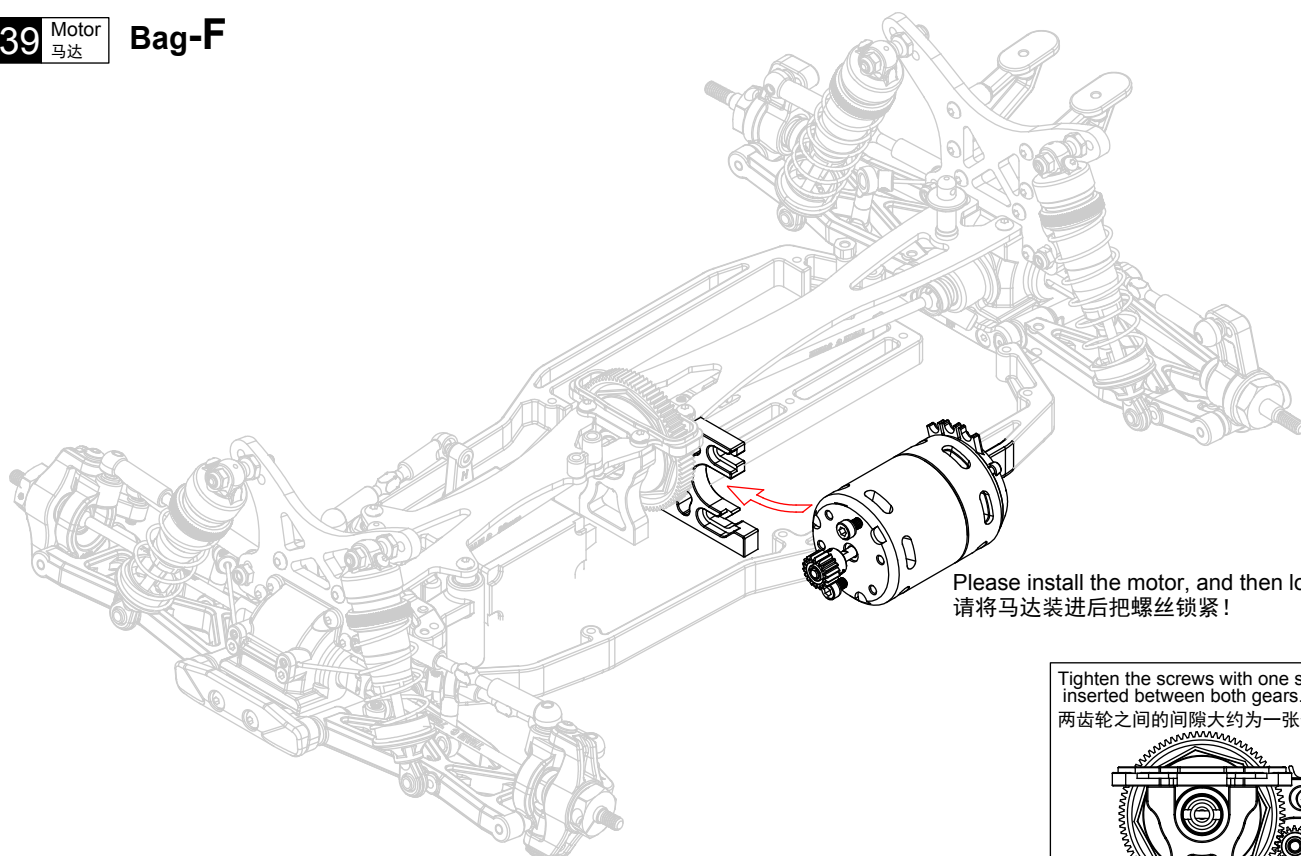


Please install the motor, and then lock the screw.
请将马达装进后把螺丝锁紧！

Tighten the screws with one sheet of paper
inserted between both gears.
两齿轮之间的间隙大约为一张普通纸的厚度。

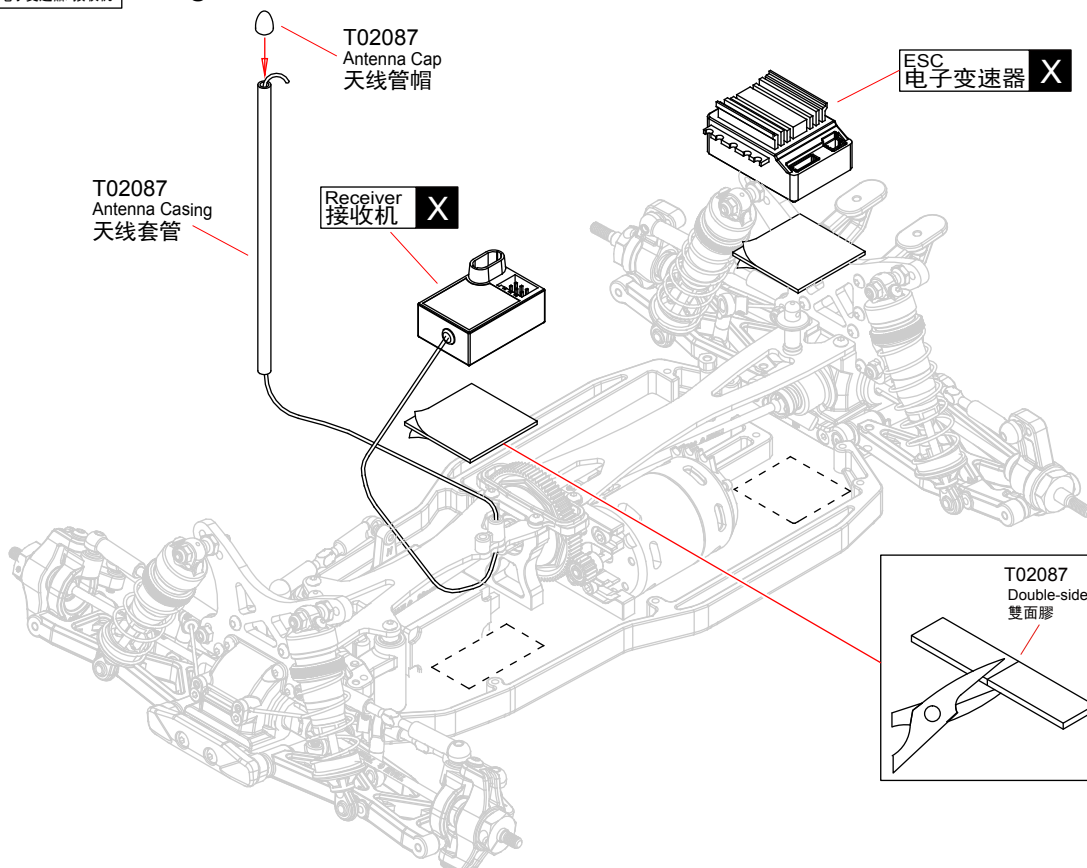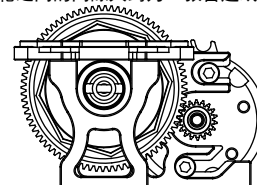

41 Battery 电池

Bag-F

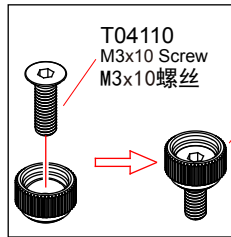

T04144
Battery Holder
电池压板

Battery
电池 X

T04110 M3x10 Screw
M3x10螺丝





42 Wheel 轮胎

Bag-G

< Front > x2

< Rear > x2

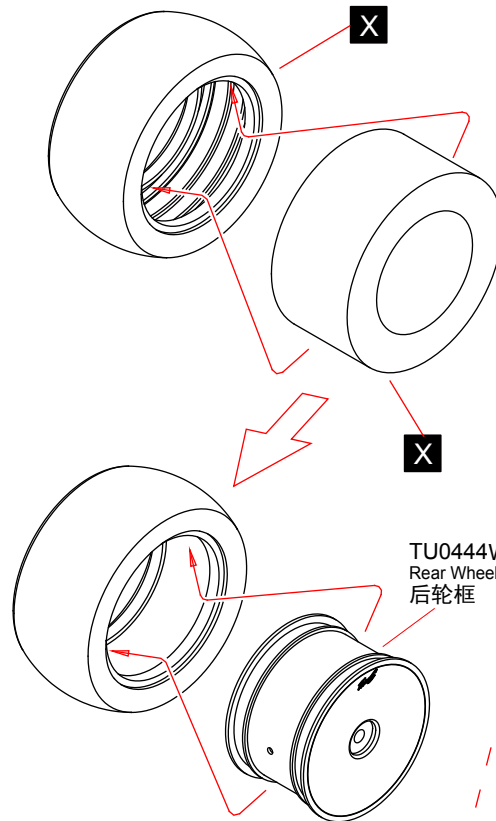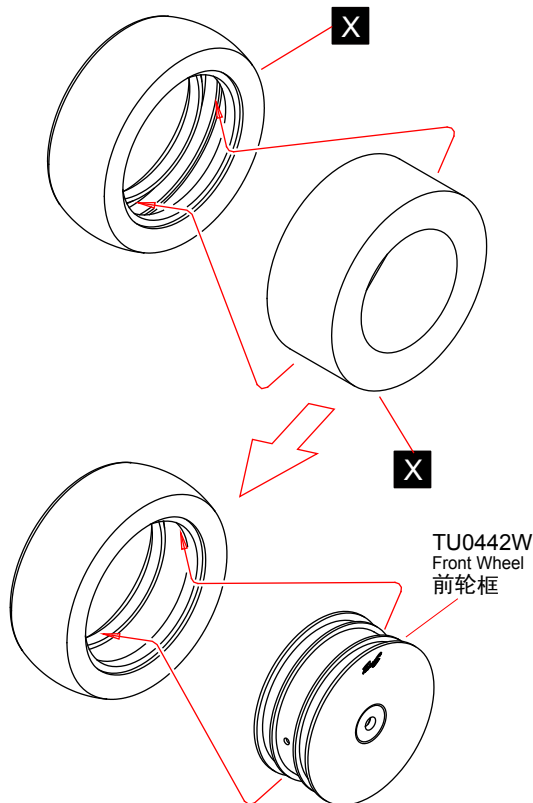

F/R x2





After fitting wheels to tyres,
apply instant glue as shown
轮胎装好后如图打胶水





x2 Assemble as many times as specified
需組裝數量


F/R Assemble both front and rear
組裝前面和後面

X Must be purchased separately
需另購物品















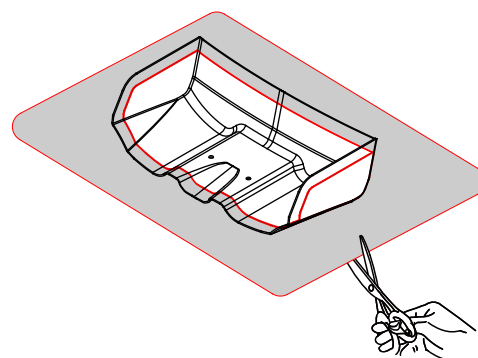
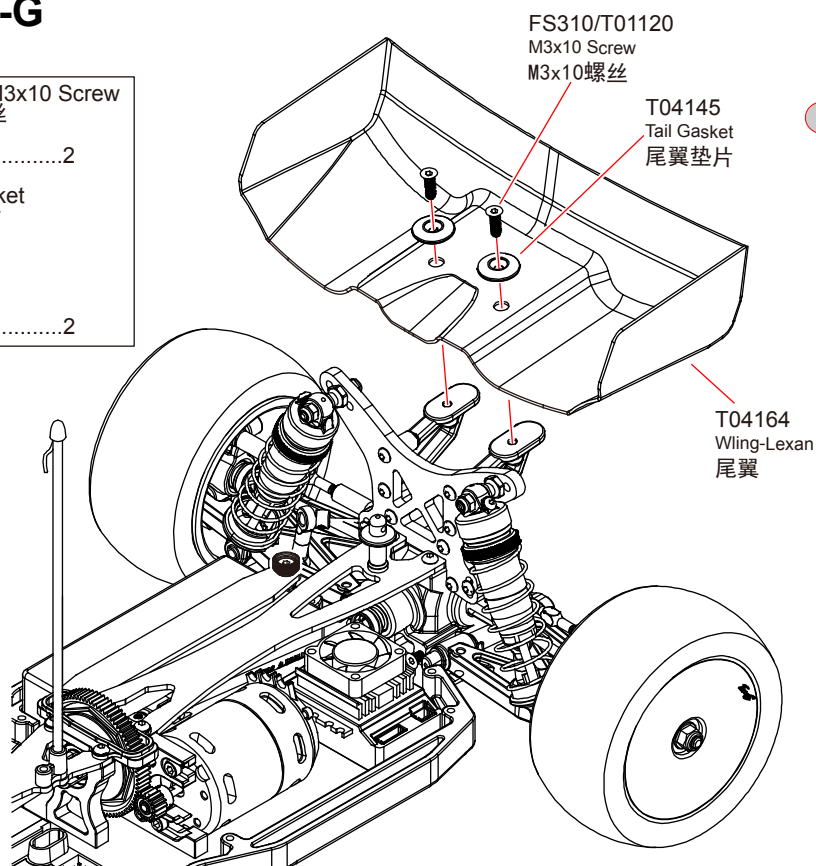
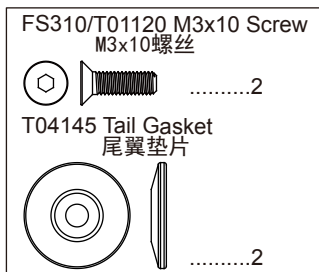
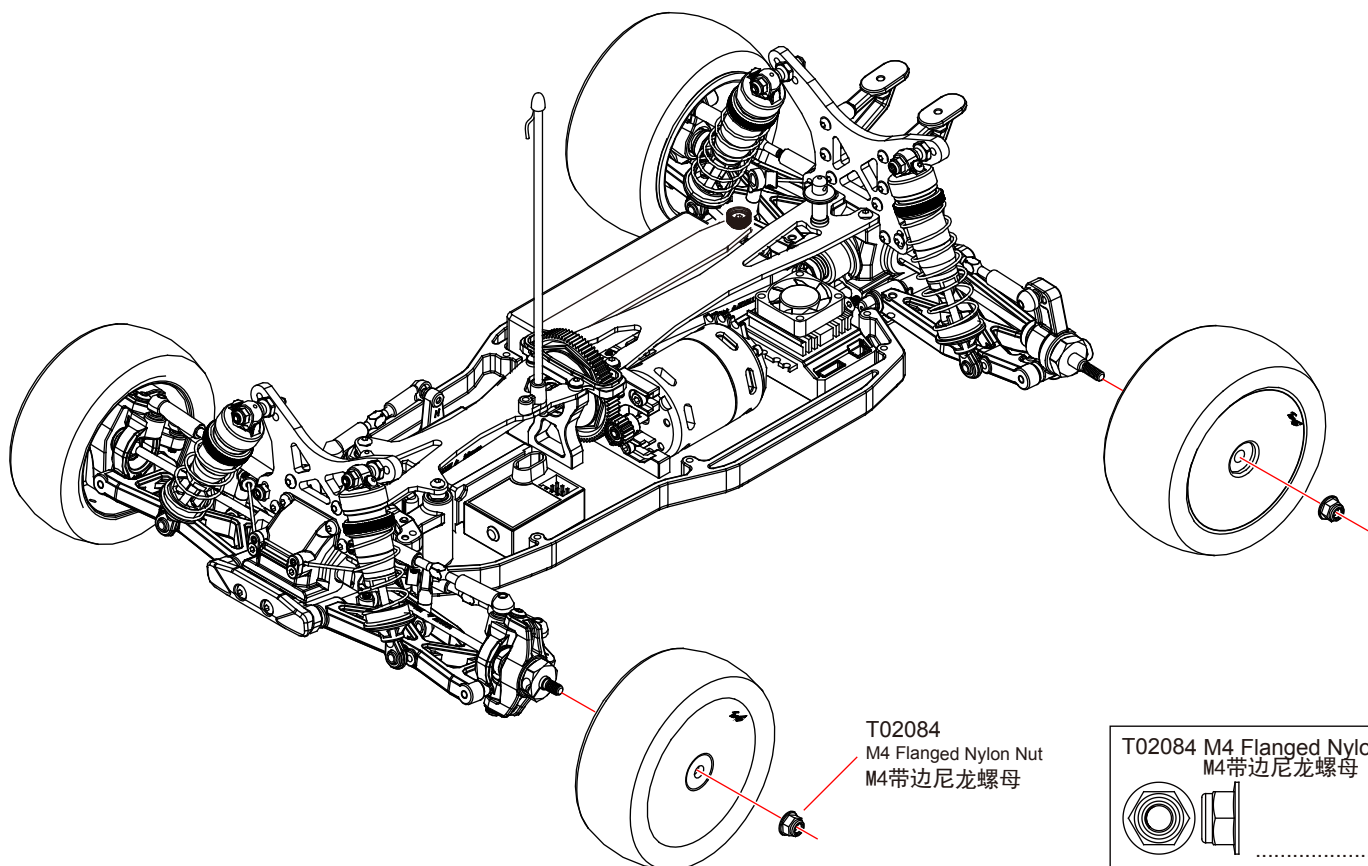


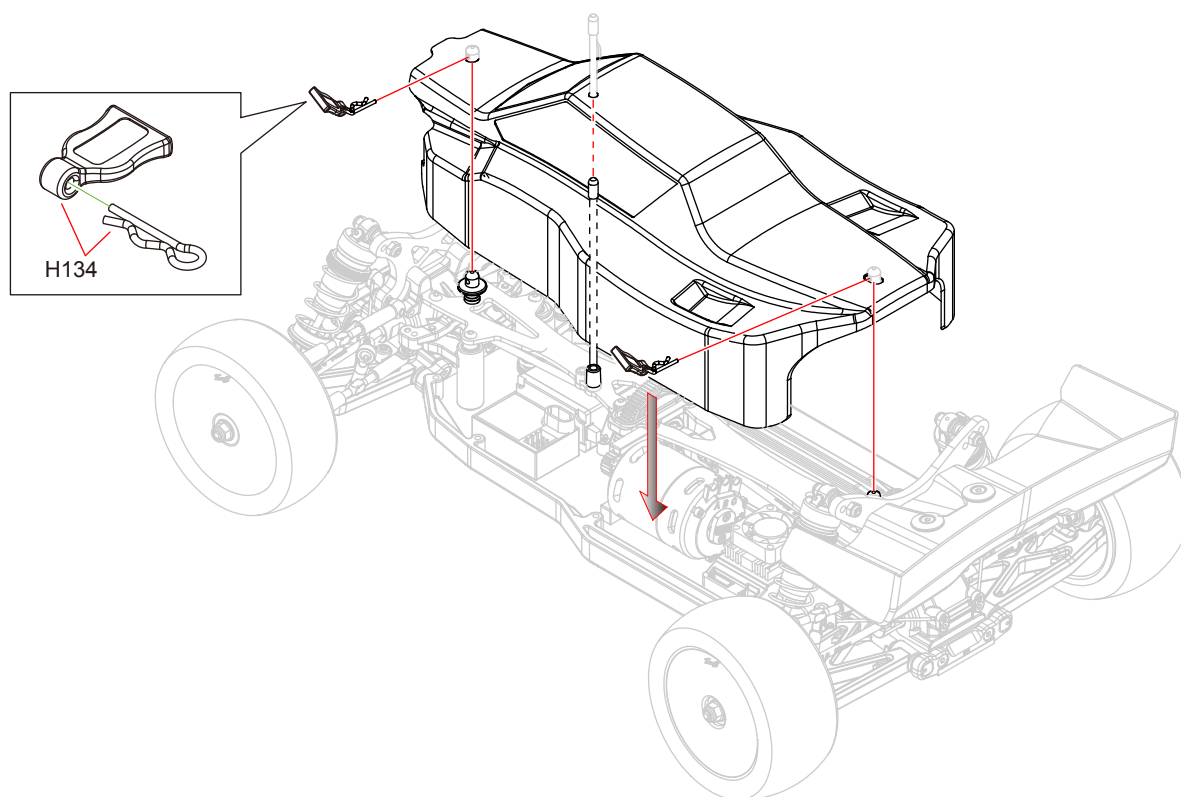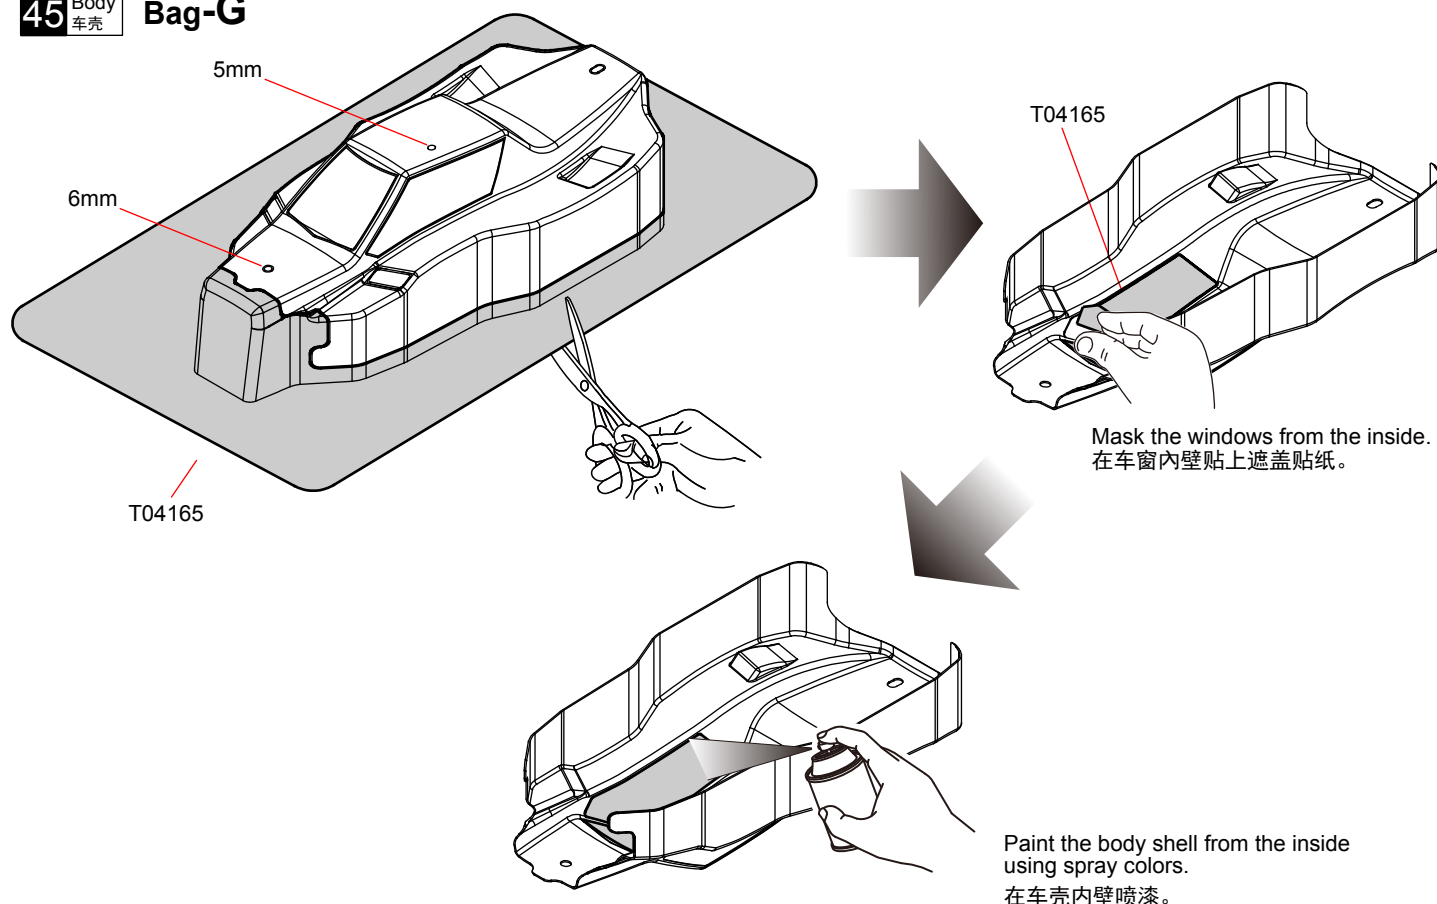

























● Exploded View 爆炸圖

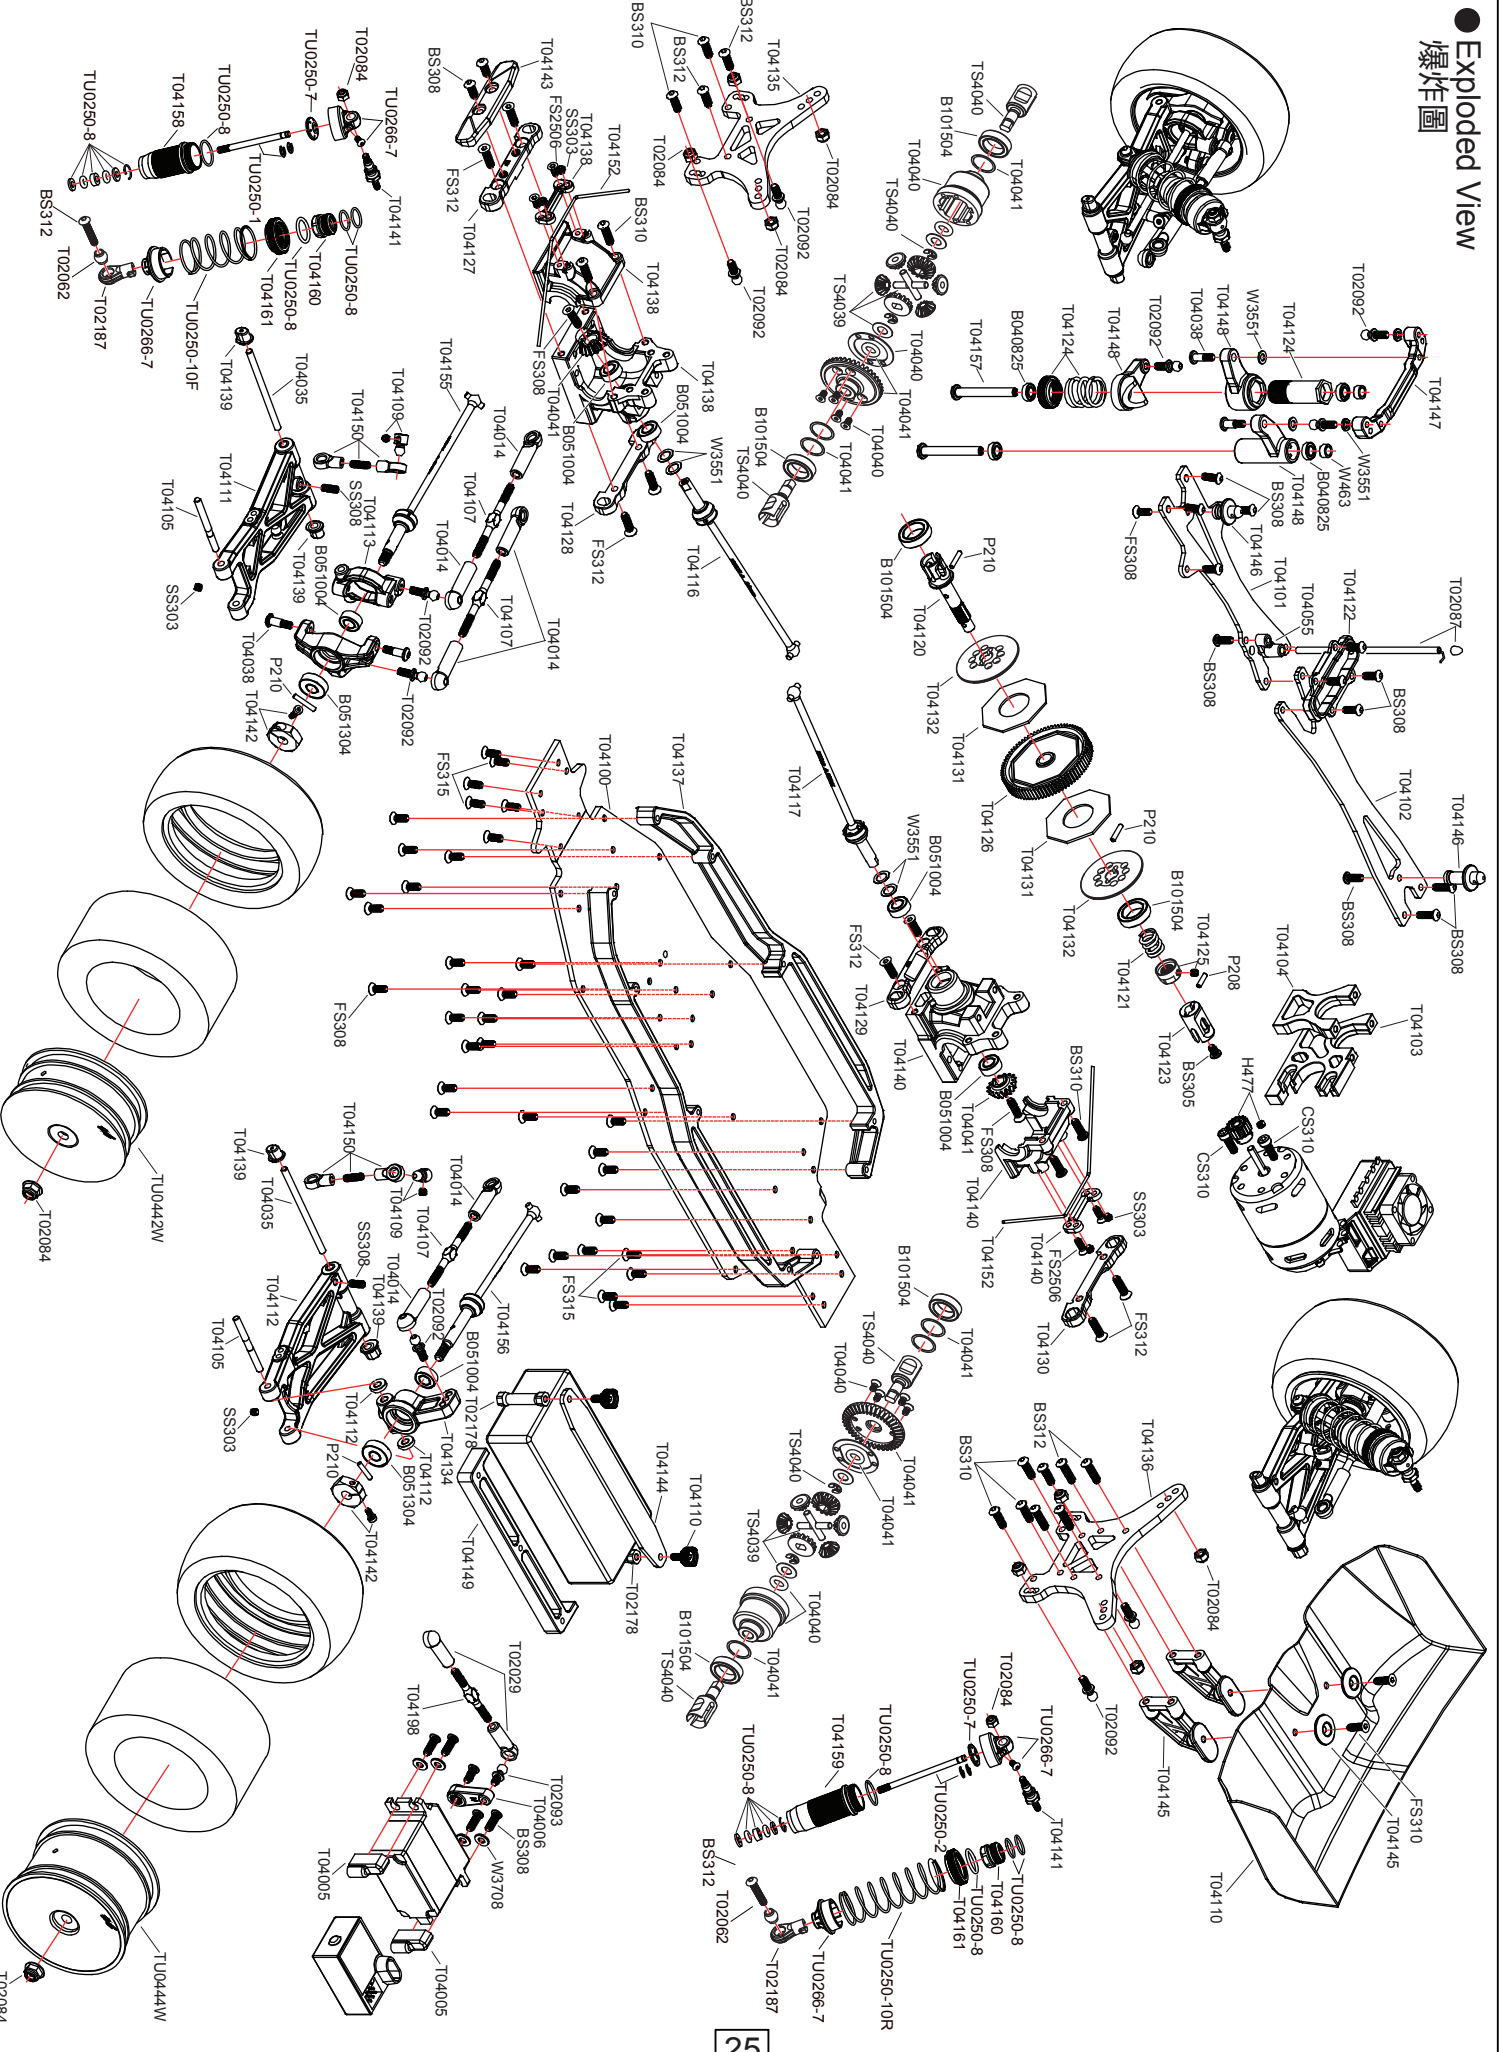



























Parts list for TM4 off-road buggy - 1 TM4配件包-1

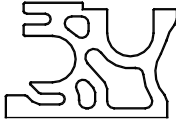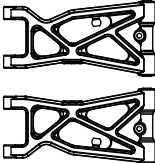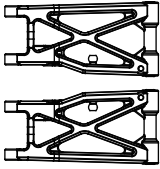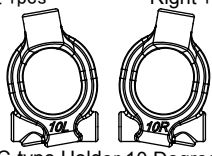T04100  Main Chassis 主底盘 1pcs	T04101  Front Top Deck 前二楼板 1pcs	T04102  Rear Top Deck 后二楼板 1pcs	T04103  Motor Mount 马达座 1pcs	T04104  Motor Mount-F 马达座-F 1pcs
T04105  3x32 Arm Pin 3x32摆臂轴 2pcs	T04106  3x33 Arm Pin 3x33摆臂轴 2pcs	T04107  3x45 Turnbuckle 3x45拉杆 2pcs	T04108  3x35 Turnbuckle 3x35拉杆 1pcs	T04109  M3x3 Screw 螺丝 2pcs Swaybar Ball Stud 防倾杆球头 2pcs
W463  4x6x3 Washer 垫片 2pcs	T04111  Left 1pcs Right 1pcs Front Lower Arm 前下摆臂	T04112  Left 1pcs Right 1pcs Rear Lower Arm 后下摆臂	 Wheelbase Washer 轴距垫片 4pcs	T04113  Left 1pcs Right 1pcs C-type Holder 10 Degree C型座10° 1pcs
TU0442W  Front Wheel 前轮框 2pcs	TU0444W  Rear Wheel 后轮框 2pcs	T04114  62mm Rear CVD Bone 62mm后CVD骨 2pcs	T04115  74mm Front CVD Bone 74mm前CVD骨 2pcs	T04116  M3x8 Screw 螺丝 1pcs 85mm Center CVD 85mm中CVD 1pcs
T04117  M3x8 Screw 螺丝 1pcs 95mm Center CVD 95mm中CVD 1pcs	T04118  Front CVD Axle 前CVD轴 2pcs	T04119  Rear CVD Axle 后CVD轴 2pcs	T04120  Slipper Shaft 扭限轴 1pcs	T04121  Slipper Spring 扭限弹簧 1pcs
T04122  Center Diff Cover 中差上顶板 1pcs	T04123  Center Diff Connecting Cup 中差接杯 1pcs	T04124  Servo Saver Body 缓冲筒身 1pcs  Buffer Prop Adjusting Nut 缓冲支柱调整螺帽 1pcs	 Steering Buffer Spring 转向缓冲弹簧 1pcs	T04125  M3x3 Screw 螺丝 1pcs Slipper Nut 扭限调整环 1pcs
T04126  Spur Gear-80T 齿轮-80T 1pcs	T04127  Arm Mount-FF 摆臂固定座-FF 1pcs	T04128  Arm Mount-FR 摆臂固定座-FR 1pcs	T04129  Arm Mount-RF 摆臂固定座-RF 1pcs	T04130  Arm Mount-RR 摆臂固定座-RR 1pcs









Parts list for TM4 off-road buggy - 2 TM4配件包-2

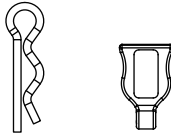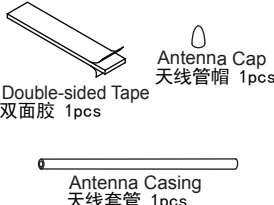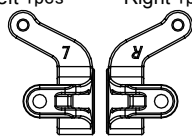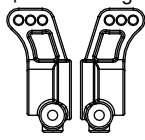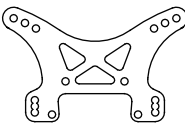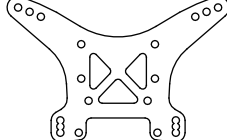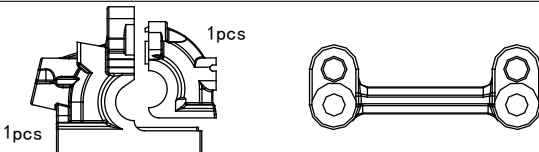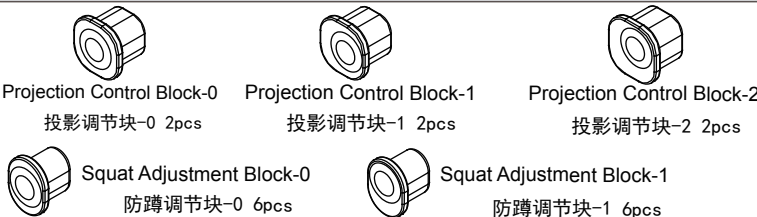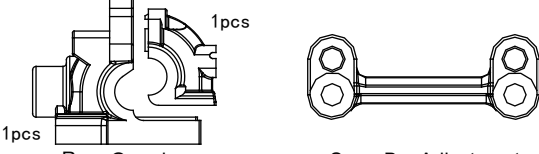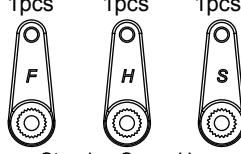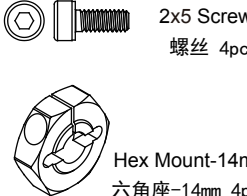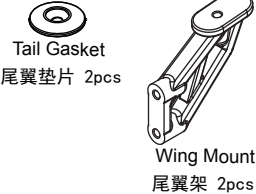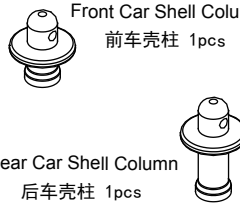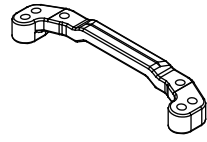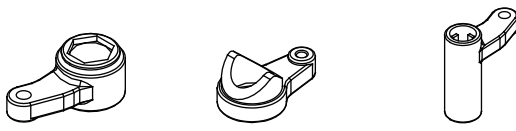H134  Small Clip 小号插销 6pcs Small Clip Holder 小号插销固定座 6pcs	T04131  Slipper Clutch Pad 八角扭限摩擦片 2pcs	T04132  Slipper Hub Set-A 扭限盘-A 1pcs Slipper Hub Set-B 扭限盘-B 1pcs	T02087  Double-sided Tape 双面胶 1pcs Antenna Cap 天线管帽 1pcs Antenna Casing 天线套管 1pcs	W3551/T01014  3x5.5x1 Washer 垫片 6pcs
T04133  Left 1pcs Right 1pcs Steering Arm 转向臂	T04134  Left 1pcs Right 1pcs Rear Hub 后轮座	T04135  Front Shock Tower 前避震器架 1pcs	T04136  Rear Shock Tower 后避震器架 1pcs	T04137  Left 1pcs Right 1pcs Side Panel 侧板
T04138  1pcs Front Gear-box 前齿轮箱 Sway Bar Adjustment 防倾杆调整座 1pcs	T04139  Projection Control Block-0 投影调节块-0 2pcs Projection Control Block-1 投影调节块-1 2pcs Projection Control Block-2 投影调节块-2 2pcs Squat Adjustment Block-0 防蹲调节块-0 6pcs Squat Adjustment Block-1 防蹲调节块-1 6pcs			
T04140  1pcs Rear Gear-box 后齿轮箱 Sway Bar Adjustment 防倾杆调整座 1pcs	T04006  1pcs 1pcs 1pcs Steering Servo Horn 转向伺服臂 1pcs	T04141  Shock Ball Stud 带牙避震器上球珠 4pcs	T04142  2x5 Screw 螺丝 4pcs Hex Mount-14mm 六角座-14mm 4pcs	
T04143  Anti-collision Plate 防撞板 1pcs	T04144  Battery Holder 电池压板 1pcs	T04145  Tail Gasket 尾翼垫片 2pcs Wing Mount 尾翼架 2pcs	T04146  Front Car Shell Column 前车壳柱 1pcs Rear Car Shell Column 后车壳柱 1pcs	T04147  Steering Ackerman Plate 缓冲连接板 1pcs
T04148  Servo Saver Top 缓冲座上 1pcs Servo Saver Bottom 缓冲座下 1pcs Servo Saver Left 缓冲座左 1pcs	T04149  Central Reinforcing Bar 中央补强条 1pcs	T04014  4.8mm Ball End-Long 4.8mm球头座-长 6pcs	T04150  M3x10 Screw 螺丝 4pcs 4.8mm Ball End-Short 4.8mm球头座-短 8pcs	
T02029  4.8mm Ball End 4.8mm球头座 6pcs	T04151  1.1 1pcs Swaybar 防倾杆 2pcs	T04152  1.2 1pcs Swaybar 防倾杆 2pcs	T04153  1.3 1pcs Swaybar 防倾杆 2pcs	T04154  1.4 1pcs Swaybar 防倾杆 2pcs

Parts list for TM4 off-road buggy - 3 TM4配件包-3

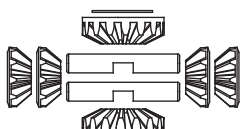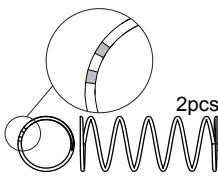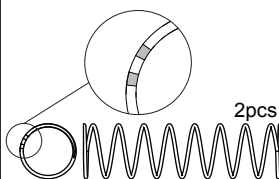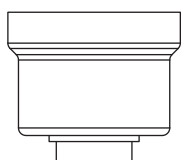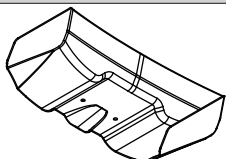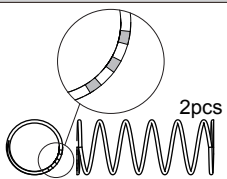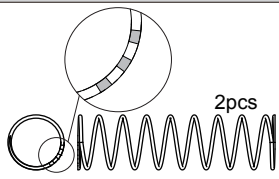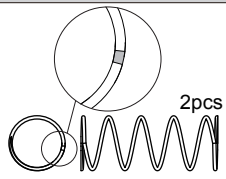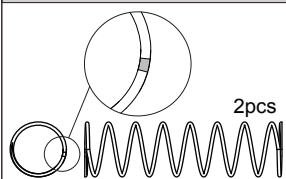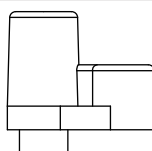T04155  74mm Front CVD 74mm前CVD 2pcs	T04156  62mm Rear CVD 62mm后CVD 2pcs	TS4039  Diff Gear Set 差速齿轮组	T02084  M4 Flanged Nylon Nut 带边尼龙螺母 6pcs M3 Nylon Nut 尼龙螺母 6pcs	TS4040  3.0 E-ring 3.0 E扣 2pcs Diff Connecting Cup 差速接杯 2pcs
TU0250-1  2.3 E-ring 2.3 E扣 4pcs  Front Shock Absorber Shaft 前避震器轴 2pcs	TU0250-2  2.3 E-ring 2.3 E扣 4pcs  Rear Shock Absorber Shaft 后避震器轴 2pcs	T04158  Front Shock Absorber Body 前避震器筒身 2pcs	B051004/T02100  5x10x4 Ball Bearing 轴承 6pcs	B101504/T02099  10x15x4 Ball Bearing 轴承 6pcs
T04159  Rear Shock Absorber Body 后避震器筒身 2pcs	TU0250-5  Below Spring Mount End 弹簧下座 4pcs	TU0250-8  1mm Washer-White 1mm压垫-白色 4pcs 1mm Washer-Black 1mm压垫-黑色 4pcs 2.5mm Washer-White 2.5mm压垫-白色 4pcs Spring 弹簧 4pcs 9x1 O-Ring 9x1 O环 4pcs 12x1 O-Ring 12x1 O环 4pcs 14x1.5 O-Ring 14x1.5 O环 4pcs		
TU0250-7  Front Piston-Black 前活塞-黑色 2pcs Rear Piston-White 后活塞-白色 2pcs	TU0250-10F  Front Shock Absorber Spring-Medium 前避震器弹簧-中 2pcs	TU0250-10R  Rear Shock Absorber Spring-Medium 后避震器弹簧-中 2pcs	T04160  Shock Below Cover 避震下盖 4pcs	T04161  Spring Adjuster 弹簧调节座 4pcs
T04040  Diff Housing 差速壳 1pcs 4.8x1.6 O-ring 4.8x1.6 O环 1pcs 10x12x0.2 Washer 10x12x0.2垫片 2pcs M2.5x6 Screw M2.5x6螺丝 4pcs Diff Pads 差速垫片 1pcs	T04041  16T Gear 16T齿轮 1pcs 40T Gear 40T齿轮 1pcs 10x12x0.2 Washer 10x12x0.2垫片 2pcs 4.8x1.6 O-ring 4.8x1.6 O环 1pcs	T04164  Wing-Lexan 尾翼 1pcs		
TU0262-F  Front Shock Absorber Spring-Soft 前避震器弹簧-软 2pcs	TU0262-R  Rear Shock Absorber Spring-Soft 后避震器弹簧-软 2pcs	TU0260-F  Front Shock Absorber Spring-Hard 前避震器弹簧-硬 2pcs	TU0260-R  Rear Shock Absorber Spring-Hard 后避震器弹簧-硬 2pcs	T02187  5.8 Ball End 球头座 4pcs
H477  Aluminium Motor Gear-17T 铝合金马达齿-17T 1pcs 3x3 Screw 1pcs	T02092  Ball Stud Sponge 球头海绵 2pcs Ball Stud-Long 球头-长 2pcs	T04055  Antenna Pipe Mount 天线管座 1pcs	T04005  Servo Mount 伺服机座 1mm Spacer 2pcs 2mm Spacer 2pcs	T02178  Battery Post 電池柱 2pcs

Parts list for TM4 off-road buggy - 4 TM4配件包-4

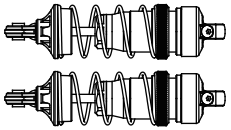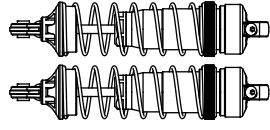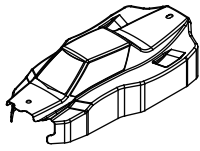TU0266-7  Below Spring Mount end-Plastic 弹簧下座-尼龙 4pcs  Shock Absorber Top cover-Plastic 避震器上盖-尼龙 4pcs  M2.5x4 Screw M2.5x4螺丝 4pcs	T04022  Spring Buckle 弹簧扣 1pcs	T01057  2x9.8 pin 钢针 4pcs  CVD Shaft CVD轴 4pcs	T04157  Servo Saver Post 缓冲柱 2pcs	T04038  M3 Screw M3螺丝 6pcs
BS305/T08788  M3x5 Screw M3x5螺丝 8pcs	BS308/T01114  M3x8 Screw M3x8螺丝 10pcs	BS310/T01115  M3x10 Screw M3x10螺丝 10pcs	FS308/T01119  M3x8 Screw M3x8螺丝 10pcs	FS310/T01120  M3x10 Screw M3x10螺丝 10pcs
FS312/T08805  M3x12 Screw M3x12螺丝 8pcs	FS315/T08807  M3x15 Screw M3x15螺丝 10pcs	CS310  M3x10 Screw M3x10螺丝 10pcs	SS303/T01122  M3x3 Screw M3x3螺丝 10pcs	SS308/T01095  M3x8 Screw M3x8螺丝 10pcs
P210/T04032  2x9.8 Pin 2x9.8钢针 6pcs	T02062  5.8 Ball Stud 球头 4pcs	P208  2x7.8 Pin 2x7.8钢针 6pcs	B051304  5x13x4 Ball Bearing 5x13x4轴承 6pcs	B040803/T01074  4x8x3 Ball Bearing 4x8x3轴承 6pcs
W5802/86000  5x8x0.2 Washer 5x8x0.2垫片 6pcs	T04110  Adjustment Nut 调车尺螺帽 2pcs  M3x10 Screw M3x10螺丝 2pcs	BS312/T01116  M3x12 Screw M3x12螺丝 10pcs	FS2506  M2.5x6 Screw M2.5x6螺丝 10pcs	T04035  3x51 Arm Pin 3x51摆臂轴 2pcs
T02093  Ball Stud Sponge 球头海绵 5pcs  Ball Stud-Short 球头-短 5pcs	W3708/T02081  3x7x0.8 Washer 3x7x0.8垫片 10pcs	T04162  Front Shock Absorber 前避震器	T04163  Rear Shock Absorber 后避震器	T04165  Body-Lexan 车壳 1pcs

TM4

SETUP SHEET for the TeamC TM4

Driver _____

Track / City _____

Event _____ Date ____ / ____ / ____

Conditions

☐ Smooth

☐ Bumpy

☐ Low traction

☐ Med traction

☐ High traction

☐ Sandy

☐ Soft dirt

☐ Grass

☐ Hard soil

☐ Clay

☐ Wet


☐ Dry

☐ Dusty

☐ Other

Front Suspension


Shock Mounting&Camber link

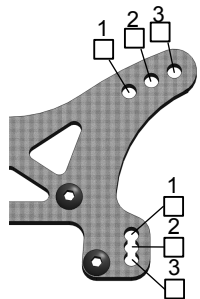

Anti-roll bar: ☐ _____ mm

Camber _____ °


Washers
_____ mm



Toe-in (+)/Out (-) _____ °
Bump Steep Spacer _____




Washers _____



Ride height _____

Front Shocks

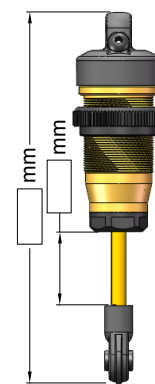

Spring(color)

☐ Black


☐ _____

Oil _____ wt

Piston # _____


Rear Suspension

Shock Mounting&Camber link

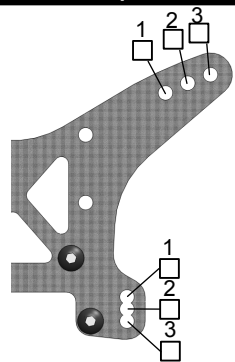

Anti-roll bar: ☐ _____ mm

Camber _____ °

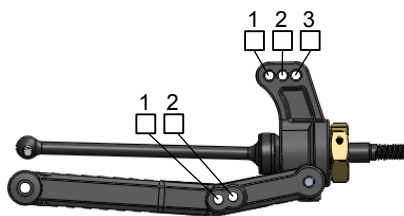

☐ FF

☐ FR

☐ RF


☐ RR

Wheelbase

☐ Long


☐ Medium

☐ Short

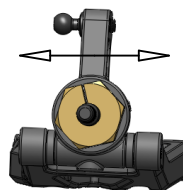

Ride height _____

Rear Shocks

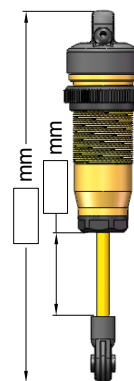

Spring(color)

☐ Black

☐ _____

Oil _____ wt

Piston # _____

Front Diff

Brand _____

Oil wt _____

Rear Diff

Brand _____

Oil wt _____

Front Tires&Wheels

Front Tires _____

Inserts _____ Wheels _____

Rear Tires&Wheels

Rear Tires _____

Inserts _____ Wheels _____

Batteries

Servo _____

Esc _____

Batteries _____

Motor

Motor _____

Pinion/Spur _____ / _____

Other

Wing _____

Wing Angle ☐ 4° ☐ 10°

