



S350 **ES**
1/8 OFF ROAD RACING EP BUGGY

Instruction Manual



INSTRUCTION

Congratulations on your purchase of the new SWORKz S350 BE1 1/8 scale off-road racing brushless power buggy pro kit.

Please read this manual thoroughly before you attempt to start or drive your S350 BE1. This manual contains step-by-step instructions to help you complete, prepare for startup, and fine-tune your Buggy. Updates, setups, and product news will be posted on our website (www.sworkz.com), so check often.

If you should ever have any questions on your S350 BE1, please feel free to contact our official SWORKz dealers and distributors, as they will be glad to help you. You may also contact us at any time for the most up to date information and support.

The SWORKz S350 BE1 Pro Kit comes equipped with many SWORKz Factory Team Option Parts adding strength and performance to the car.

The S350 design team emphasized a lot on the weight distribution of the S350 BE1 contributing to the car performance and easy general car setup.


The SWORKz S350 BE1 1/8 scale off-road racing brushless buggy with its super narrow chassis design, comes standard with the SWORKz X-system transmission that provides powerful punch acceleration.

Equipped with Big Bore Shocks and oil filled differentials, the S350 BE1 delivers good traction and balance on any off road tracks. The pivot ball steering system gives the driver good control while driving the S350 BE1. The Standard set up given is a good base start for any drivers.

Overall, the S350 BE1 is a perfect combination of design, quality and performance.

S350 BE1 Kit Features :

1. 2 Speed Transmission Gear Box System.
2. Comes Standard with SWORKz X-System Transmission.
3. Front and Rear Big Bore Shocks.
4. Unique 4 Wheel Dust Protection System.
5. Double Protection Bumper Design.
6. Super Narrow Chassis Design.
7. Adjustable Front Upper and Lower Suspension Arm System.
8. Rear Kick Up Chassis System
9. Center Spur Gear Protection Cover.
10. Single Unit Motor Holder with Center Diff. Mount.
11. Steering Servo with Receiver Box System.
12. Front and Rear Aluminum Chassis Brace.

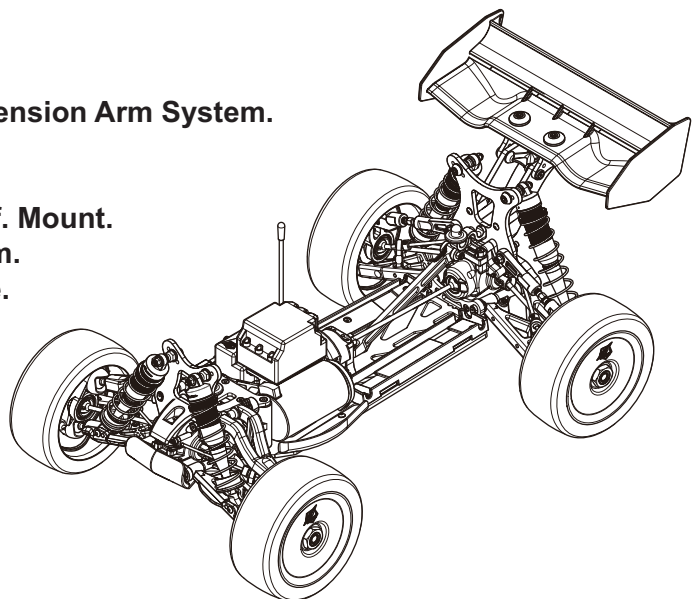

Specification	
Length:	535mm
Width:	308mm
Height:	220mm
Ground Clearance:	70mm
Wheelbase:	321-326mm
Track:	F:306mm / R:306mm
Gear Ratio:	C:46/13T, F/R 43/13T
Weight:	3650g



WARRANTY

Your SWORKz S350 BE1 kit warranty covers workmanship and manufacturing defects on the original parts. Warranty claims resulting from crashes, abuse, improper operation, improper mounting, improper adjustment or lack of maintenance will not be honored.

Contact your local hobby shop or SWORKz distributor for all claims and questions. Claims must be well documented. All Claims are subject to expert examination and approval by SWORKz .




INTRO	2
Warranty	3
2D Spare Parts List	6-13
Operation Guide	14
Assembly Steps	15-42
Set-up Sheet	43
SWORKz Driver's Set-up Sheet for Reference	44
S350 BE1 Part No. List	45-46
S350 BE1 Spare & Option Part List	47
Company Info	48
Explosion View with Screw Items	49-50




This radio control racing car is not a toy!
This high-performance R/C model is recommended for ages 14 and older.

Required Equipment for Operation


Radio Gear

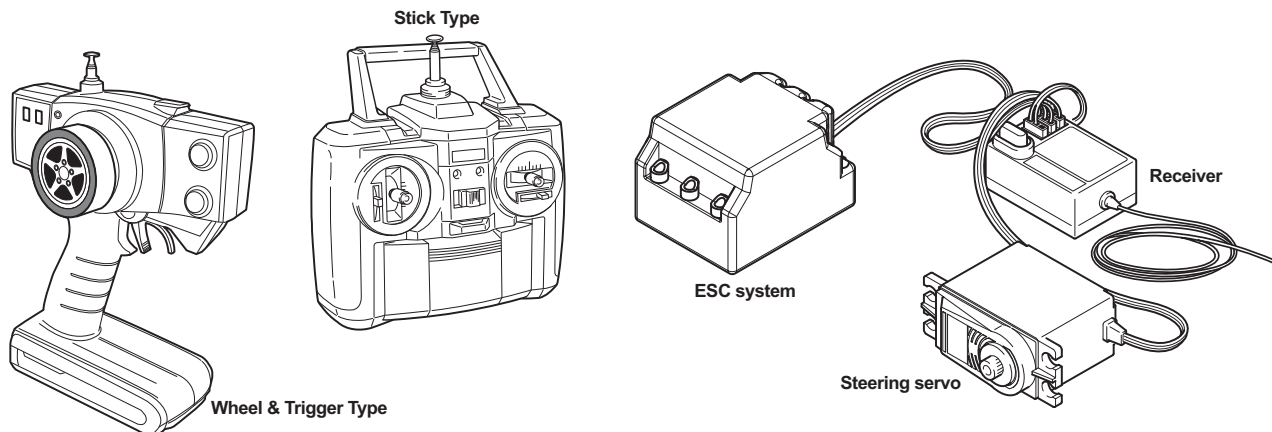


Breshless Motor

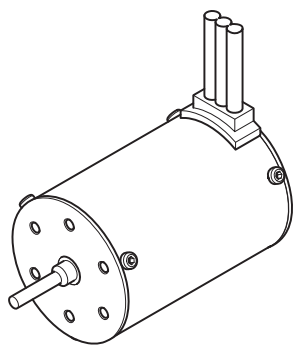


Charger and LiPo Battery

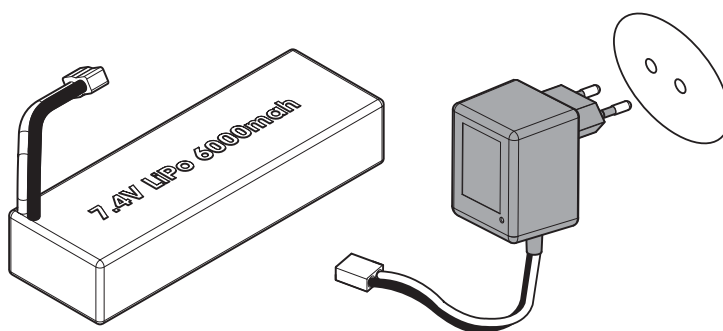

Tools Recommended

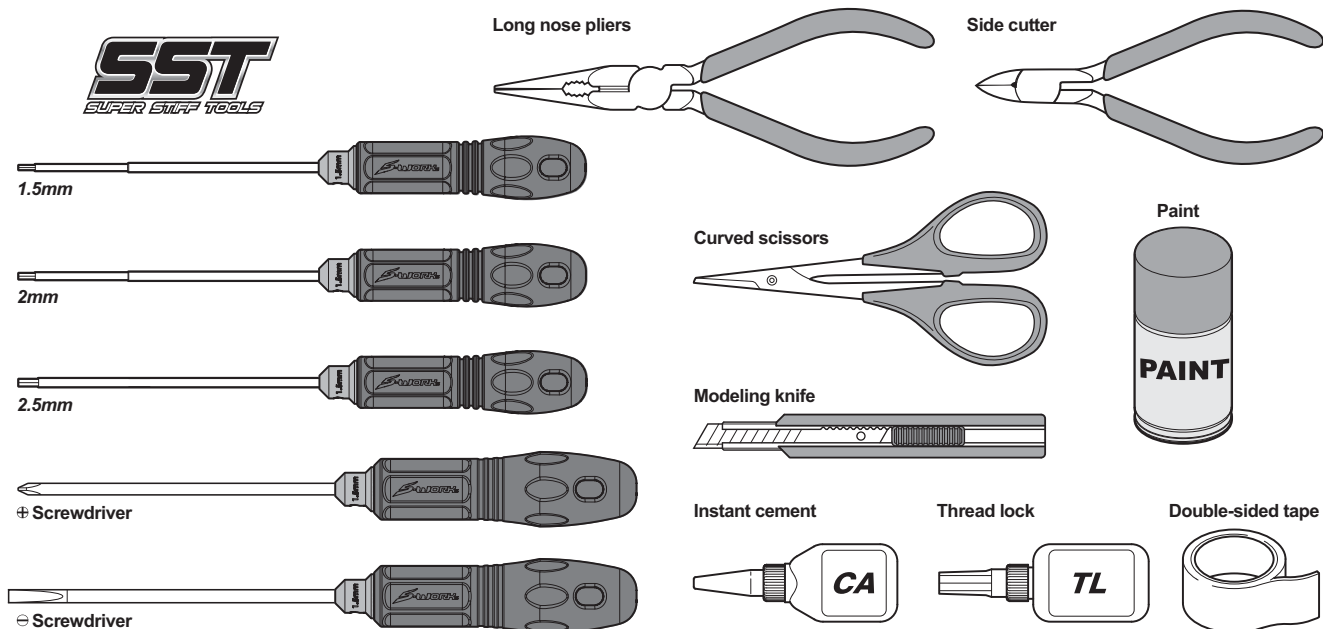

Included items

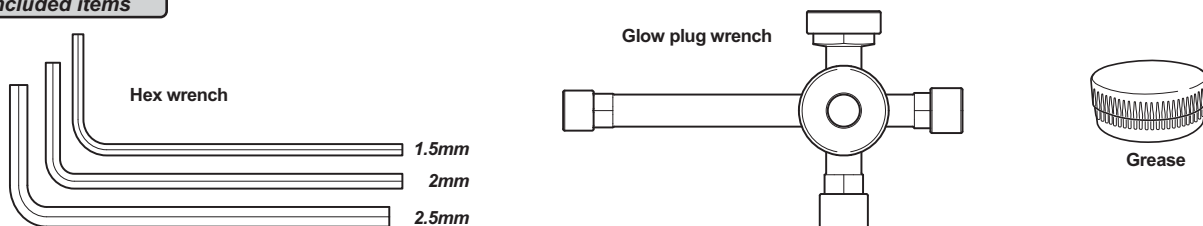



104001
M5x4mm Set Screw **x4**



104004
M3x3mm Set Screw **x4**



104005
M3x4mm Set Screw **x4**



104007
M4x8mm Set Screw **x4**



104008
M4x4mm Set Screw **x1**



105004
M2.6x6mm Cap Screw **x4**



105005
M3x12mm Cap Screw **x2**



105006
M3x28mm Cap Screw **x4**



105011
M3x23mm Cap Screw **x2**



105012
M3x10mm Cap Screw **x2**



106002
M3x10mm Hex Socket OH/TP Screw **x8**



106003
M3x16mm Hex Socket OH/TP Screw **x2**



106005
M3x15mm Hex Socket OH/TP Screw **x10**



106006
M3x20mm Hex Socket OH/TP Screw **x5**



106007
M3x12mm Hex Socket OH/TP Screw(HT) **x1**



106008
M3x12mm Hex Socket OH/TP Screw **x5**



106010
M3x6mm Hex Socket OH/TP Screw **x34**



106011
M3x4mm Hex Scket OH/TP Screw **x8**



108001
M3x12mm FH/ST HEX Screw **x15**



108003
M3x10mm FH/ST HEX Screw **x20**



108005
M3x14mm FH/ST HEX Screw **x2**



108006
M3x8mm FH/ST HEX Screw **x8**



108007
M3x6mm FH/ST HEX Screw **x16**



108008
M3x35mm FH/ST HEX Screw **x4**



108009
M3x20mm FH/ST HEX Screw **x4**



108010
M4x10mm FH/ST HEX Screw **x6**




108012
M4x16mm FH/ST HEX Screw **x8**



108014
M3x4mm FH/ST HEX Screw **x4**



108015
M3x16mm FH/ST HEX Screw **x12**



101004
Washer 3.5X10X0.2mm **x12**



103001
M3 Nut Lock **x20**



330095
Shock Washer 3.6x7x1mm **x4**



101011
M2.6x6xT0.6mm **x4**



103003
Flange M3 Nut Lock **x6**



330096
Shock Washer 3.6x7x2.5mm **x4**



103004
M2.5 Nut Lock **x4**



330117
Knuckle Pivot Ball Washer **x2**




101012
M3x6xT0.6mm **x2**



116004
Ball Bearing 6x10x3mm **x4**



400002
O-ring S5 4.8X1.5 **x6**

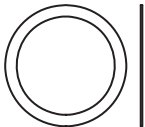

101018
SHIM 13x16x0.2mm **x6**




116006
Ball Bearing 8x16x5mm **x10**




400006
Shock Seal O-Ring **x8**



101019
SHIM 6.0x10.0x0.2mm **x4**

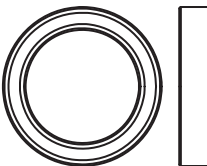

116012
Ball Bearing 15x21x4mm **x10**

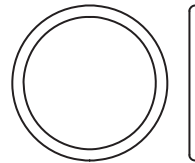


400005
Shock Spring Adjust Nut O-Ring **x4**



101010
M3 Countersunk Washer **x6**



117003
Flange Ball Bearing 3x6x2.5mm **x2**



330119
Front Upper Arm HingPin **x2**



101014
M3 Pivot Ball Bushing **x1**




200135
Rear Wheel Axle Insert (1mm) **x4**



330013
Bevel Gear Shaft **x6**




200136
Rear Wheel Axle Insert (2mm) **x2**




330015
Pin M2.2x9.9mm **x6**




101020
3mm Countersunk Washers (RD) **x6**



330124
Pin M3.0x16.8mm **x4**



330111
Pin M2.5x14.8mm **x6**



330115
Steering Knuckle Pivot Ball Turnbuckle **x4**




330123
Rear Upper Sus. Arm Turnbuckles **x2**




330126
Steering Turnbuckle **x2**




330155
Steering Servo Turnbuckle (M3x30mm) **x1**




330103
Front/Rear Lower Arm HingPin **x4**




330120
Rear Hub Carriers Hing pin **x2**




330132
Shock Shaft (L) **x2**




330133
Shock Shaft (S) **x2**



330109
F/R Drive Shaft 93.5mm **x4**



330240
BE1 Center Front Drift Shaft 100mm **x1**



330108
X-system C/R Drive Shaft 125mm **x1**




115014
Shock Spring 1.6mm (L) **x2**




115013
Shock Spring 1.6mm (S) **x2**




115004
Servo Saver Spring **x1**

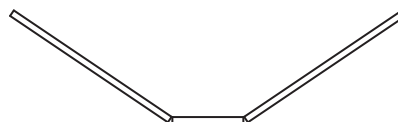

115005
Rear Sway Ball 2.8mm **x1**



115008
Front Sway Ball 2.3mm **x1**




330113
Servo Saver Shaft **x2**



330114
Servo Saver Post **x1**




115019
Body Clip **x2**



320003
Diff. Bevel Gear 18T **x6**



330122
Wheel Nut **x4**

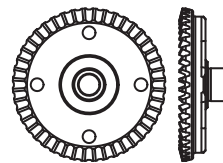

330164
Crown Gear 43T **x2**




320004
Diff. Bevel Gear 10T **x12**



330125
Rear Upper Sus. Arm Ball Stud **x4**



330235
BE1 Motor Gear 13T **x1**

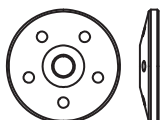


330098
Shock Piston 1.4mmx5 holes **x4**



330127
Steering Linkage Ball Stud 7mm **x4**




330239
BE1 Motor Gear 14T **x1**

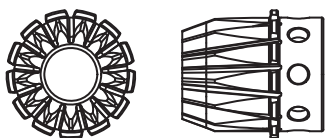

330102
X-system Pinion Gear 13T **x2**



330130
Shock Seal Cover **x4**

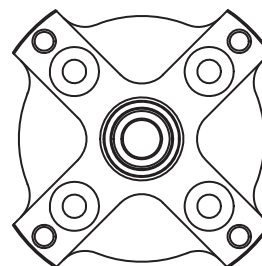


330241
BE1 Center Supar Gear Mount **x1**



330110
CVD Join **x6**



330134
Shock Ball Stud **x10**



330116
14mm Knuckle Pivot Ball **x4**



330136
Sway Bar Ball Stud **x4**




410022A
Shock Bladder **x4**




330121
Wheel Hub **x4**



330138
Shock Cap Stud **x4**

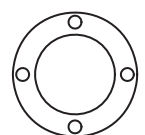

610002
Diff. Gasket (0.5T) **x3**

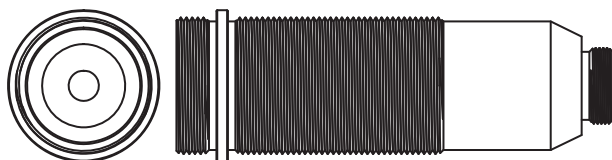


330128
Shock Body (L) **x2**



330135
Servo Saver Nut **x1**




330087
Front Shock Tower (Al) **x1**

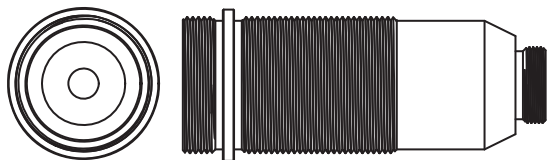


330129
Shock Body (S) **x2**




330131
Shock Spring Adjust Nut **x4**

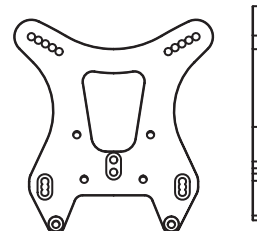


330089
Rear Shock Tower (Al) **x1**




330153
Aluminum Front Chassis Brace **x1**

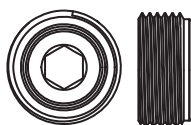


330118
Knuckle Pivot Ball Nut **x4**



330017
Center Diff. Outdrive **x2**




330152
Aluminum Rear Chassis Brace **x1**

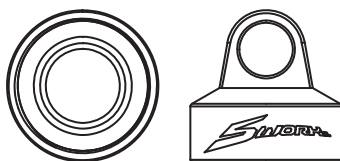


330139
Shock Cap **x4**




330014
Front/Rear Diff. Outdrive **x4**



330086
S350 Front Lower Suspension Plate **x1**

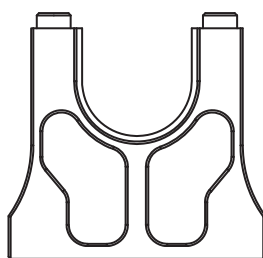


330238
BE1 Aluminum Center Diff. Mount (R) **x1**




330112
CVD Axle **x4**



330088
S350 Rear Lower Arm Holder **x1**

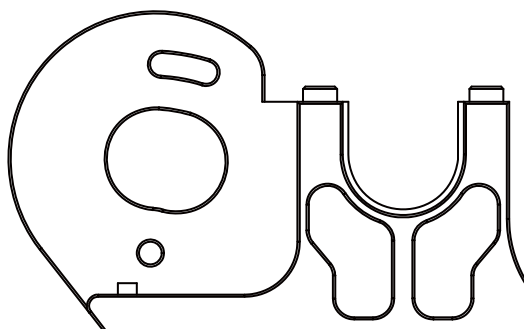


330236
BE1 Aluminum Center Diff. Mount (F) **x1**


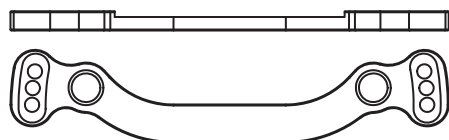


330092
Servo Saver Steering Plate **x1**

SW-2501093
S350 Front Lower Arm Set (L&R) x1

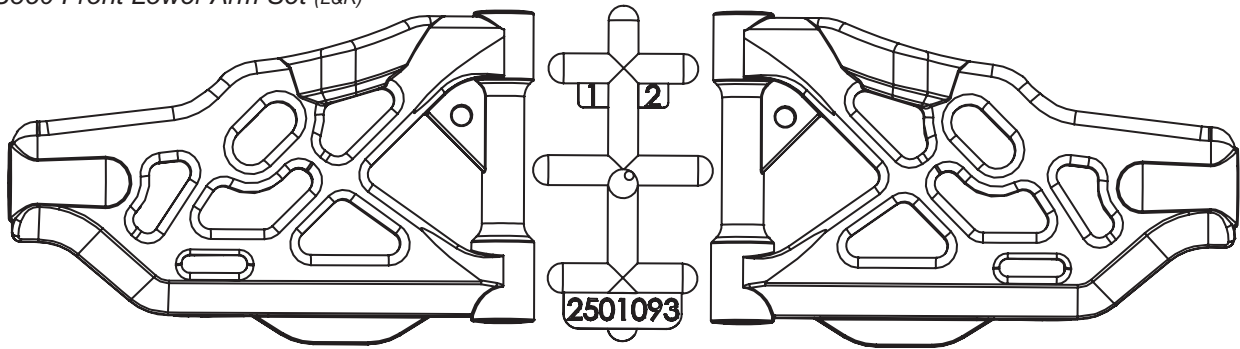


SW-2501113
S350 Front Upper Arm Set (L&R) x1

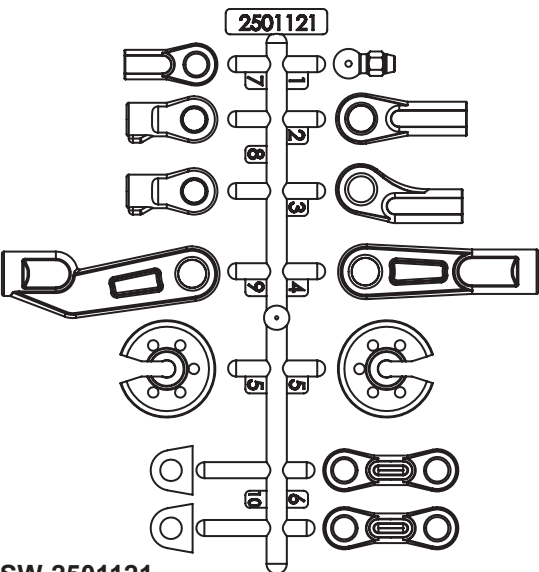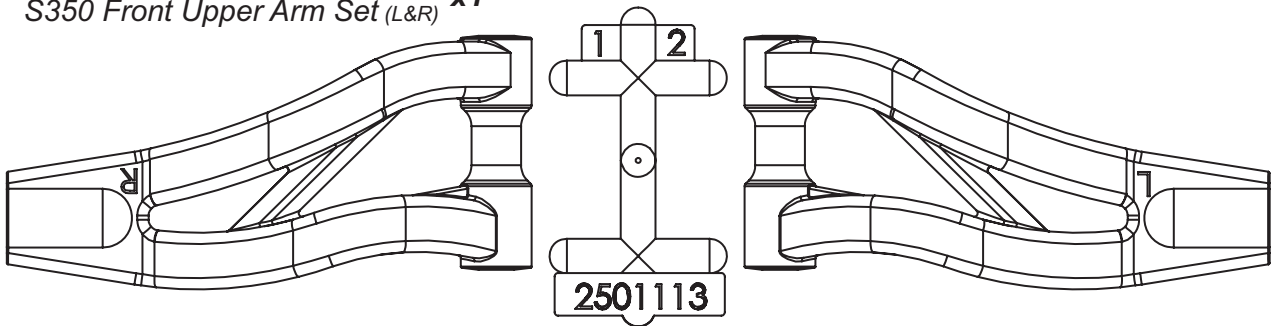


SW-2501121
S350 Ball End Set with Shock Plastic Parts (2 Set)





SW-2501098
S350 Front Steering Knuckle Set (L&R) x1

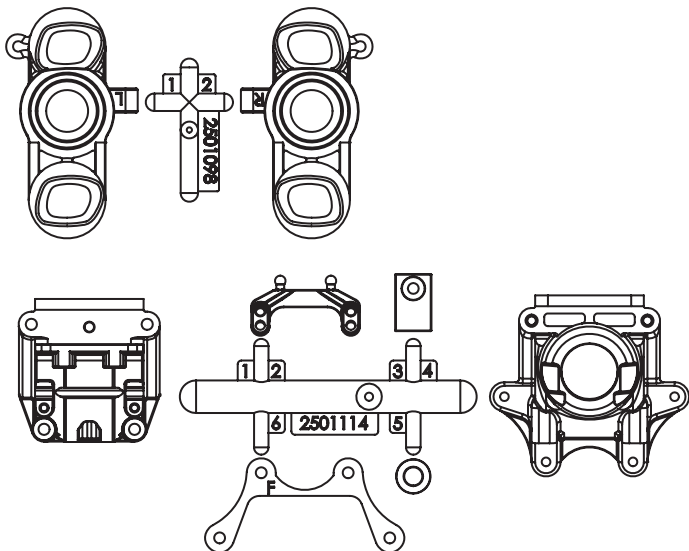


SW-2501114
S350 Gear Box Set (F&R) x2

SW-2501096
S350 Full Arm Holder Set (7pc) x1

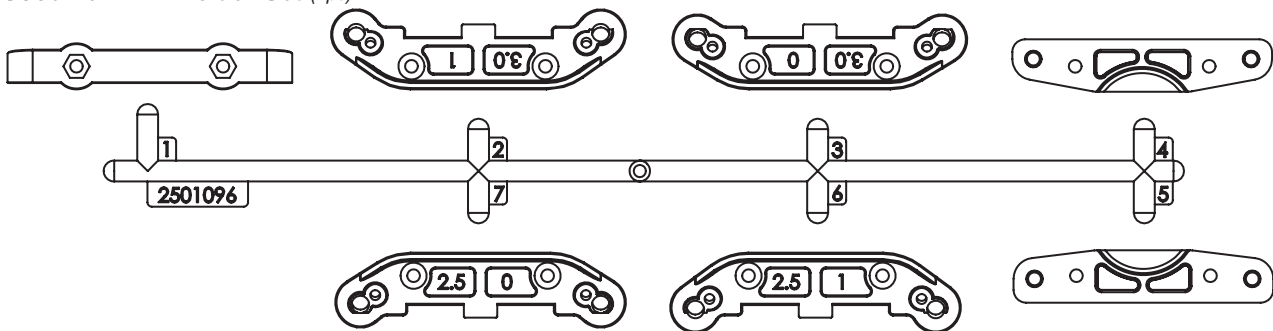


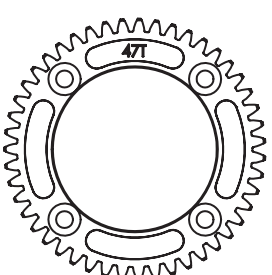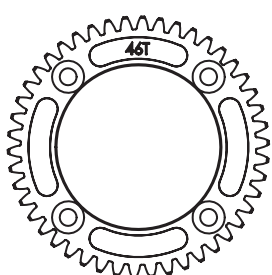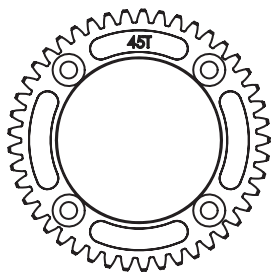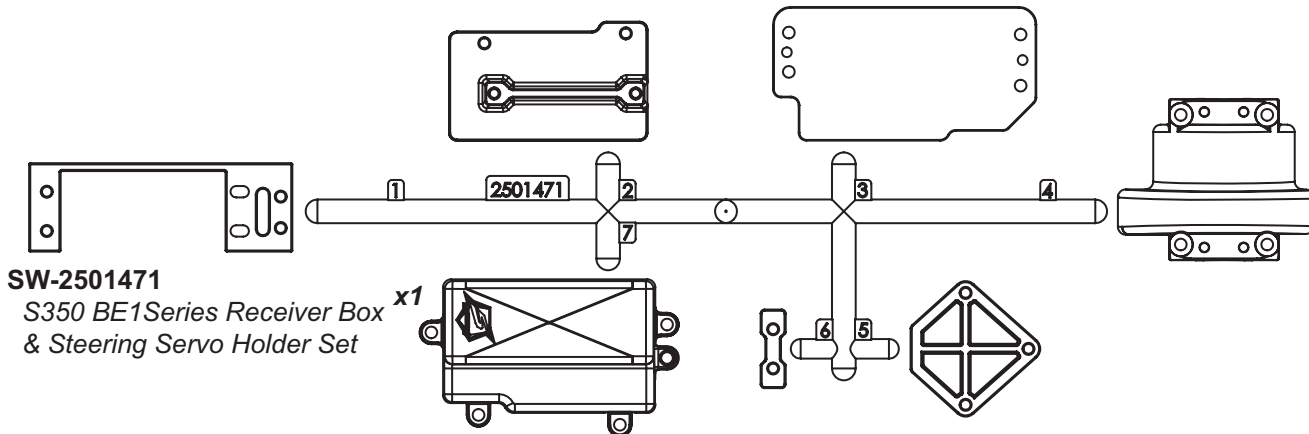

SW-2501469
BE1 Supar Gear 45T Plastic **x1**
BE1 Supar Gear 46T Plastic **x1**
BE1 Supar Gear 47T Plastic **x1**

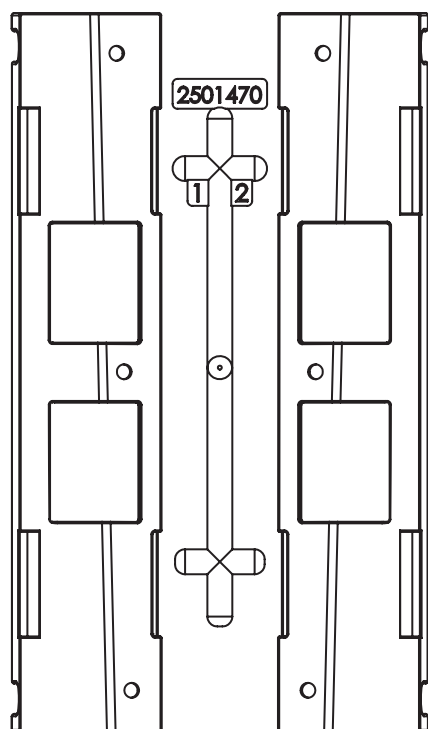


SW-210002
Diff. Case **x3**

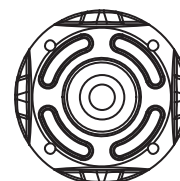


SW-2501122
S350 Setting Bellcrank Set **x1**
with Servo Horn Set


SW-2501470
S350 BE1 Series LiPo **x1**
Battery(25mm)
Case Set

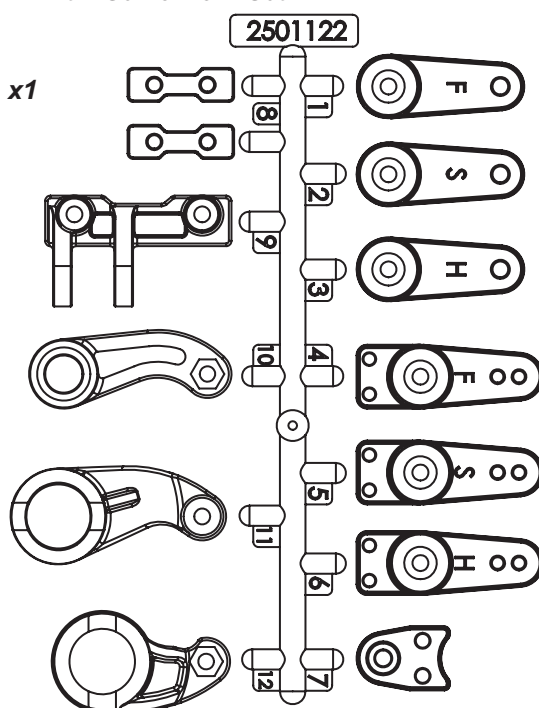


SW-2501100
S350 Pivot Ball Cup **x4**
Caster Insert Set

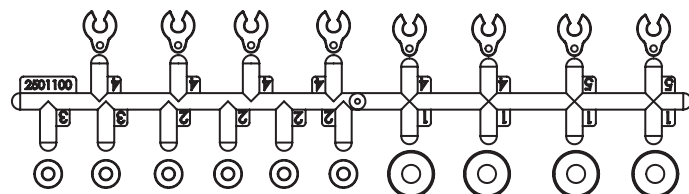



SW-2501094
S350 Rear Lower Arm Set (L&R) **x1**

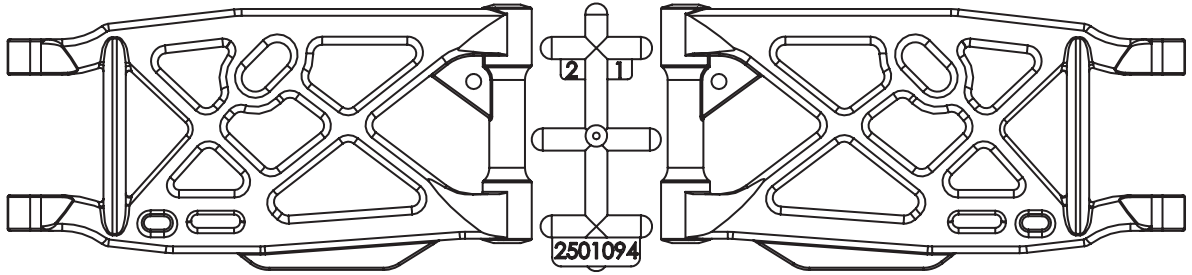


SW-2501097
S350 Wing Stay Set with Bumper **x1**

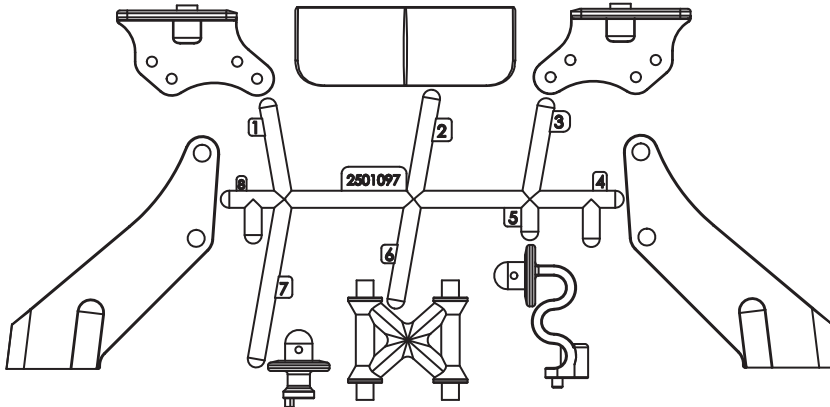



SW-2501118
S350 Wheel Dusty Cover Set **x1**

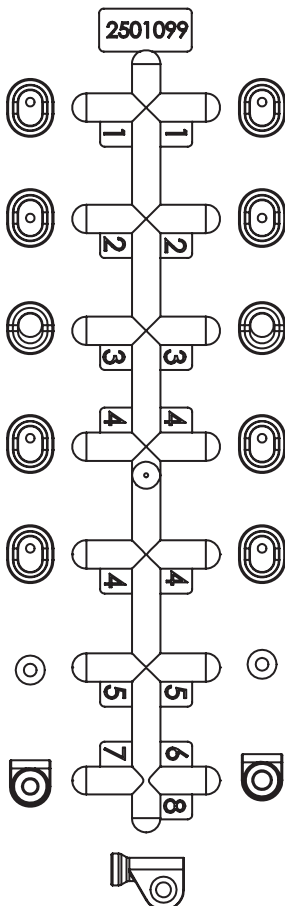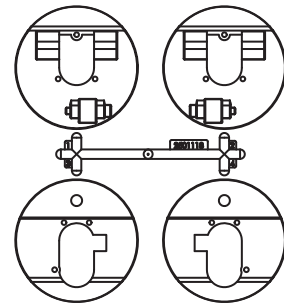

SW-2501099 **x2**
S350 R/F Insert
Brake
Throttle Linkage
Linkage Holder

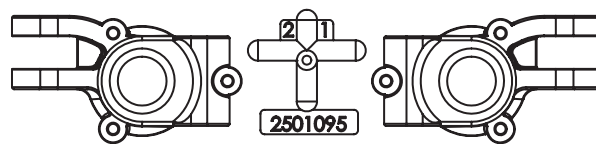

SW-2501095
S350 Rear Hub Carrier Set (L&R) **x1**

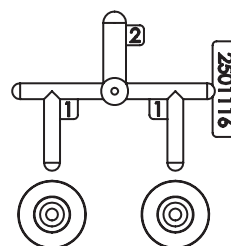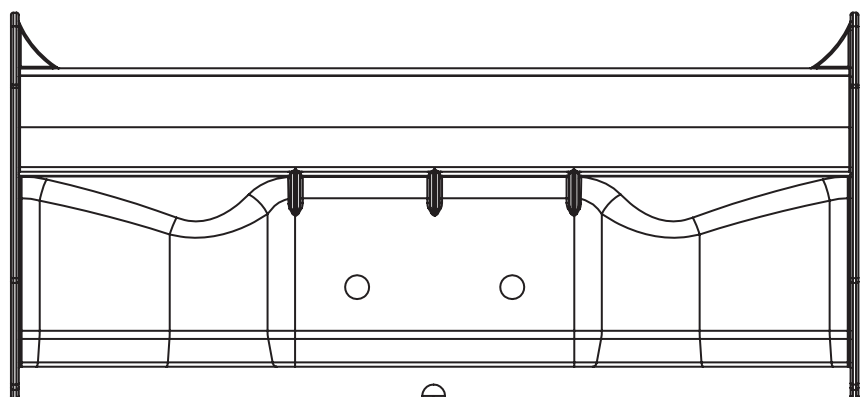


SW-2501116
S-WORKz
High Done Force Wing Set **x1**
(BK)(Fit S350)

Operation Guide



Assemble front and rear

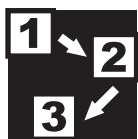

Assemble in the specified order



Assemble both left and right sides



Assemble for 2 sets



Assemble for 4 sets



overturn



Thread Locking Compound



Grease




Pure Silicone Oil

Safety Precautions

The SWORKz S350 BE1 is a high performance radio control model which needs to be operated with caution and common sense.

The S350 BE1 Pro Kit is not intended for children under the age of 14 without adult supervision. SWORKz shall not be held liable for any loss or damages, whether direct, indirect, act of nature, arising from abuse or misuse of this product or any other product required.

- The LiPO Battery can be dangerous if improperly handled.
- Always keep your LiPO Battery in a cool area and never use it near flames, sparks, or while smoking.
- Keep your LiPO Battery, and all other flammables, out of the reach of children.
- After running your car, all parts of the Motor and ESC can become extremely hot. Be careful not to touch these parts.
- This model is controlled by your radio controller and can be vulnerable to interference from many outside sources. This interference can cause a loss of control so it is necessary to operate this model in an open area to avoid personal or property damage. Always ensure turning on your radio first.
- Keep all the products included in the package out of the reach of children.
- This model contains many fast rotating parts. Never touch them during operation.
- Follow the instructions included with your radio gear.
- Never operate your model near people or property. The speed of this model has the potential to injure people and or damage property if misused.
- Always use original SWORKz spare parts and option parts.
- Always ensure that the buggy is in proper working condition before use.
- Always exercise caution when using any tools.




330015
Pin M2.2x9.9mm x4



400002
O-ring S5 4.8X1.5 x4



116006
Ball Bearing 8x16x5mm x4

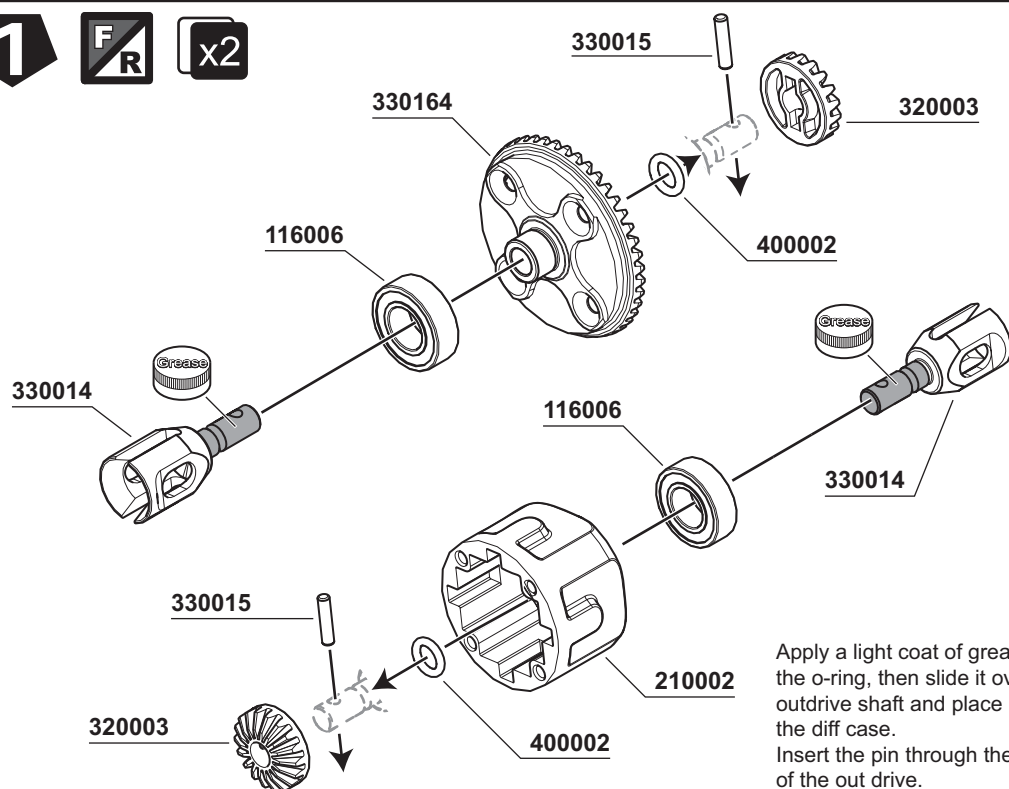

Apply a light coat of grease to the o-ring, then slide it over the outdrive shaft and place it in the diff case. Insert the pin through the hole of the out drive.




108003
M3x10mm FH/ST HEX Screw x8




330013
Bevel Gear Shaft x4



101004
Washer 3.5X10X0.2mm x8

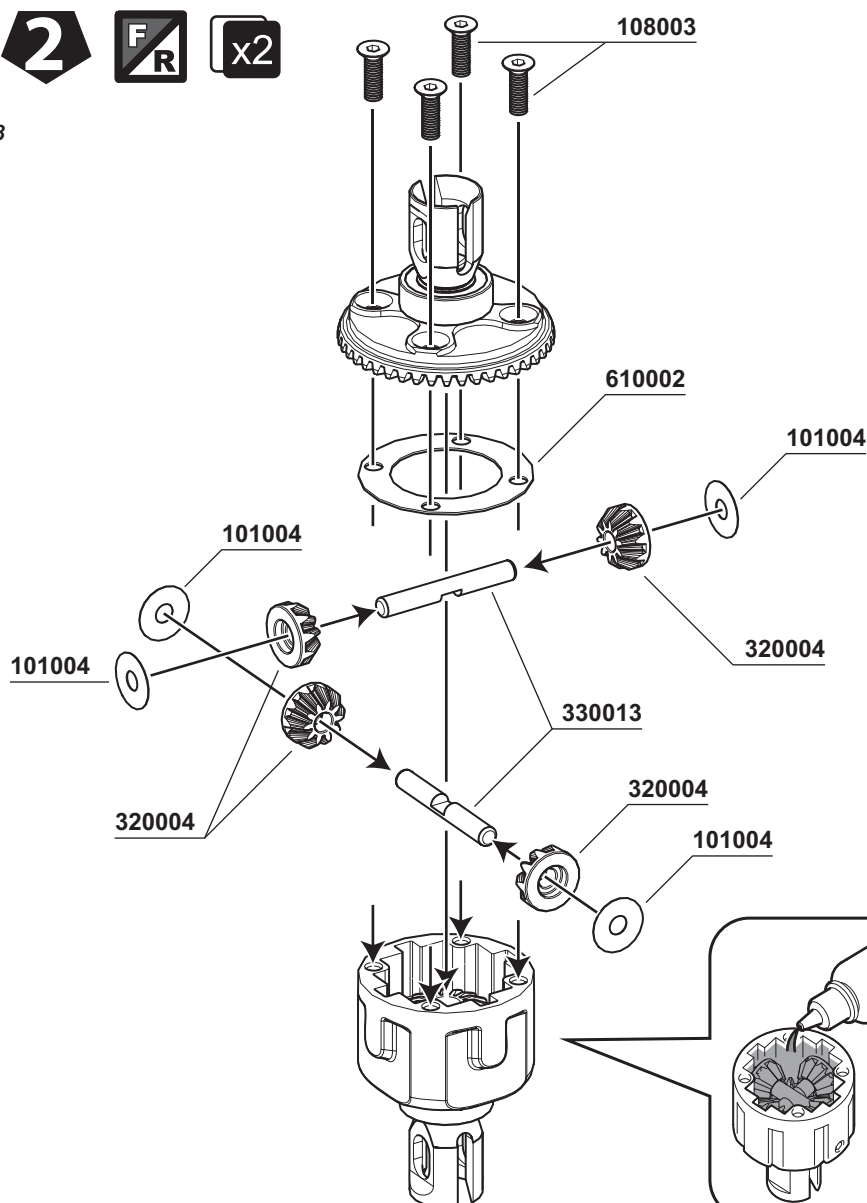

Fill the differentials with oil up to 80% full. Use SWORKz diff. Oil 5000cps for the front Diff. and 3000cps for the rear Diff.




330015
Pin M2.2x9.9mm x2



400002
O-ring S5 4.8X1.5 x2



116006
Ball Bearing 8x16x5mm x2

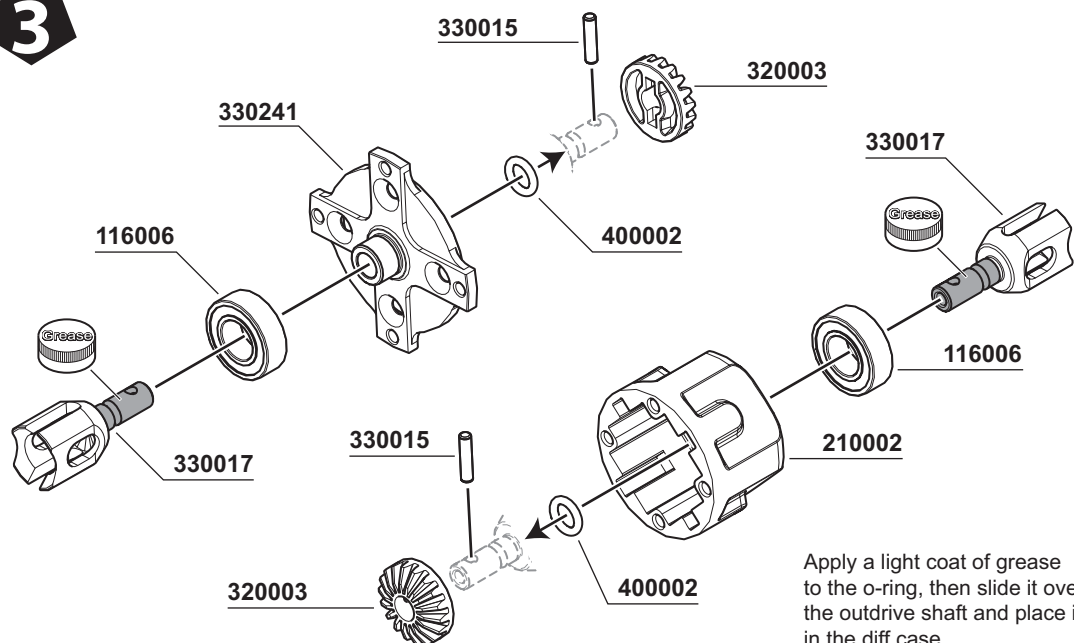

Apply a light coat of grease to the o-ring, then slide it over the outdrive shaft and place it in the diff case. Insert the pin through the hole of the out drive.



108007
M3x6mm FH/ST HEX Screw x4




108003
M3x10mm FH/ST HEX Screw x4



330013
Bevel Gear Shaft x2



101004
Washer 3.5X10X0.2mm x4

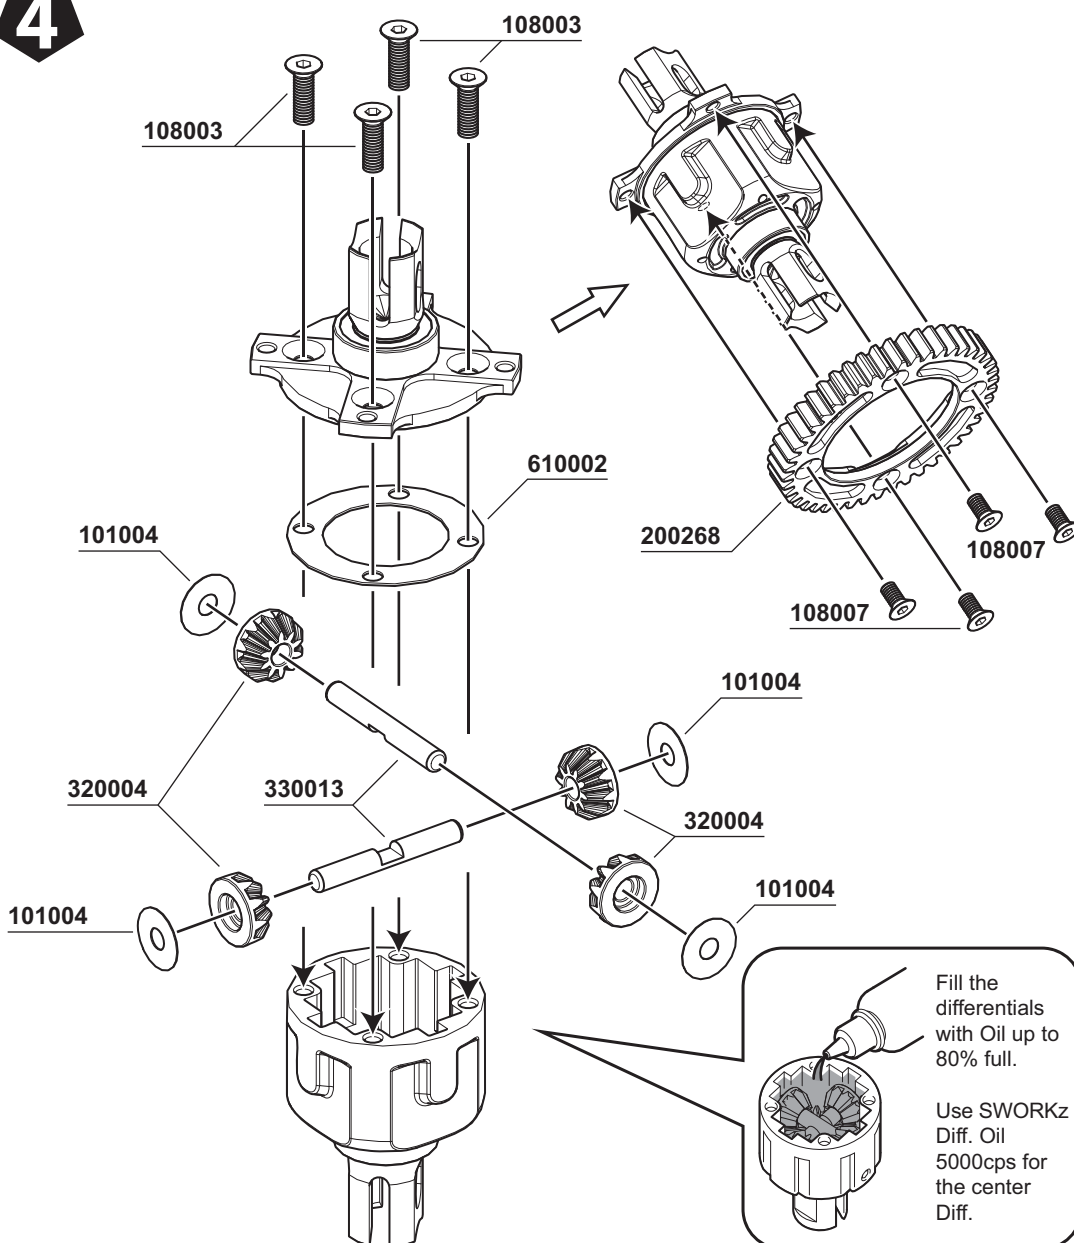

Fill the differentials with Oil up to 80% full.

Use SWORKz Diff. Oil 5000cps for the center Diff.



106010

M3x6mm Hex Socket OH/TP Screw


x6



330111

Pin M2.5x14.8mm


x2

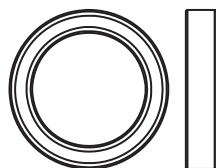

116012

Ball Bearing 15x21x4mm

x6

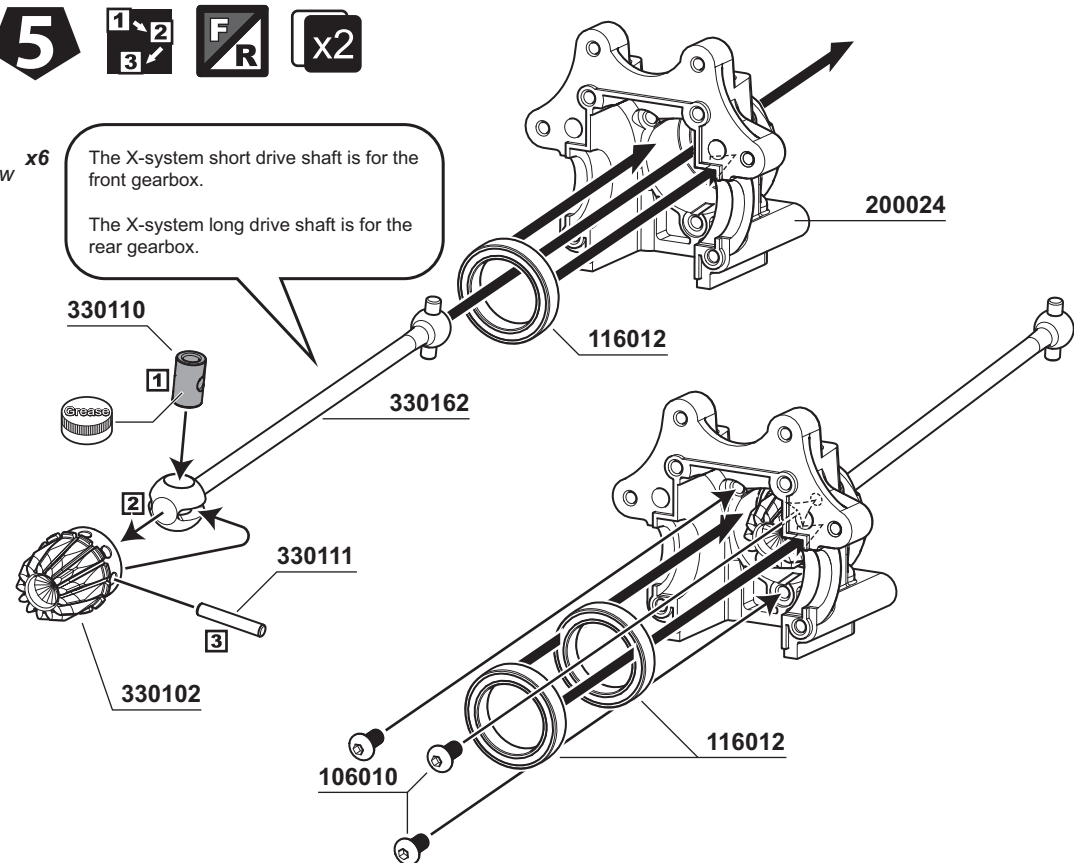

108001

M3x12mm FH/ST HEX Screw

x4



108008

M3x35mm FH/ST HEX Screw


x2



101020

3mm Countersunk Washers (RD)


x2

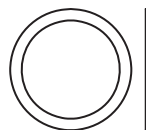

101018

SHIM 13x16x0.2mm

x2

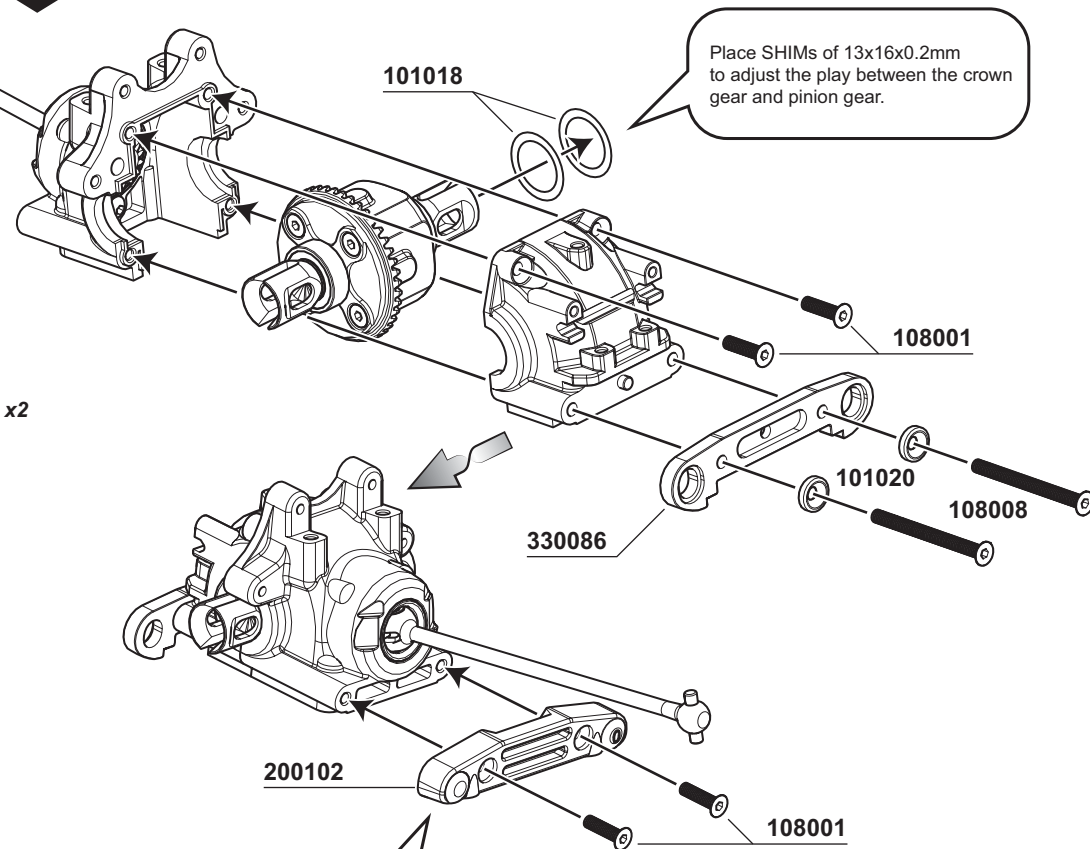

The standard front lower arm holder (200102) gives a 0° kick-up for your front lower suspension. Use the option(200103) to get 1° kick-up for your front lower suspension.
200102 Front Lower Arm Holder (0 degree)
200103 Front Lower Arm Holder (1 degree)

BAG D**7****Rear**


108001
M3x12mm FH/ST HEX Screw x2

108015
M3x16mm FH/ST HEX Screw x2

108008
M3x35mm FH/ST HEX Screw x2


101018
SHIM 13x16x0.2mm x2

Place SHIMs of 13x16x0.2mm to adjust the play between the crown gear and pinion gear.

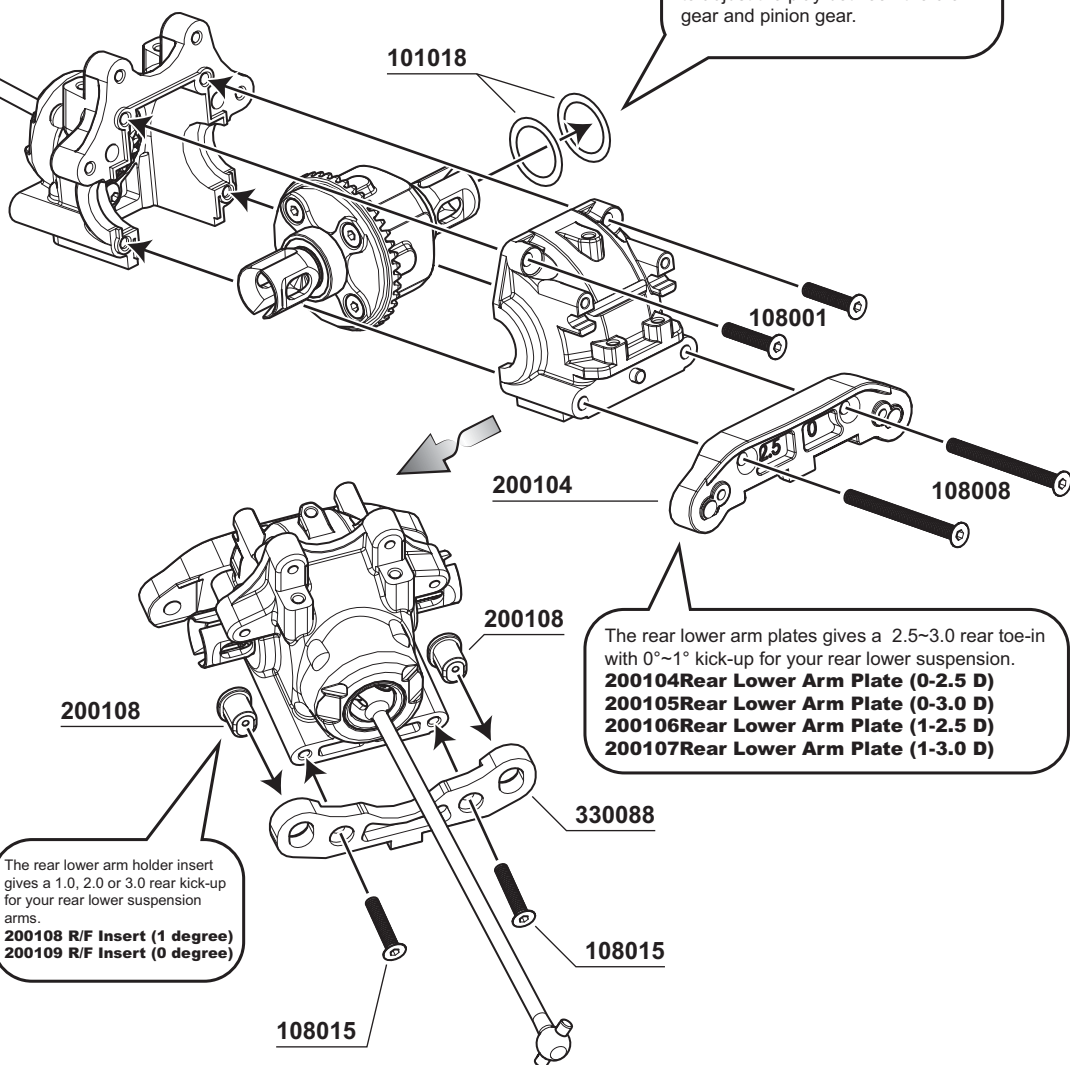
**BAG E****8****R L****x2**

104007
M4x8mm Set Screw x2



106005
M3x15mm Hex Socket OH/TP Screw x2

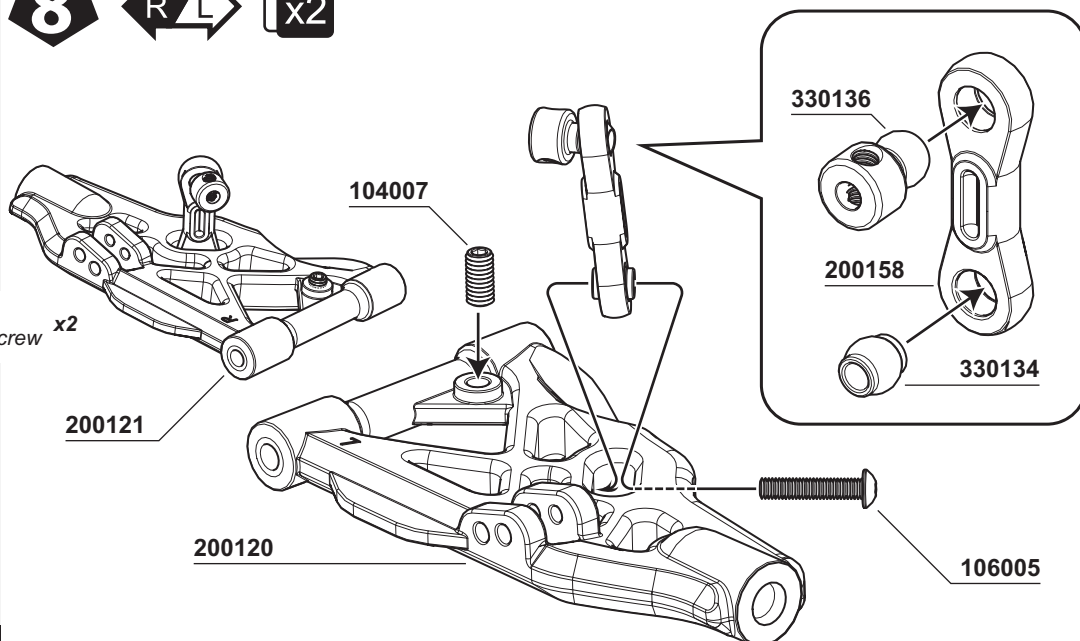

9



330103
Front/Rear Lower Arm HingPin **x2**

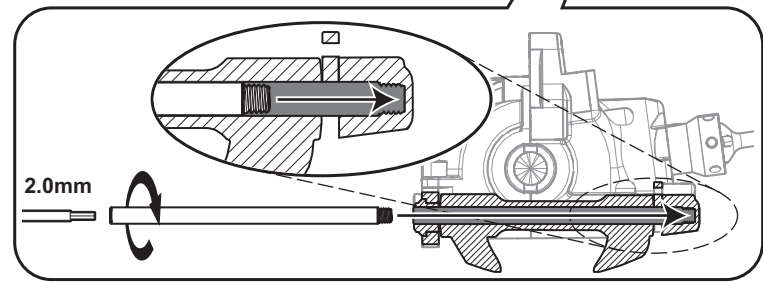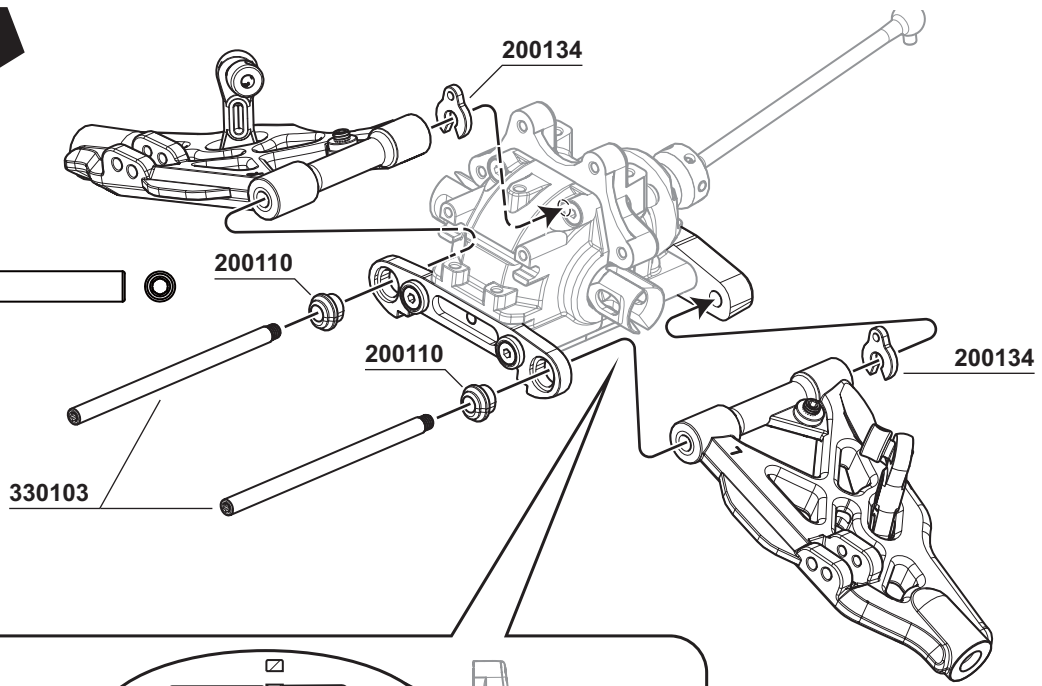


Use a 2mm Hex Wrench and slowly tighten the Hinge Pins.




104004
M3x3mm Set Screw **x2**

10

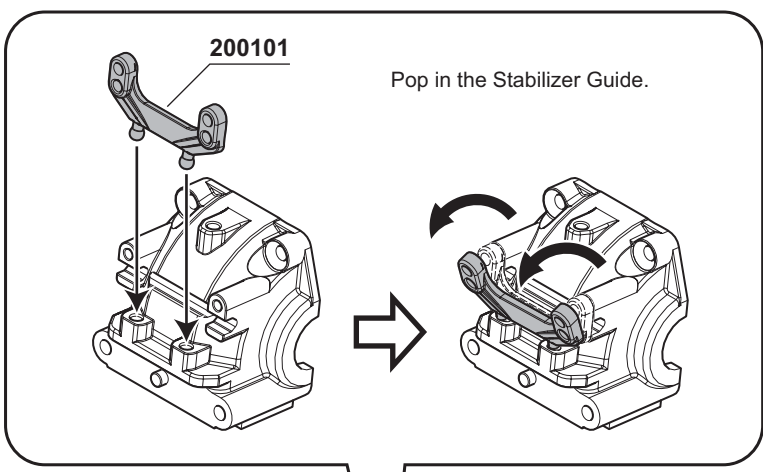

Pop in the Stabilizer Guide.

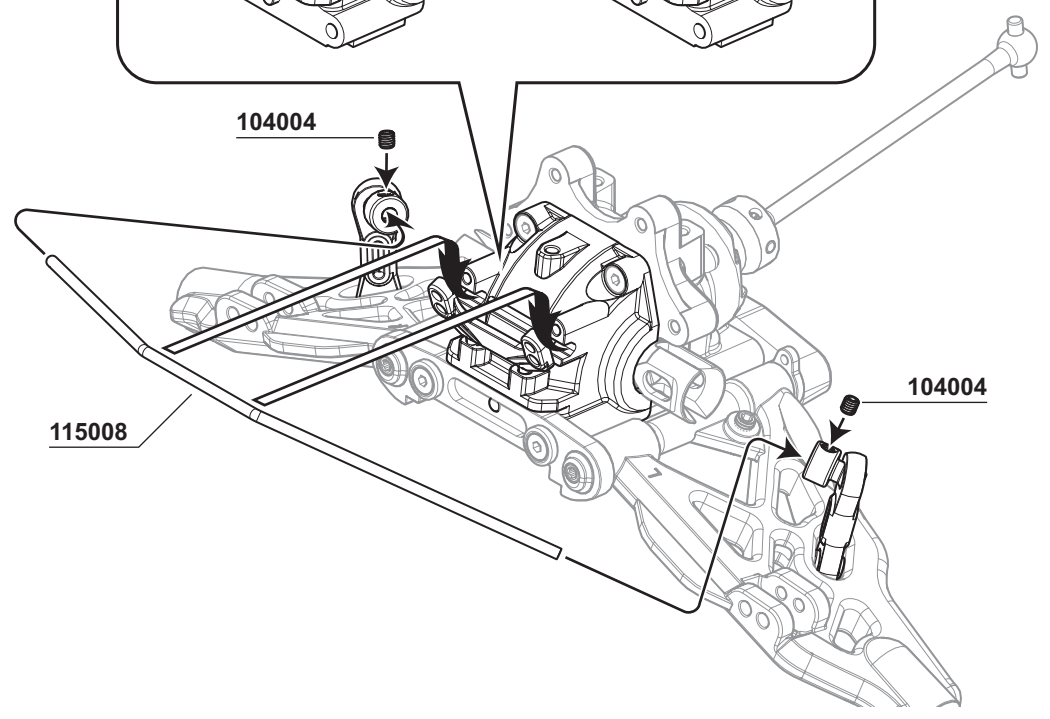





104005
M3x4mm Set Screw **x2**





105004
M2.6x6mm Cap Screw **x2**

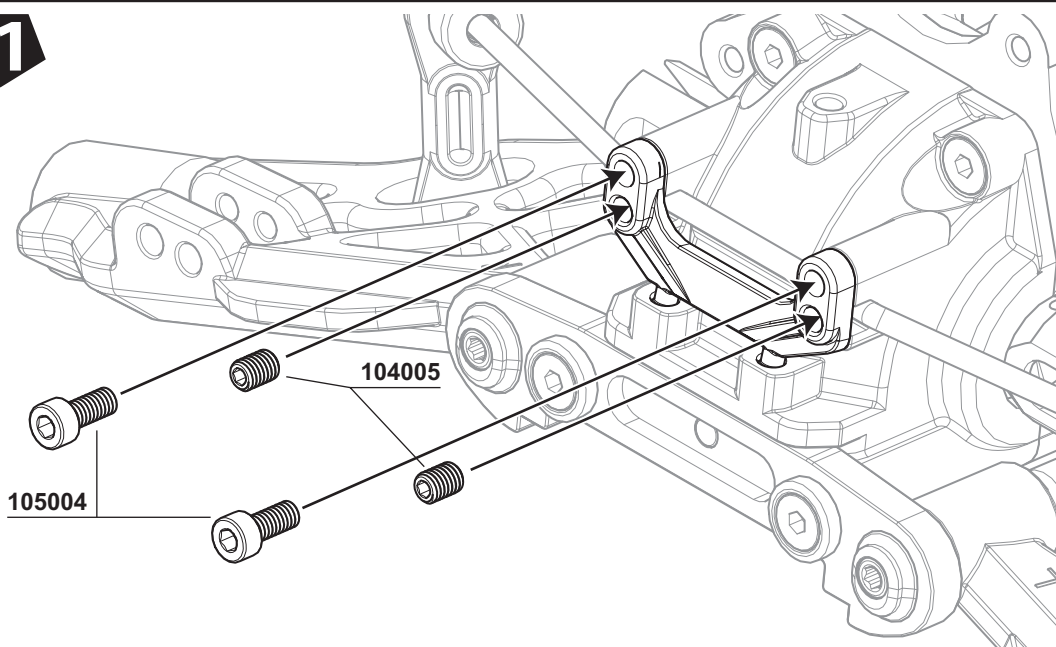

108003
M3x10mm FH/ST HEX Screw **x4**



330115
Steering Knuckle Pivot Ball Turnbuckle **x4**

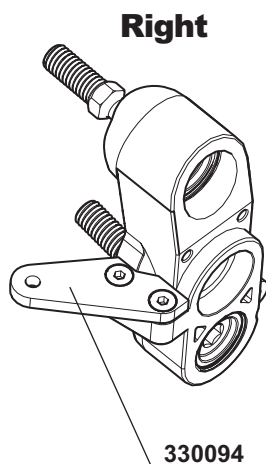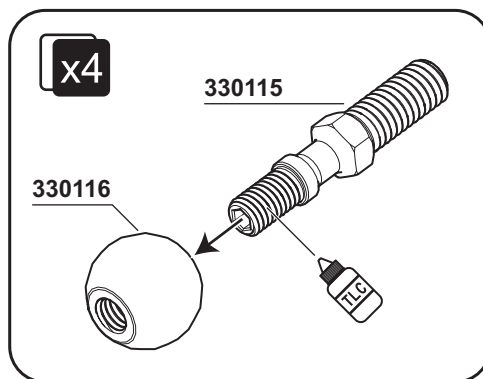


Right

330094

200124

330118

200124

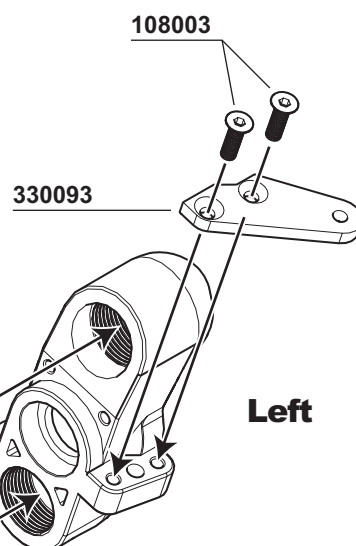

Left


330093

108003


Screw and adjust 330118 Knuckle Pivot Ball Nut so the Knuckle can move smoothly.



104001
M5x4mm Set Screw x2




330111
Pin M2.5x14.8mm x2



330124
Pin M3.0x16.8mm x2




116006
Ball Bearing 8x16x5mm x2

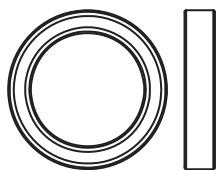

116012
Ball Bearing 15x21x4mm x2

13

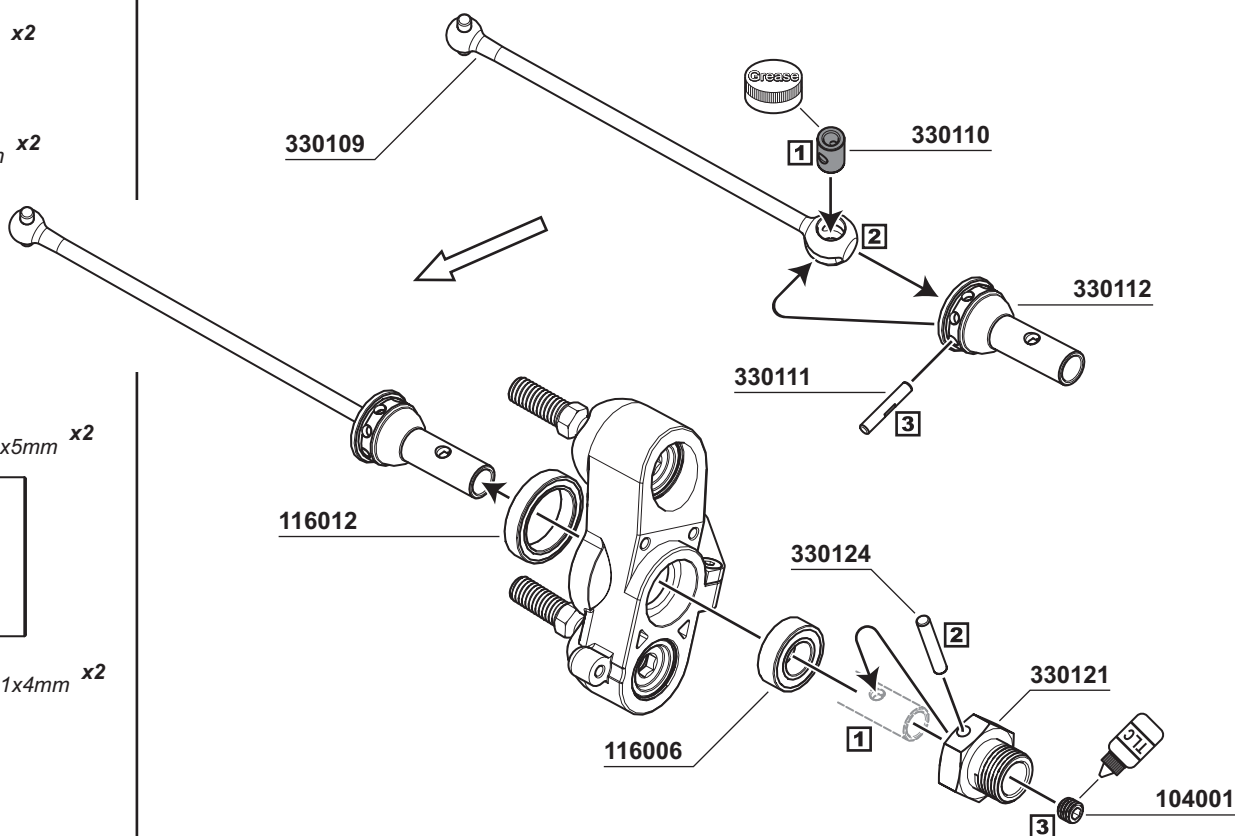

103001
M3 Nut Lock x2



108003
M3x10mm FH/ST HEX Screw x2




108001
M3x12mm FH/ST HEX Screw x2



106002
M3x10mm Hex Socket OH/TP Screw x1

14

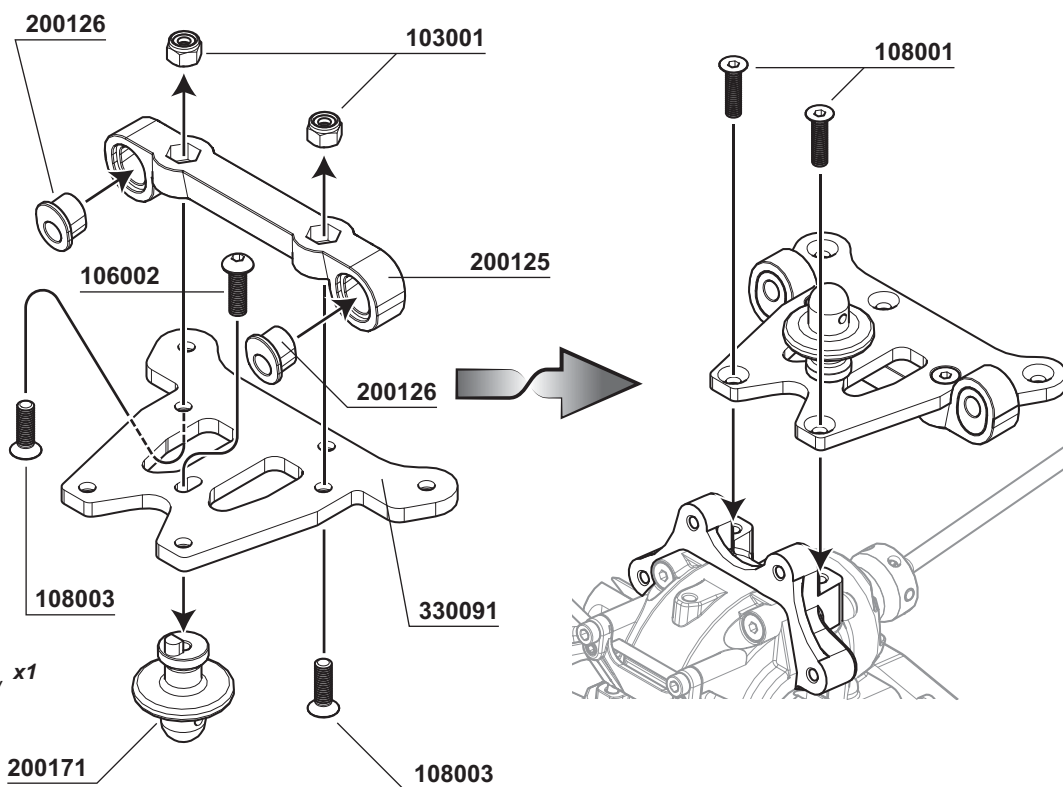





108001
M3x12mm FH/ST HEX Screw **x4**



330119
Front Upper Arm HingPin **x2**

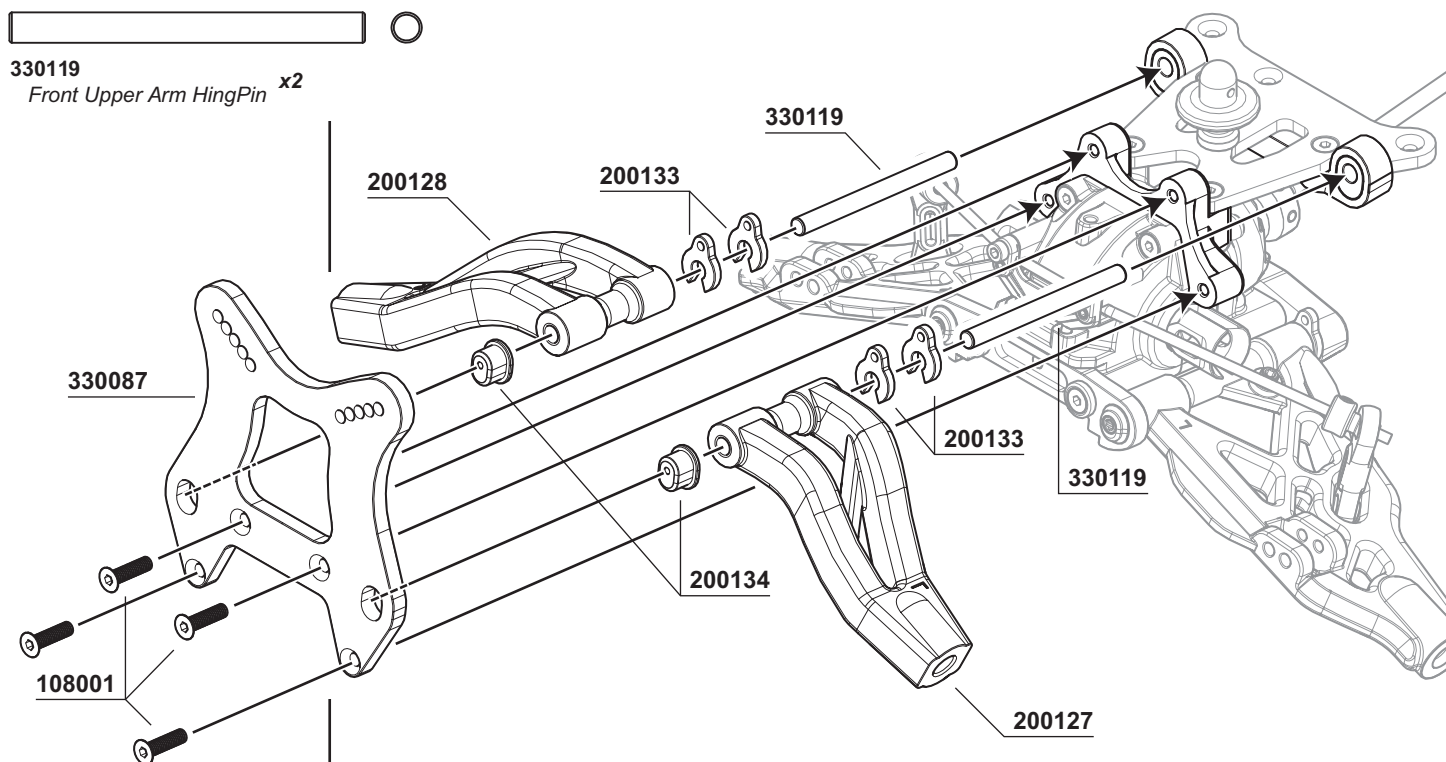

330117
Knuckle Pivot Ball Washer **x2**

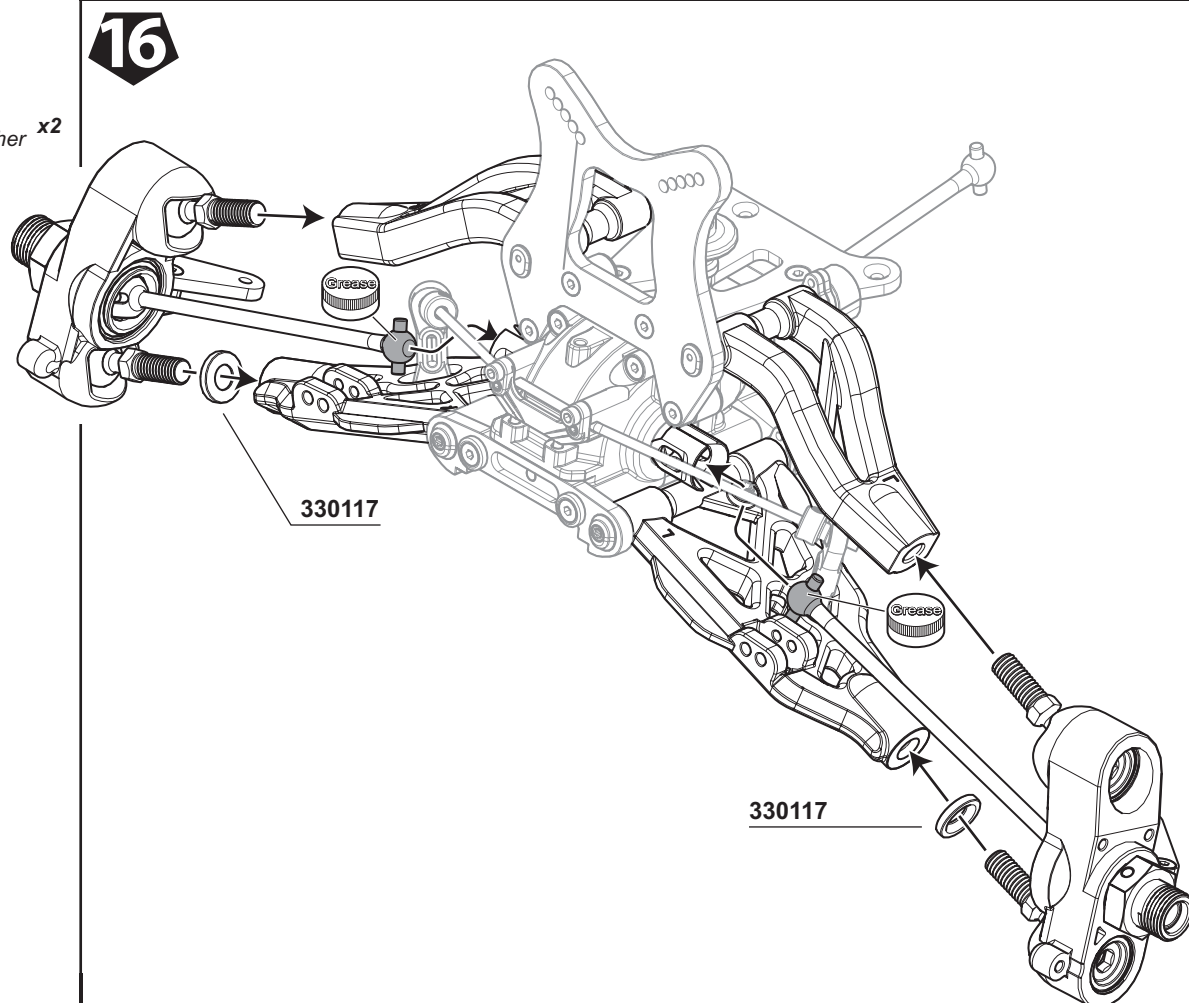



103001
M3 Nut Lock x2



101012
M3x6xT0.6mm x2





117003
Flange Ball Bearing 3x6x2.5mm x2



116004
Ball Bearing 6x10x3mm x2



106002
M3x10mm Hex Socket OH/TP Screw x2

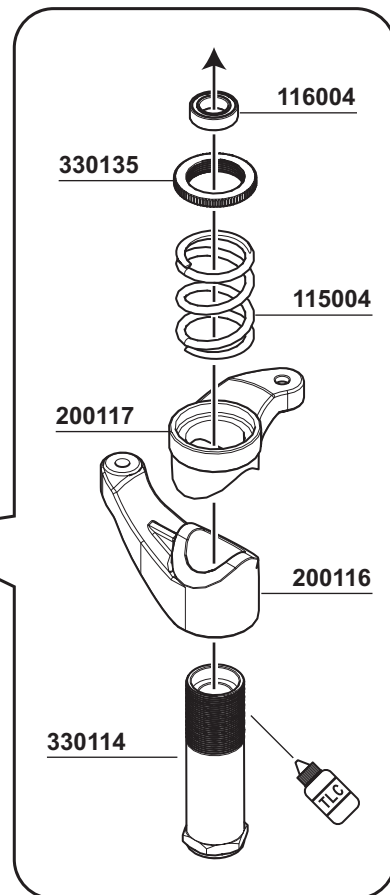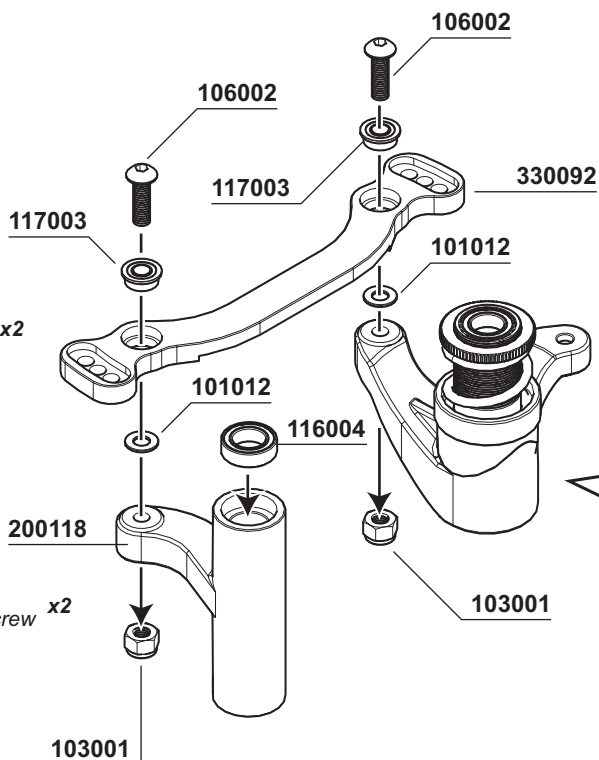


108001
M3x12mm FH/ST HEX Screw x2



116004
Ball Bearing 6x10x3mm x2



101019
SHIM 6.0x10.0x0.2mm x1

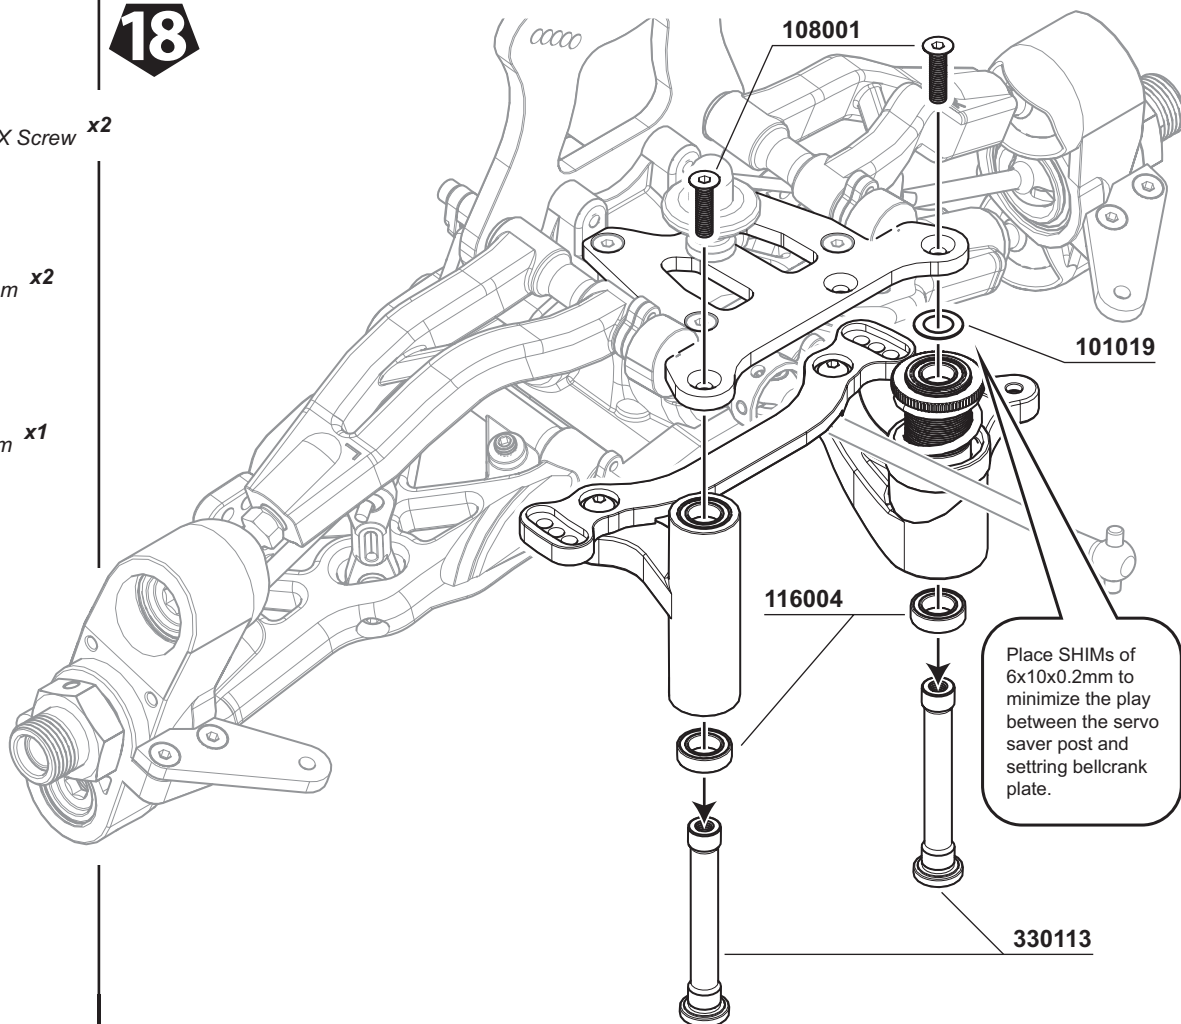




104007
M4x8mm Set Screw **x2**




106005
M3x15mm Hex Socket OH/TP Screw **x2**

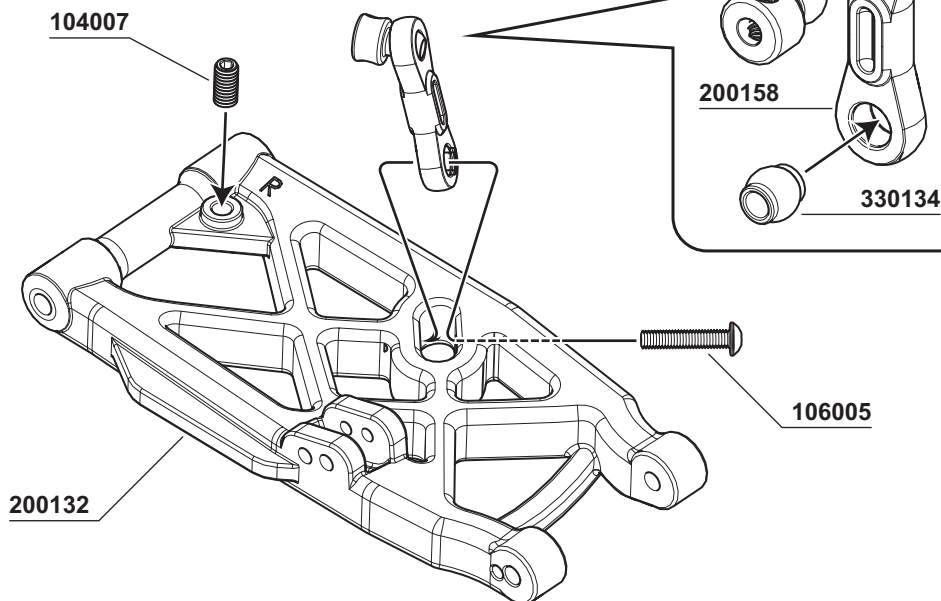


106002
M3x10mm Hex Socket OH/TP Screw **x1**



108015
M3x16mm FH/ST HEX Screw **x4**


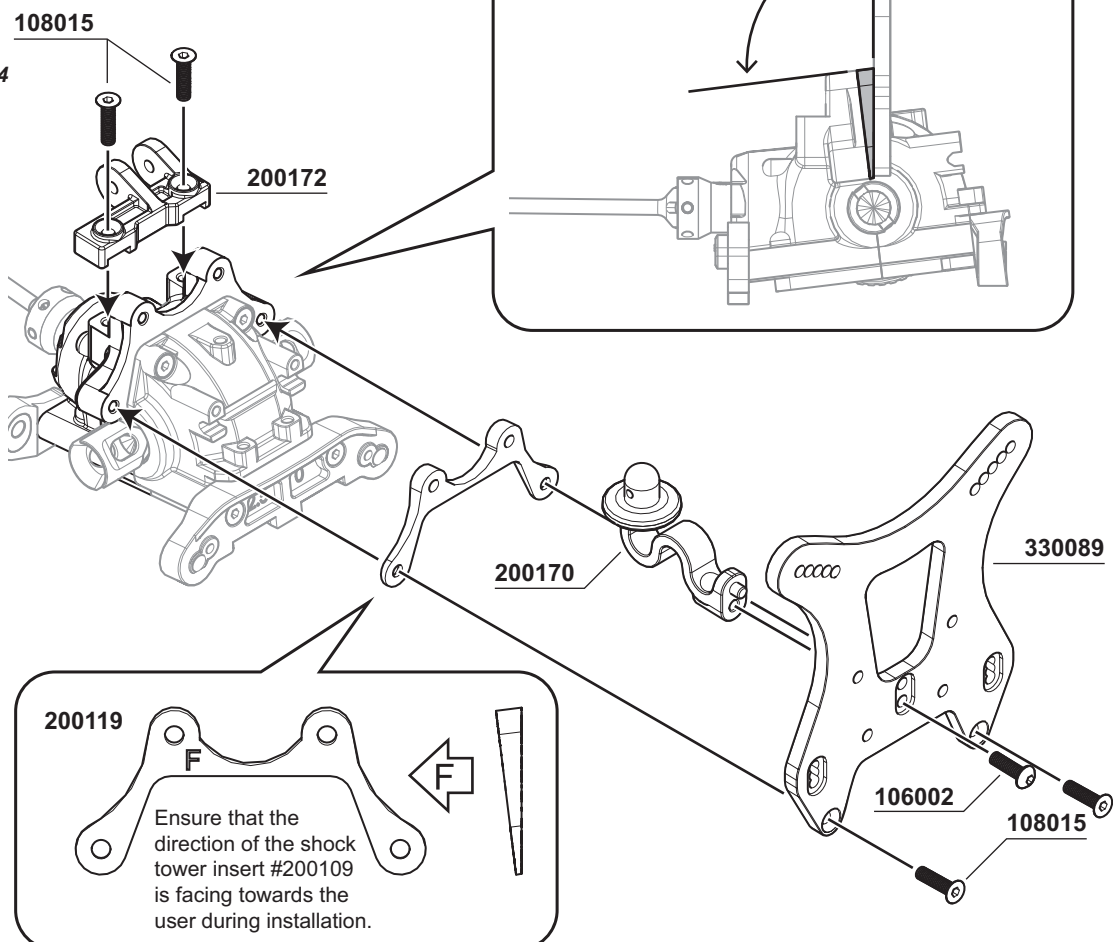


21

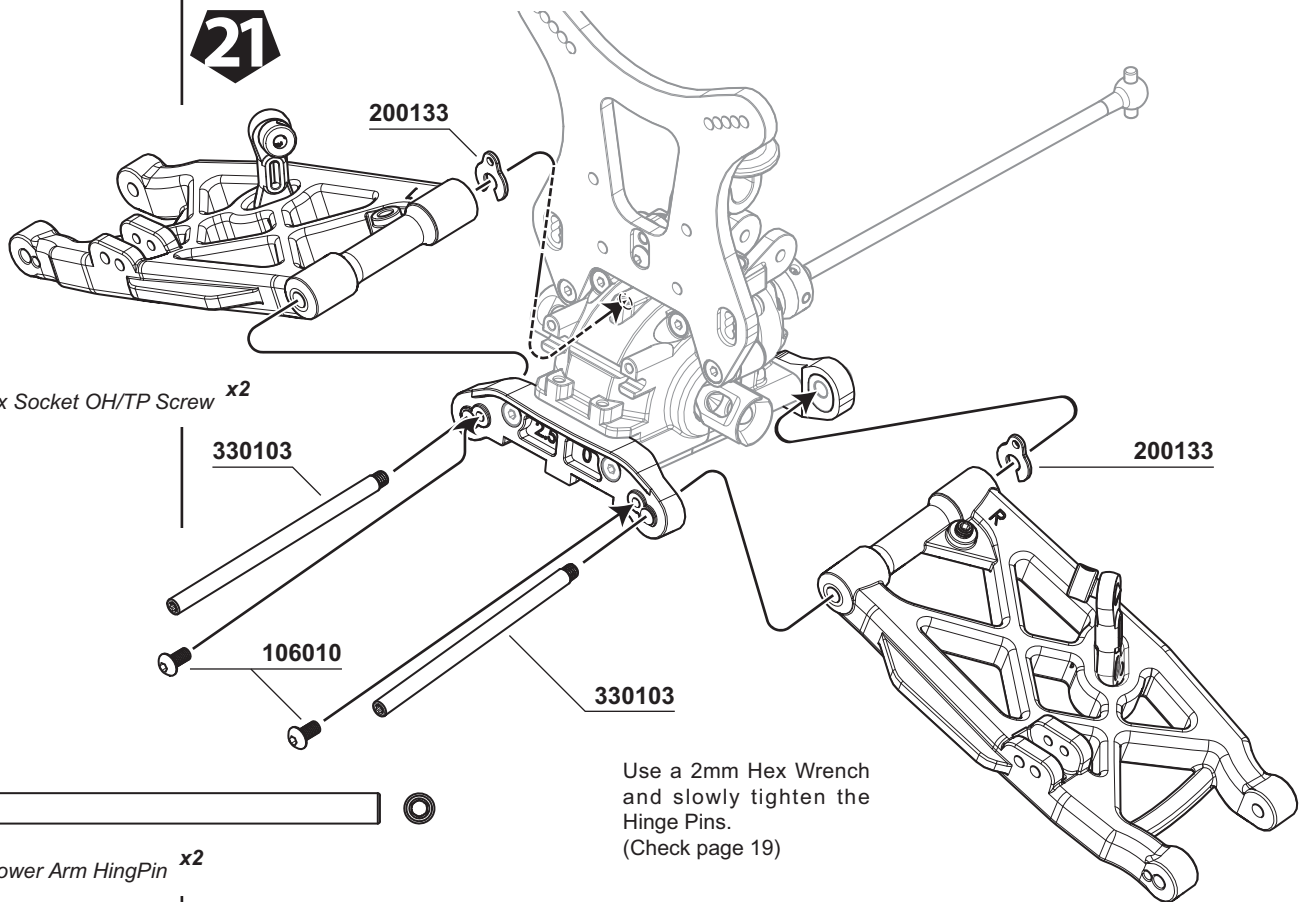

22

104004
M3x3mm Set Screw **x2**

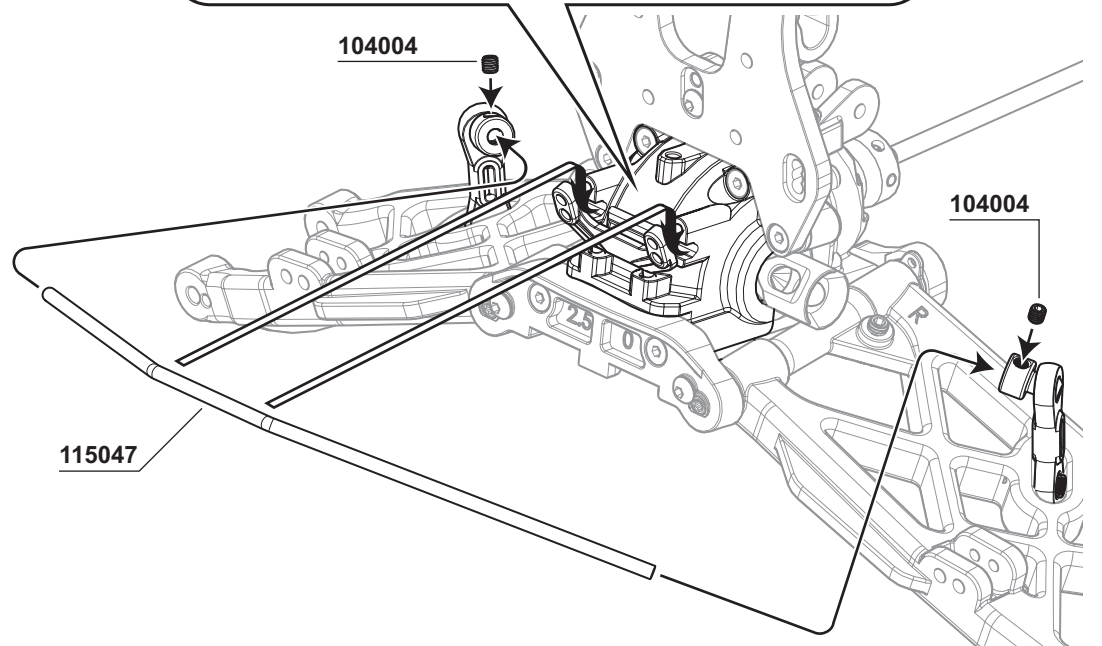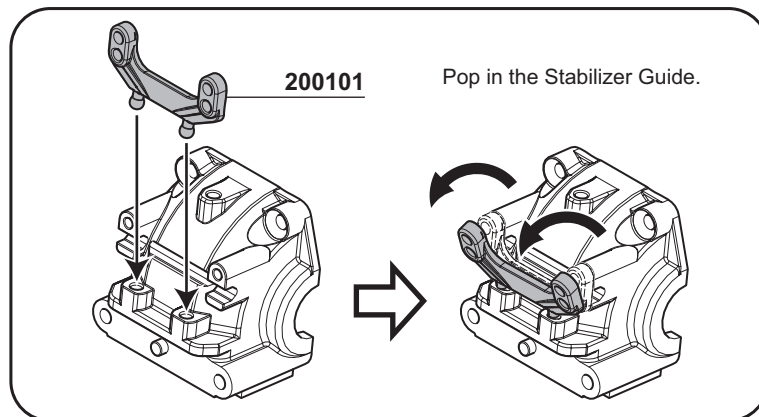




104005
M3x4mm Set Screw **x2**




105004
M2.6x6mm Cap Screw **x2**

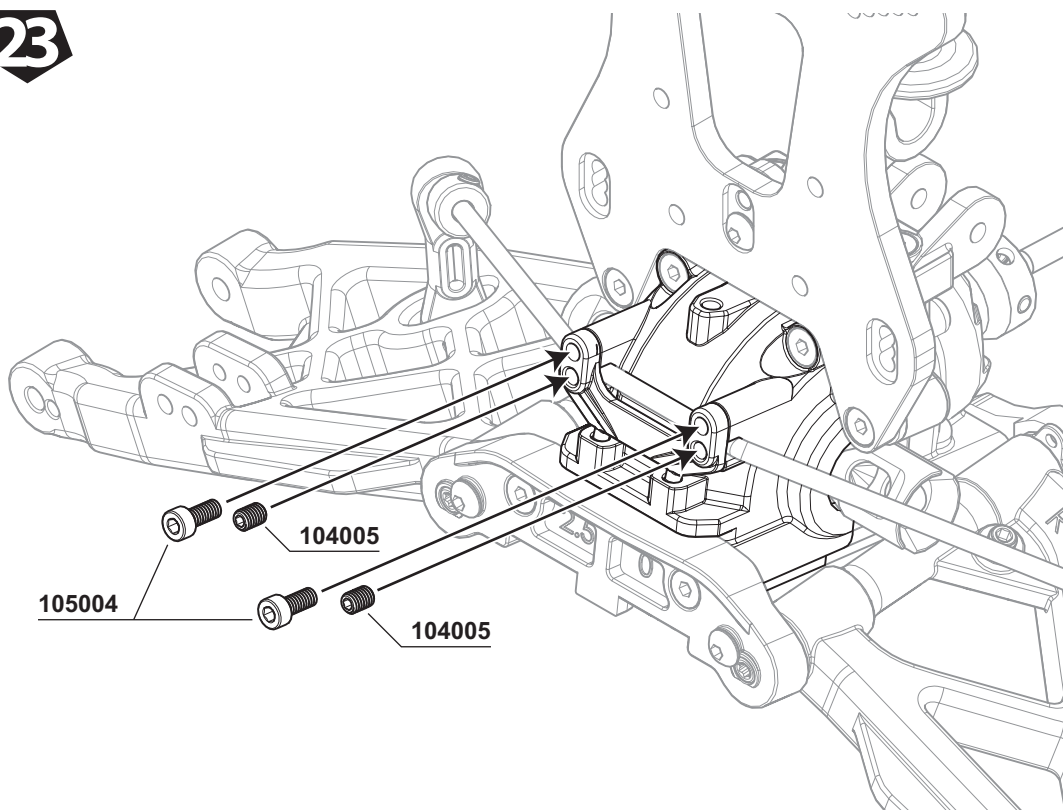

104001
M5x4mm Set Screw **x2**




330111
Pin M2.5x14.8mm **x2**




330124
Pin M3.0x16.8mm **x2**




116006
Ball Bearing 8x16x5mm **x2**

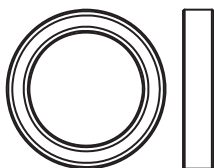

116012
Ball Bearing 15x21x4mm **x2**

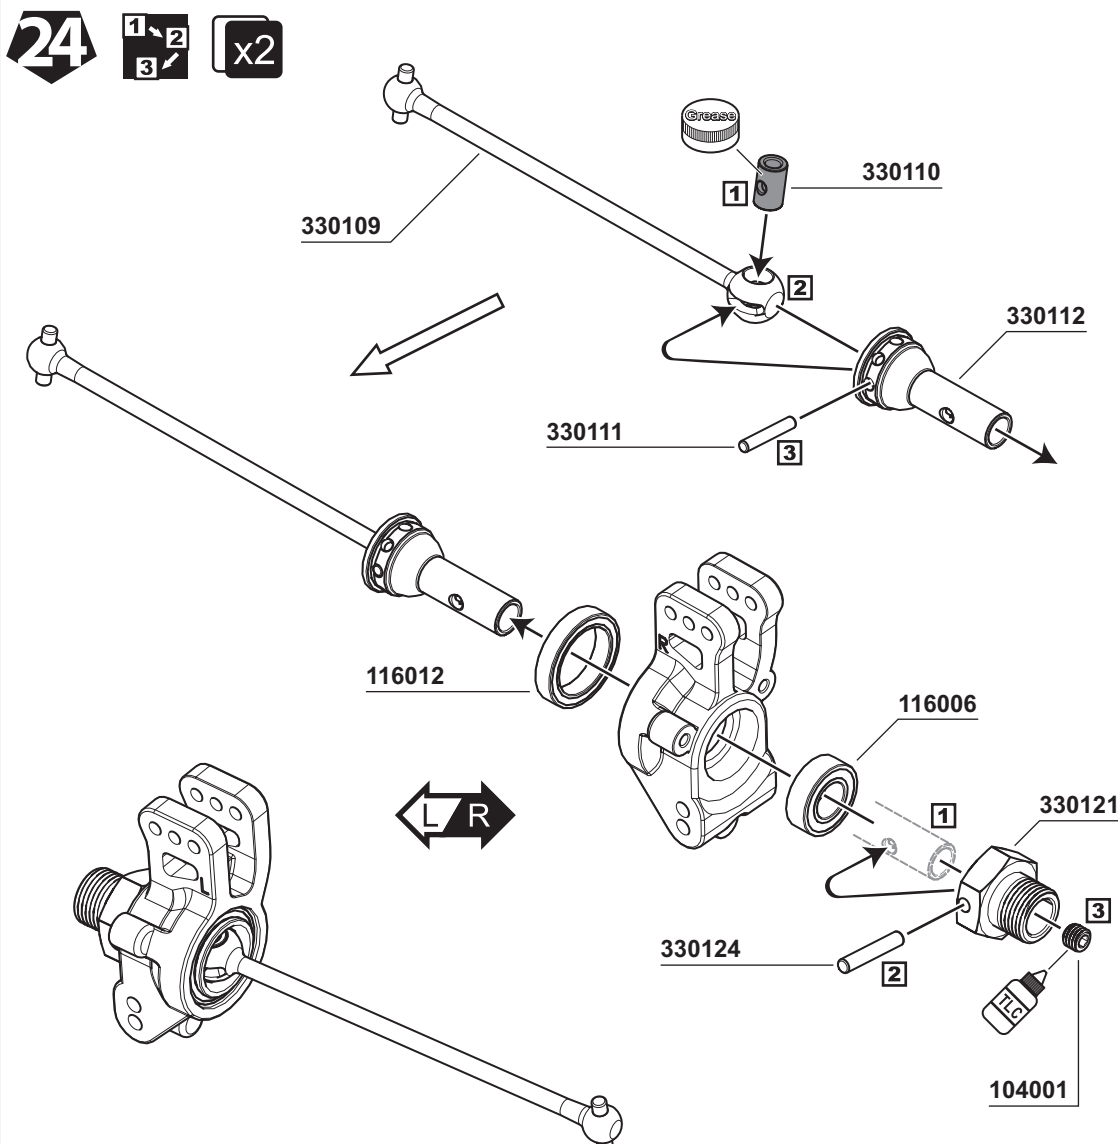

25

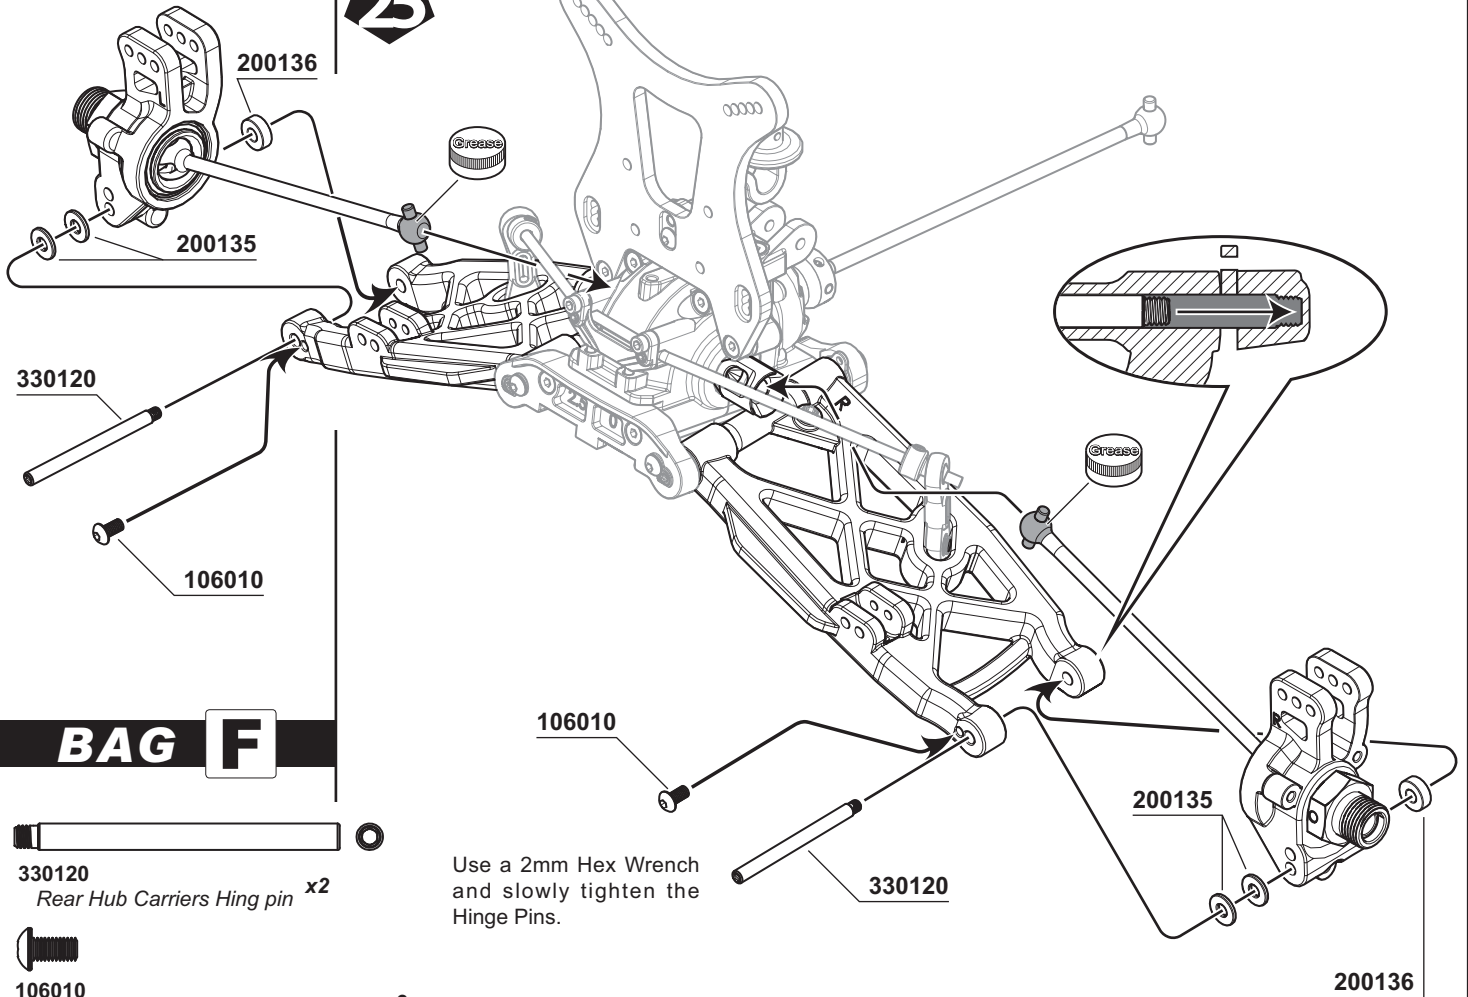

330120
Rear Hub Carriers Hing pin x2

106010
M3x6mm Hex Socket OH/TP Screw x2

Use a 2mm Hex Wrench and slowly tighten the Hinge Pins.

26

R L

x2




200135
Rear Wheel Axle Insert (1mm) x4



200136
Rear Wheel Axle Insert (2mm) x2




330123
Rear Upper Sus. Arm Turnbuckles x2

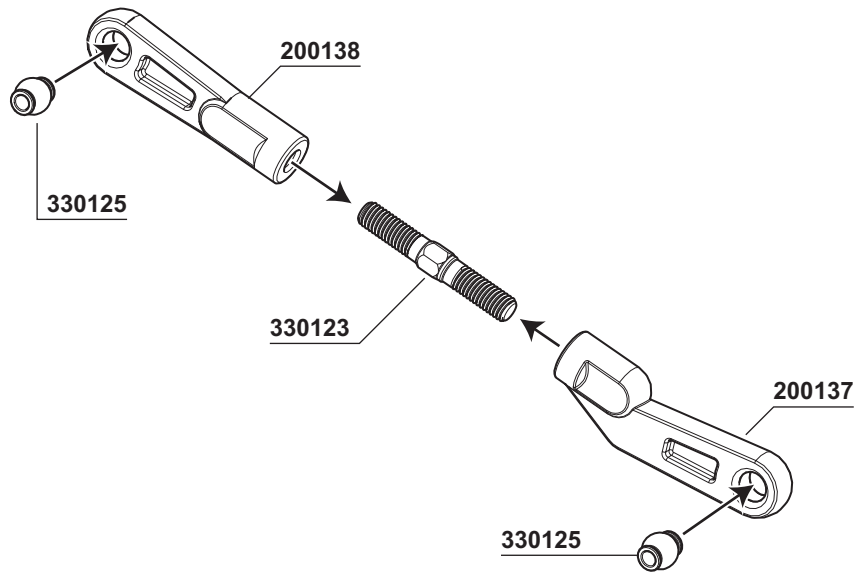

1:1

7.3mm

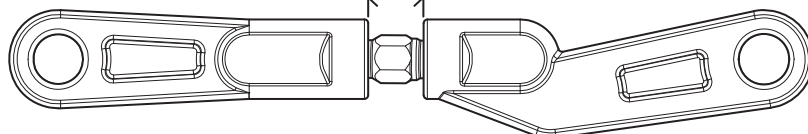



103001
M3 Nut Lock x2




103003
Flange M3 Nut Lock x2



106003
M3x16mm Hex Socket OH/TP Screw x2




105011
M3x23mm Cap Screw x2

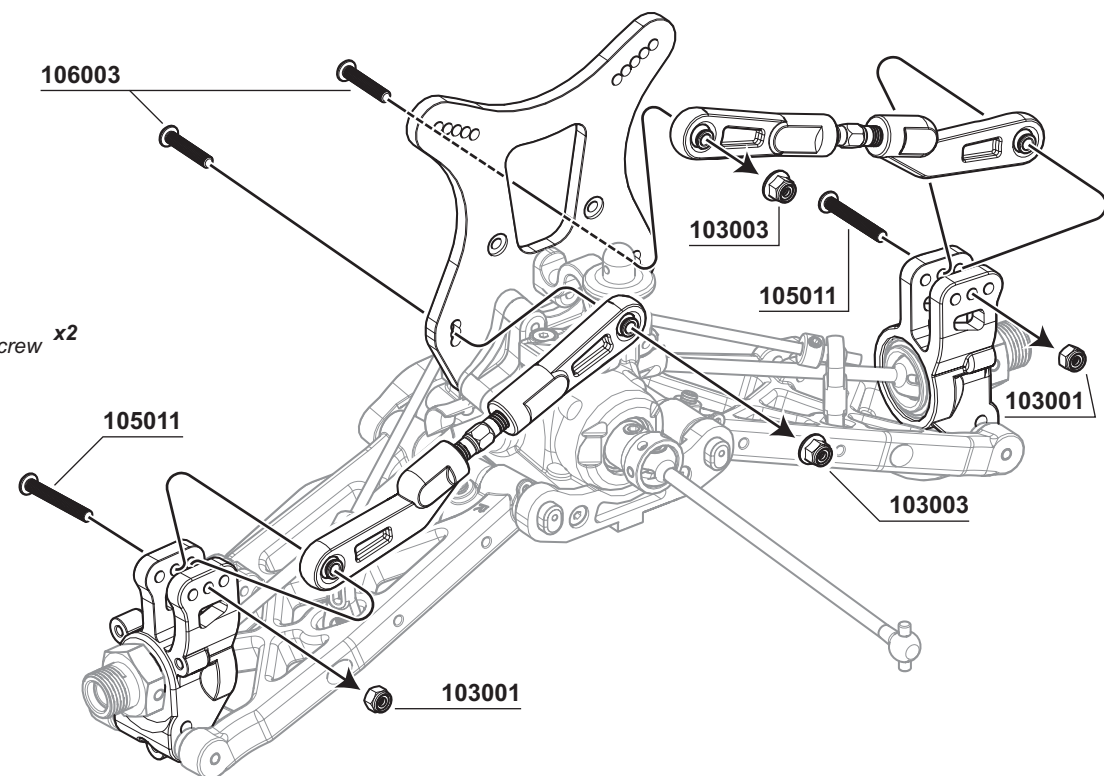

108014
M3x3mm FH/ST HEX Screw x4



106011
M3x4mm Hex Scket OH/TP Screw x4

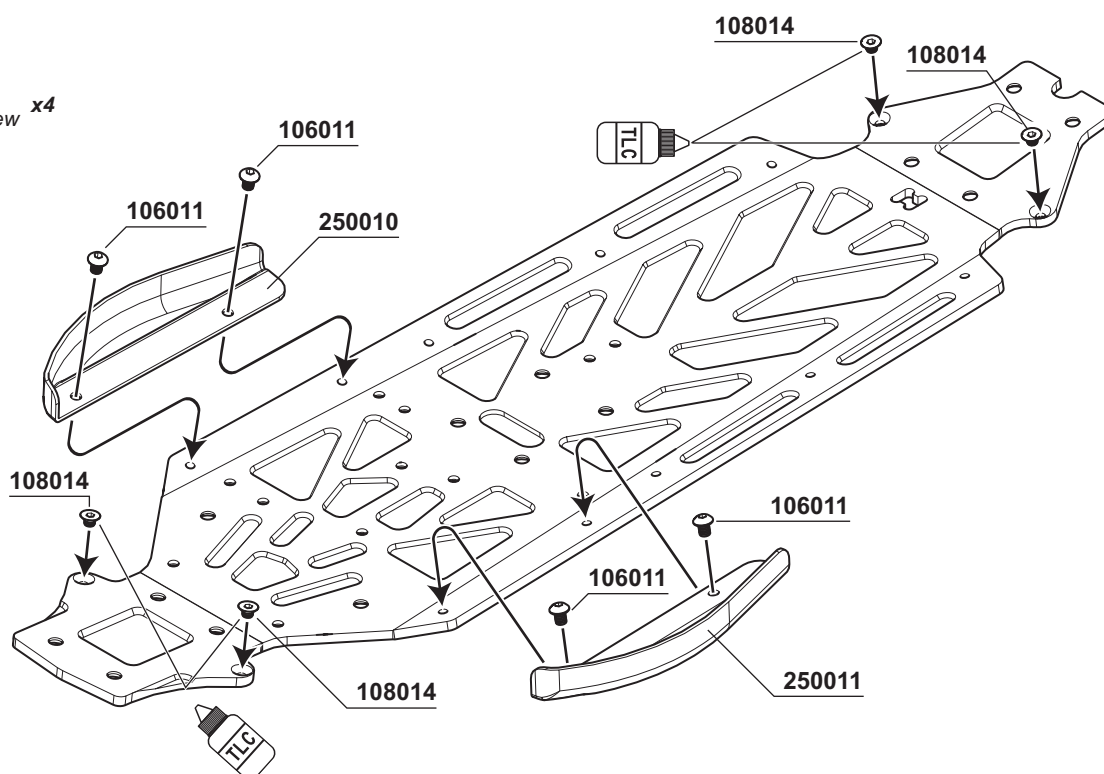



103001
M3 Nut Lock x2



108003
M3x10mm FH/ST HEX Screw x2




108001
M3x12mm FH/ST HEX Screw x2




108010
M4x10mm FH/ST HEX Screw x2



108012
M4x16mm FH/ST HEX Screw x2

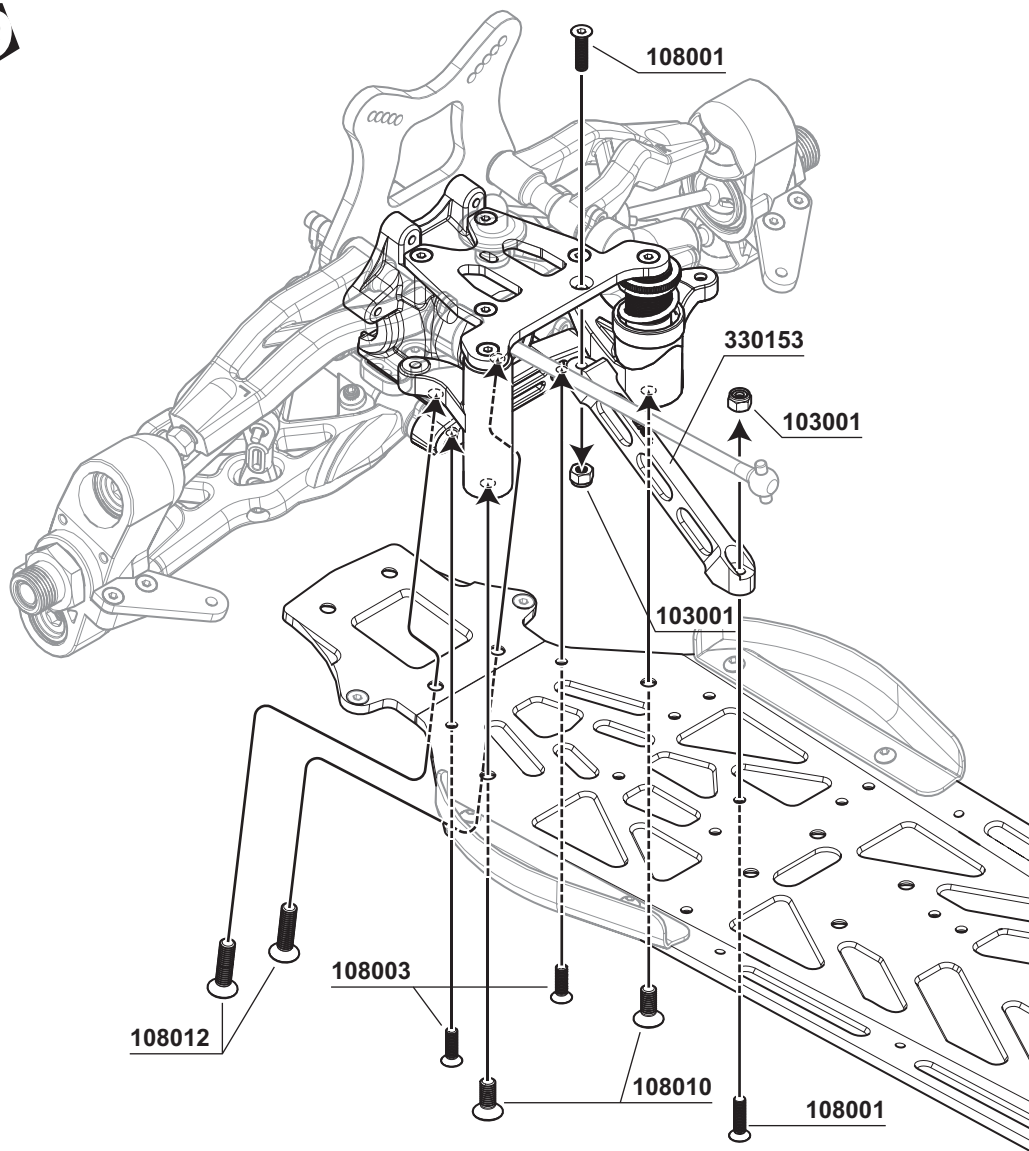

108012
M4x16mm FH/ST HEX Screw x2

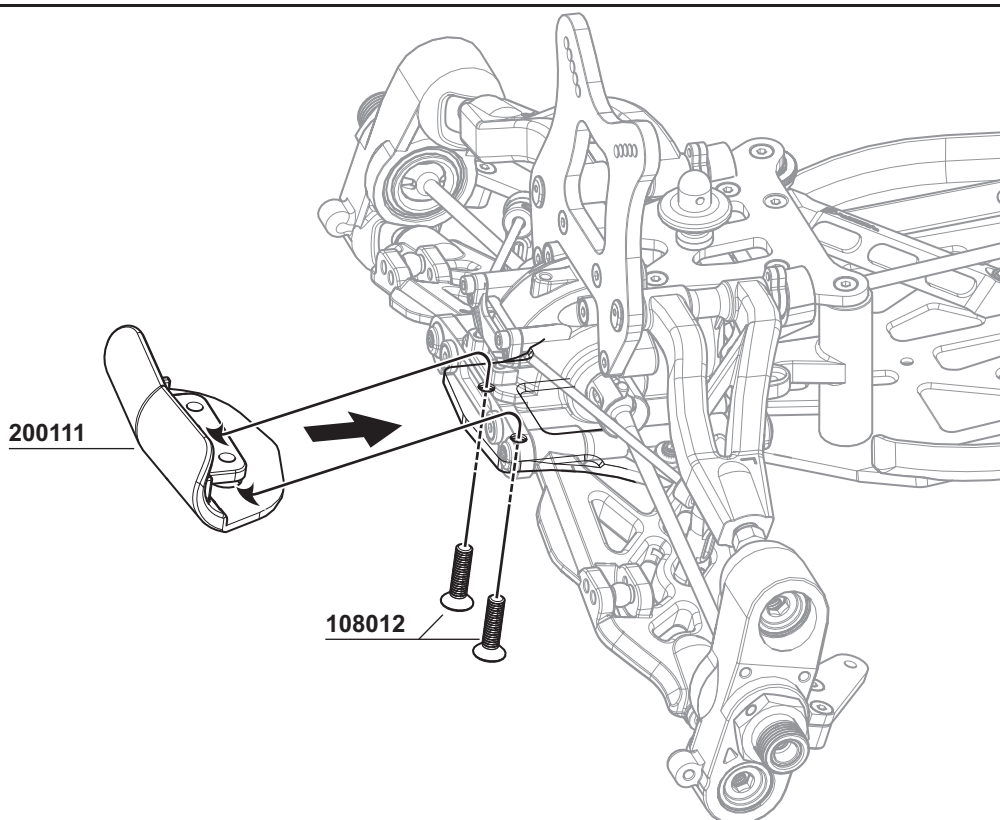




104008
M4x4mm Set Screw **x1**



106002
M3x10mm Hex Socket OH/TP Screw **x4**




105012
M3x10mm Cap Screw **x2**

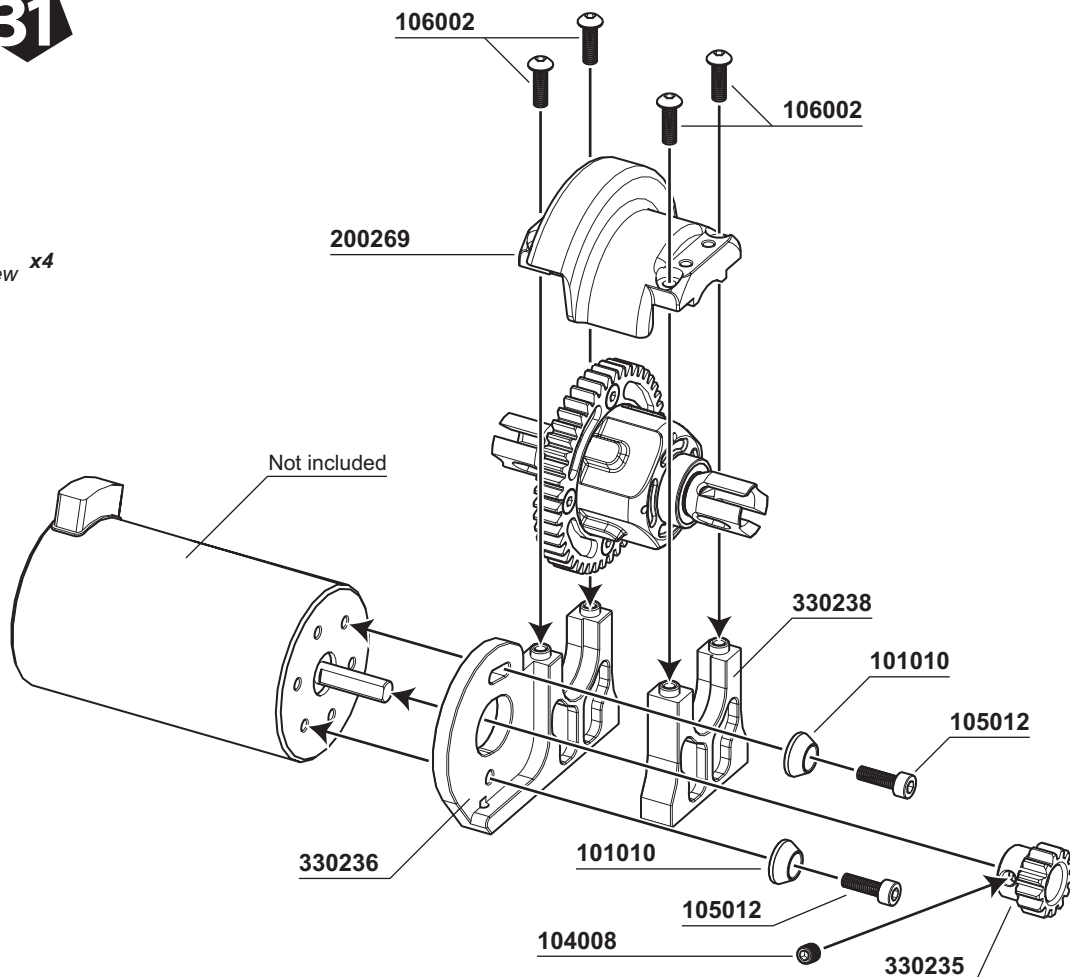

108006
M3x8mm FH/ST HEX Screw **x1**



108010
M4x10mm FH/ST HEX Screw **x4**

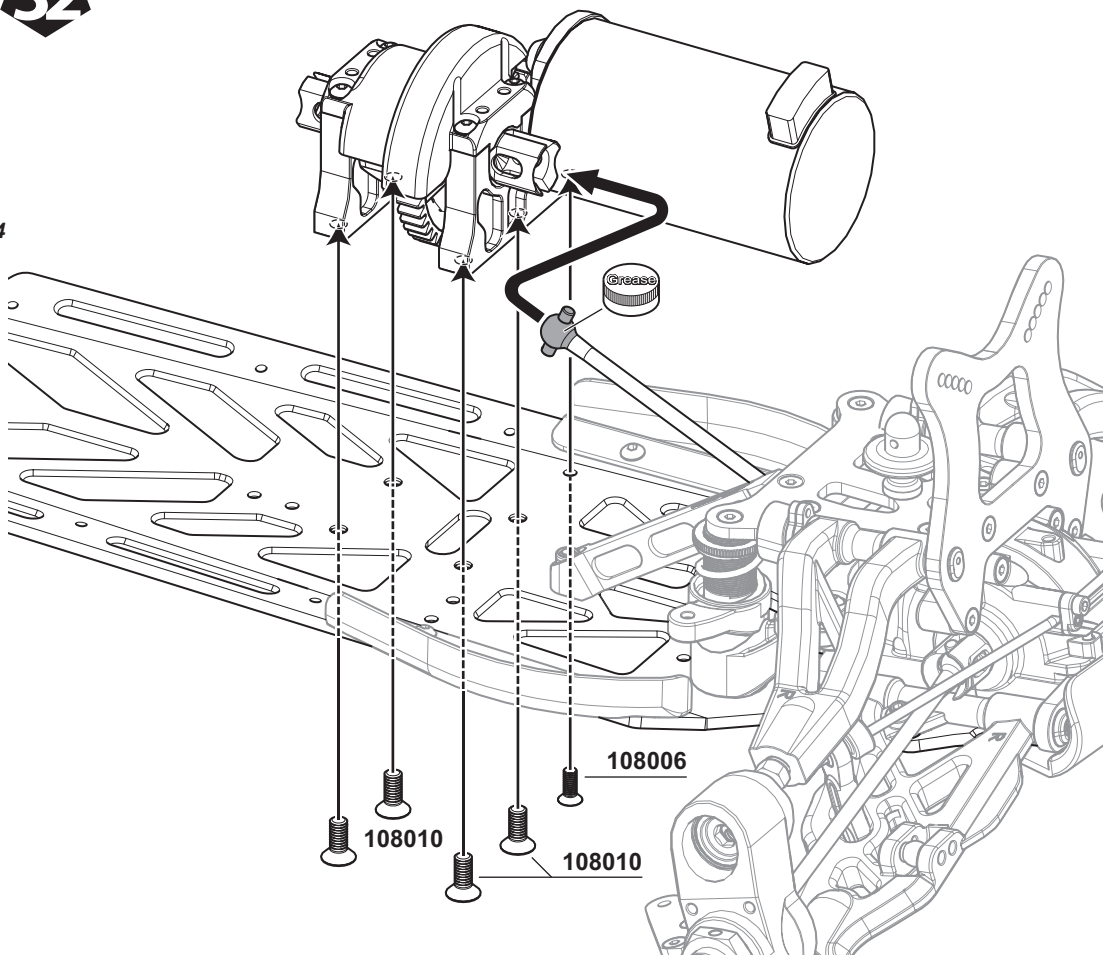



103001
M3 Nut Lock x2



108001
M3x12mm FH/ST HEX Screw x1




108012
M4x16mm FH/ST HEX Screw x4



106006
M3x20mm Hex Socket OH/TP Screw x1

33

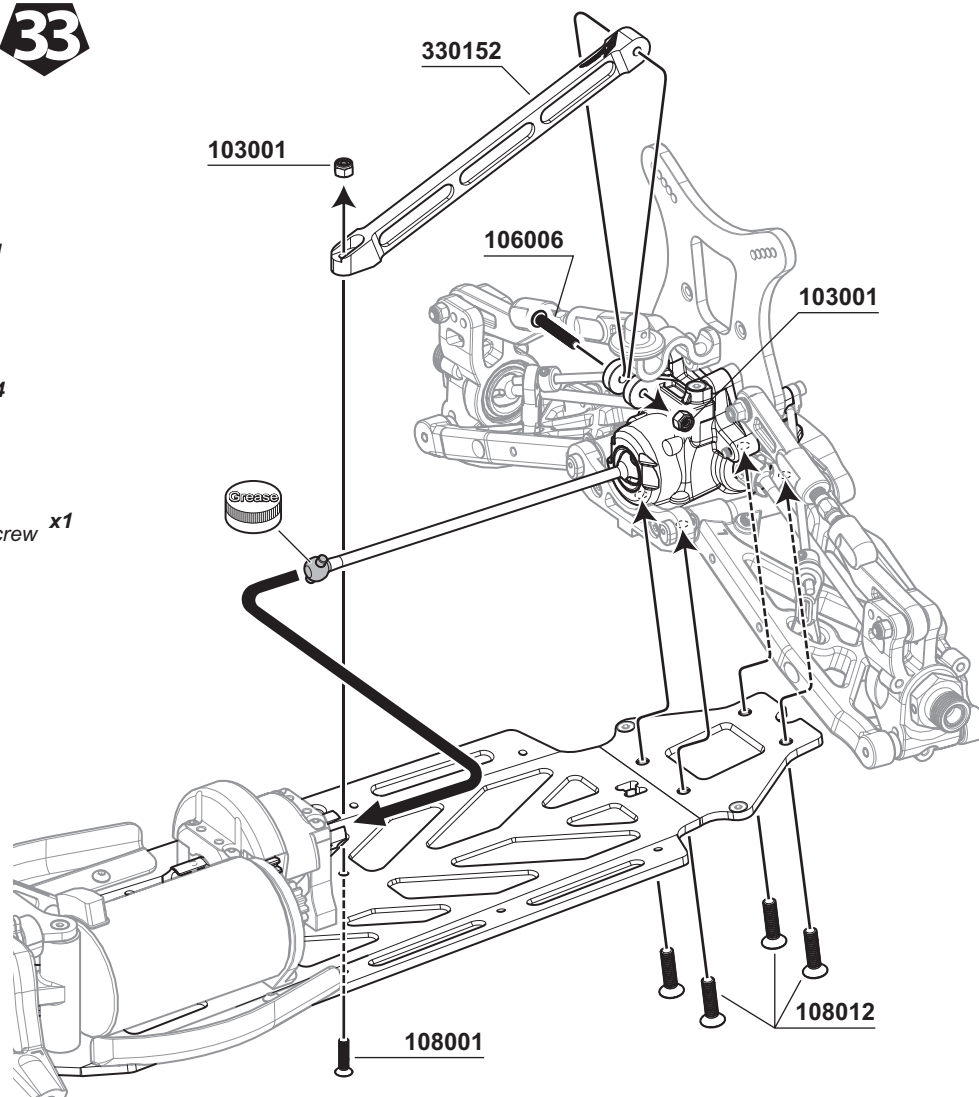


34



x2



330126
Steering Turnbuckle x2

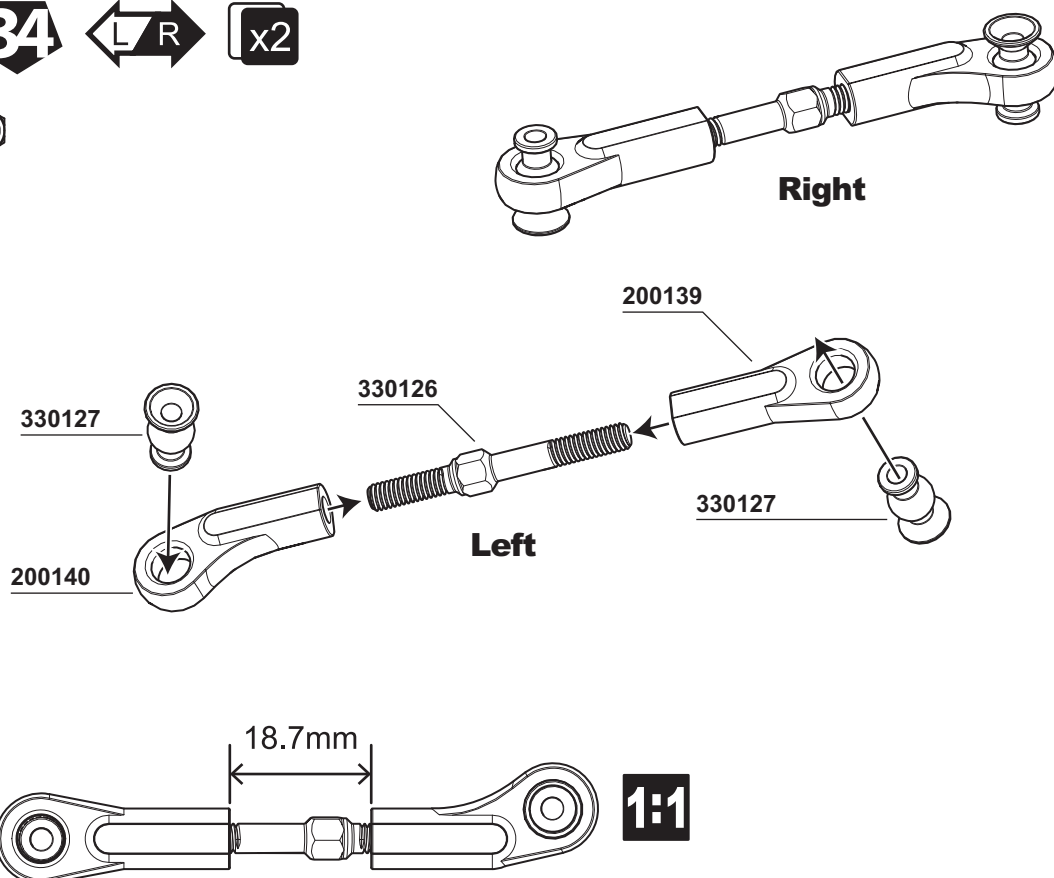




103001
M3 Nut Lock x4



108009
M3x20mm FH/ST HEX Screw x4

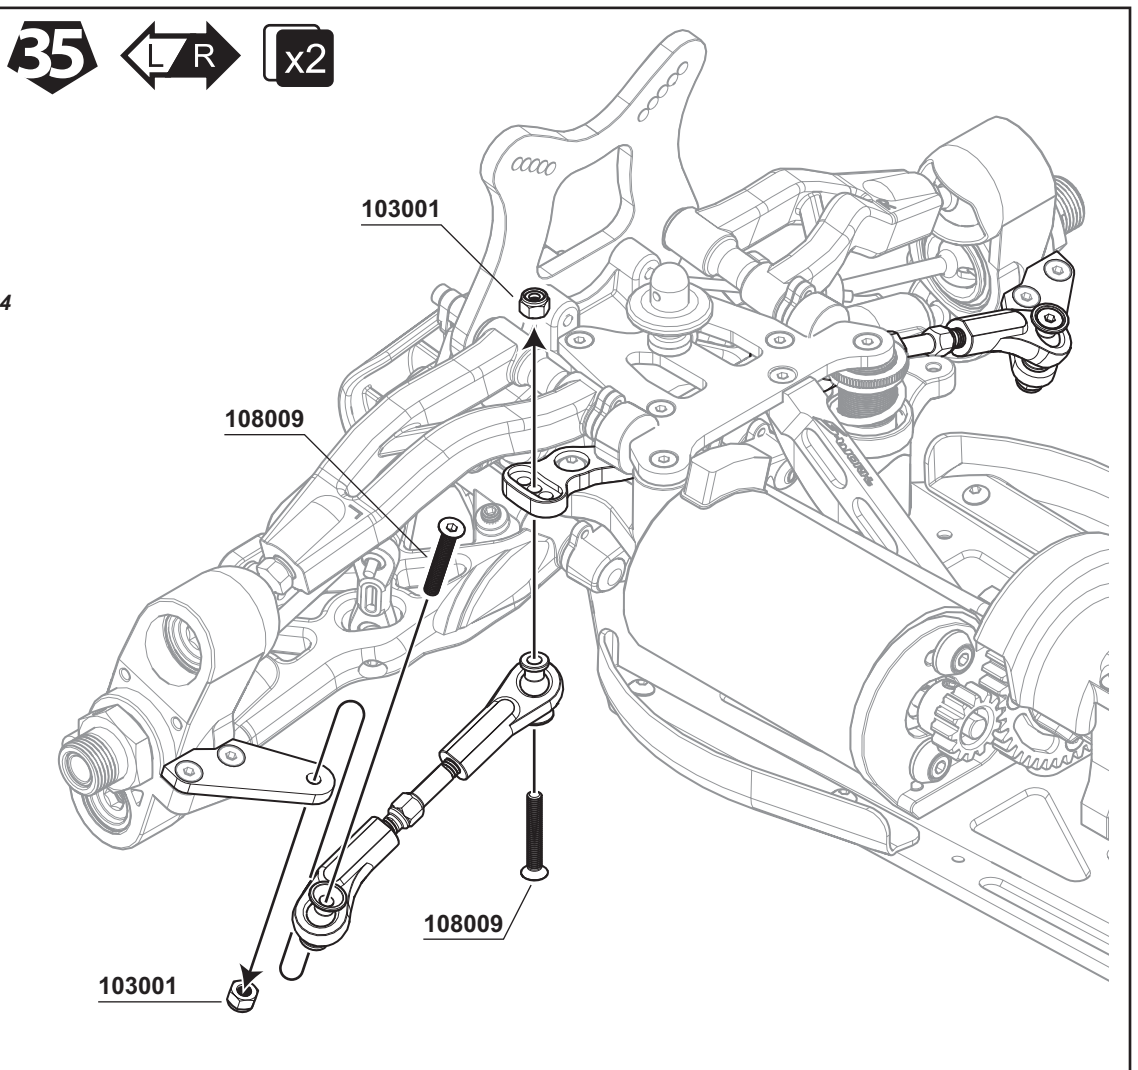


BAG



36



108006
M3x8mm FH/ST HEX Screw x4

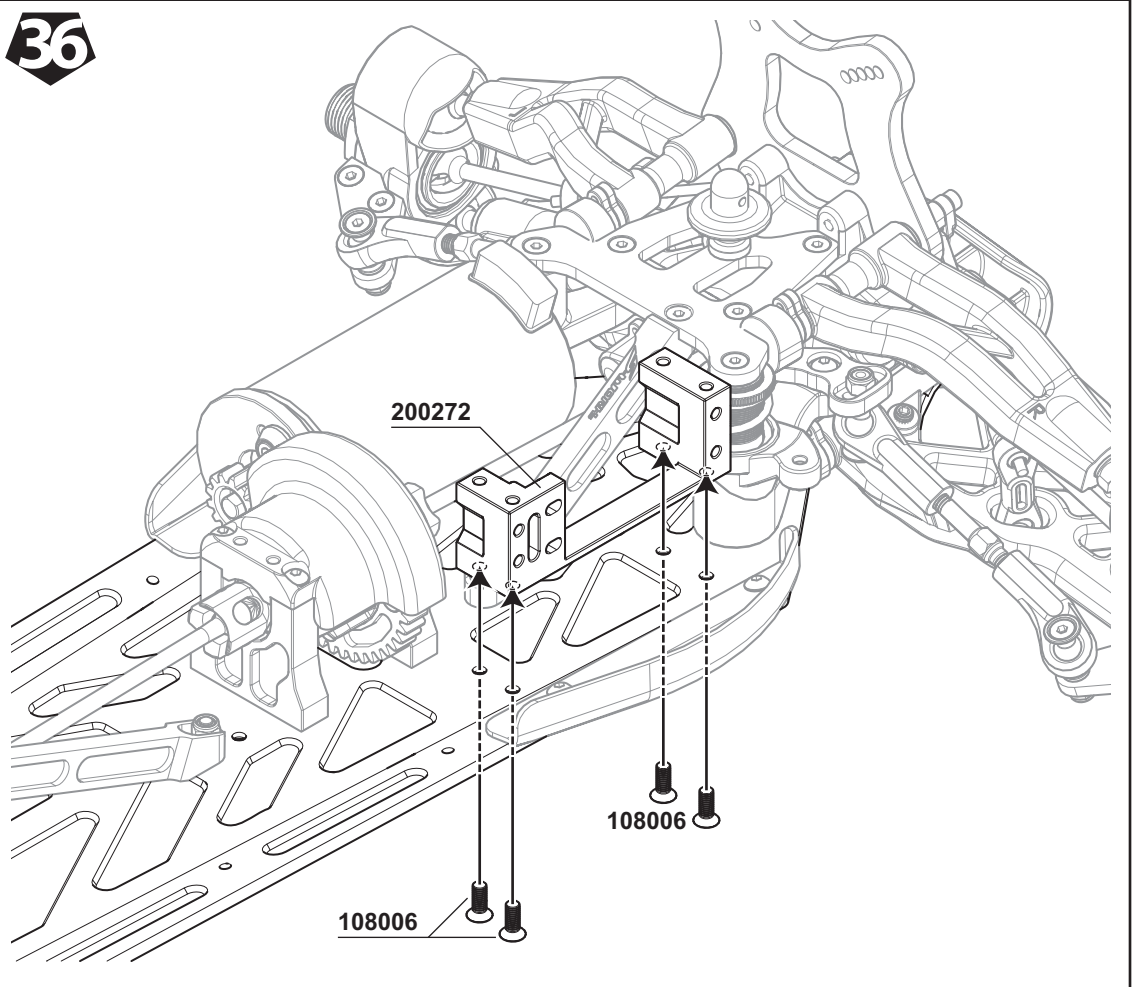


37



106011
M3x4mm Hex Scket OH/TP Screw **x3**




106010
M3x6mm Hex Socket OH/TP Screw **x2**

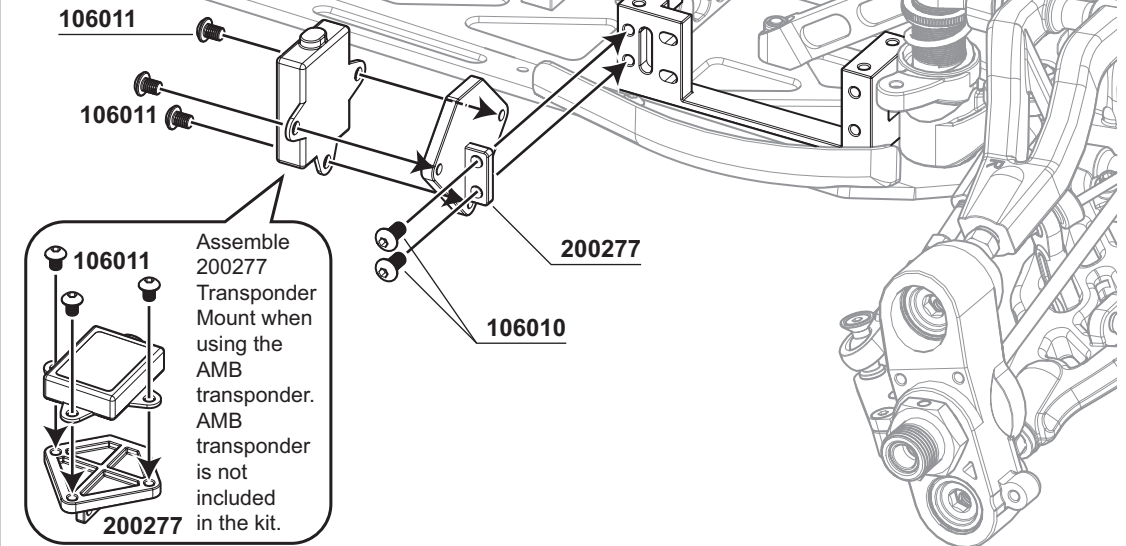

38



106008
M3x12mm Hex Socket OH/TP Screw **x4**

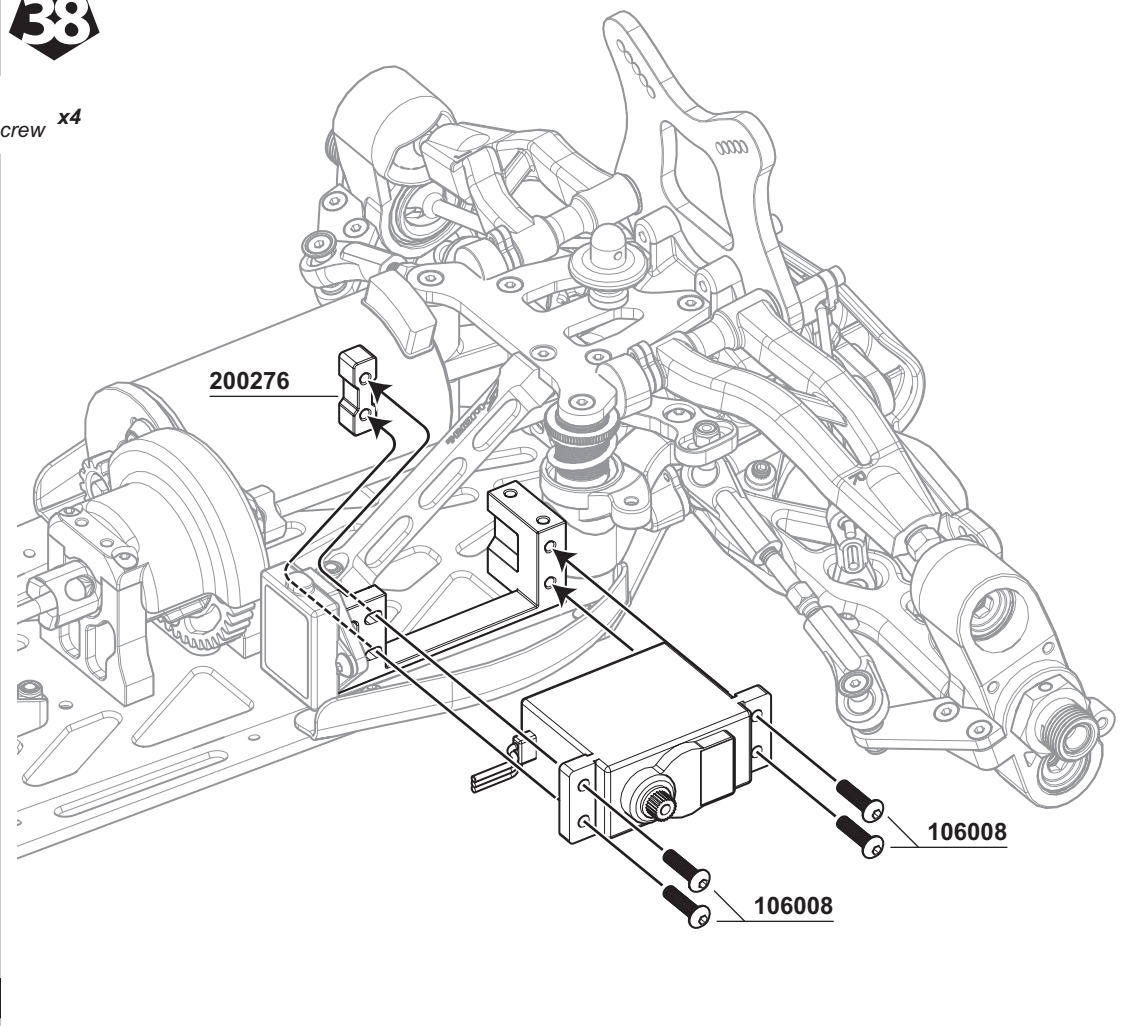



103001
M3 Nut Lock **x1**




330155
Steering Servo Turnbuckle (M3x30mm) **x1**



106005
M3x15mm Hex Socket OH/TP Screw **x1**



101014
M3 Pivot Ball Bushing **x1**

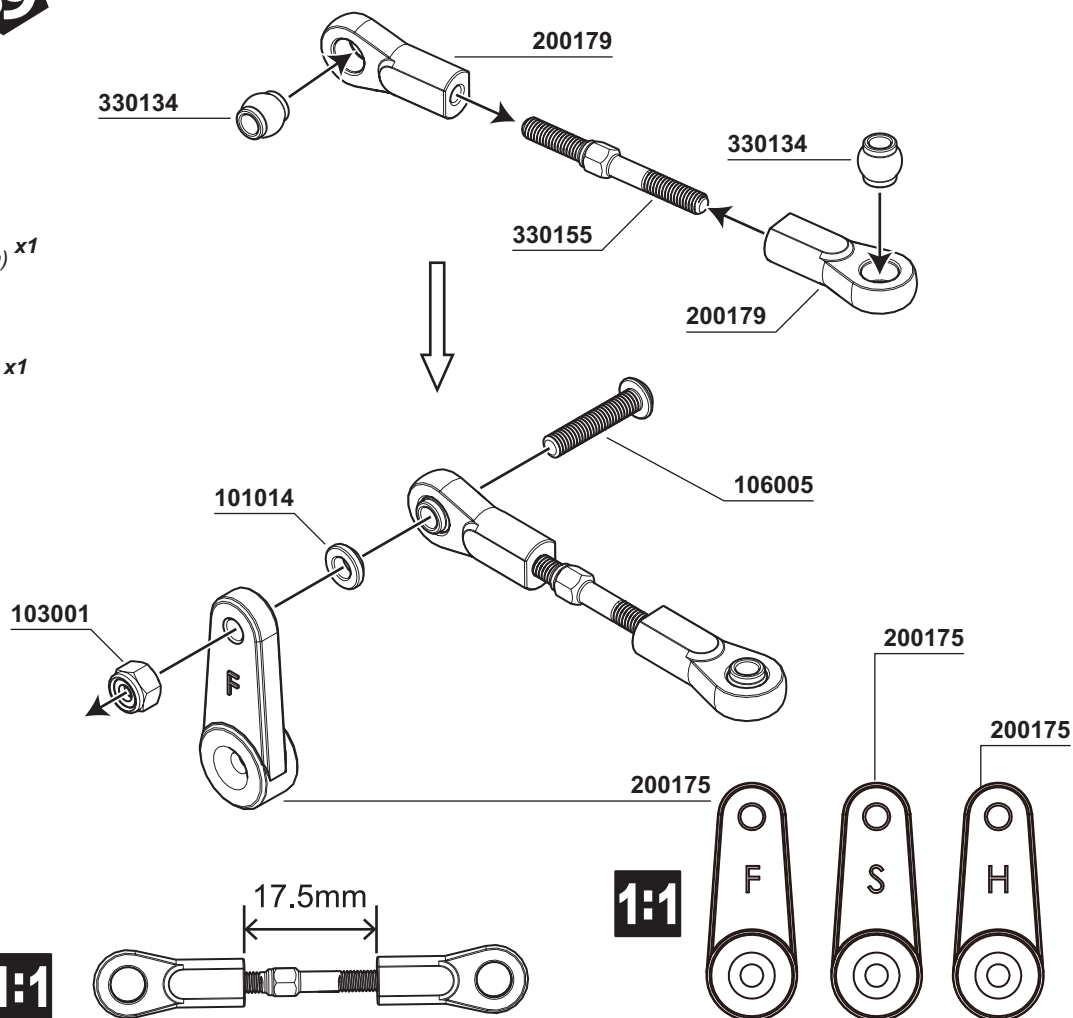


103001
M3 Nut Lock **x1**




108006
M3x8mm FH/ST HEX Screw **x1**




106007
M3x12mm Hex Socket OH/TP Screw(HT) **x1**

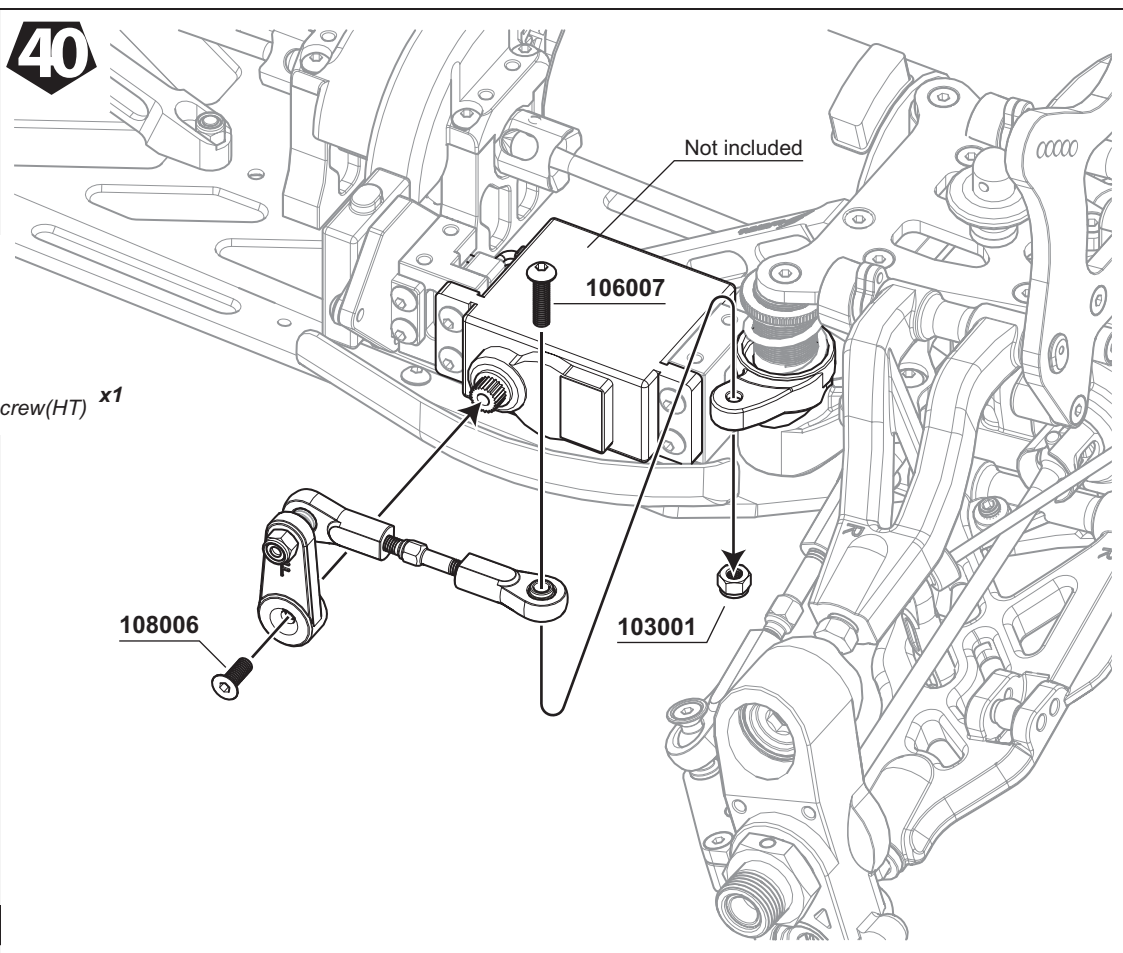

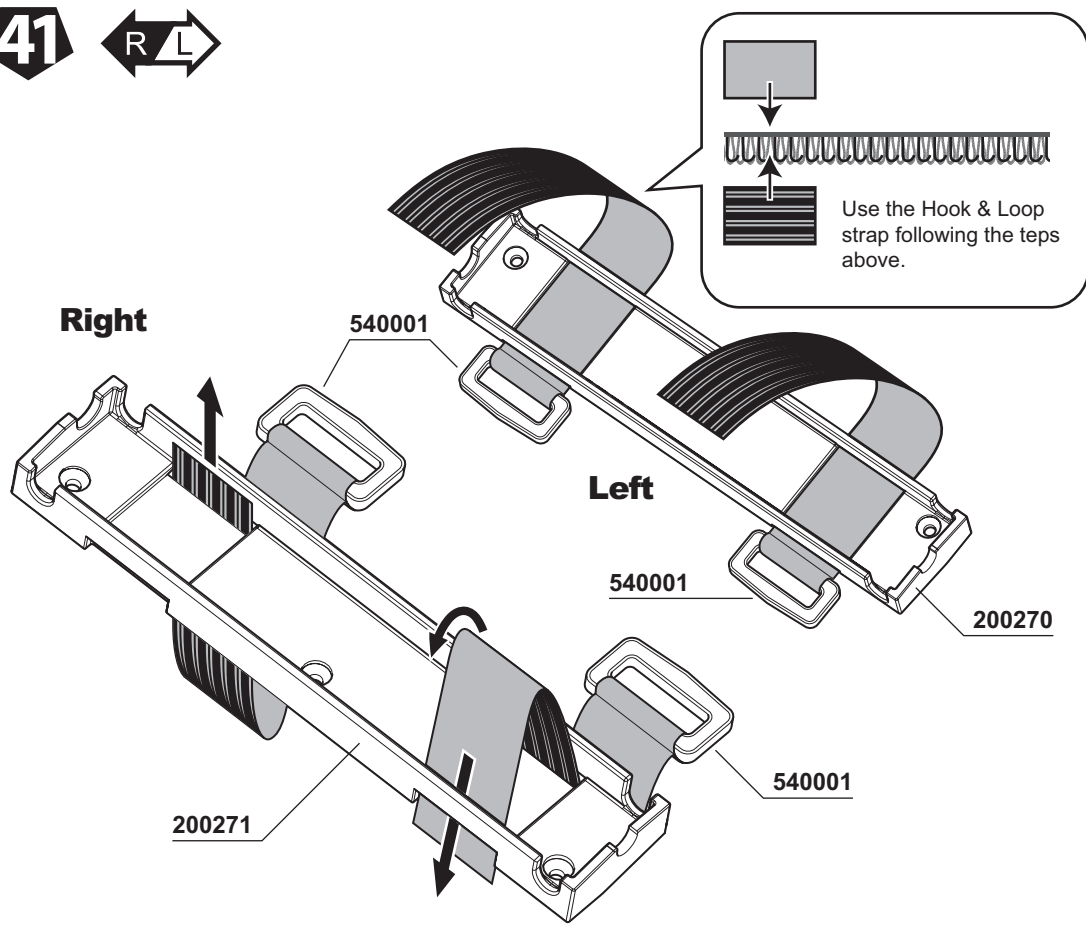


108007
M3x6mm FH/ST HEX Screw x6

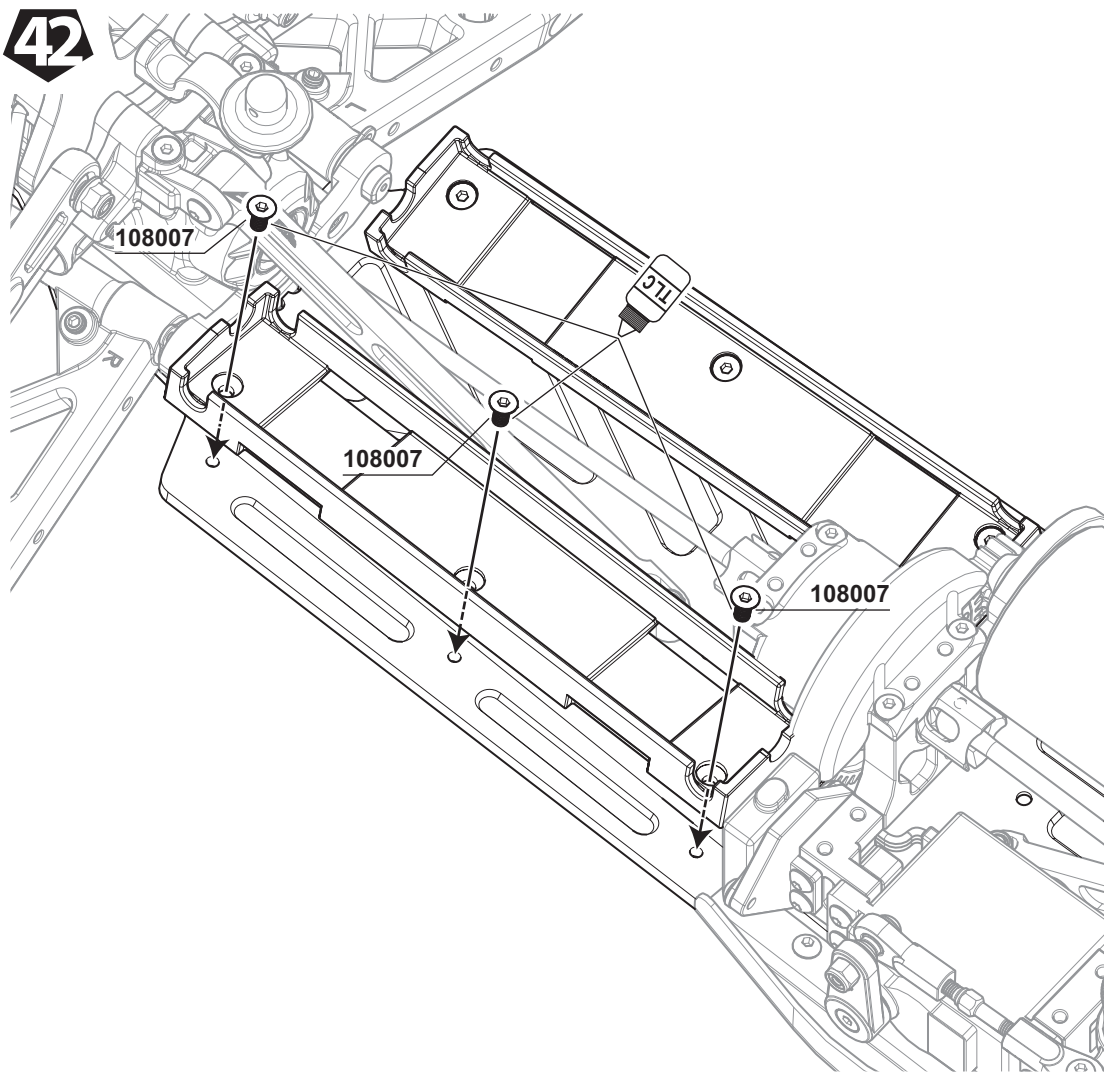




108007
M3x6mm FH/ST HEX Screw **x4**

43

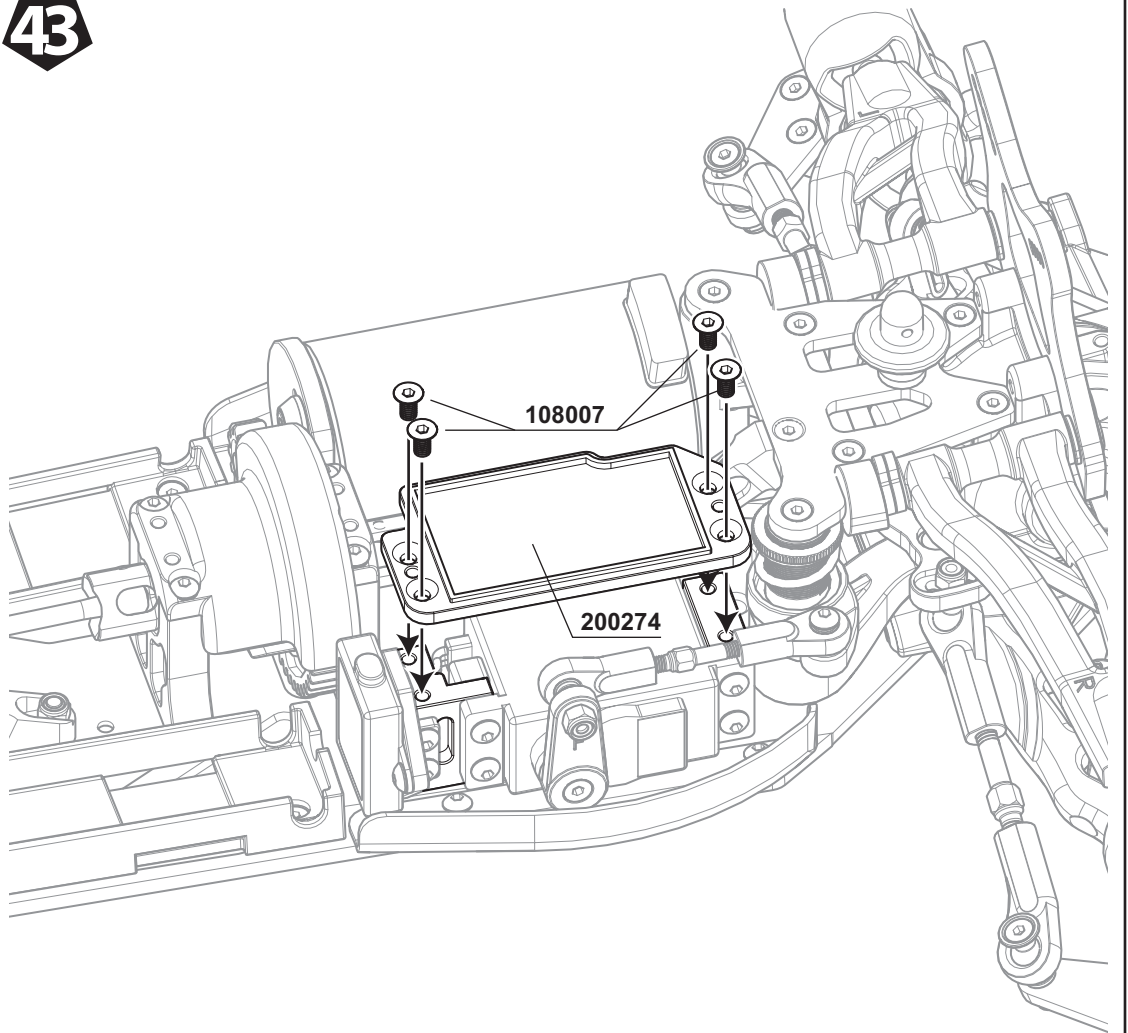


106010
M3x6mm Hex Socket OH/TP Screw **x2**

44

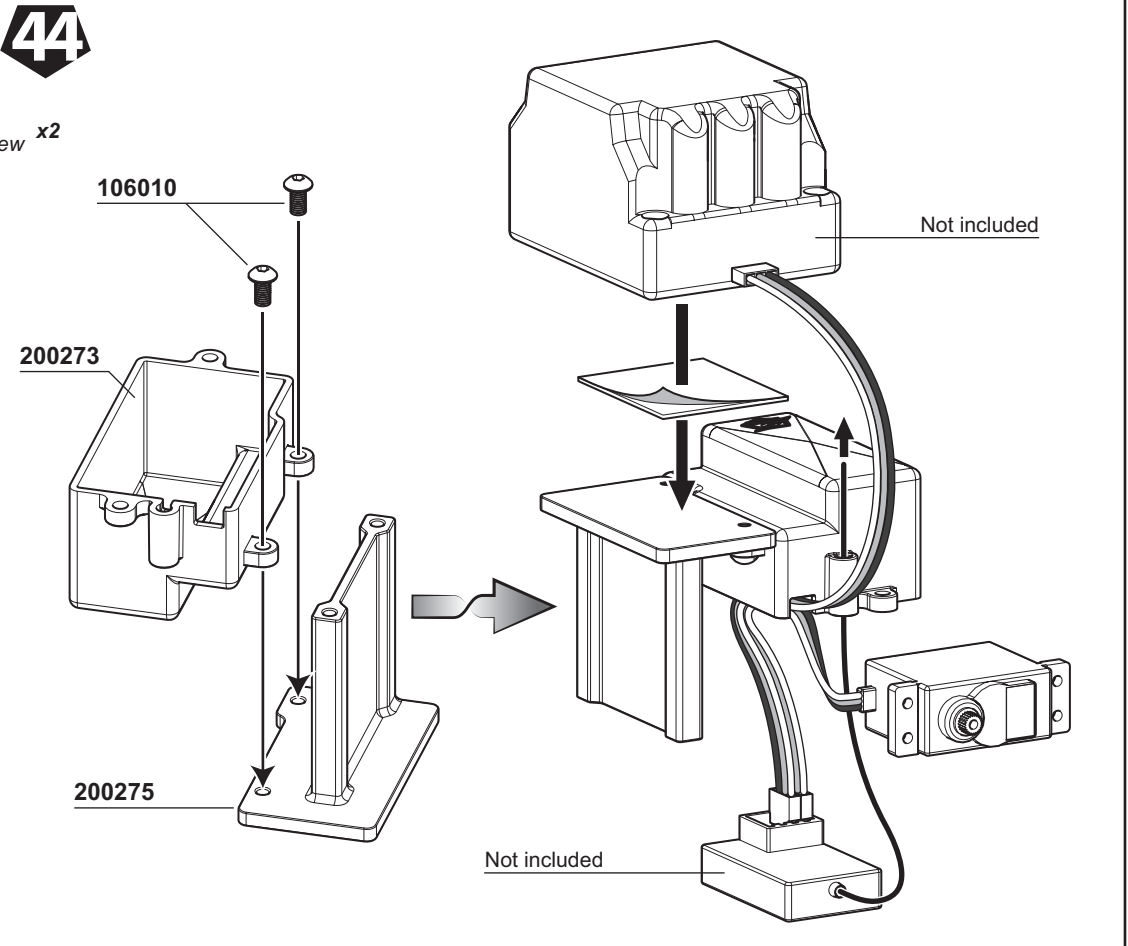

45

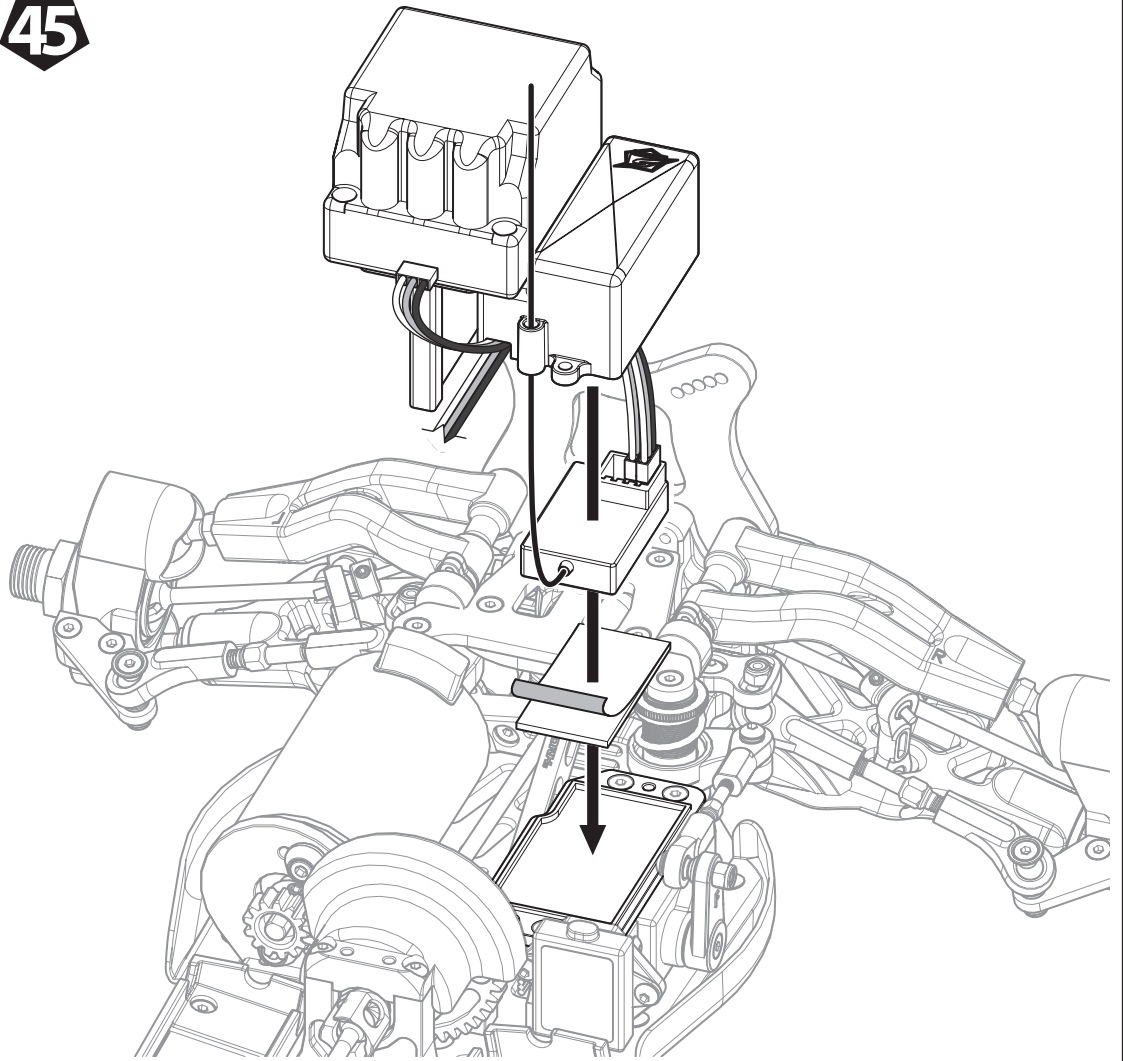


46




106010
M3x6mm Hex Socket OH/TP Screw x2




108006
M3x8mm FH/ST HEX Screw x2

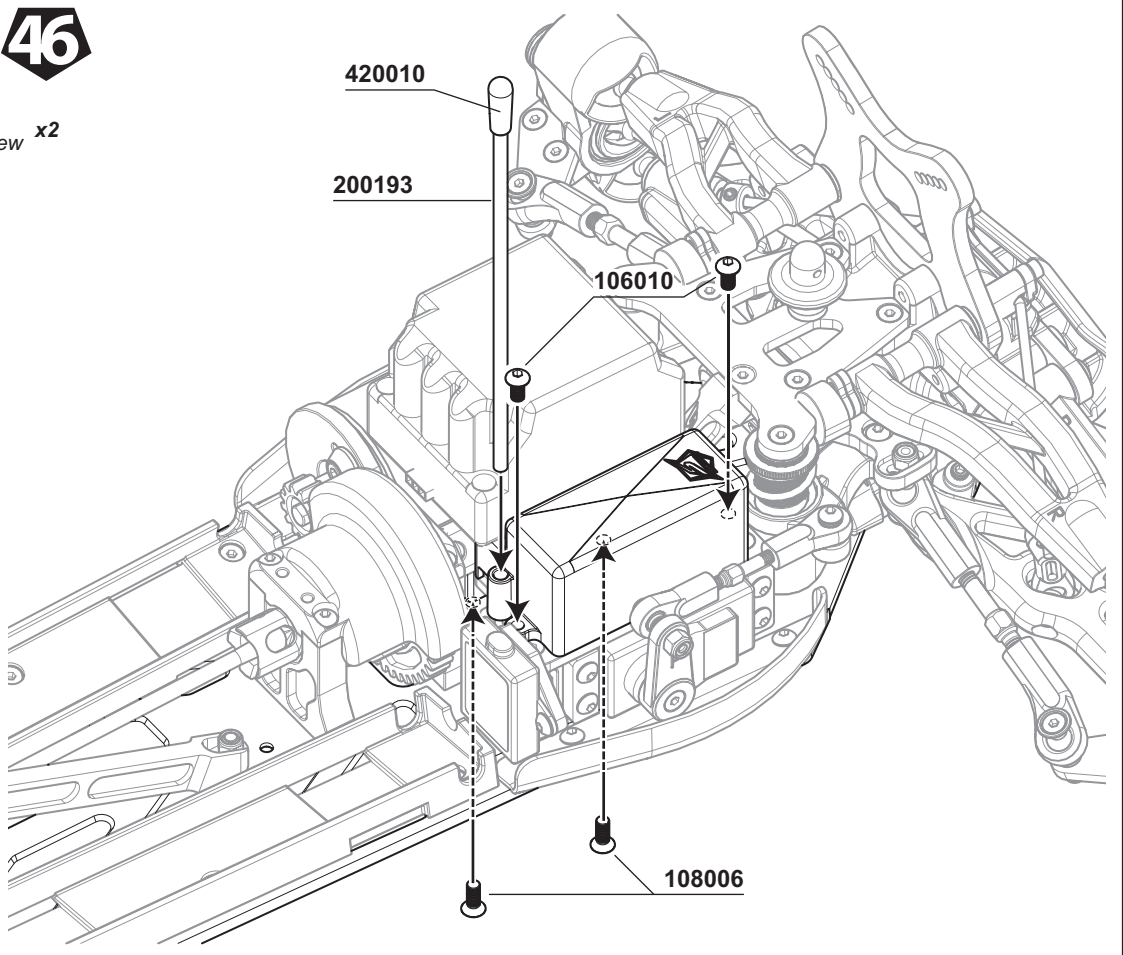



330132
Shock Shaft (L) x2



330133
Shock Shaft (S) x2



330095
Shock Washer 3.6x7x1mm x4



330096
Shock Washer 3.6x7x2.5mm x4




101011
M2.6x6xT0.6mm x4



400006
Shock Seal O-Ring x8








103004
M2.5 Nut Lock x4

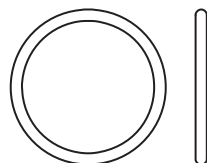


400005
Shock Spring Adjust Nut O-Ring x4




410022
Shock Bladder x4

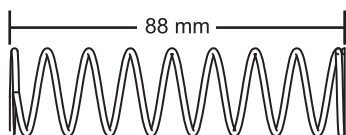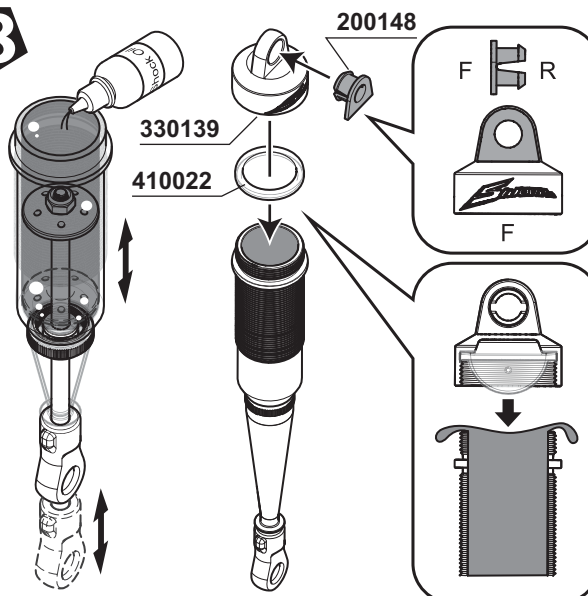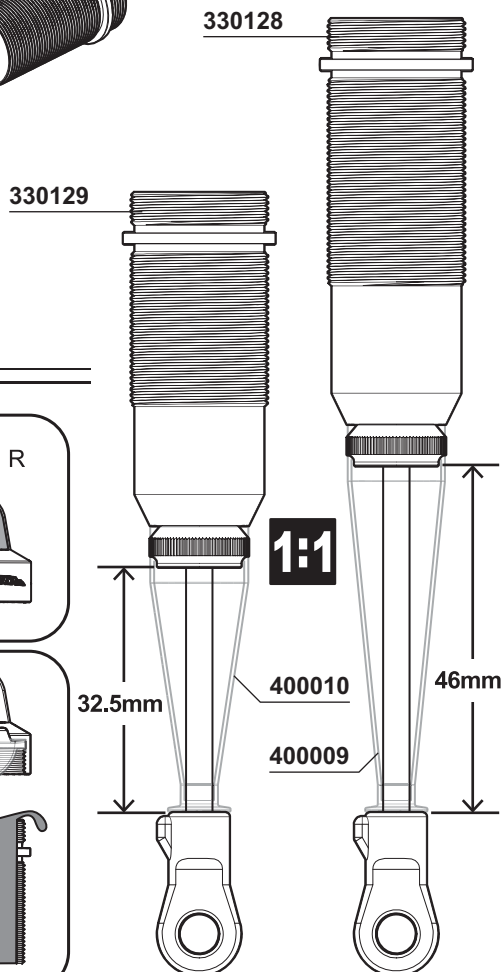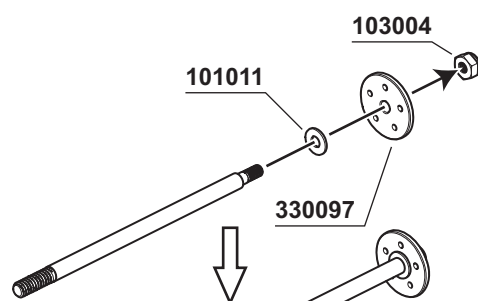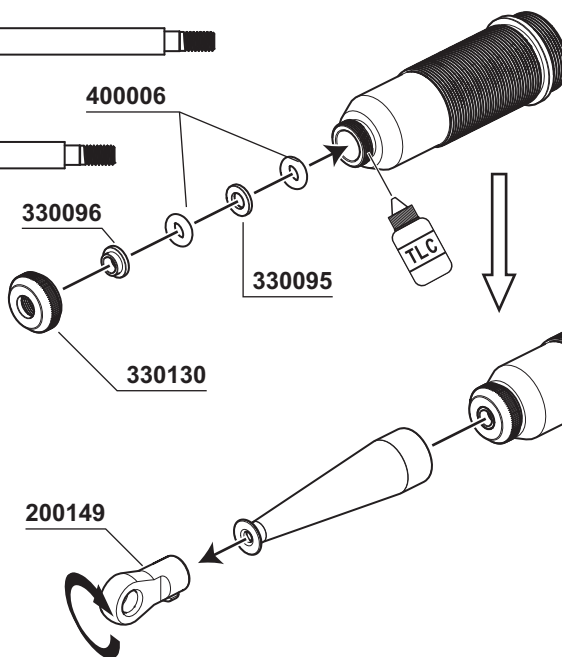

Rear 115014
Shock Spring 1.6mm (L) x2

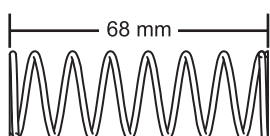


Front 115013
Shock Spring 1.6mm (S) x2

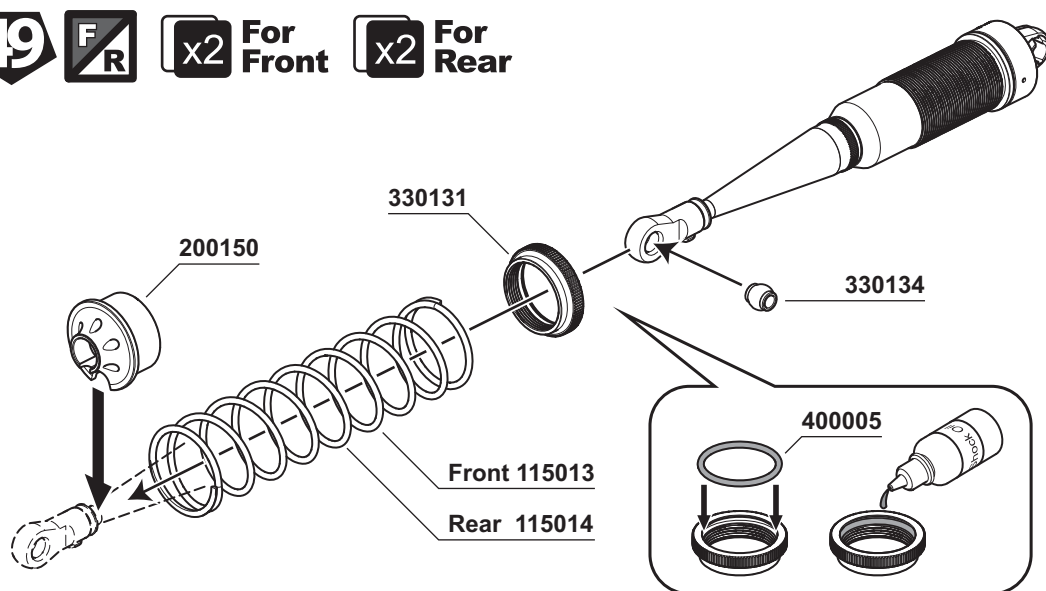



105006
M3x28mm Cap Screw x4

50


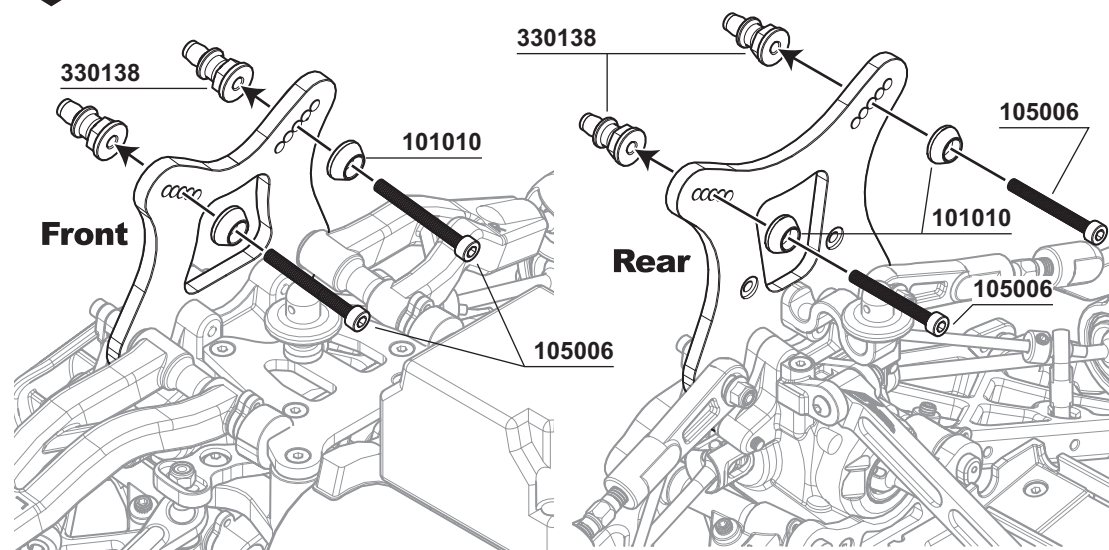


103003
Flange M3 Nut Lock x4



106005
M3x15mm Hex Socket OH/TP Screw x4

51

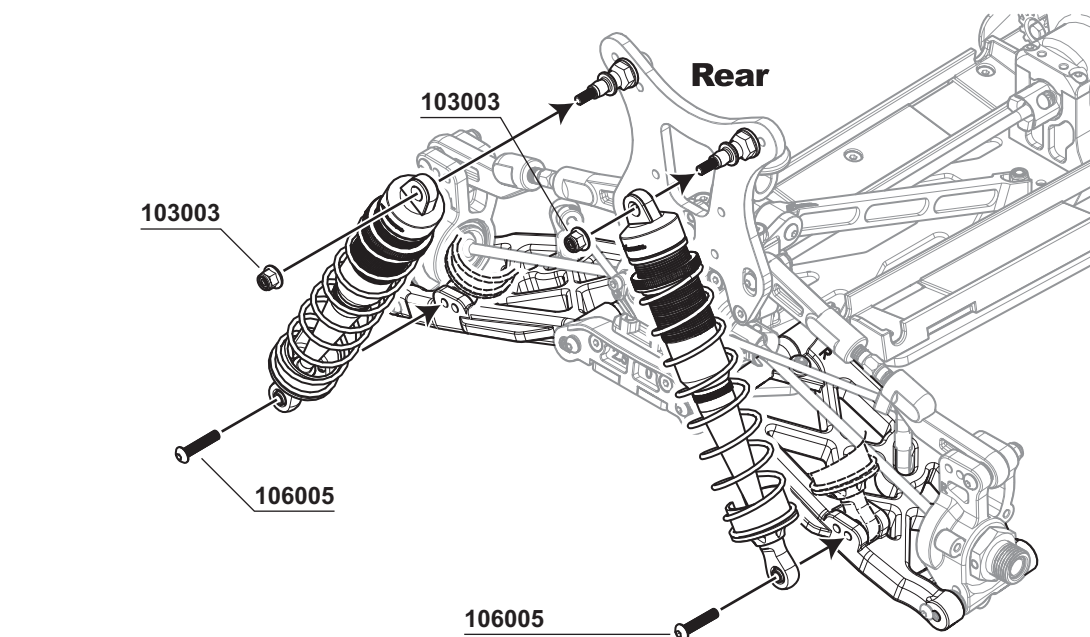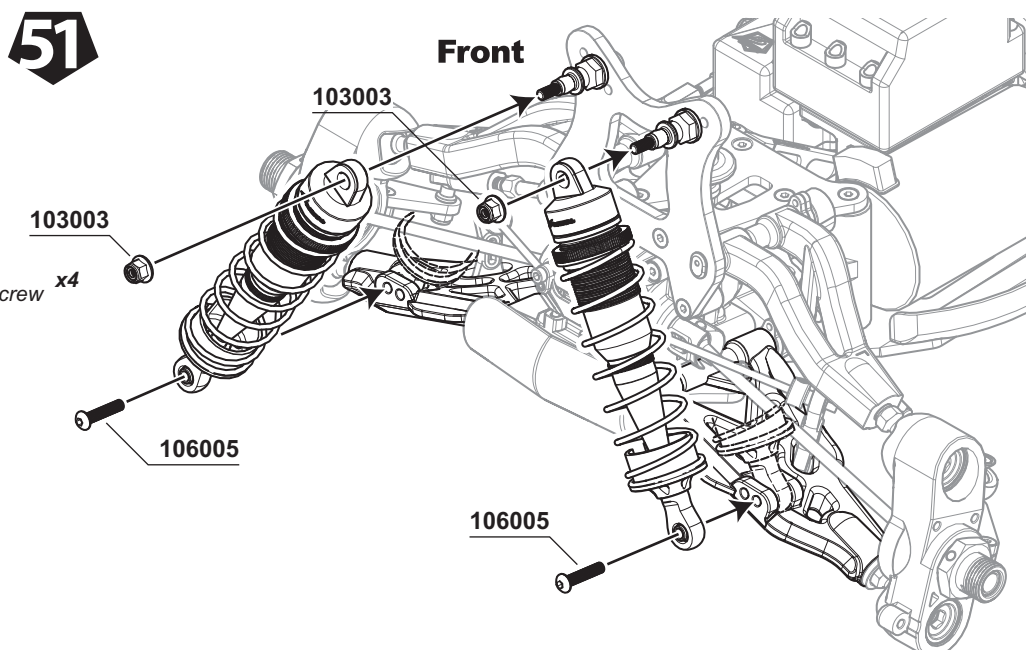




103001
M3 Nut Lock **x4**




101020
3mm Countersunk Washers (RD) **x4**




108015
M3x16mm FH/ST HEX Screw **x4**


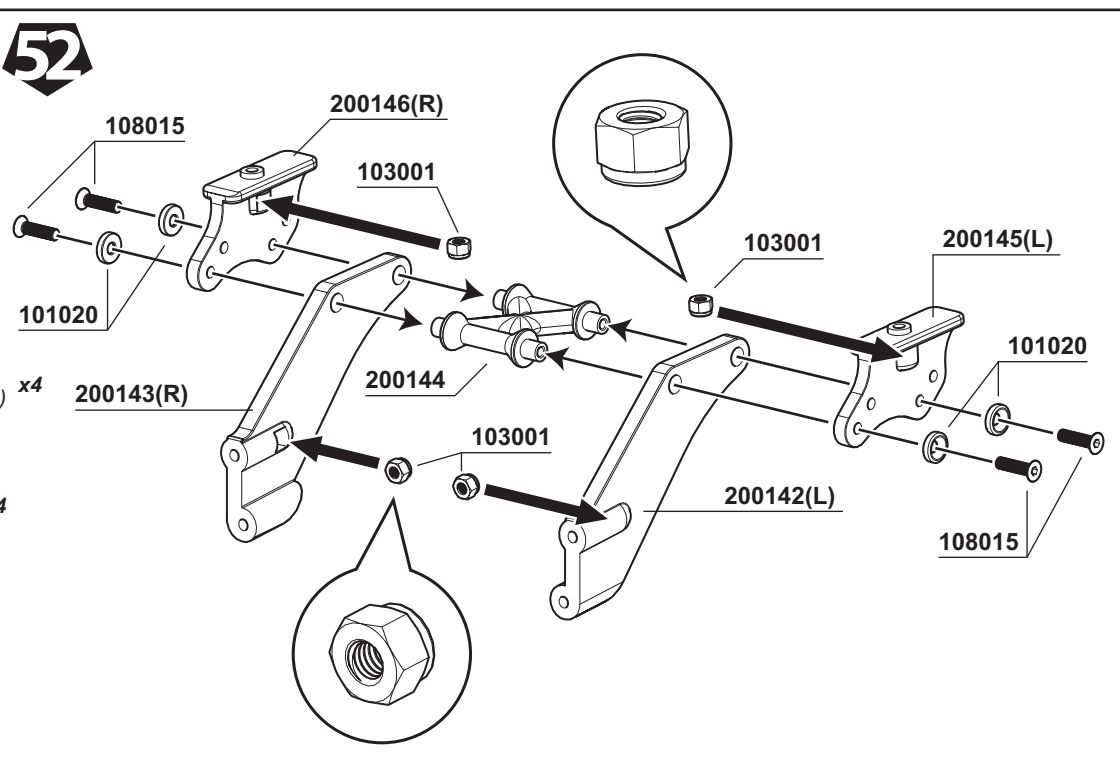


106006
M3x20mm Hex Socket OH/TP Screw **x4**

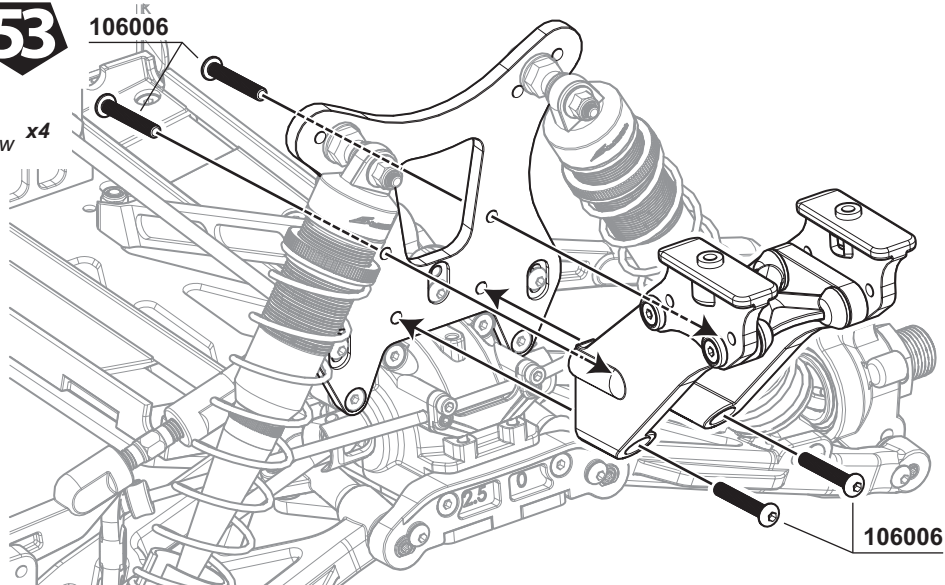

105005
M3x12mm Cap Screw **x2**

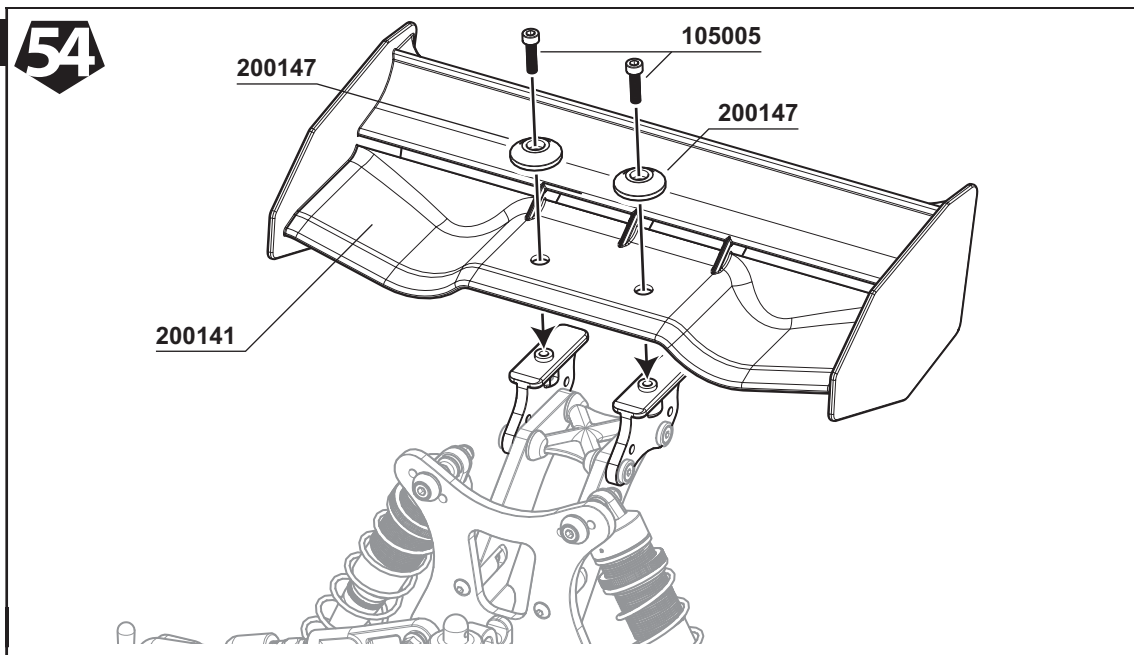


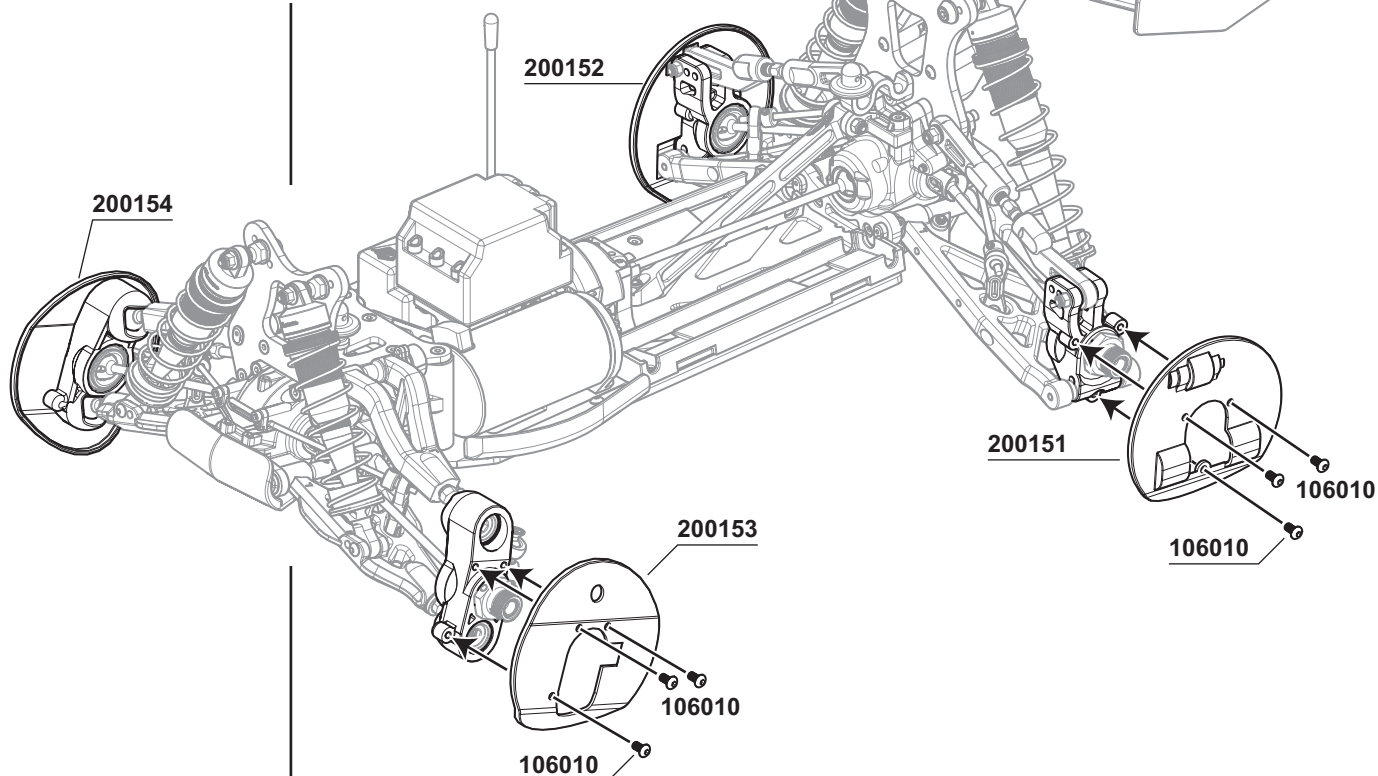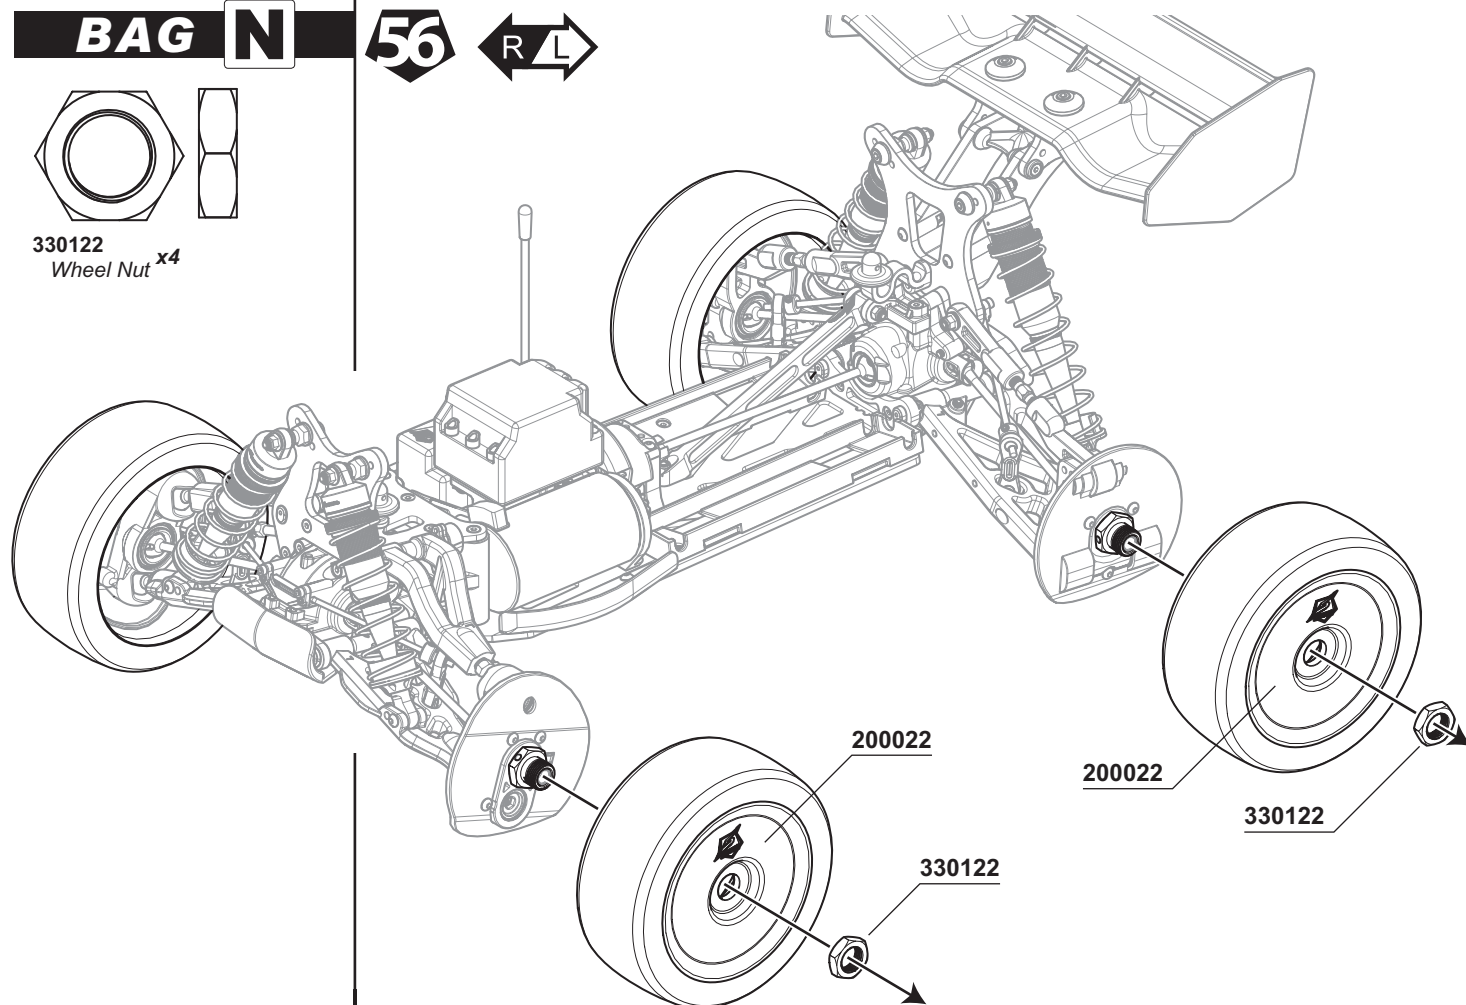BAG E**55****106010***M3x6mm Hex Socket OH/TP Screw x12***BAG N****56****330122***Wheel Nut x4*




106010
M3x6mm Hex Socket OH/TP Screw **x1**

57

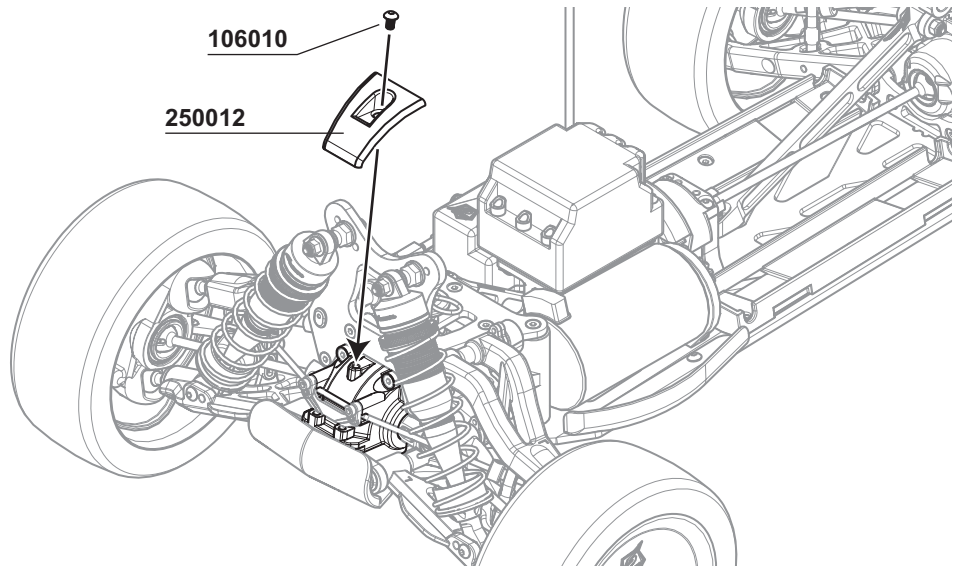

BAG A

58

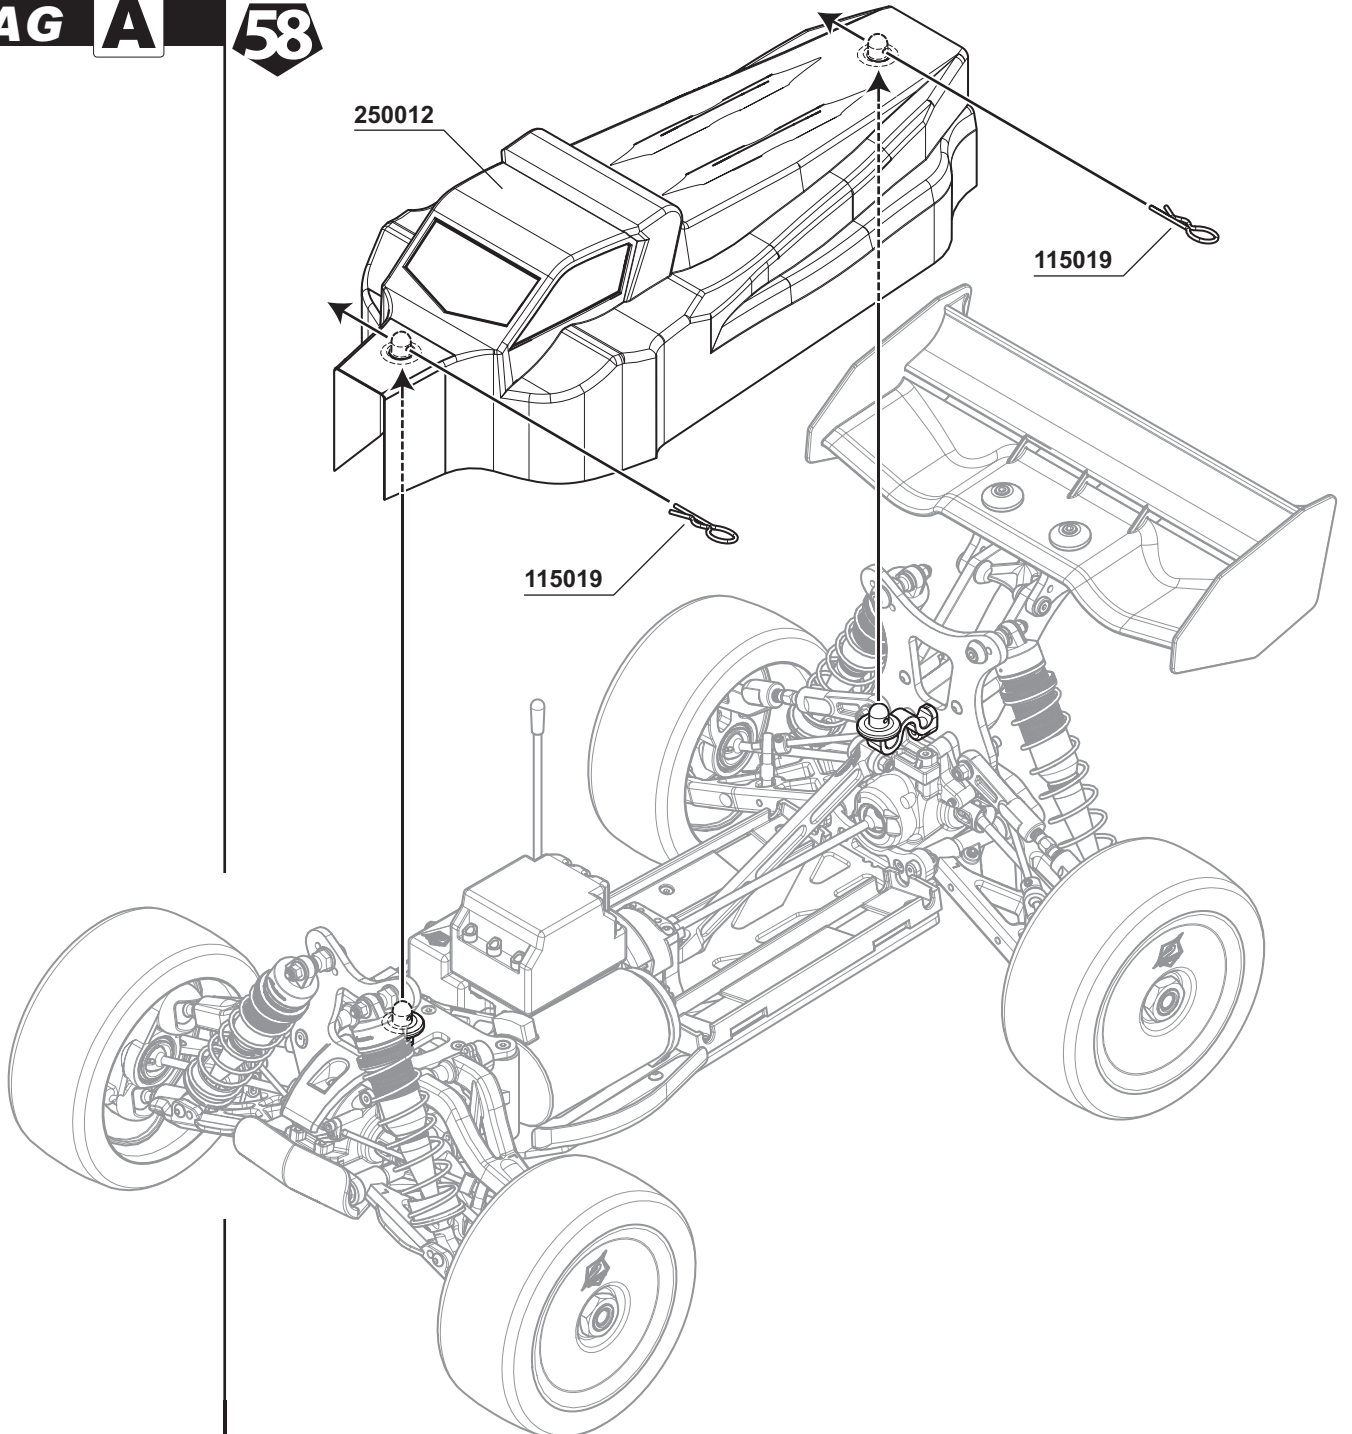



Name: _____
Date: _____
Track: _____

Diff. Oil

Front: # _____
Center: # _____
Rear: # _____

Tire

Front Type: _____ Rear Type: _____
Foam: _____ Foam: _____

Track Conditions

Size: ☐ Open ☐ Med. ☐ Tight
Traction: ☐ High ☐ Med. ☐ Low
Surface: ☐ Smooth ☐ Med. ☐ Bumpy

Electric System


ESC Type: _____

Motor Type: _____



Motor Gear/Spur Gear: _____

Battery Type: _____

Front Suspension

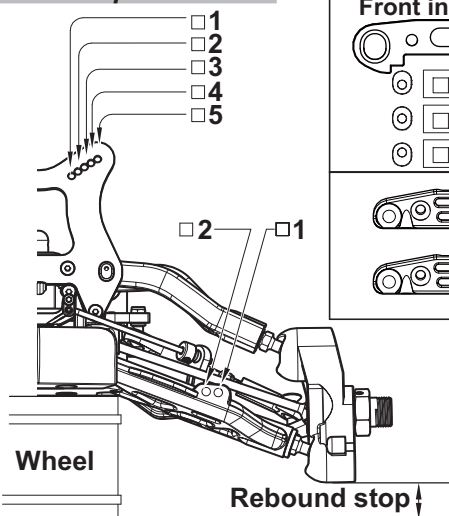

Front in-Board Toe

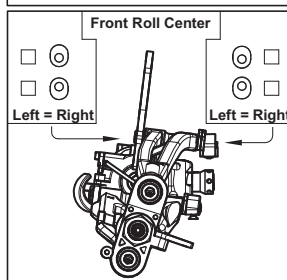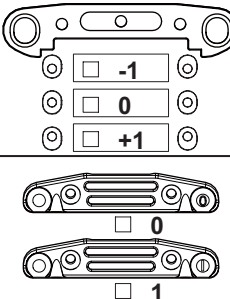


Track width _____ mm
Camber angle Upper _____ mm
Lower _____ mm
Toe angle _____ mm
Rebound stop _____ mm
Sway bar ☐ Use _____ mm
☐ None


Front Shocks

Oil: _____
Pistons: _____
Spring: _____
Spacer: _____ mm


Steering Ackerman

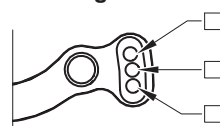

Notes: _____

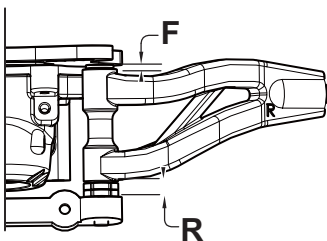


F: _____ mm
R: _____ mm

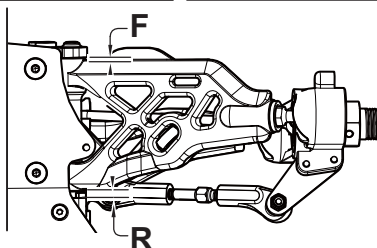


F: _____ mm
R: _____ mm


Rear Suspension

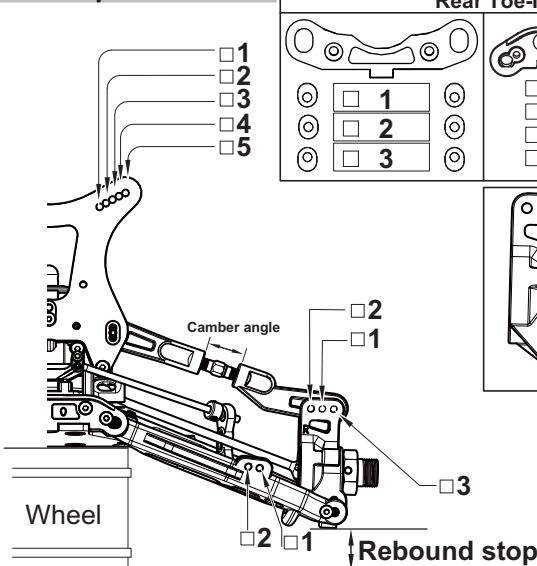

Rear Toe-In


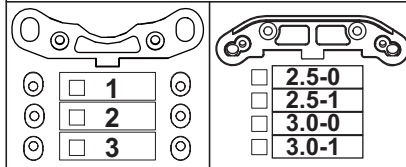


Upper arm position

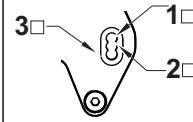

Camber angle _____ mm
Rebound stop _____ mm


Wing Position

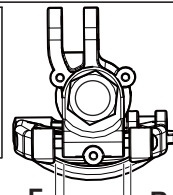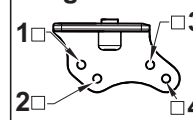

Rear Shocks

Oil: _____
Pistons: _____
Spring: _____
Spacer: _____ mm

Wheelbase adjustment F _____ mm
R _____ mm
Sway bar ☐ Use _____ mm
☐ None

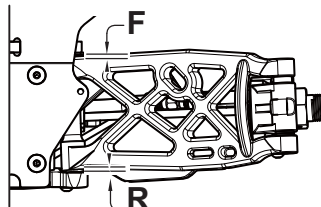

F: _____ mm
R: _____ mm

Notes: _____




Name: Mayr Thomas
Date: 11/5/2012
Track: Rhein-Main-Circoit

Diff. Oil
Front: # 8000
Center: # 8000
Rear: # 4000



Tire

Front VP-Pro Spiker Rear VP-Pro Spiker
Type: Soft Type: Soft
Foam: Standard Foam: Standard

Front Suspension

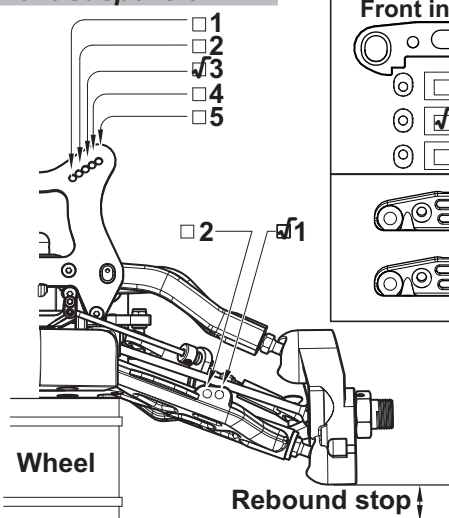

Front in-Board Toe

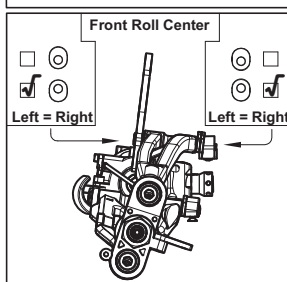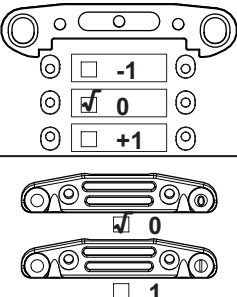


Track width 307 mm
Camber angle Upper _____ mm
Lower _____ mm
Toe angle _____ mm
Rebound stop 24 mm
Sway bar ☒ Use 2.4 mm
☐ None


Front Shocks

Oil: 300cps
Pistons: 1.3x5Holes
Spring: Blue
Spacer: 1 mm


Steering Ackerman

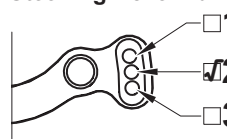

Notes: _____

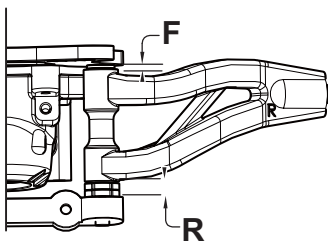


F: 1 mm
R: 3 mm

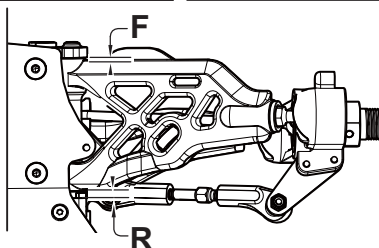


F: 0 mm
R: 2 mm


Rear Suspension

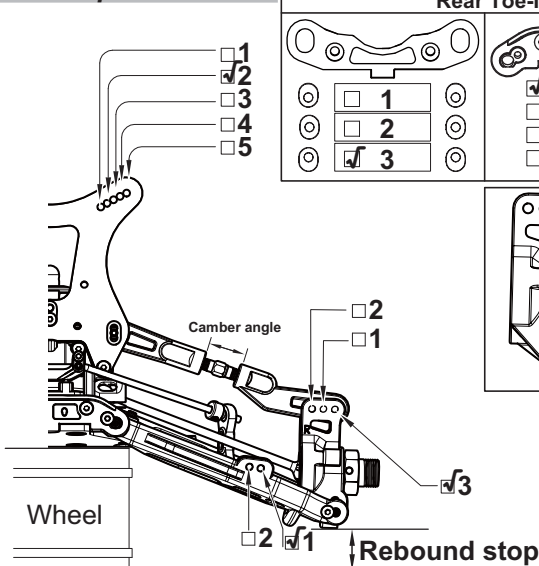

Rear Toe-In

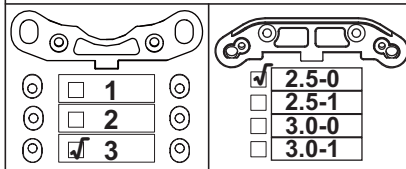


Upper arm position

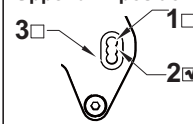


Camber angle 13 mm
Rebound stop 20 mm


Wing Position

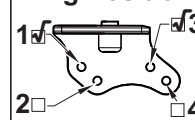

Rear Shocks
Oil: 250cps
Pistons: 1.3x5Holes
Spring: Black
Spacer: 6 mm

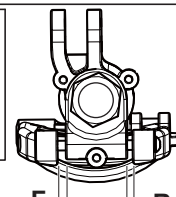

Front
Wheelbase adjustment F 4 mm
R 0 mm
Sway bar ☒ Use 2.8 mm
☐ None

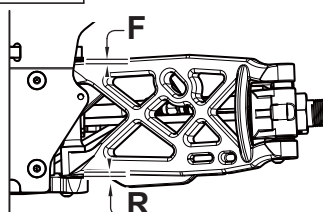

F: 1 mm
R: 0 mm

Notes: _____

Parts No. List

Part No.	Part Name	Q'ty in Use	Item No.	Part No.	Part Name	Q'ty in Use	Item No.
200022WH	1/8 UFO Competiton Wheel set	4	SW-200022WH	330014	Front/Rear Diff. Outdrive	4	SW-330014
210002	Diff Case with Matel part	3	SW-210002	330015	Pin M2.2x9.9mm	6	SW-330015
200120	Front Lower Arm (L)	1	SW-2501093	330017	Center Diff. Outdrive	2	SW-330017
200121	Front Lower Arm (R)	1	SW-2501093	330086	Front Lower Suspension Plate	1	SW-330086
200131	Rear Lower Arm (L)	1	SW-2501094	330087	Front Shock Tower (Al)	1	SW-330087
200132	Rear Lower Arm (R)	1	SW-2501094	330088	Rear Lower Arm Holder	1	SW-330088
200129	Rear Hub Carrier (L)	1	SW-2501095	330089	Rear Shock Tower (Al)	1	SW-330089
200130	Rear Hub Carrier (R)	1	SW-2501095	330091	Settring BellcrankPlate	1	SW-330091
200102	Front Lower Arm Holder (0 degree)	1	SW-2501096	330092	Servo Saver Steering Plate	1	SW-330092
200103	Front Lower Arm Holder (1 degree)	1	SW-2501096	330093	Steering Knuckle Plate (L)	1	SW-330093
200104	Rear Lower Arm Plate (0-2.5 D)	1	SW-2501096	330094	Steering Knuckle Plate (R)	1	SW-330094
200105	Rear Lower Arm Plate (0-3.0 D)	1	SW-2501096	330095	Shock Washer 3.6x7x1mm	4	SW-330095
200106	Rear Lower Arm Plate (1-2.5 D)	1	SW-2501096	330096	Shock Washer 3.6x7x2.5mm	4	SW-330096
200107	Rear Lower Arm Plate (1-3.0 D)	1	SW-2501096	330098	Shock Piston 1.4mmx5 holes	4	SW-330098
200125	Front Upper Arm Holder	1	SW-2501096	330103	Front/Rear Lower Arm HingPin	4	SW-330103
200111	Front Bumper	1	SW-2501097	330109	F/R Drive Shaft 93.5mm	4	SW-330109
200142	Wing Stay (L)	1	SW-2501097	330110	CVD Join	6	SW-330110
200143	Wing Stay (R)	1	SW-2501097	330111	Pin M2.5x14.8mm	6	SW-330111
200144	Wing Stay Holder	1	SW-2501097	330112	CVD Axle	4	SW-330112
200145	Wing Support (L)	1	SW-2501097	330113	Servo Saver Shaft	2	SW-330113
200146	Wing Support (R)	1	SW-2501097	330114	Servo Saver Post	1	SW-330114
200170	Rear Body Mount	1	SW-2501097	330115	Steering Knuckle Pivot Ball Turnbuckle	4	SW-330115
200171	Front Body Mount	1	SW-2501097	330116	14mm Knuckle Pivot Ball	4	SW-330116
200122	Front Steering Knuckle (L)	1	SW-2501098	330117	Knuckle Pivot Ball Washer	2	SW-330117
200123	Front Steering Knuckle (R)	1	SW-2501098	330118	Knuckle Pivot Ball Nut	4	SW-330118
200108	R/F Insert (1 degree)	2	SW-2501099	330119	Front Upper Arm HingPin	2	SW-330119
200109	R/F Insert (0 degree)	2	SW-2501099	330120	Rear Hub Carriers Hing pin	2	SW-330120
200110	F/F Insert (1 degree)	2	SW-2501099	330121	Wheel Hub	4	SW-330121
200126	F/Up Insert (1 degree)	4	SW-2501099	330122	Wheel Nut	4	SW-330122
200184	Brake Linkage Holder	2	SW-2501099	330123	Rear Upper Sus. Arm Turnbuckles	2	SW-330123
200186	Throttle Linkage Holder	1	SW-2501099	330124	Pin M3.0x16.8mm	4	SW-330124
200187	Throttle Linkage Holder (Done)	1	SW-2501099	330125	Rear Upper Sus. Arm Ball Stud	4	SW-330125
200188	Throttle Linkage Holder (Up)	1	SW-2501099	330126	Steering Turnbuckle	2	SW-330126
200124	Pivot Ball Cup	4	SW-2501100	330127	Steering Linkage Ball Stud 7mm	4	SW-330127
200133	Lower Arm Insert (1mm)	2	SW-2501100	330128	Shock Body (L)	2	SW-330128
200134	Lower Arm Insert (1mm)	6	SW-2501100	330129	Shock Body (S)	2	SW-330129
200135	Rear Wheel Axle Insert (1mm)	4	SW-2501100	330130	Shock Seal Cover	4	SW-330130
200136	Rear Wheel Axle Insert (2mm)	2	SW-2501100	330131	Shock Spring Adjust Nut	4	SW-330131
200127	Front Upper Arm (L)	1	SW-2501113	330132	Shock Shaft (L)	2	SW-330132
200128	Front Upper Arm (R)	1	SW-2501113	330133	Shock Shaft (S)	2	SW-330133
200023	Gear Box (F)	2	SW-2501114	330134	Shock Ball Stud	10	SW-330134
200024	Gear Box (R)	2	SW-2501114	330135	Servo Saver Nut	1	SW-330135
200101	S-Way Bar Holder	2	SW-2501114	330136	Sway Bar Ball Stud	4	SW-330136
200114	Brake Holder	2	SW-2501114	330138	Shock Cap Stud	4	SW-330138
200115	Brake Cam Insert	2	SW-2501114	330139	Shock Cap	4	SW-330139
200119	Rear Shock Tower Insert	1	SW-2501114	330152A	Aluminum Rear Chassis Brace	1	SW-330152A
200141	SWORKz High Done Force Wing	1	SW-2501116	330153	Aluminum Front Chassis Brace	1	SW-330153
200147	Wing Holder	2	SW-2501116	330155	Steering Servo Turnbuckle (M3x30mm)	1	SW-330155
200151	Rear Wheel Dusty Cover (L)	1	SW-2501118	330102	X-system Pinion Gear 13T	2	SW-330102
200152	Front Wheel Dusty Cover (R)	1	SW-2501118	330108	X-system C/R Drive Shaft 125mm	1	SW-330108
200153	Front Wheel Dusty Cover (L)	1	SW-2501118	330235	BE1 Motor Gear 13T	1	SW-330235
200154	Front Wheel Dusty Cover (R)	1	SW-2501118	330239	BE1 Motor Gear 14T	1	SW-330239
200137	Rear Upper Arm Ball End (For Wheel Side)	2	SW-2501121	330236	BE1 Aluminum Center Diff. Mount (F)	1	SW-330236
200138	Rear Upper Arm Ball End	2	SW-2501121	330237	BE1 Main Chassis	1	SW-330237
200139	Steering Ball End	2	SW-2501121	330238	BE1 Aluminum Center Diff. Mount (R)	1	SW-330238
200140	Steering Ball End (For Wheel Side)	2	SW-2501121	330240	BE1 Center Front Drift Shaft 100mm	1	SW-330240
200148	Shock Cap Insert	4	SW-2501121	330241	BE1 Center Supar Gear Mount	1	SW-330241
200149	Shock Ball End	4	SW-2501121	330164	Crown Gear 43T	2	SW-330164
200150	Shock Spring Holder	4	SW-2501121	400002	O-ring S5 4.8X1.5	6	SW-400002
200158	Sway Bar Linkage	4	SW-2501121	400005	Shock Spring Adjust Nut O-Ring	4	SW-400005
200179	Steering Linkage Ball End	2	SW-2501121	400006	Shock Seal O-Ring	8	SW-400006
200185	Throttle Linkage Ball End	1	SW-2501121	410022A	SWORKz Strong Shock Bladder (Black)	4	SW-410022A
200116	Settring Bellcrank Upper (R)	1	SW-2501122	610002	Diff. Gasket (0.5T)	3	SW-610002
200117	Settring Bellcrank (R)	1	SW-2501122	400009	Shock Boot (L)	2	SW-400009
200118	Settring Bellcrank (L)	1	SW-2501122	400010	Shock Boot (S)	2	SW-400010
200172	Rear Chassis Brace Mount	1	SW-2501122	410024	Switch Cover	1	SW-410024
200175	Steering Servo Horn (For Futaba)	1	SW-2501122	200193	Antenna Tube	1	SW-200193
200176	Steering Servo Horn (For S&K)	1	SW-2501122	420010	Antenna Cup	1	SW-420010
200177	Steering Servo Horn (For Hitec)	1	SW-2501122	510031	S350 BE1 Body Decal Sheet	1	SW-510031
200178	Servo Mount	2	SW-2501122	510032	S350 BE1 Body Window Mask	1	SW-510031
200180	Throttle Servo Horn (For Futaba)	1	SW-2501122	250012	S350 BE1 Shark Style Body Shell	1	SW-250012
200181	Throttle Servo Horn (For S&K)	1	SW-2501122	250010	S350 BE1 Side Guard R	1	SW-250010
200182	Throttle Servo Horn (For Hitec)	1	SW-2501122	250011	S350 BE1 Side Guard L	1	SW-250010
200183	Brake Servo Horn	1	SW-2501122	115004	Servo Saver Spring	1	SW-115004
200278	BE1 Spur Gear 45T Plastic	1	SW-2501469	115006	Rear Sway Ball 2.6mm	1	SW-115006
200268	BE1 Spur Gear 46T Plastic	1	SW-2501469	115007	Rear Sway Ball 3.0mm	1	SW-115007
200279	BE1 Spur Gear 47T Plastic	1	SW-2501469	115008	Front Sway Ball 2.3mm	1	SW-115008
200270	BE1 LiPo Battery Case (L)	1	SW-2501470	115047	Rear Sway Ball 2.5mm	1	SW-115047
200271	BE1 LiPo Battery Case (R)	1	SW-2501470	115034	Front Sway Ball 2.1mm	1	SW-115034
200269	BE1 Center Diff. Mount Cover	1	SW-2501471	115035	Front Sway Ball 2.2mm	1	SW-115035
200272	BE1 Steering Servo Mount	1	SW-2501471	115013	Shock Spring 1.6mm (S)	2	SW-115013
200273	BE1 Receiver Box Cover	1	SW-2501471	115014	Shock Spring 1.6mm (L)	2	SW-115014
200274	BE1 Receiver Box Holder	1	SW-2501471	115019	Body Clip	2	SW-115019
200275	BE1 Receiver Box Post	1	SW-2501471	115024	Shock Spring 1.5mm (L)	2	SW-115024
200276	Servo Mount	1	SW-2501471	115025	Shock Spring 1.5mm (S)	2	SW-115025
200277	Transponder Mount	1	SW-2501471	116004	Ball Bearing 6x10x3mm	4	SW-116004
320003	Diff. Bevel Gear 18T	6	SW-320003	116006	Ball Bearing 8x16x5mm	10	SW-116006
320004	Diff. Bevel Gear 10T	12	SW-320003	116010	Ball Bearing 5x10x4mm	2	SW-116010
330013	Bevel Gear Shaft	6	SW-330013	116012	Ball Bearing 15x21x4mm	10	SW-116012

Parts No. List				Spare Part List	
Part No.	Part Name	Q'ty in Use	Item No.	Item No.	Part Name
117003	Flange Ball Bearing 3x6x2.5mm	2	SW-117003	SW-101004	Washer 3.5X10X0.2mm
101004	Washer 3.5X10X0.2mm	12	SW-101004	SW-101010	M3 Countersunk Washer (RD)
101010	M3 Countersunk Washer	6	SW-101010	SW-101011	M2.6x6xT0.6mm
101020	3mm Countersunk Washers (RD)	6	SW-101020	SW-101012	M3x6xT0.6mm
101011	M2.6x6xT0.6mm	4	SW-101011	SW-101014	M3 Pivot Ball Bushing
103001	M3 Nut Lock	20	SW-103001	SW-101020	3mm Countersunk Washers (RD)
103003	Flange M3 Nut Lock	6	SW-103003	SW-103001	M3 Nut Lock
103004	M2.5mm Nut Lock	4	SW-103004	SW-103003	Flange M3 Nut Lock(RD)
104001	M5x4mm Set Screw	4	SW-104001	SW-103004	M2.5mm Nut Lock
104004	M3x3mm Set Screw	4	SW-104004	SW-104001	M5x4mm Set Screw
104005	M3x4mm Set Screw	4	SW-104005	SW-104004	M3x3mm Set Screw
104008	M4x4mm Set Screw	1	SW-104008	SW-104005	M3x4mm Set Screw
104007	M4x8mm Set Screw	4	SW-104007	SW-104007	M4x8mm Set Screw
105012	M3x10mm Cap Screw	2	SW-105012	SW-104008	M4x4mm Set Screw
105004	M2.6x6mm Cap Screw	4	SW-105004	SW-105004	M2.6x6mm Cap Screw
105005	M3x12mm Cap Screw	2	SW-105005	SW-105005	M3x12mm Cap Screw
105011	M3x23mm Cap Screw	2	SW-105011	SW-105006	M3x28mm Cap Screw
105006	M3x28mm Cap Screw	4	SW-105006	SW-105011	M3x23mm Cap Screw
106002	M3x10mm Hex Scket OH/TP Screw	8	SW-106002	SW-105012	M3x10mm Cap Screw
106003	M3x16mm Hex Scket OH/TP Screw	2	SW-106003	SW-106002	M3x10mm Hex Scket OH/TP Screw
106005	M3x15mm Hex Scket OH/TP Screw	10	SW-106005	SW-106003	M3x16mm Hex Scket OH/TP Screw
106006	M3x20mm Hex Scket OH/TP Screw	5	SW-106006	SW-106005	M3x15mm Hex Scket OH/TP Screw
106008	M3x12mm Hex Scket OH/TP Screw	5	SW-106008	SW-106006	M3x20mm Hex Scket OH/TP Screw
106010	M3x6mm Hex Scket OH/TP Screw	34	SW-106010	SW-106008	M3x12mm Hex Scket OH/TP Screw
106011	M3x4mm Hex Scket OH/TP Screw	8	SW-106011	SW-106010	M3x6mm Hex Scket OH/TP Screw
108001	M3x12mm FH/ST HEX Screw	15	SW-108001	SW-106011	M3x4mm Hex Scket OH/TP Screw
108003	M3x10mm FH/ST HEX Screw	20	SW-108003	SW-108001	M3x12mm FH/ST HEX Screw
108006	M3x8mm FH/ST HEX Screw	8	SW-108006	SW-108003	M3x10mm FH/ST HEX Screw
108007	M3x6mm FH/ST HEX Screw	16	SW-108007	SW-108006	M3x8mm FH/ST HEX Screw
108008	M3x35mm FH/ST HEX Screw	4	SW-108008	SW-108007	M3x6mm FH/ST HEX Screw
108009	M3x20mm FH/ST HEX Screw	4	SW-108009	SW-108008	M3x35mm FH/ST HEX Screw
108010	M4x10mm FH/ST HEX Screw	6	SW-108010	SW-108009	M3x20mm FH/ST HEX Screw
108012	M4x16mm FH/ST HEX Screw	8	SW-108012	SW-108010	M4x10mm FH/ST HEX Screw
101012	M3x6xT0.6mm	2	SW-101012	SW-108012	M4x16mm FH/ST HEX Screw
101014	M3 Pivot Ball Bushing	1	SW-101014	SW-108014	M3x3mm FH/ST HEX Screw
108014	M3x3mm FH/ST HEX Screw	4	SW-108014	SW-108015	M3X16mm FH/ST HEX Screw
108015	M3X16mm FH/ST HEX Screw	12	SW-108015		
				SW-108008	M3x35mm FH/ST HEX Screw
				SW-108009	M3x20mm FH/ST HEX Screw
				SW-108010	M4x10mm FH/ST HEX Screw
				SW-108012	M4x16mm FH/ST HEX Screw
				SW-108014	M3x3mm FH/ST HEX Screw
				SW-108015	M3X16mm FH/ST HEX Screw
				SW-115006	Rear Sway Bar 2.6mm
				SW-115007	Rear Sway Bar 3.0mm
				SW-115008	Front Sway Bar 2.3mm
				SW-115013	Shock Spring 1.6mm (S)
				SW-115014	Shock Spring 1.6mm (L)
				SW-115019	1/8 Body Clip(6pc)
				SW-115024	Shock Spring 1.5mm (L)
				SW-115025	Shock Spring 1.5mm (S)
				SW-115034	Front Sway Ball 2.1mm
				SW-115035	Front Sway Ball 2.2mm
				SW-115047	Rear Sway Ball 2.5mm
				SW-116004	Ball Bearing 6x10x3mm (4pc)
				SW-116006	Ball Bearing 8x16x5mm (10pc)
				SW-116010	Ball Bearing 5x10x4mm(4pc)
				SW-116012	Ball Bearing 15x21x4mm(8pc)
				SW-117003	Flange Ball Bearing 3x6x2.5mm(2pc)
				SW-200022WH	SWORKz 1/8 UFO Competiton Wheel set
				SW-200193	Antenna Tube
				SW-210002	S350 Diff. Case Set
				SW-250010	S350 BE1 Series Side Guard Set
				SW-250012	S350 BE1 Series Shark Style Clean Body Shell
				SW-2501093	S350 Front Lower Arm Set (L&R)
				SW-2501094	S350 Rear Lower Arm Set (L&R)
				SW-2501095	S350 Rear Hub Carrier Set (L&R)
				SW-2501096	S350 Full Arm Holder Set (7pc)
				SW-2501097	S350 Wing Stay Set with Bumper
				SW-2501098	S350 Front Steering Knuckle Set (L&R)
				SW-2501099	S350 R/F Insert, Brake, Throttle Linkage Linkage Holder
				SW-2501100	S350 Pivot Ball Cup, Caster Insert Set
				SW-2501113	S350 Front Upper Arm Set (L&R)
				SW-2501114	S350 Gear Box Set (F&R)
				SW-2501116	SWORKz High Done Force Wing Set (BK)(Fit S350)
				SW-2501116A	SWORKz High Done Force Wing Set (BK)
				SW-2501116AFY	SWORKz High Done Force Wing Set (FY)
				SW-2501116AWH	SWORKz High Done Force Wing Set (WH)
				SW-2501118	S350 Wheel Dusty Cover Set
				SW-2501121	S350 Ball End Set with Shock Plastic Parts (2 Set)
				SW-2501122	S350 Settring Bellcrank Set with Servo Horn Set

Spare Part List

Item No.	Part Name
SW-2501469	S350 BE1Series Spur Gear Set(45T/46T/47T)
SW-2501470	S350 BE1Series LiPo Battery(25mm) Case Set
SW-2501471	S350 BE1Series Receiver Box & Steering Servo Holder Set
SW-320003	Diff. Bevel Gear Set
SW-330013	Bevel Gear Shaft
SW-330014	Front/Rear Diff. Outdrive
SW-330015	Pin M2.2x9.9mm
SW-330017	Center Diff. Outdrive
SW-330018	S350 46T SPUR GEAR
SW-330086	S350 Front Lower Suspension Plate
SW-330087	S350 Front Shock Tower (Al)
SW-330088	S350 Rear Lower Arm Holder
SW-330089	S350 Rear Shock Tower (Al)
SW-330091	Steering BellcrankPlate
SW-330092	Servo Saver Steering Plate
SW-330093	Steering Knuckle Plate Set(L&R)
SW-330095	Shock Seal Kit
SW-330098	Shock Piston 1.4mmx5 holes
SW-330102	X-system Pinion Gear 13T
SW-330103	Front/Rear Lower Arm HingPin
SW-330240	S350 X-System C/F Drive Shaft 100mm
SW-330108	S350 X-System C/R Drive Shaft 125mm
SW-330109	F/R Drive Shaft 93.5mm
SW-330110	CVD Join
SW-330111	S350 Serie CVD Pin M2.5x14.8mm(6pc)
SW-330112	CVD Axle
SW-330113	Servo Saver Shaft
SW-330114	Servo Saver Post
SW-330115	Steering Knuckle Pivot Ball Turnbuckle
SW-330116	14mm Knuckle Pivot Ball
SW-330117	Knuckle Pivot Ball Washer
SW-330118	Knuckle Pivot Ball Nut
SW-330119	Front Upper Arm HingPin
SW-330120	Rear Hub Carriers Hing pin
SW-330121	Wheel Hub
SW-330122	Wheel Nut
SW-330123	Rear Upper Sus. Arm Turnbuckles
SW-330124	Pin M3.0x16.8mm
SW-330125	Rear Upper Sus. Arm Ball Stud
SW-330126	Steering Turnbuckle
SW-330127	Steering Linkage Ball Stud 7mm
SW-330128	Shock Body (L)
SW-330129	Shock Body (S)
SW-330130	Shock Seal Cover
SW-330131	Shock Spring Adjust Nut
SW-330132	Shock Shaft (L)
SW-330133	Shock Shaft (S)
SW-330134	Shock Ball Stud 6mmxL6.7
SW-330136	Sway Bar Ball Stud
SW-330138	Shock Cap Stud
SW-330139	Shock Cap
SW-330152A	Aluminum Rear Chassis Brace
SW-330153	Aluminum Front Chassis Brace
SW-330154	Caron Fiber Radio Tray
SW-330155	Steering Servo Turnbuckle (M3x30mm)
SW-330164	Crown Gear 43T
SW-330235	S350 BE1 Series Motor Gear 13T
SW-330239	S350 BE1 Series Motor Gear 14T
SW-330236	S350 BE1 Series Aluminum Center Diff. Mount (F)
SW-330237	S350 BE1 Series Main Chassis for Pro Kit
SW-330238	S350 BE1 Series Aluminum Center Diff. Mount (R)
SW-330241	S350 BE1 Series Center Supar Gear Mount
SW-400002	O-ring S5 4.8X1.5
SW-400005	Shock Spring Adjust Nut O-Ring
SW-400009	Shock Boot (L)
SW-400010	Shock Boot (S)
SW-410022	Shock Bladder (8pc)
SW-410022A	SWORKz Strong Shock Bladder (Black)
SW-410024	Switch Cover
SW-420010	Antenna Cup
SW-510031	S350 BE1 Series Body Decal Sheet
SW-610002	Diff. Gasket (0.5T)(6pc)

Option Part List

Item No.	Part Name
SW-210019	S350 Shock Spring SET 1.6mm (S)(P0.8)(BL)
SW-210020	S350 Shock Spring SET 1.5mm(SS)(P0.8)(SL)
SW-330398	SWORKz Pro Wheel Nut
SW-510030	SWORKz LOGO Decal sheet
SW-330097	Shock Piston 1.3mmx5 holes
SW-330401	S350 Series Rear Hub Carriers Hing Pin with Nut
SW-330209	S350 BK1Aluminum Rear Lower Arm Plate (0-3.0 D)
SW-330213	S350 BK1Aluminum Rear Lower Arm Plate (0-2.5 D)
SW-410022A	SWORKz Strong Shock Bladder (Black)(8pc)
SW-330210	S350 Aluminum Front Upper Arm Holder
SW-330399	S350 Series Aluminum Rear Chassis Brace Mount
SW-330242	S350 Series Lightened Aluminum CVD Axle (2pc)
SW-210005	S350 Series Front Super Shock Tower
SW-210006	S350 Series Rear Super Shock Tower
SW-330211	Front Super Shock Tower Aluminum Insert
SW-330212	Rear Super Shock Tower Aluminum Insert
SW-2501116AWH	SWORKz High Done Force Wing Set (WH)
SW-2501116AFY	SWORKz High Done Force Wing Set (FY)
SW-910004	SWORKz S350 BE1 1/8 Pro EP Buggy Conversion Kit



Speedmaster Hobby CO., LTD.

TEL:+886-3-538-7638

FAX:+886-3-538-7328

1F., No.18, Aly. 32, Ln. 251, Niupu E. Rd., Xiangshan Dist.,
Hsinchu City 300, Taiwan (R.O.C.)